




ELECTRIC RANGE

MODELS:

WFE525S0JB4 (Black)

WFE525S0JW4 (White)


COOKTOP PARTS

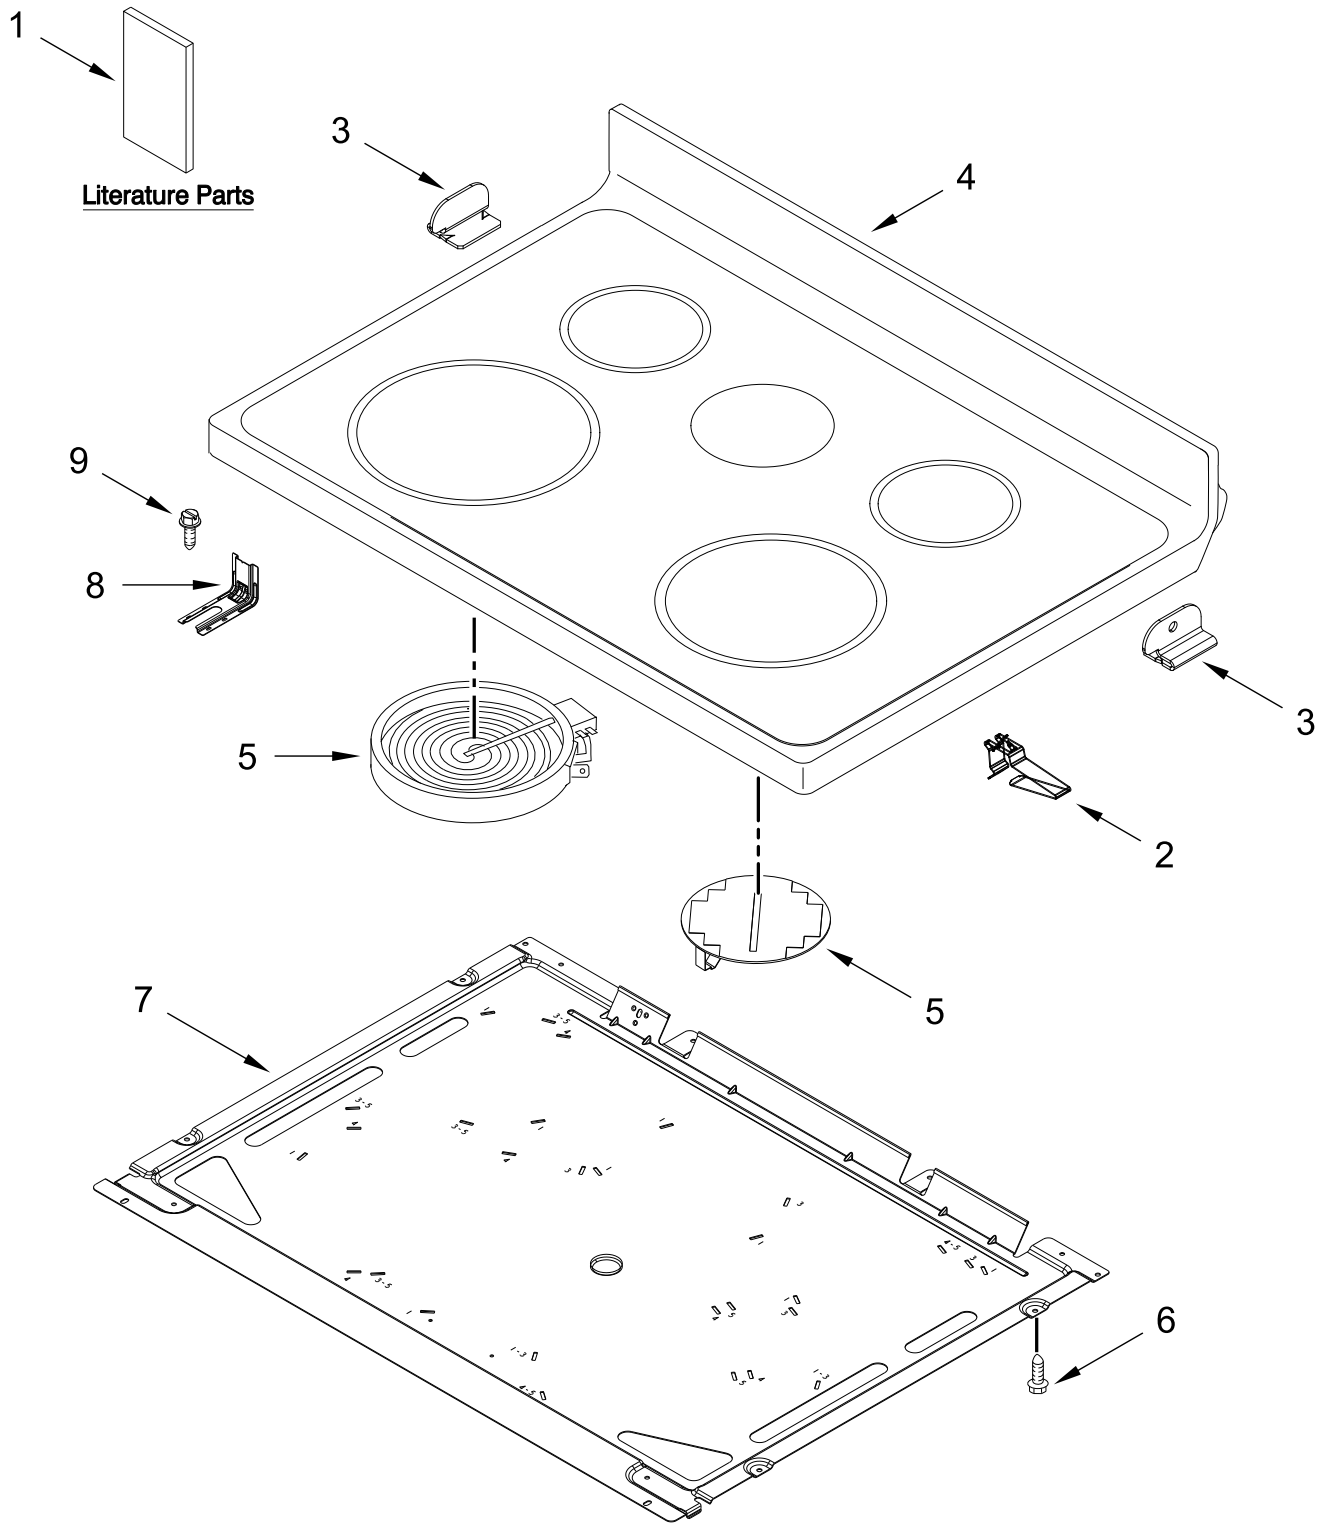

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000 and 1400W)	9	7101P485-60	Screw, Anti-Tip Kit
	W11435582	Quick Start Guide			(Left Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11509617	Owners Manual		8273994	Element (1200W)	W11452622		Harness, Main
	W11401737	Tech Sheet			(Left Rear, Right Rear)	W11134603		Harness, Cooktop (Left)
2	W11600012	Spring, Element		8273992	Element (2500W)			
3	W10607641	Bracket, Cooktop (Left)			(Right Front)	W11134551		Harness, Cooktop (Right)
	W10607642	Bracket, Cooktop (Right)		W11668631	Element, Warm Zone	W11598759		Harness, Warm Zone
					(Center)			
4		Cooktop	6	3196169	Screw			
	W11034825	Black	7	W10691223	Pan, Radiant Element			
	W11370569	White	8	W11379945	Bracket, Anti-Tip			


CONTROL PANEL PARTS

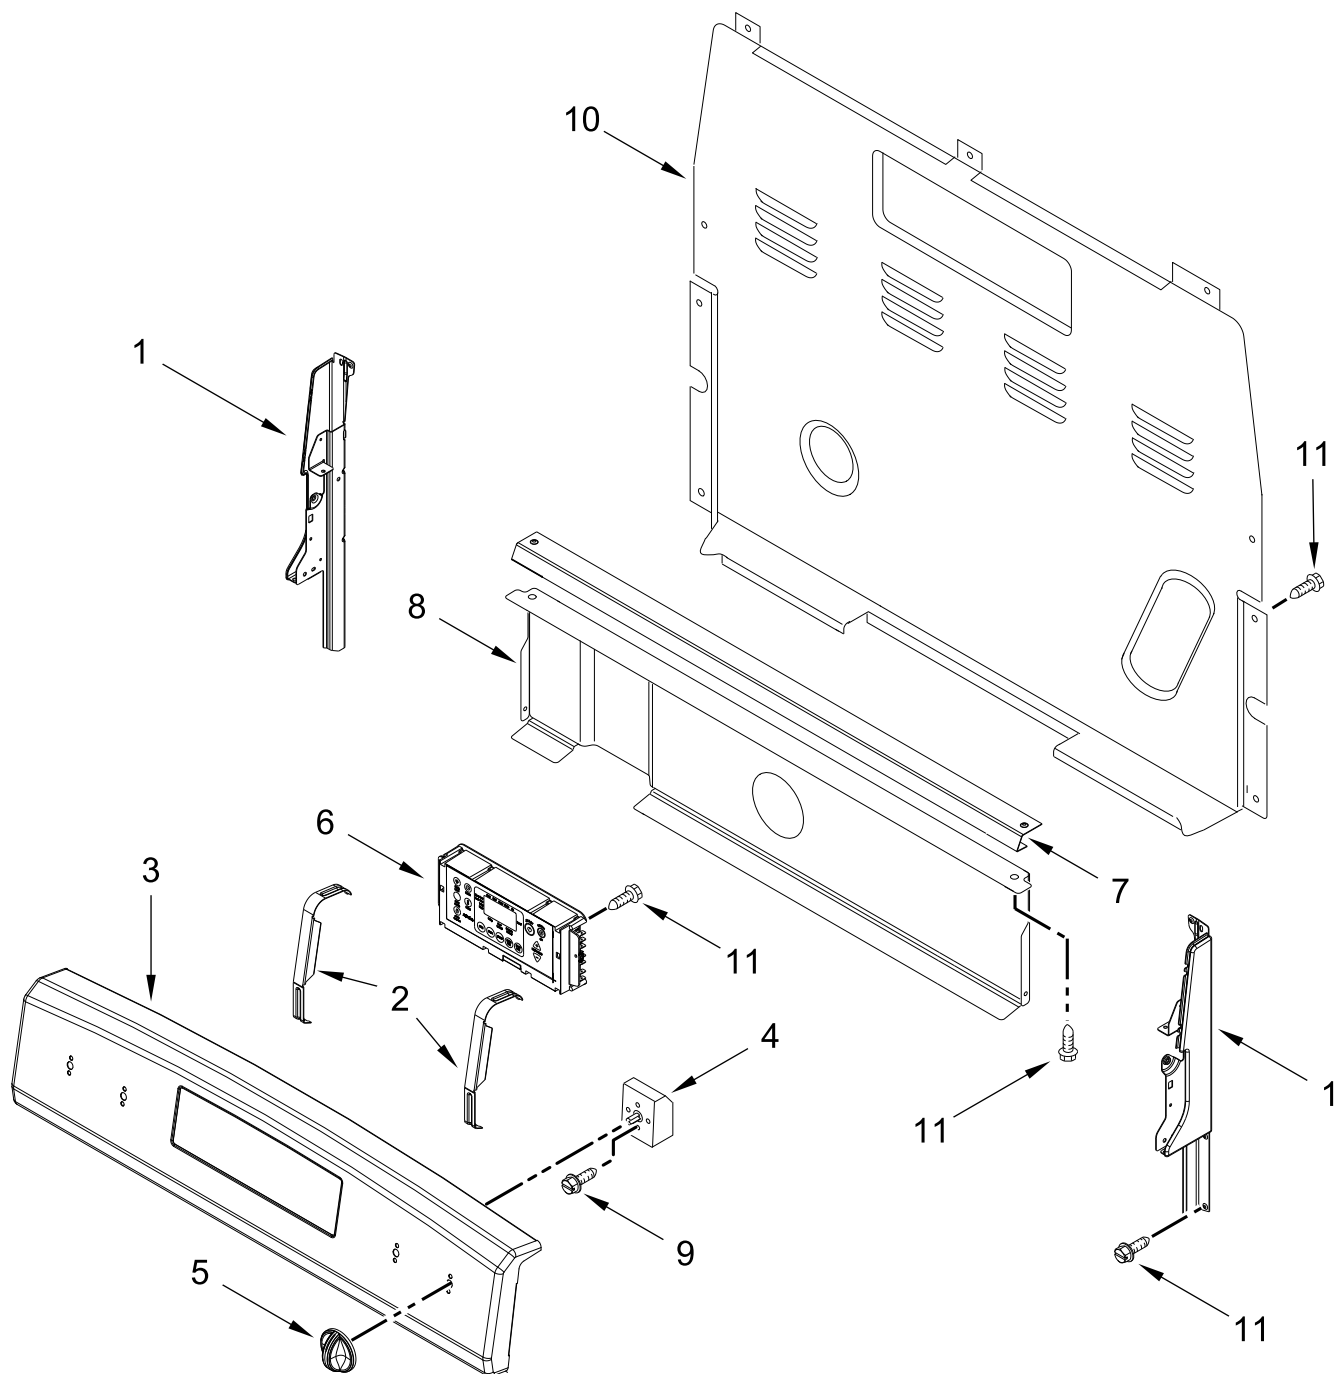

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	6		Control, Electronic (LCX)
	W11130372	Black (Left)			(Left Front)		W11515108	Black
	W11130379	Black (Right)		3148951	Switch, Infinite		W11515109	White
	W11130371	White (Left)			(Right Rear and Left	7	W10525121	Bracket, Console Mounting
	W11130378	White (Right)			Rear)			
2	W10695491	Bracket, Control		3148954	Switch, Infinite (Orange)	8	W10134247	Shield, Heat
3		Console, Assembly			(Right Front)	9	3400882	Screw
	W11027374	Black			Knob	10	8272473	Cover, Upper Rear
	W11027375	White	5			11	3196178	Screw
				W11022718	Black			
				W11022720	White			


CHASSIS PARTS

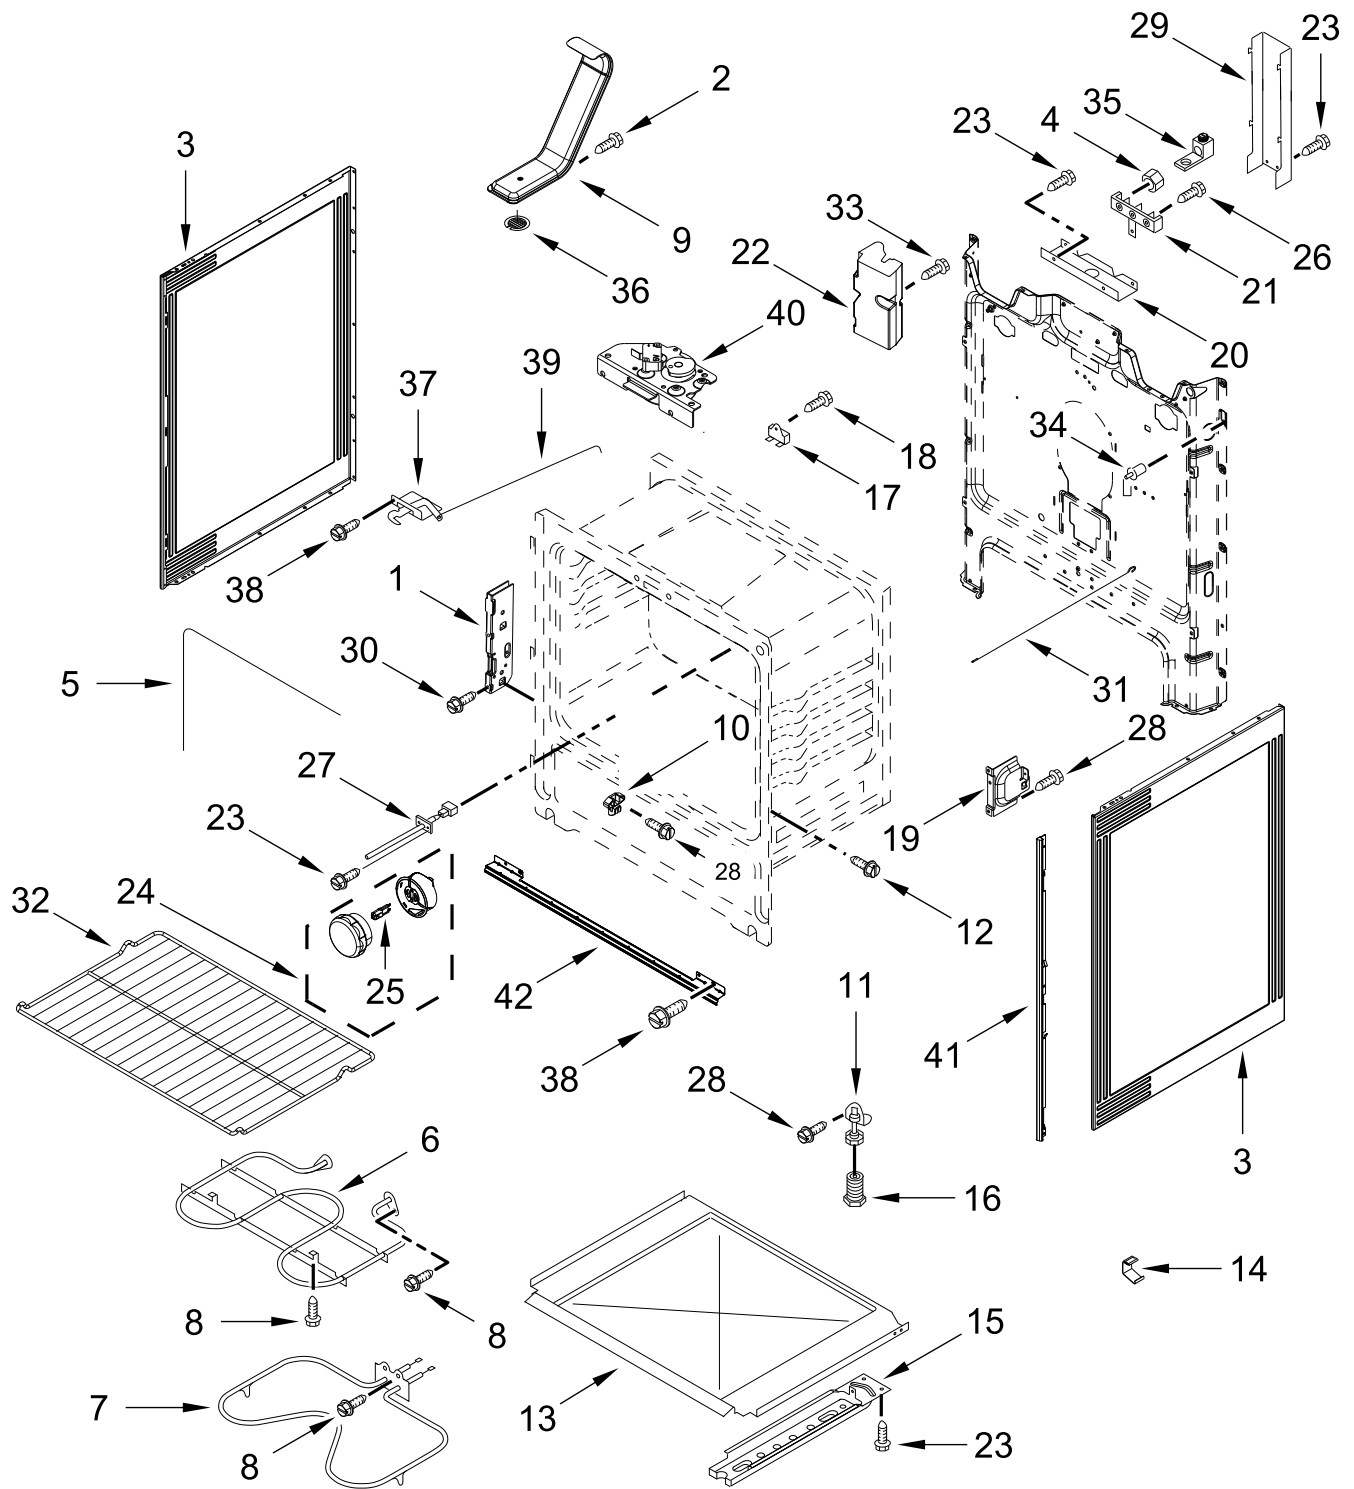

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	16	W10058460	Foot, Leveling	35	W10281322	Kit, Bare Wire Adapter Block
2	3196154	Screw	17	3196548	Fuse, Thermal	36	W11092984	Screen, Vent
3		Panel, Side	18	3196172	Screw	37	9761013	Front Door Latch Assembly
	W10162245	Black	19	W10404688	Clip, Oven Support	38	3196560	Screw
	W10575396	White	20	3186034	Bracket, Service	39	W10078380	Rod, Latch
4	3400029	Nut	21	W10245259	Block, Terminal	40	W10107820	Rear Door Latch Assembly
5	W11491751	Seal, Door	22	W10910404	Counterweight	41	W11510560	Barrier Rail, Rubber (Left and Right)
6	9757340	Element, Broil	23	3196178	Screw	42	W11464547	Bracket, Front Frame
7	W11111743	Element, Bake	24	W11634772	Light Assembly			FOLLOWING PARTS NOT ILLUSTRATED
8	3196174	Screw	25	W10571723	Bulb, Halogen 40 Watts	W10774939		Insulation, Wrap
9	W10134285	Tube, Vent	26	3400016	Screw	W11127325		Insulation, Back
10	W10674705	Glide, Drawer Front	27	W10181986	Sensor, Oven	W10333344		Insulation, Flue
11	W10341186	Front Foot Assembly	28	3196169	Screw			
12	W10067840	Screw	29	W10326122	Cover, Terminal Block			
13	8054068	Retainer, Insulation	30	W10031780	Screw			
14	W10137382	Clip, Panel	31	9757239	Rod, Door Switch			
15	W10390008	Base Rail Assembly (Left)	32	W11173792	Rack, Oven			
	W10390007	Base Rail Assembly (Right)	33	W11034869	Screw			
			34	W11511828	Switch, Door			


DOOR PARTS

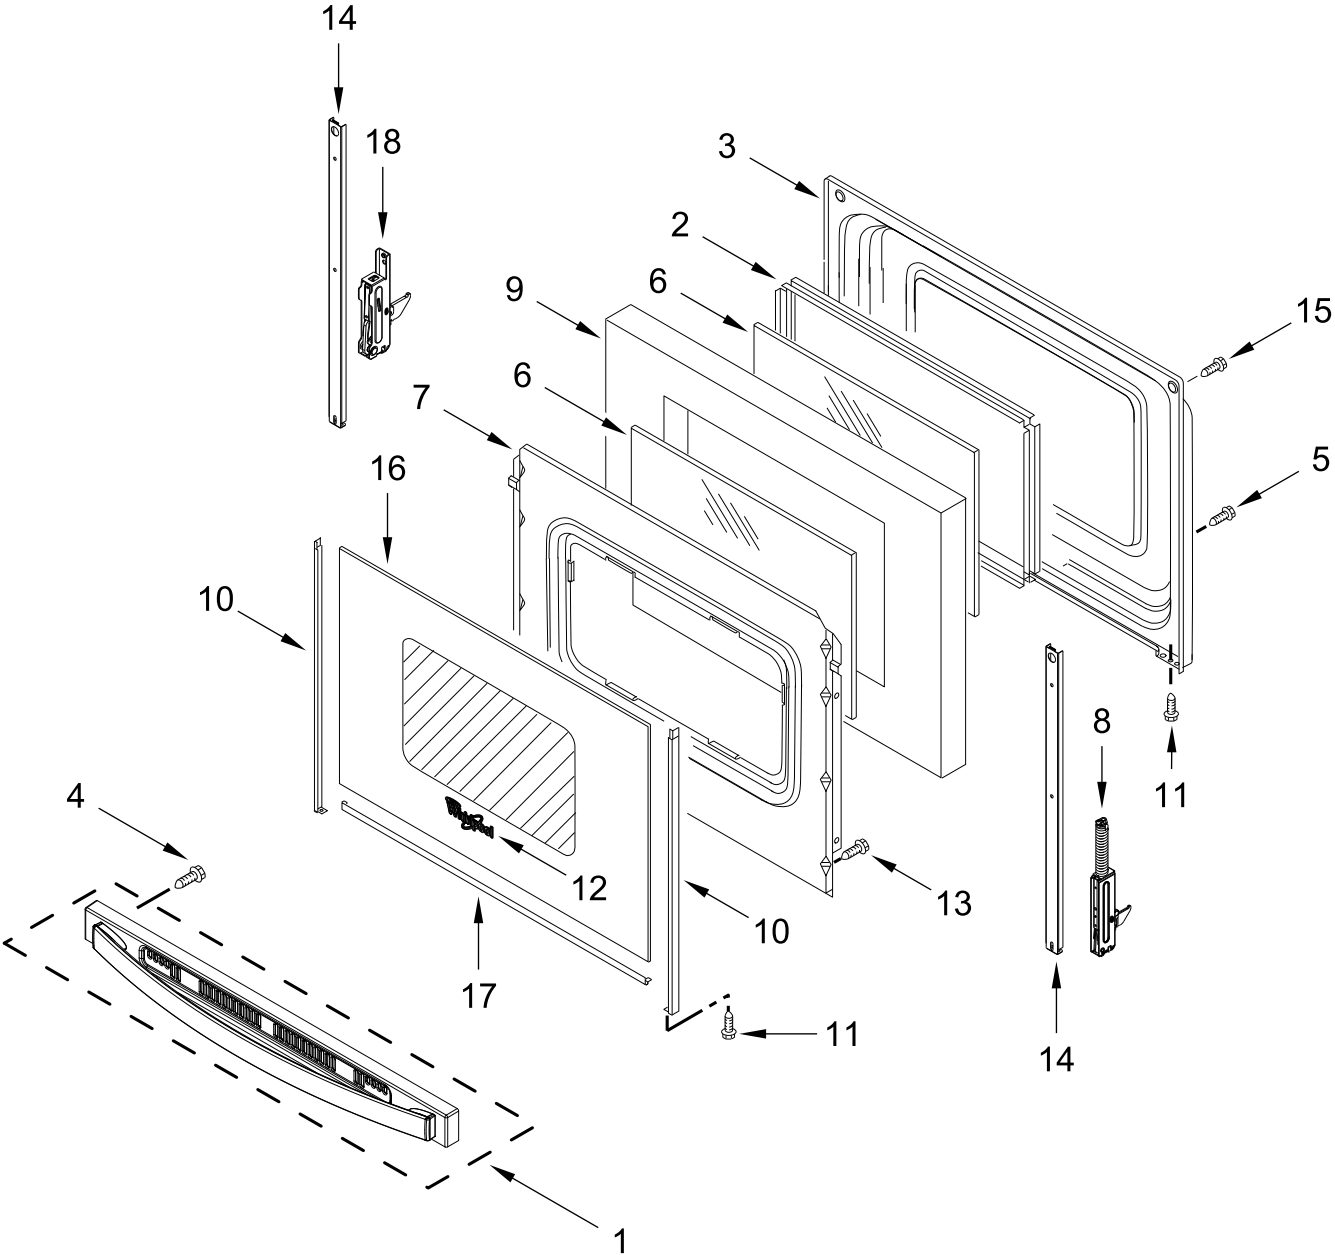

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	9	W10278991	Insulation, Door Strip	16		Glass Assembly, Outer Door
	W11242949	Black	10		Trim, Side		W10884159	Black
	W11242947	White		W10746436	Black (Left)		W10409945	White
2	W10316950	Frame, Glass		W10746435	Black (Right)	17		Trim, Lower
3	9761344	Liner, Door		8523172	White (Left)		W11444043	Black
4	W10480830	Screw		8523166	White (Right)		W11444042	White
5	W10031790	Screw	11	W10327235	Screw	18	W10299227	Hinge, Door (Passive)
6	9758162	Glass, Inner	12	W10884775	Badge			
7	W11380222	Retainer, Insulation	13	W10031780	Screw			
8	W10299226	Hinge, Active	14	W11379944	Strap, Door			
			15	W10200660	Screw			

DRAWER PARTS

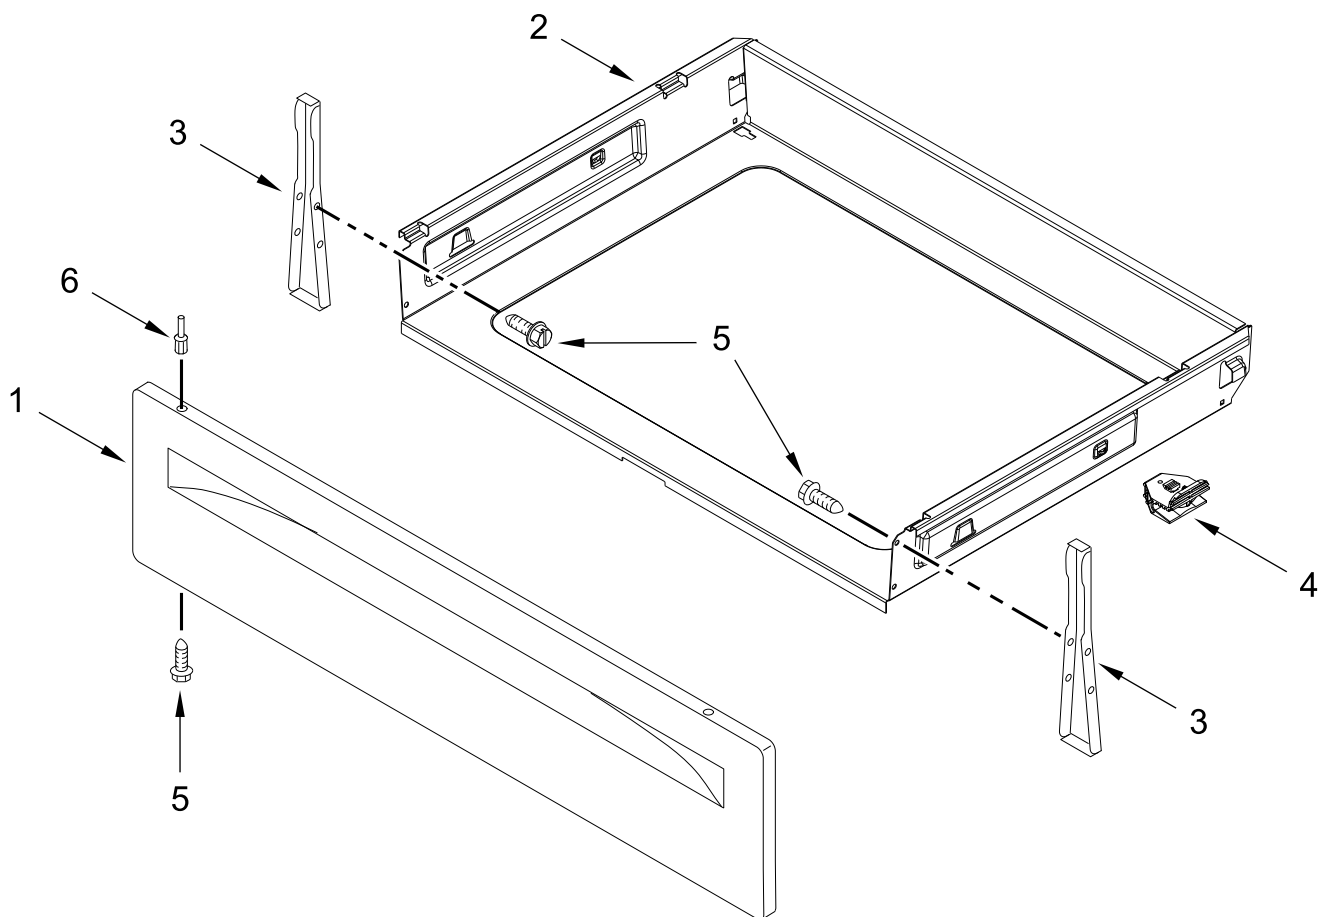

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462912	Bracket, Mounting Drawer	6		Rivet, Push
	W11123900	Black					3196813	Black
	W11123901	White	4	W10674708	Glide, Drawer Rear		3196814	White
2	W10688022	Drawer, Storage	5	3196165	Screw			

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting