




**30" FREESTANDING ELECTRIC RANGE
(Fingerprint Resistant)**

MODELS:

WFE505W0HZ1 (Stainless)


COOKTOP PARTS

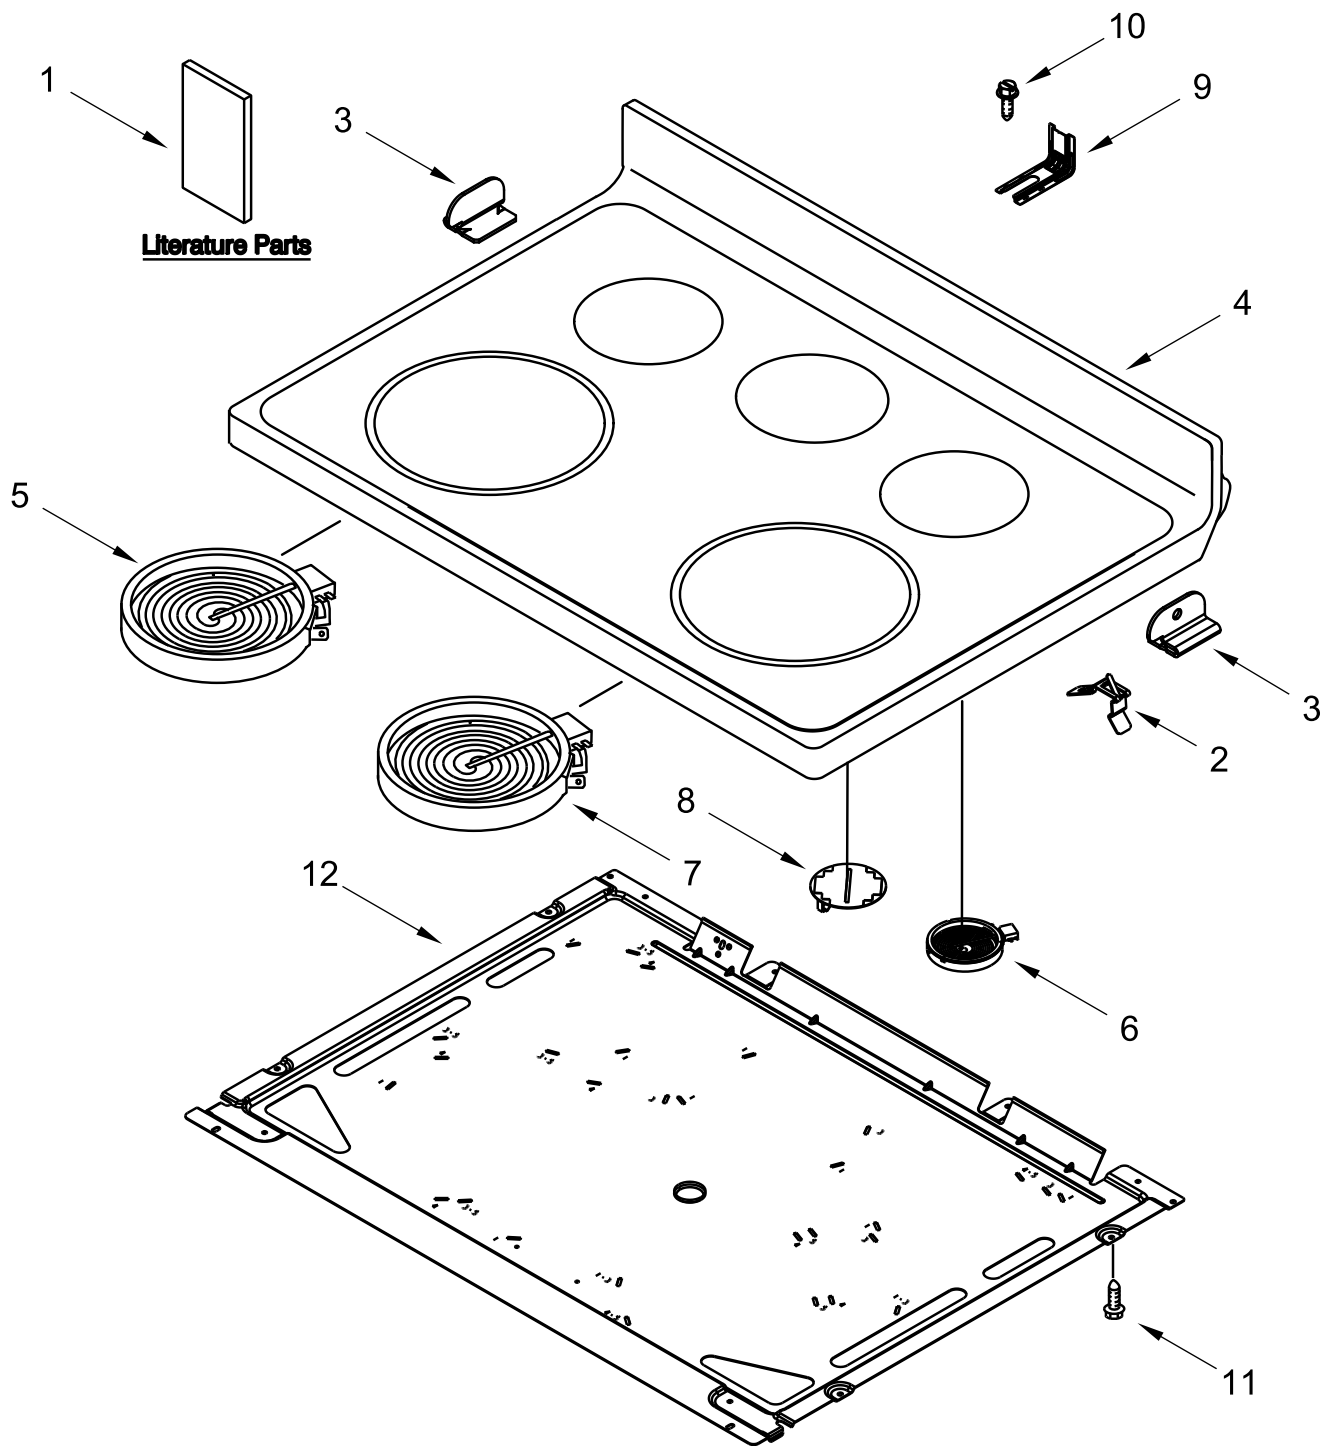

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000/1400W)	11	3196169	Screw
	W11102911	Guide, Use and Care			(Left Front)	12	W10691223	Pan, Radiant Element
	W11157404	Instructions, Installation	6	W10248261	Element (1200W) (Left Rear and Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11102742	Diagram, Wiring				W11134842		Harness, Main
	W11102747	Sheet, Tech	7	8273992	Element (2500W) (Right Front)	W11134603		Harness, Cooktop (Left)
2	W10225448	Spring, Element				W11134551		Harness, Cooktop (Right)
3	W10607641	Bracket, Cooktop (Left)	8	W10799048	Element, Warm Zone (Center)	W11134592		Harness, Warm Zone
	W10607642	Bracket, Cooktop (Right)	9	W10306542	Bracket, Anti-Tip			
4		Cooktop	10	7101P485-60	Screw, Anti-Tip Kit			
	W11034825	Black						


CONTROL PANEL PARTS

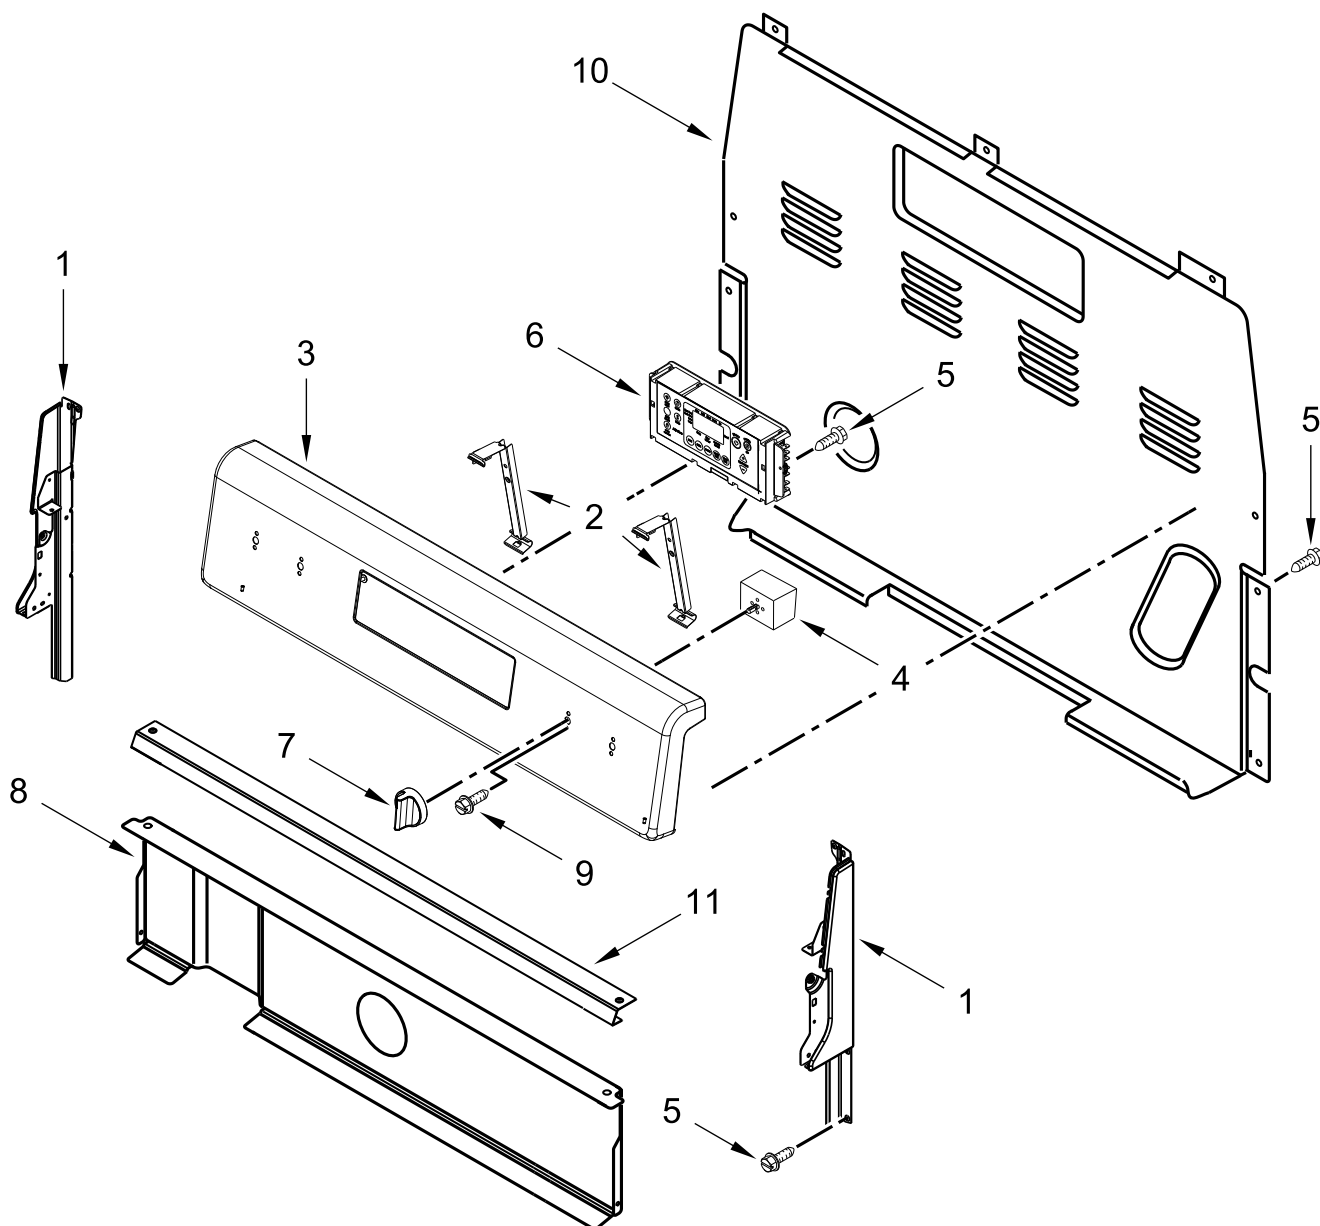

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	7		Knob
	W11130372	Black (Left)			(Left Front)		W11022718	Black
	W11130379	Black (Right)		3148951	Switch, Infinite	8	W10134247	Shield, Heat
2	W10695491	Bracket, Control			(Left Rear and Right	9	3400882	Screw
3		Console, Assembly			Rear)	10	8272473	Cover, Upper Rear
	W11027373	Stainless		3148954	Switch, Infinite	11	W10525121	Bracket, Console
					(Orange)			Mounting
					(Right Front)			
			5	3196178	Screw			
			6		Control, Electronic			
					(LCX)			
				W11204517	Black			


CHASSIS PARTS

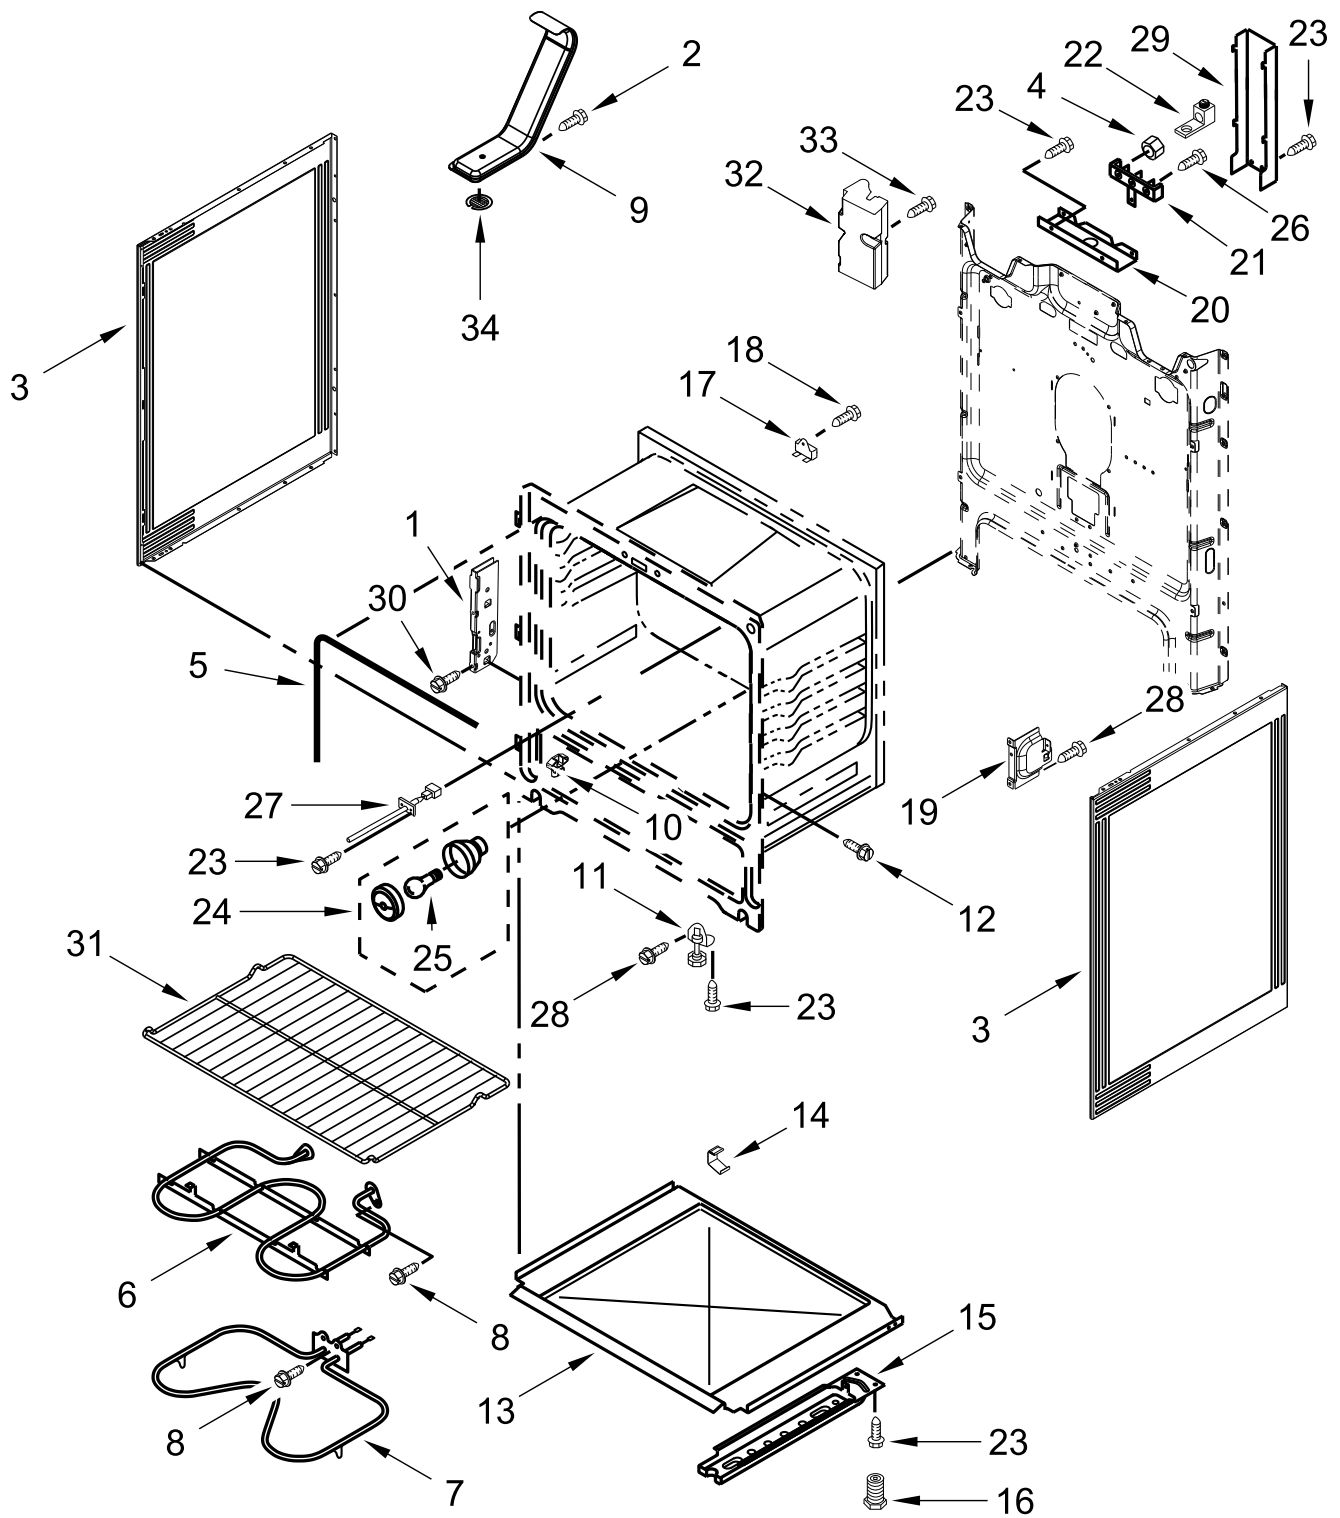

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	15	W10390008	Assembly, Base Rail (Left)	26	3400016	Screw
2	W10362924	Screw				27	W10181986	Sensor, Oven
3		Panel, Side		W10390007	Assembly, Base Rail (Right)	28	3196169	Screw
	W10162245	Black				29	W10326122	Cover, Terminal Block
4	3400029	Nut	16	W10058460	Foot, Leveling	30	W10031780	Screw
5	W10129032	Seal, Door	17	3196548	Fuse, Thermal	31	W10268578	Rack, Oven
6	9757340	Element, Broil	18	3196172	Screw	32	W10910404	Counterweight
7	W11111743	Element, Bake	19	W10404688	Clip, Oven Support	33	W11034869	Screw
8	3196154	Screw	20	3186034	Bracket, Service	34	9761301	Screen, Vent
9	W10134285	Tube, Vent	21	W10245259	Block, Terminal			FOLLOWING PARTS NOT ILLUSTRATED
10	W10674705	Glide, Drawer Front	22	W10281322	Kit, Bare Wire Adapter Block		8273263	Insulation, Wrap
11	W10341186	Assembly, Front Foot	23	3196178	Screw		8272611	Insulation, Back
12	W10067840	Screw	24	W11175594	Assembly, Light		W10333344	Insulation, Flue
13	8054068	Retainer, Insulation	25	W10571723	Bulb, Halogen 40 Watts			
14	W10137382	Clip, Panel						

DOOR PARTS

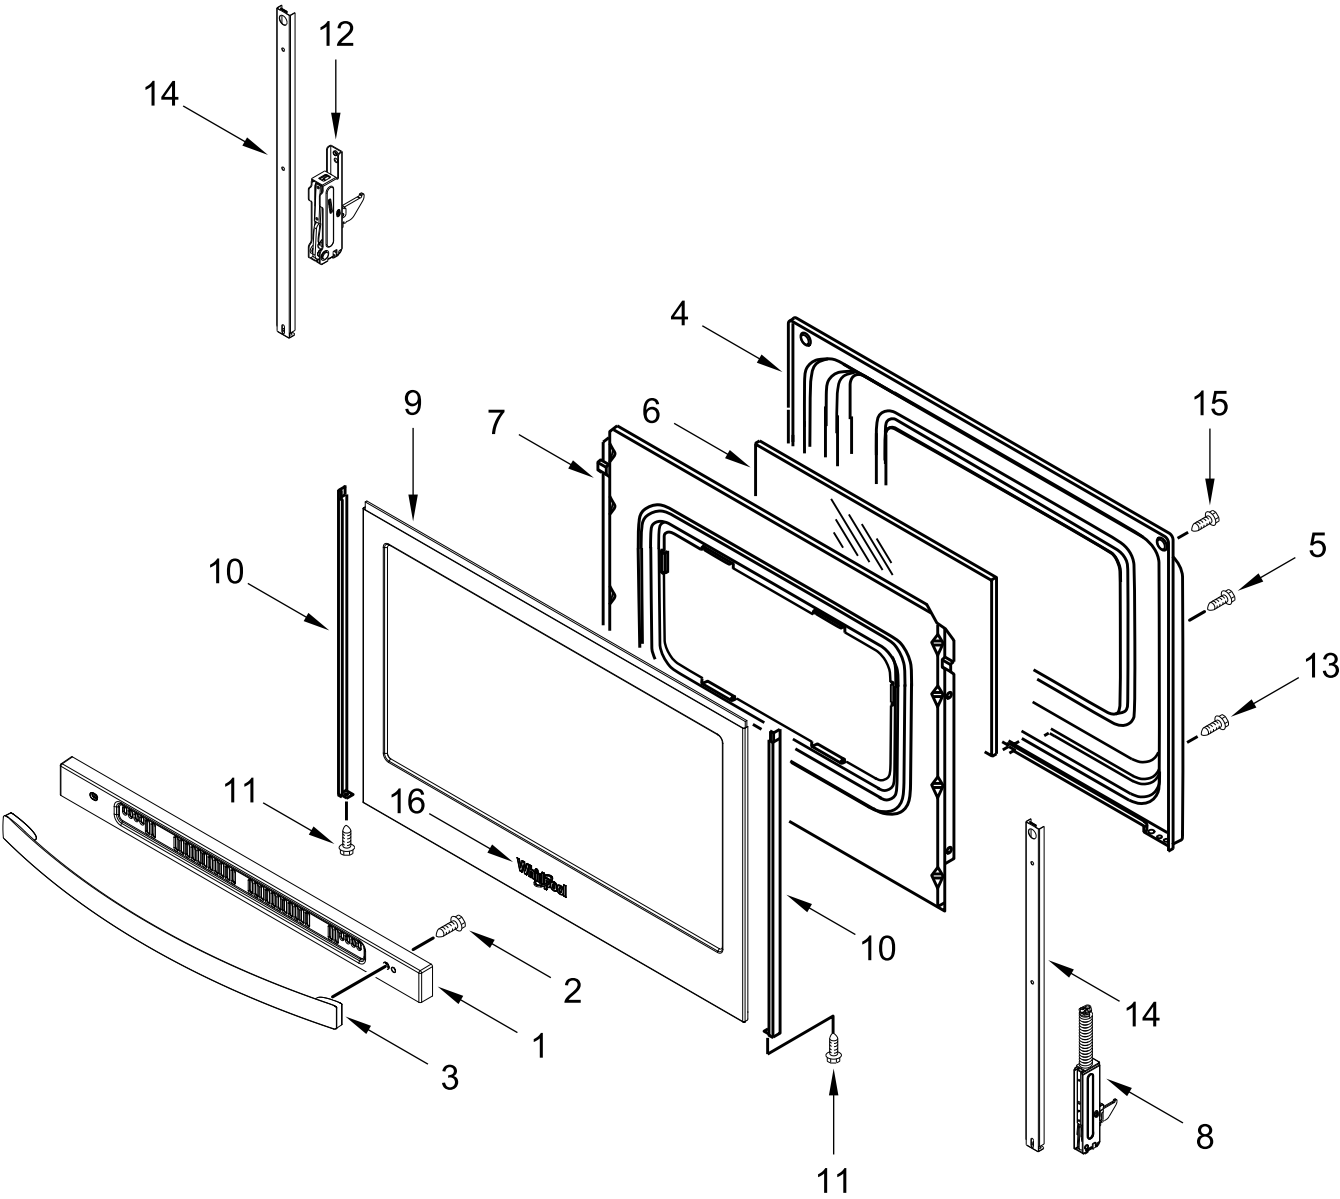


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W10310922	Black
2	W10480830	Screw
3		Handle, Door (Includes Standoff)
	W11039070	Stainless
4	9761344	Liner, Door
5	W10031790	Screw
6	W10620754	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	9761505	Retainer, Insulation
8	W10299226	Hinge, Active
9		Glass Assembly, Outer Door (Includes Nameplate)
	W11167877	Stainless
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10327235	Screw
12	W10299227	Hinge, Door (Passive)
13	W10031780	Screw
14	W10544179	Strap, Door
15	W10200660	Screw
16	W10884775	Nameplate

DRAWER PARTS

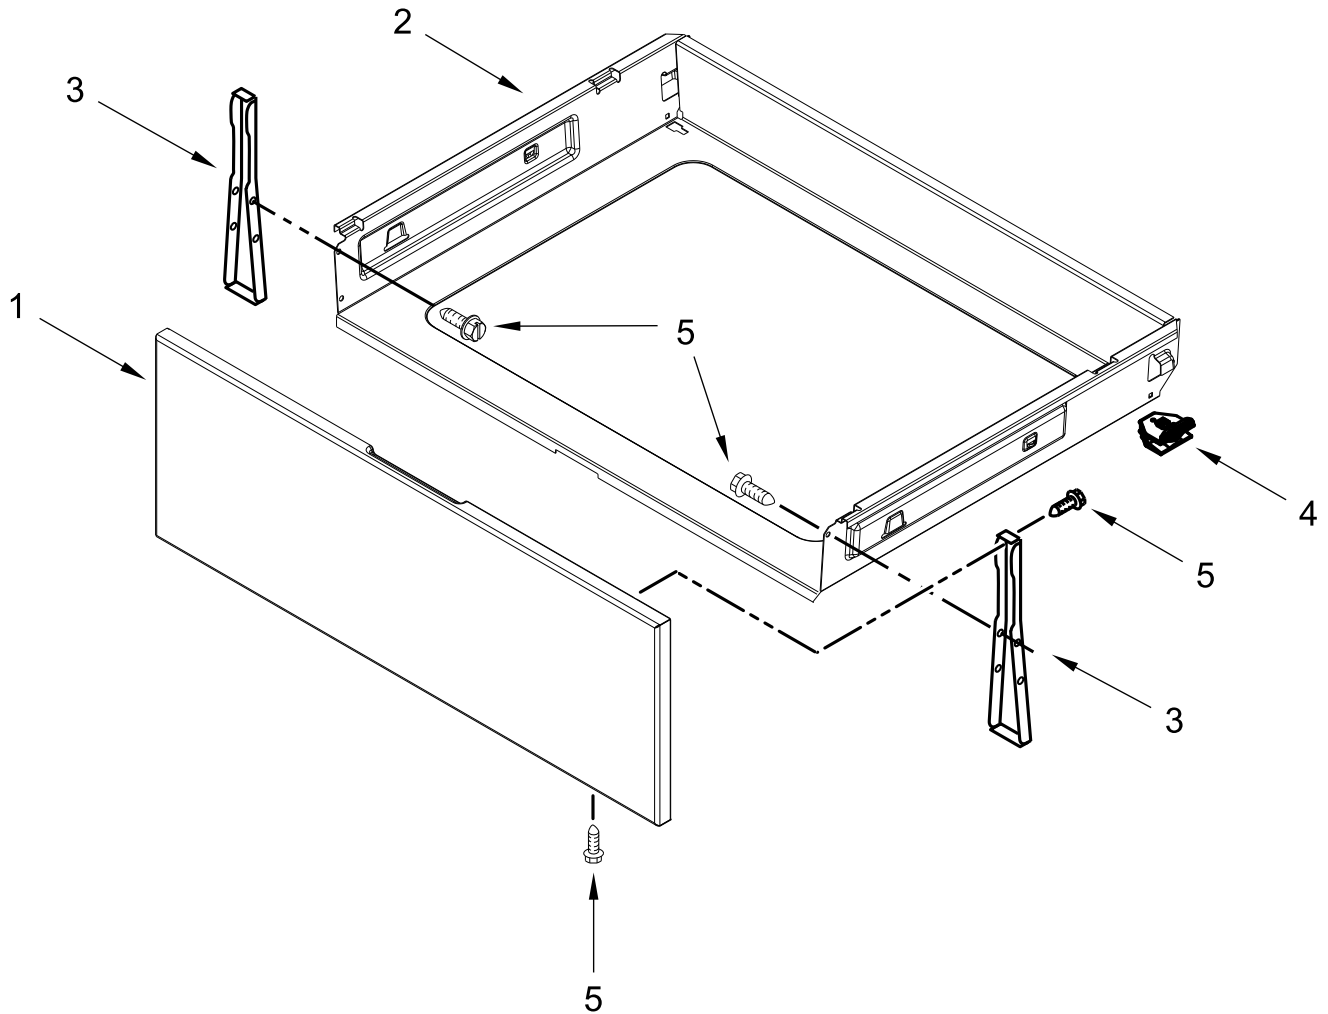

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear
	W10861542	Stainless	3	W10462910	Bracket, Mounting Drawer	5	3196169	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting