




30" FREE STANDING ELECTRIC RANGE CONVECTION

MODELS:

MER8800HK0 (Cast Iron Black)


COOKTOP PARTS

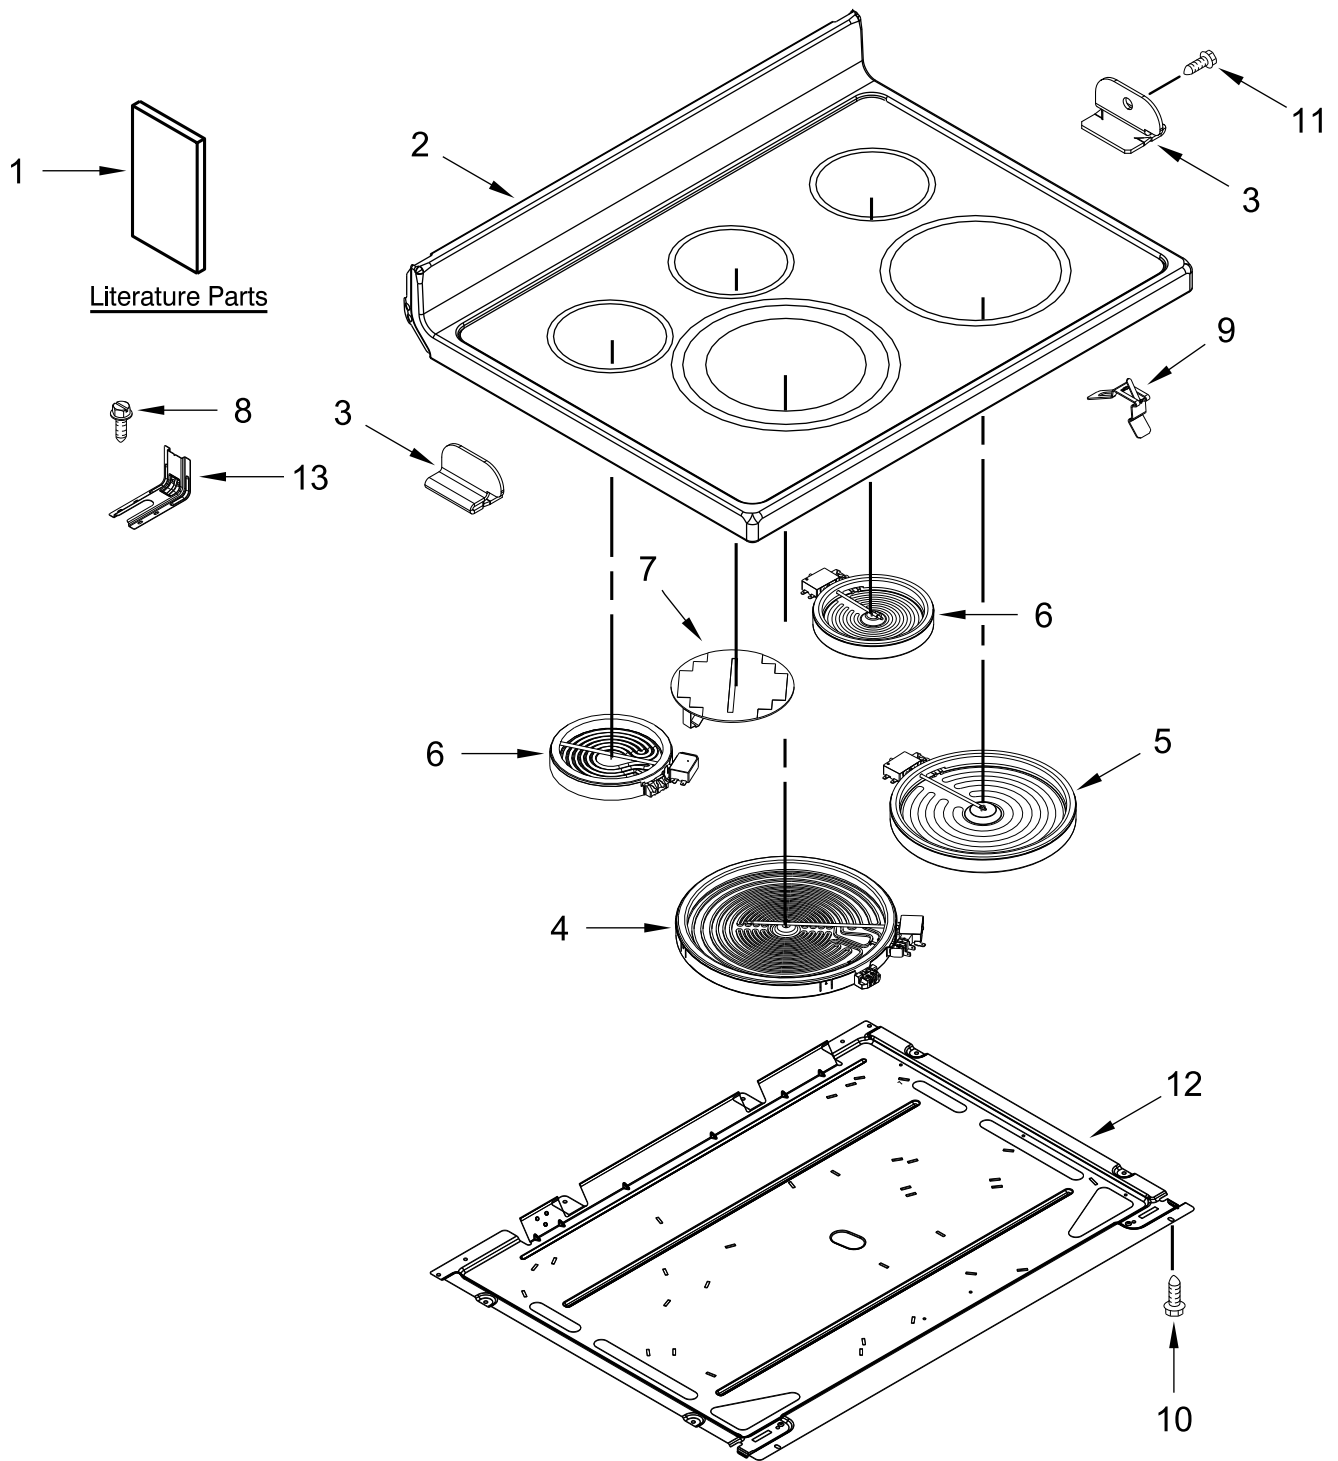

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W10535150	Element (3000W, 1000/2000W)	11	3196172	Screw
	W10667166	Use and Care Guide			(Left Front)	12	W10691223	Pan, Radiant Element
	W10400064	Guide, Quick Start (English)	5	W10251108	Element (3200W) (Right Front)	13	W10306542	Bracket, Anti-Tip
	W10667169	Tech Sheet, (English)	6	8273994	Element (1200W) (Left Rear, Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11047681	Instructions, Installation	7	W10799048	Element, Warm Zone (Center Rear)	W11188459		Harness, Main
2		Cooktop				W11134596		Harness, Cooktop (Left)
	W10655916	Black	8	7101P485-60	Screw, Anti-Tip Kit	W11134550		Harness, Cooktop (Right)
3	W10607641	Bracket, Cooktop (Left)	9	W10225448	Spring, Element	W11212183		Harness, Sensor
	W10607642	Bracket, Cooktop (Right)	10	3196169	Screw	W11134592		Harness, Warm Zone


CONTROL PANEL PARTS

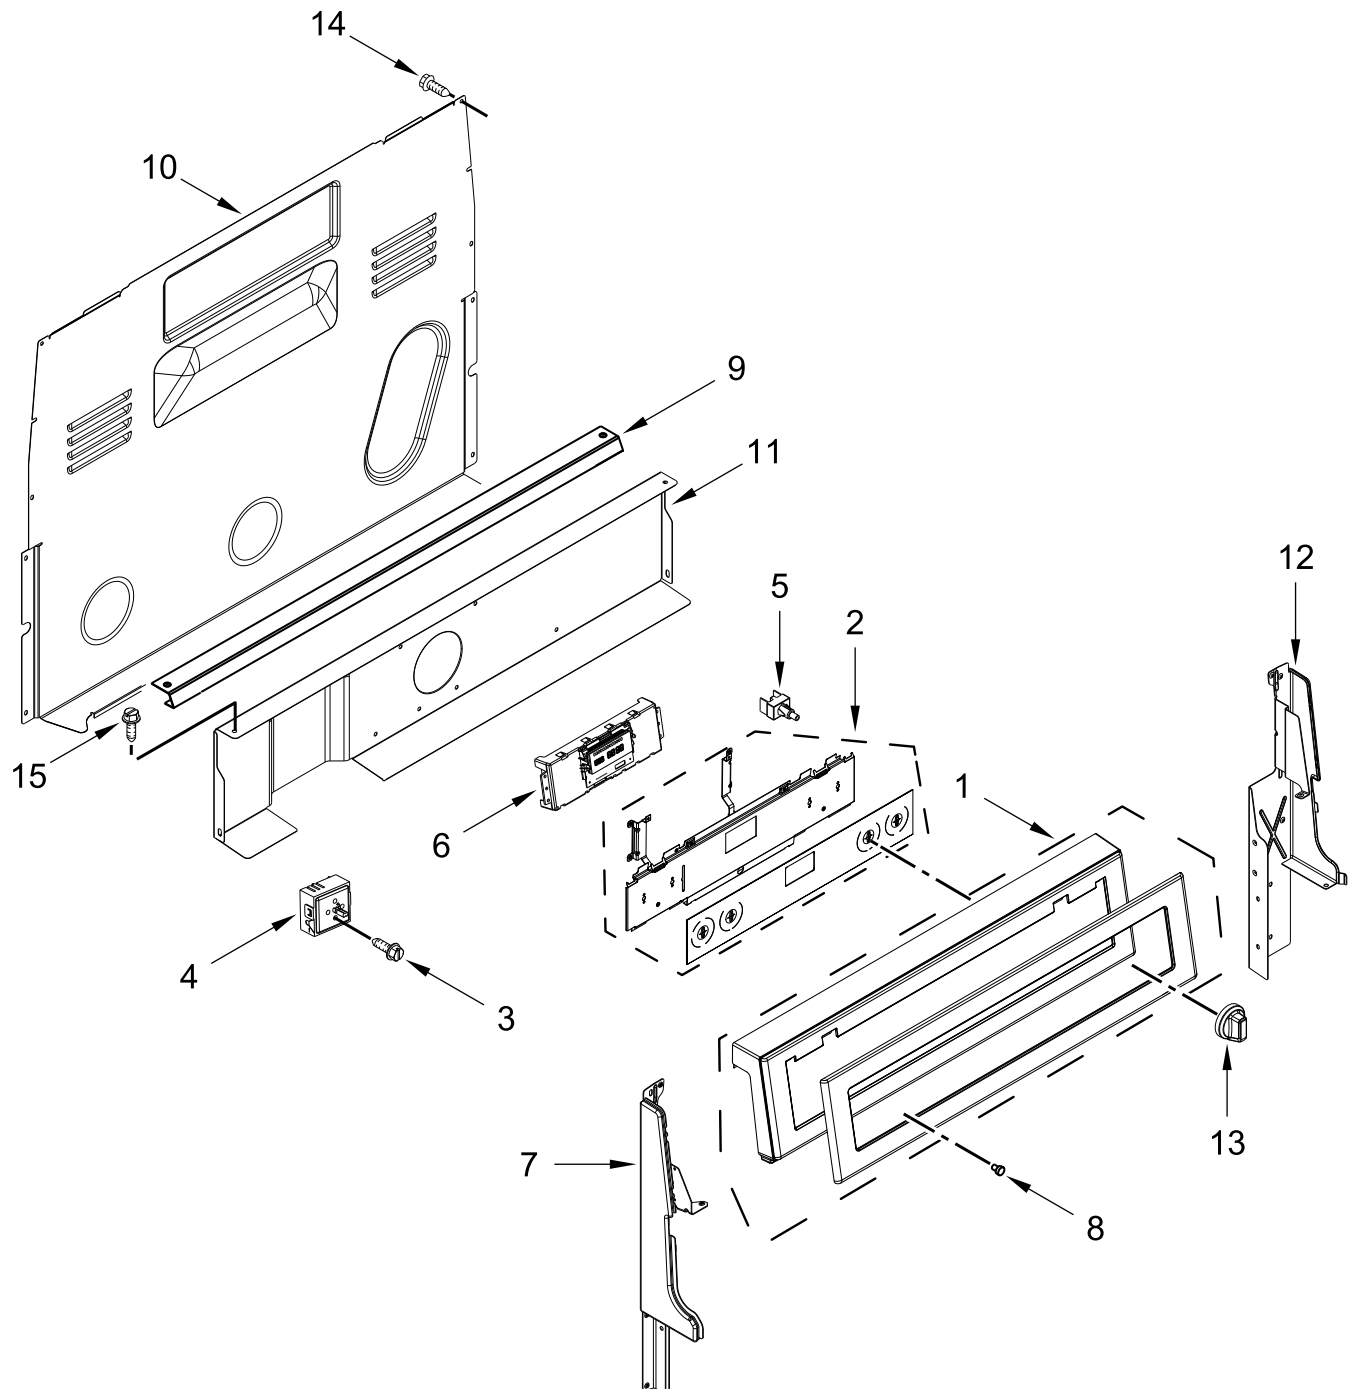

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	5	8523265	Light, Indicator (125V)	13		Knob
	W11205020	Black	6	W10340323	Control (MRC)		W10858252	Stainless
2		Assembly, Active Overlay	7		Endcap	14	3196178	Screw
	W10884363	Black		W11130372	Black (Left)	15	W10362924	Screw
3	3400882	Screw	8	3196068	Lens, Indicator			
4	W10437092	Switch, Infinite (Left Front & Right Front)	9	W10525121	Bracket, Console Mounting			
	W10437094	Switch, Infinite (Left Rear)	10	8272473	Cover, Upper Rear			
	W10578768	Switch, Infinite (Right Rear)	11	W10134247	Shield, Heat			
			12		Endcap			
				W11130379	Black (Right)			


CHASSIS PARTS

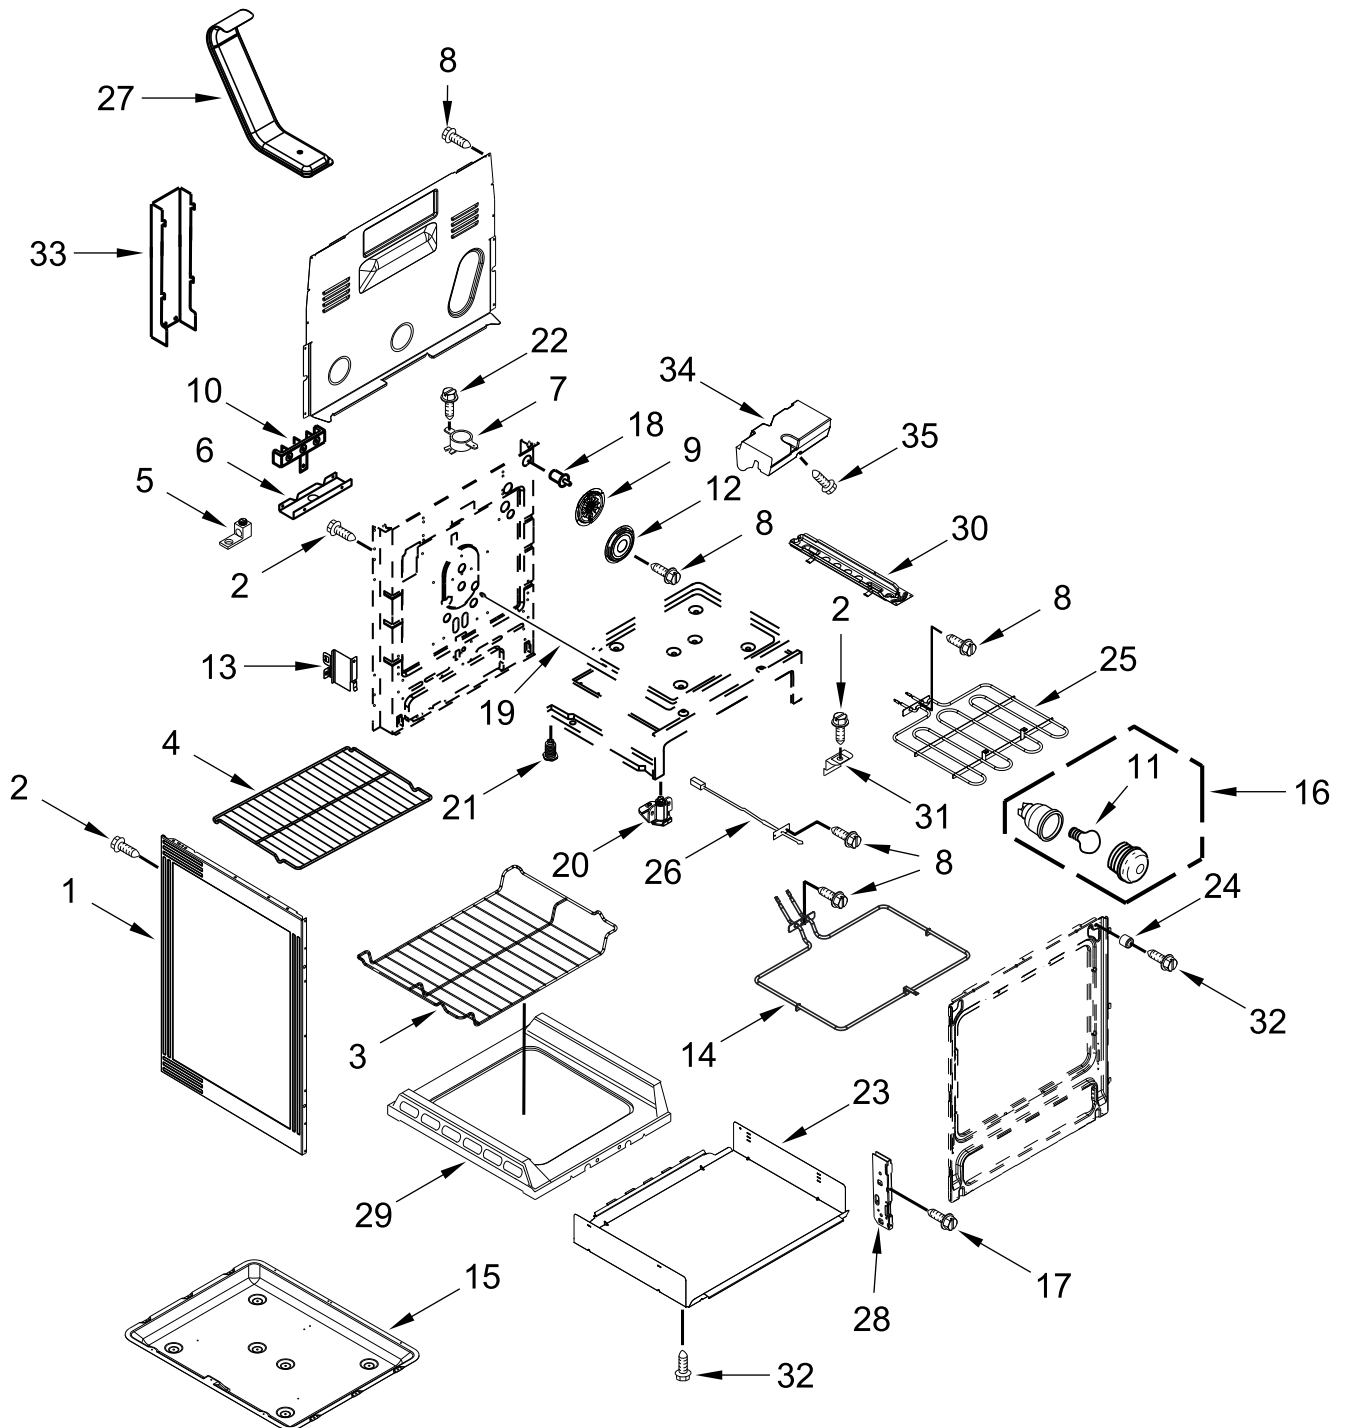

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Side	13	W10273002	Bracket, Oven Support	29	W10774446	Bottom, Oven
	W10162245	Black	14	W10774342	Element, Bake	30	W10390008	Assembly, Base Rail (Left)
2	3196172	Screw	15	W10346147	Pan, Bake		W10390007	Assembly, Base Rail (Right)
3	W10289145	Rack, Oven (Gull-Wing)	16	W11175594	Assembly, Light	31	W10035900	Support, Oven Bottom
4	W10531060	Rack, Oven	17	W10031780	Screw	32	W10516115	Screw
5	W10281322	Kit, Bare Wire Adapter Block	18	W10627802	Switch, Door	33	W10326122	Cover, Terminal Block
6	3186034	Bracket, Service	19	W10273192	Rod, Door Switch	34	W10910404	Counterweight
7	3196548	Fuse, Thermal	20	W10341186	Assembly, Front Foot	35	W11034869	Screw
8	W10362924	Screw	21	W10058460	Foot, Leveling			FOLLOWING PARTS NOT ILLUSTRATED
9	W10756304	Assembly, Convection	22	3196172	Screw	W10194393		Insulation, Wrap
10	W10245259	Block, Terminal	23	W10726740	Shield, Heat	W10225524		Insulation, Back
11	W10571723	Bulb, Halogen 40 Watts	24	9758701	Spacer, Door	W10225523		Insulation, Bottom
12	W10346154	Cover, Convection	25	W11095929	Element, Broil	4820F015-59		Insulation, Strap
			26	W10586204	Sensor			
			27	W10134285	Tube, Vent			
			28	W10289077	Receiver, Hinge			


DOOR PARTS

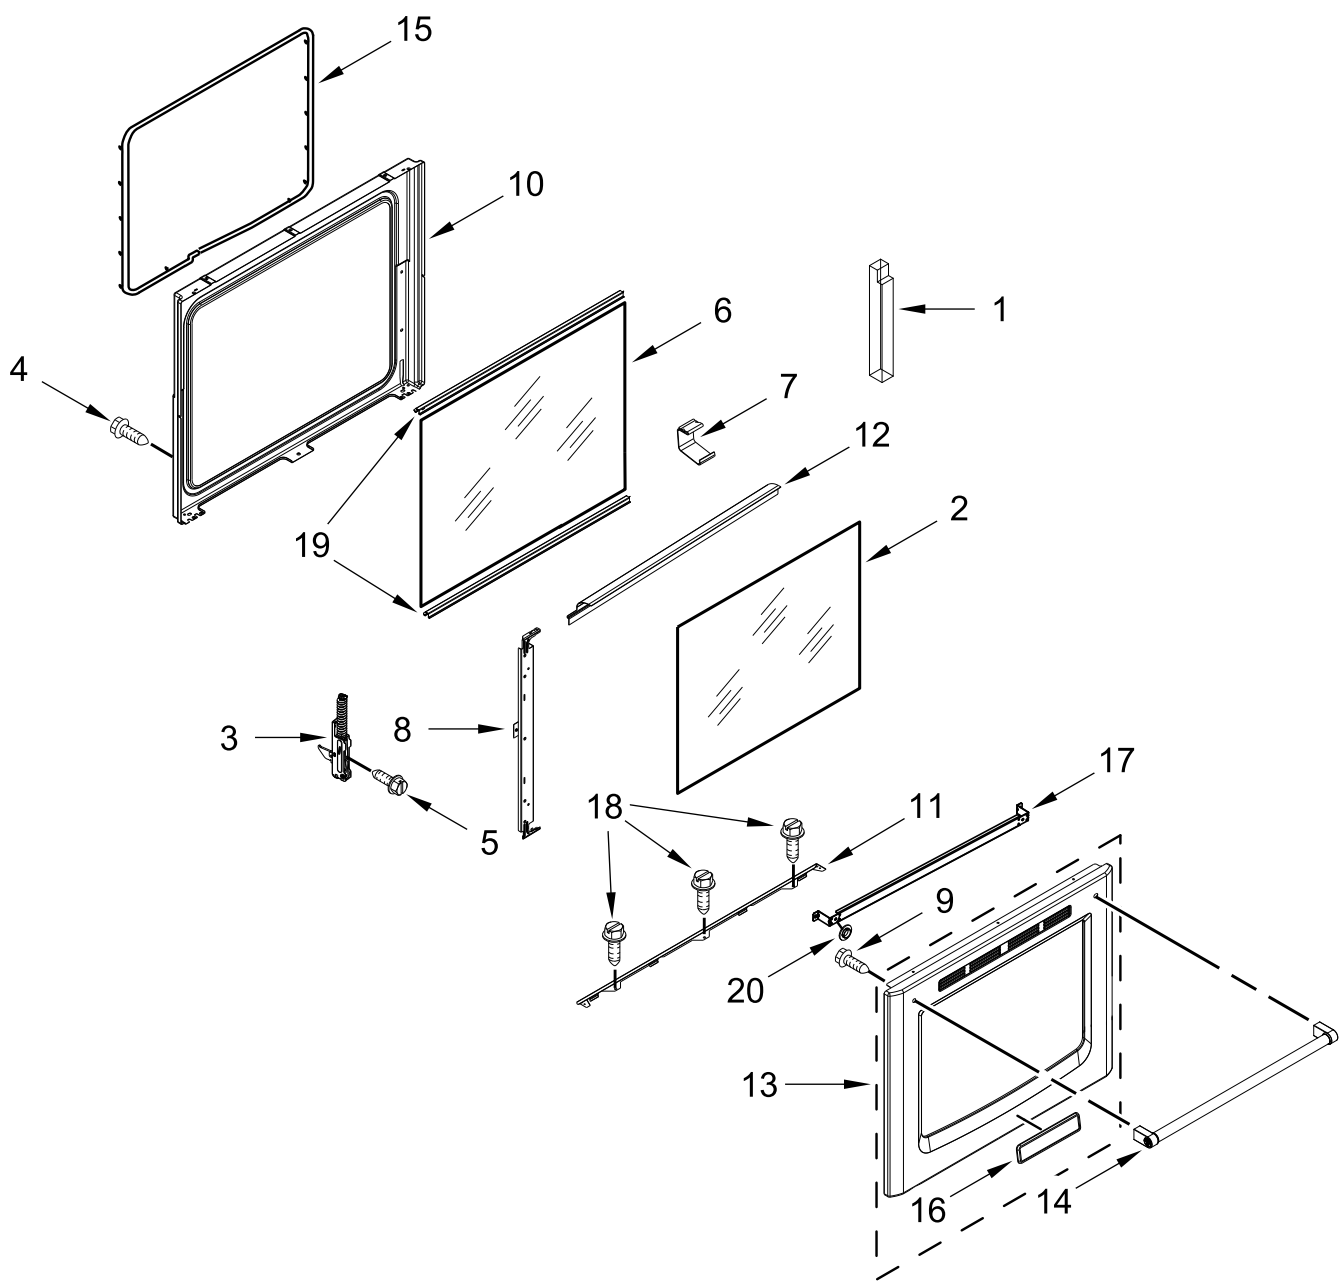

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10766562	Insulation, Door	10	W10826568	Liner, Door	16	W10612925	Badge
2		Glass, Outer Door	11	W10813140	Rail, Horizontal Support	17	W10541911	Bracket, Glass Upper Handle
	W10693388	Stainless	12		Liner, Door Scoop	18	9780274	Screw
3	W10885519	Hinge, Door (Active)		W10613791	Black	19	W10813142	Spacer, Glass
4	W10031790	Screw	13		Glass Assembly, Outer Door	20	W10319024	Washer, Door
5	W10362924	Screw		W11205027	Black			
6	W10813616	Glass, Inner	14		Handle, Door			
7	W10137382	Clip, Panel		W10834521	Stainless			
8	W10813139	Rail, Vertical Support	15	W10162385	Gasket, Door			
9	W10241367	Screw						

DRAWER PARTS

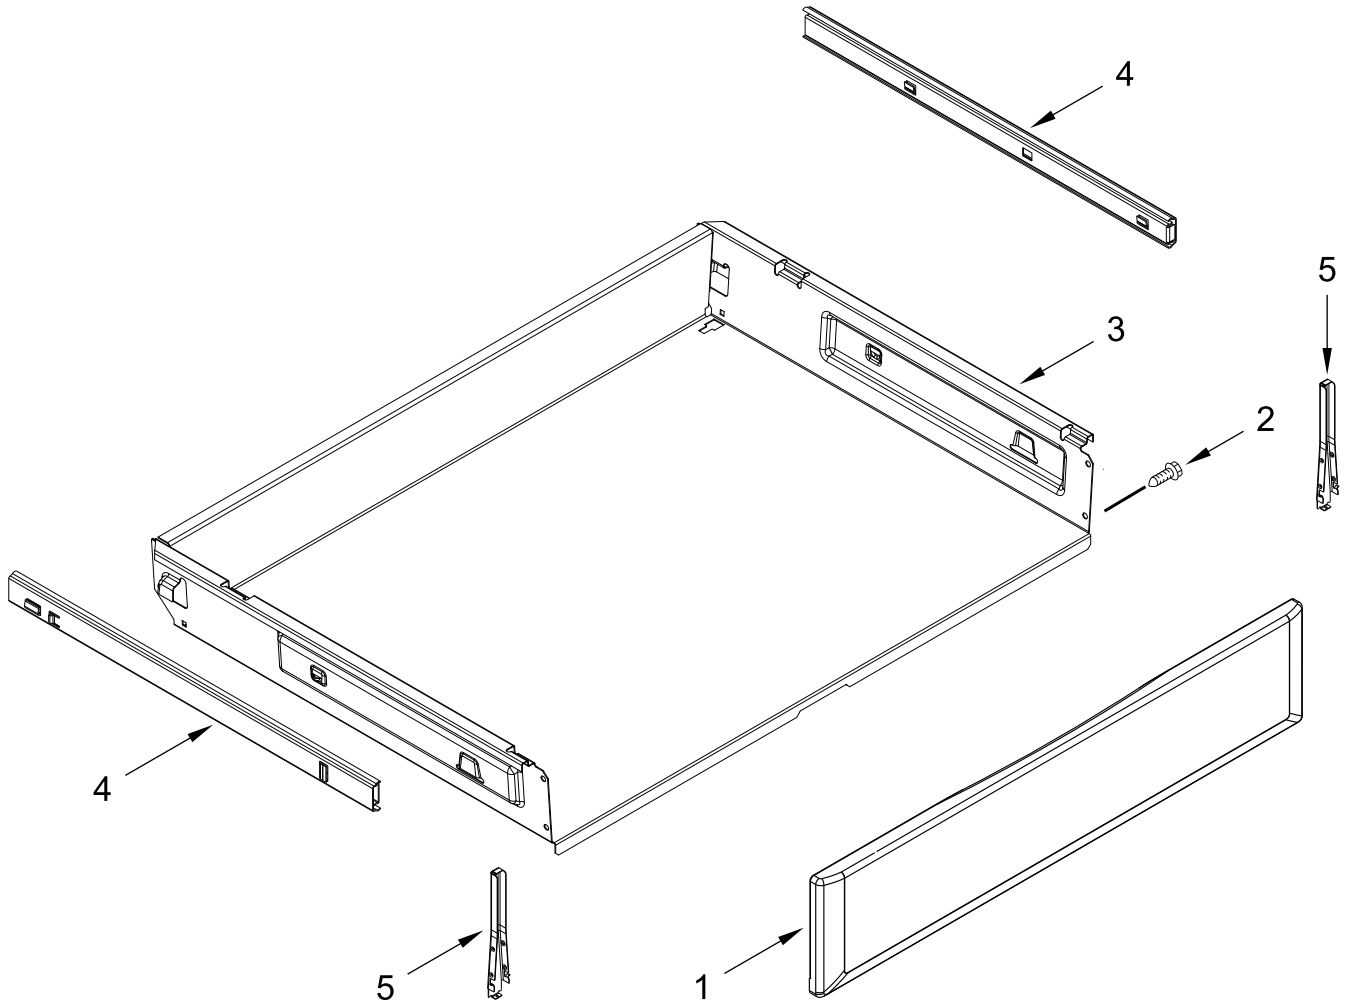

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W11205021	Black
2	3196169	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
5	W10318027	Bracket, Drawer

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	350938	Gray Primer
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	W10355049	Wipes, Stainless Steel Cleaning
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	W10432019	Alt Cleaning Kit
	WA906B	Scraper, Cooktop
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	W10205524	Split Oven Rack
	W10289145	Rack, Oven (Gull-Wing)
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting