




ELECTRIC RANGE

MODELS:

WFE515S0JS4 (Stainless)


COOKTOP PARTS

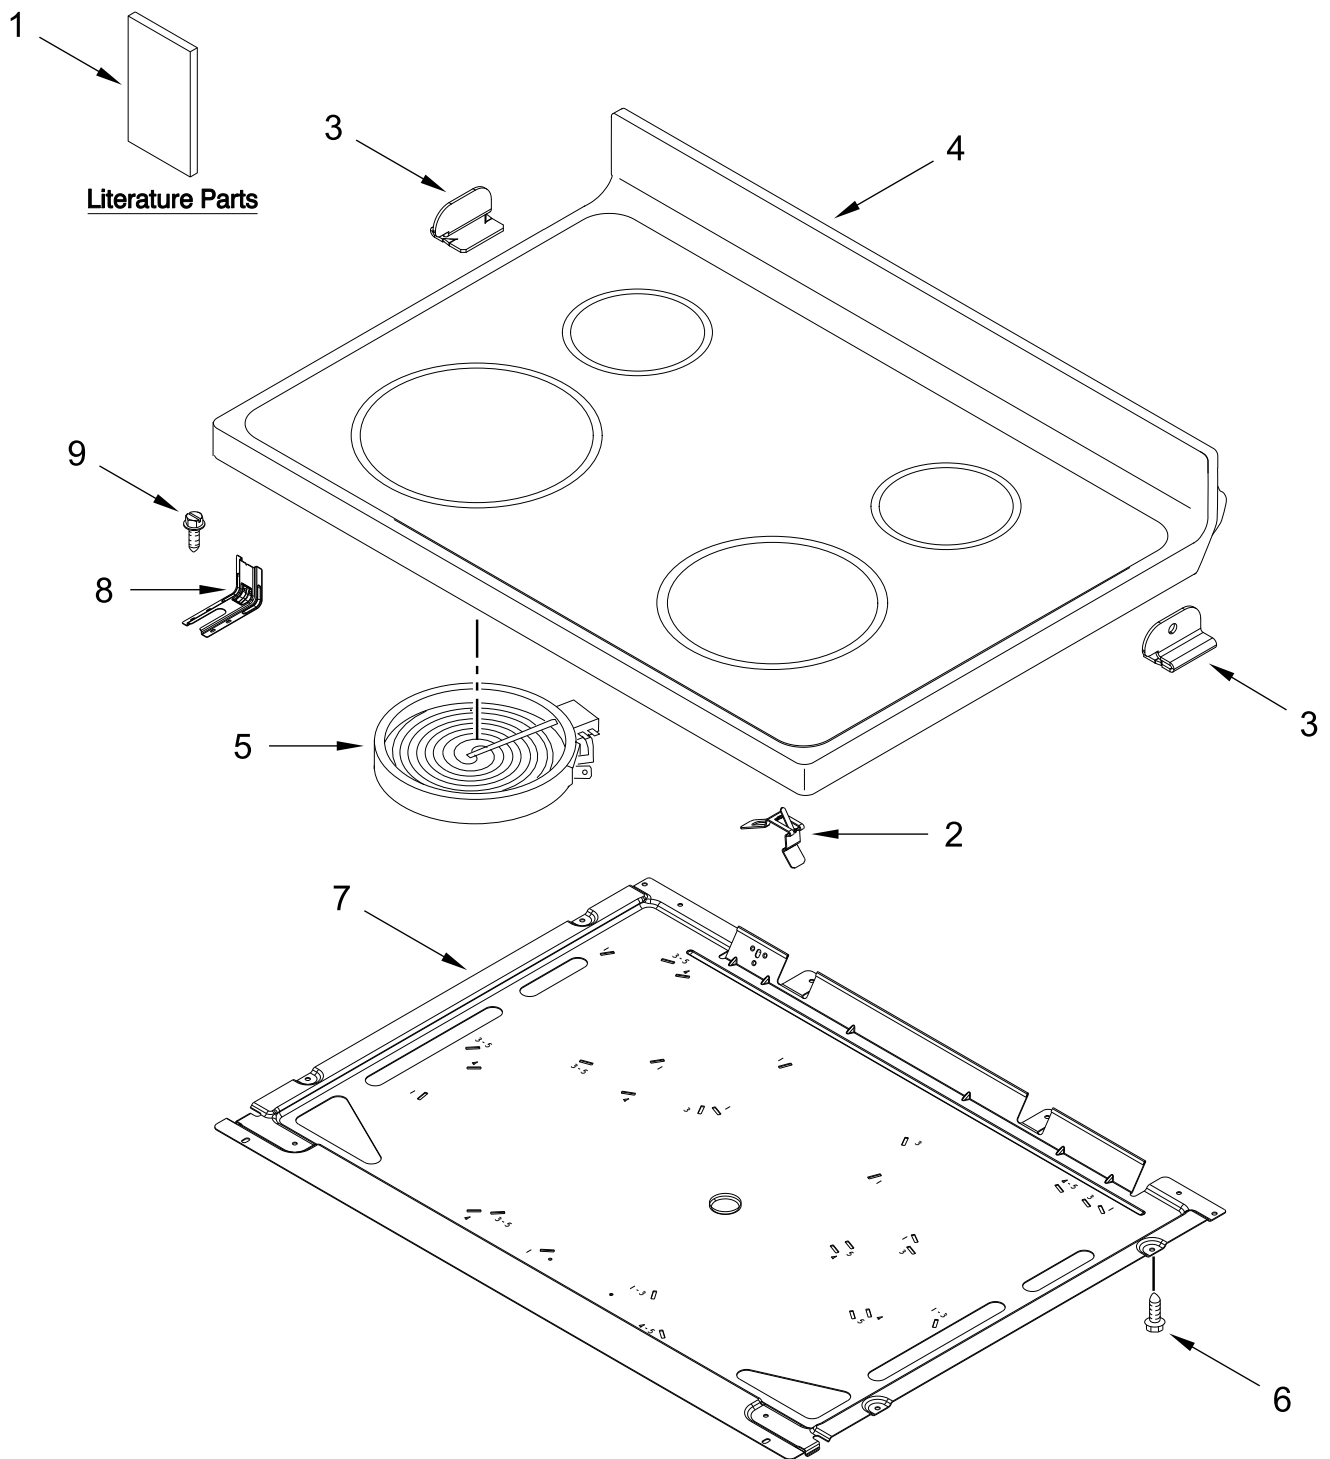

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11282542	Element (3000W Dual)	9	7101P485-60	Screw, Anti-Tip Kit
	W11435582	Quick Start Guide			(Left Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11509617	Owners Manual		8273994	Element (1200W)			
	W11401736	Tech Sheet			(Left Rear, Right Rear)		W11452623	Harness, Main
2	W11600012	Spring, Element		8273992	Element (2500W)		W11134551	Harness, Cooktop (Right)
3	W10607641	Bracket, Cooktop (Left)			(Right Front)			
	W10607642	Bracket, Cooktop (Right)	6	3196169	Screw		W11134603	Harness, Cooktop (Left)
			7	W10691223	Pan, Radiant Element			
4		Cooktop	8	W11379945	Bracket, Anti-Tip			
	W11034830	Black						


CONTROL PANEL PARTS

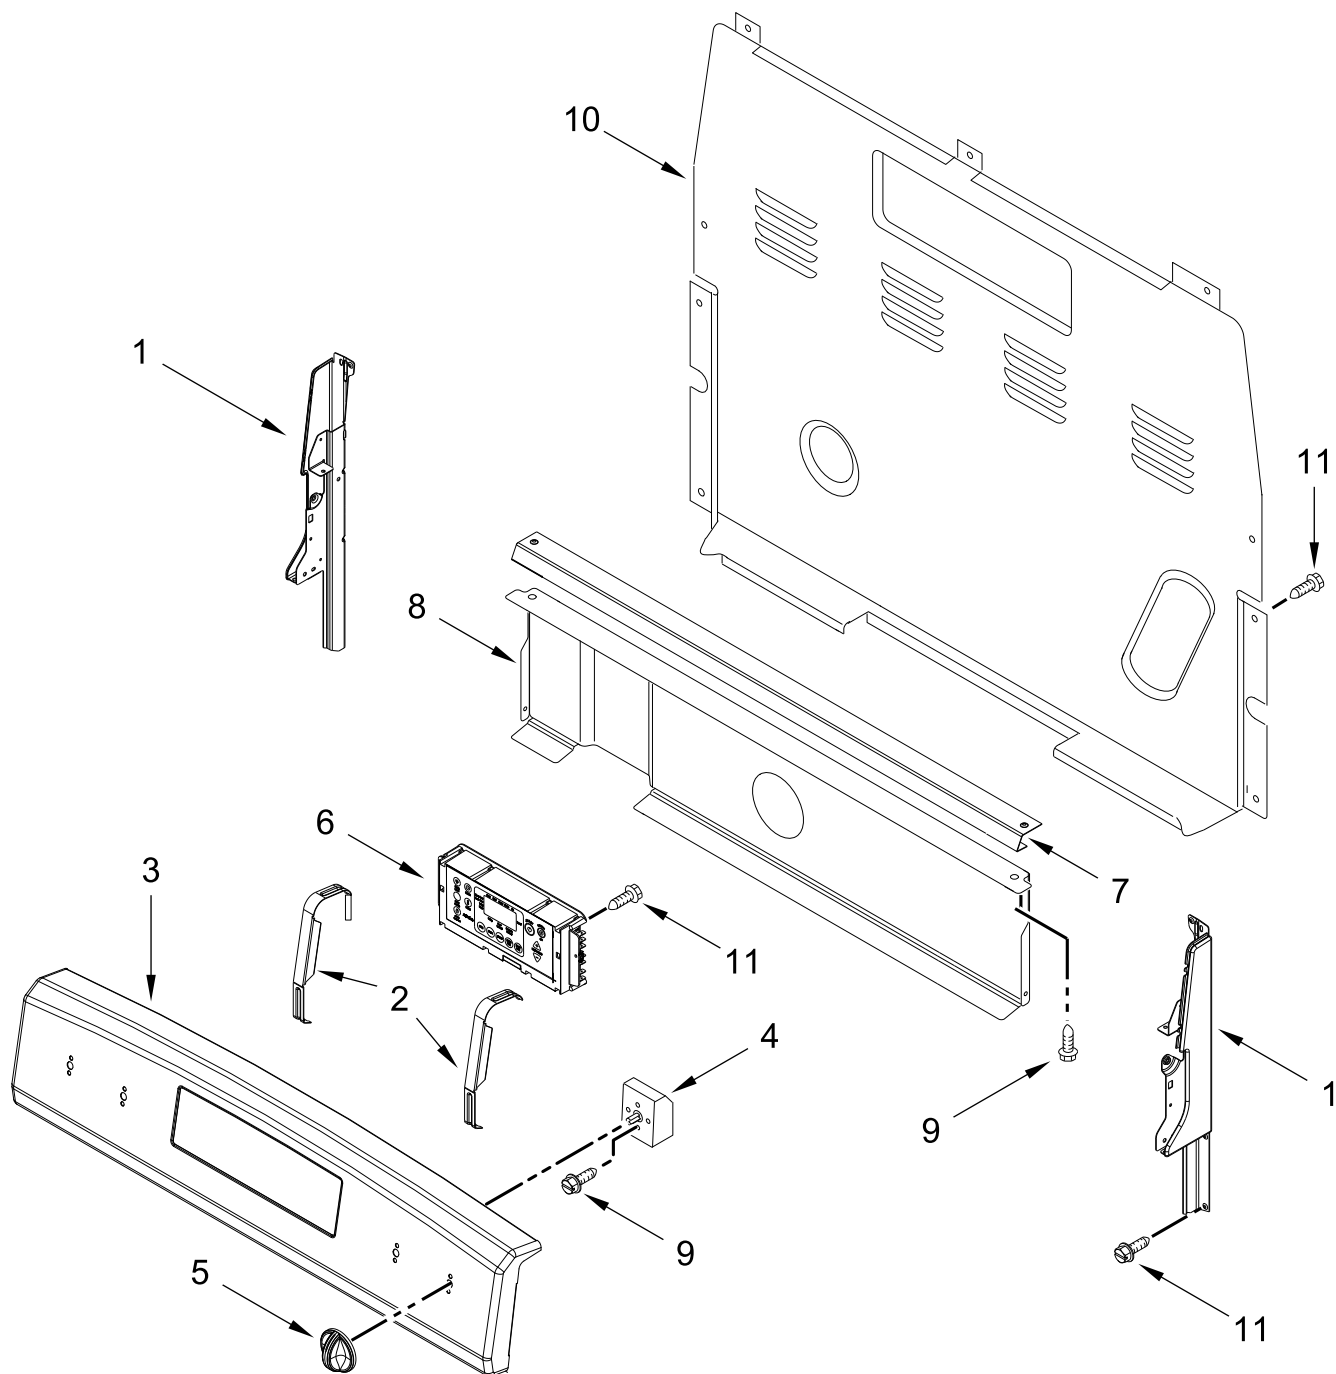

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	6		Control, Electronic (LCX)
	W11130372	Black (Left)			(Left Front)		W11515107	Black
	W11130379	Black (Right)		3148951	Switch, Infinite	7	W10525121	Bracket, Console Mounting
2	W10695491	Bracket, Control			(Right Rear and Left Rear)	8	W10134247	Shield, Heat
3		Console, Assembly		3148954	Switch, Infinite (Orange)	9	3400882	Screw
	W11027387	Stainless			(Right Front)	10	8272473	Cover, Upper Rear
			5		Knob	11	3196178	Screw
				W11022718	Black			


CHASSIS PARTS

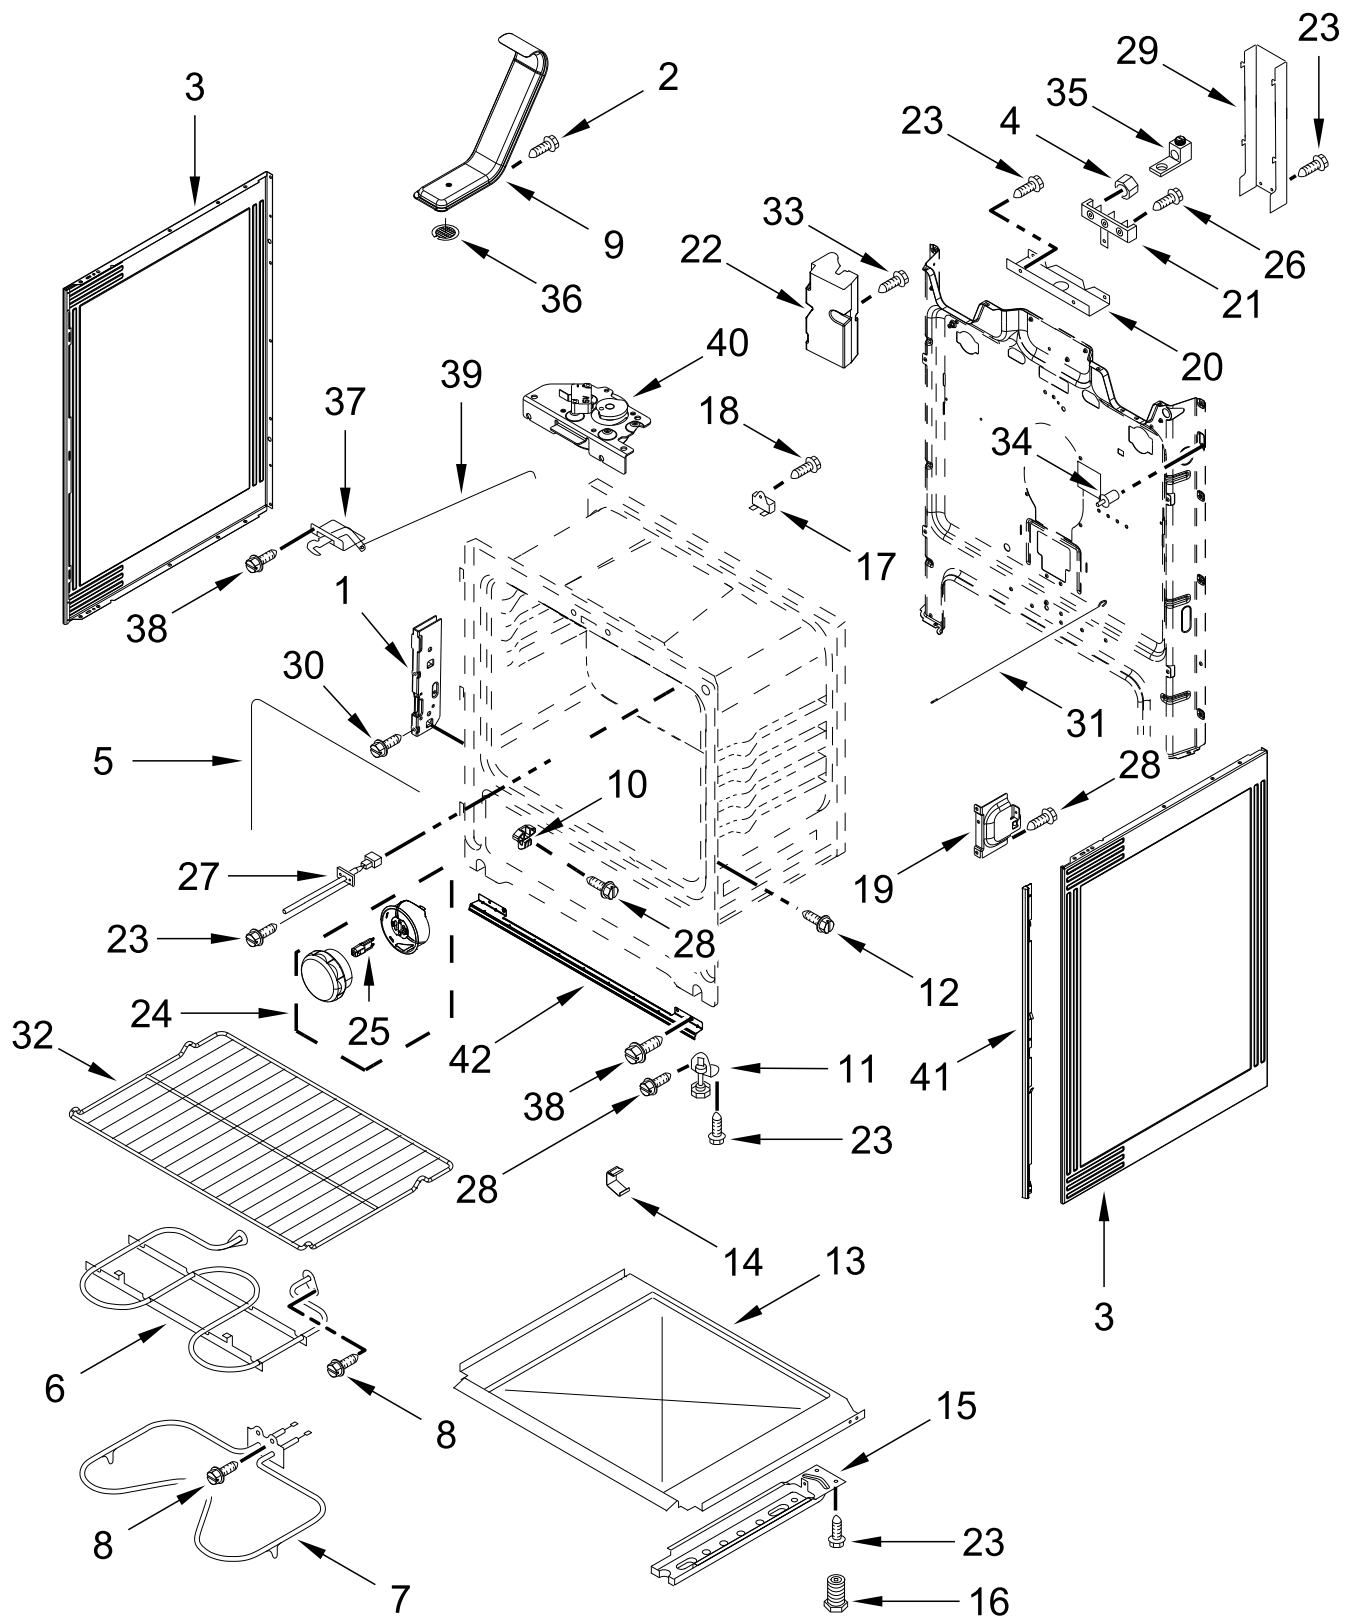

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	16	W10058460	Foot, Leveling	34	W11511828	Switch, Door
2	3196154	Screw	17	3196548	Fuse, Thermal	35	W10281322	Kit, Bare Wire Adapter Block
3		Panel, Side	18	3196172	Screw	36	W11092984	Screen, Vent
	W10162245	Black	19	W10404688	Clip, Oven Support	37	9761013	Front Door Latch Assembly
4	3400029	Nut	20	3186034	Bracket, Service	38	3196560	Screw
5	W11491751	Seal, Door	21	W10245259	Block, Terminal	39	W10078380	Rod, Latch
6	9757340	Element, Broil	22	W10910404	Counterweight	40	W10107820	Rear Door Latch Assembly
7	W11111743	Element, Bake	23	3196178	Screw	41	W11510560	Barrier Rail, Rubber (Left and Right)
8	3196174	Screw	24	W11634772	Light Assembly	42	W11464547	Bracket, Front Frame
9	W10134285	Tube, Vent	25	W10571723	Bulb, Halogen 40 Watts			FOLLOWING PARTS NOT ILLUSTRATED
10	W10674705	Glide, Drawer Front	26	3400016	Screw	W10774939		Insulation, Wrap
11	W10341186	Front Foot Assembly	27	W10181986	Sensor, Oven	W11127325		Insulation, Back
12	W10067840	Screw	28	3196169	Screw	W10333344		Insulation, Flue
13	8054068	Retainer, Insulation	29	W10326122	Cover, Terminal Block			
14	W10137382	Clip, Panel	30	W10031780	Screw			
15	W10390008	Base Rail Assembly (Left)	31	9757239	Rod, Door Switch			
	W10390007	Base Rail Assembly (Right)	32	W11173792	Rack, Oven			
			33	W11034869	Screw			

DOOR PARTS

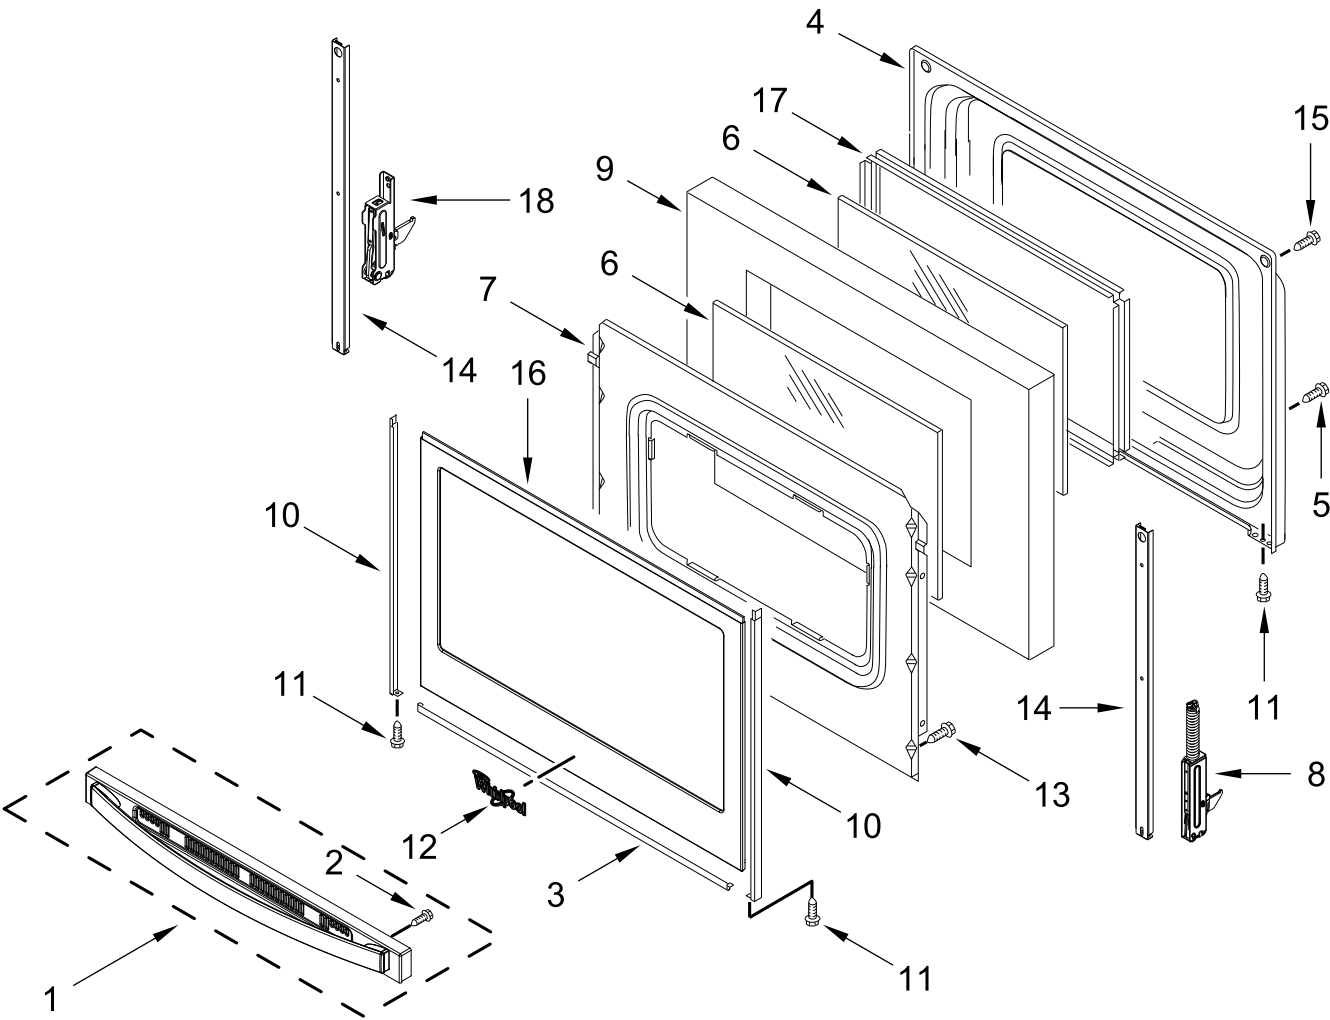


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly
	W11242950	Stainless
2	W10480830	Screw
3		Trim, Lower Door
	W11444043	Black
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner
7	W11380222	Retainer, Insulation

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10299224	Hinge, Active (With Spring)
9	W10278991	Insulation, Door Strip
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
11	W10327235	Screw
12	W10884775	Badge
13	W10031780	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
14	W11379944	Strap, Door
15	W10200660	Screw
16		Glass, Outer Door
	W10884159	Black
17	W10316950	Frame, Glass
18	W10299227	Hinge, Door (Passive)

DRAWER PARTS

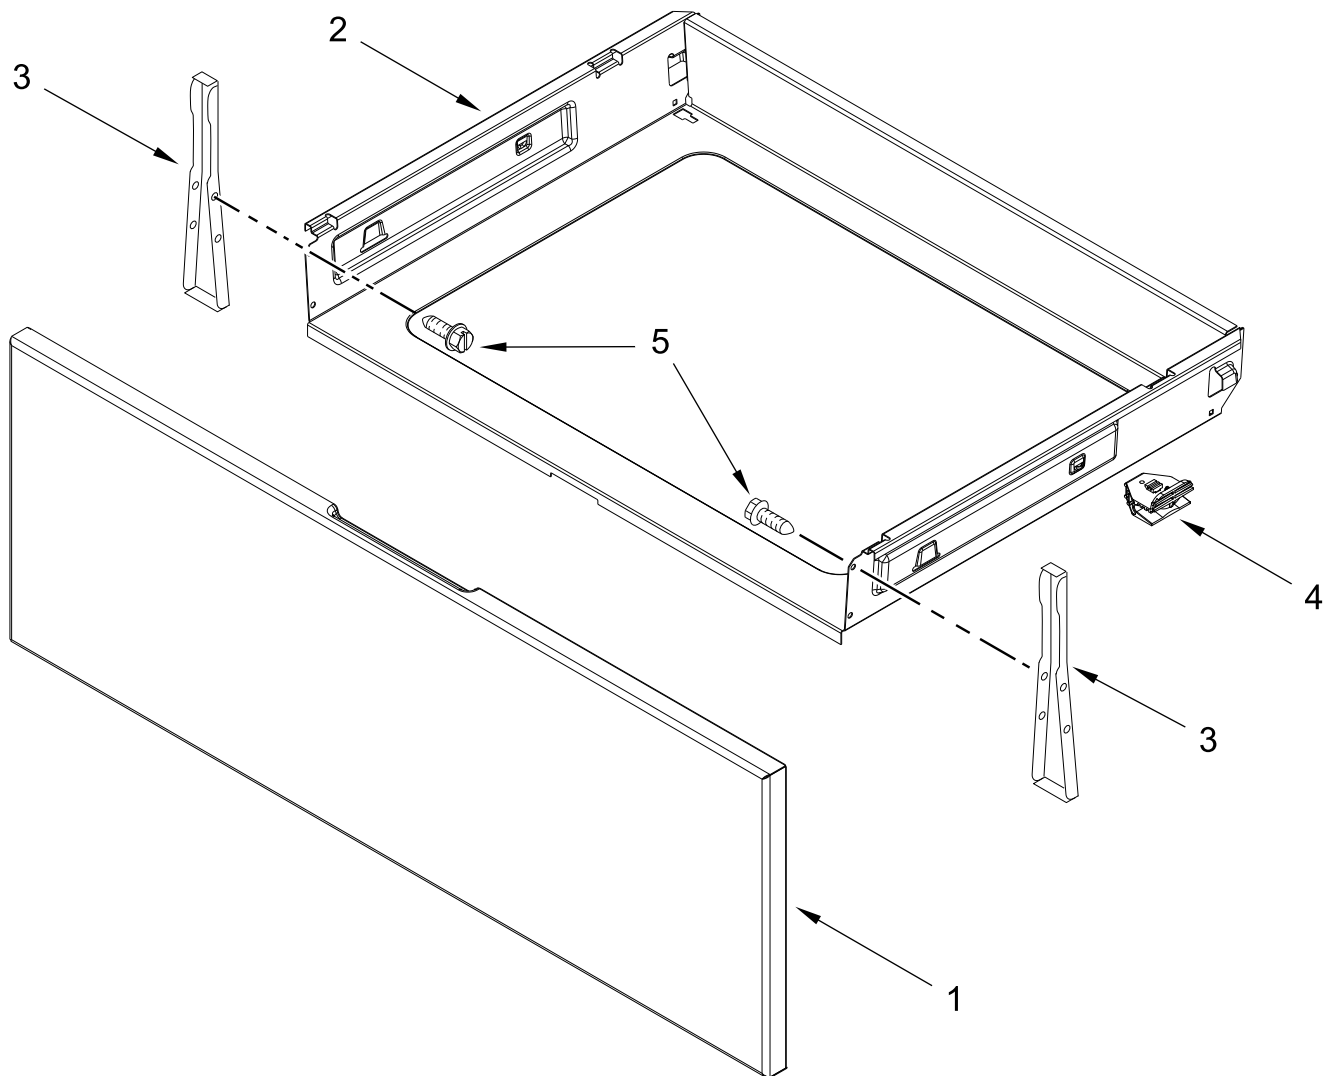

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear
	W10330070	Stainless	3	W10462910	Bracket, Mounting Drawer	5	3196165	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting