




ELECTRIC RANGE

MODELS:

WFES3330RS0 (Stainless)


COOKTOP PARTS

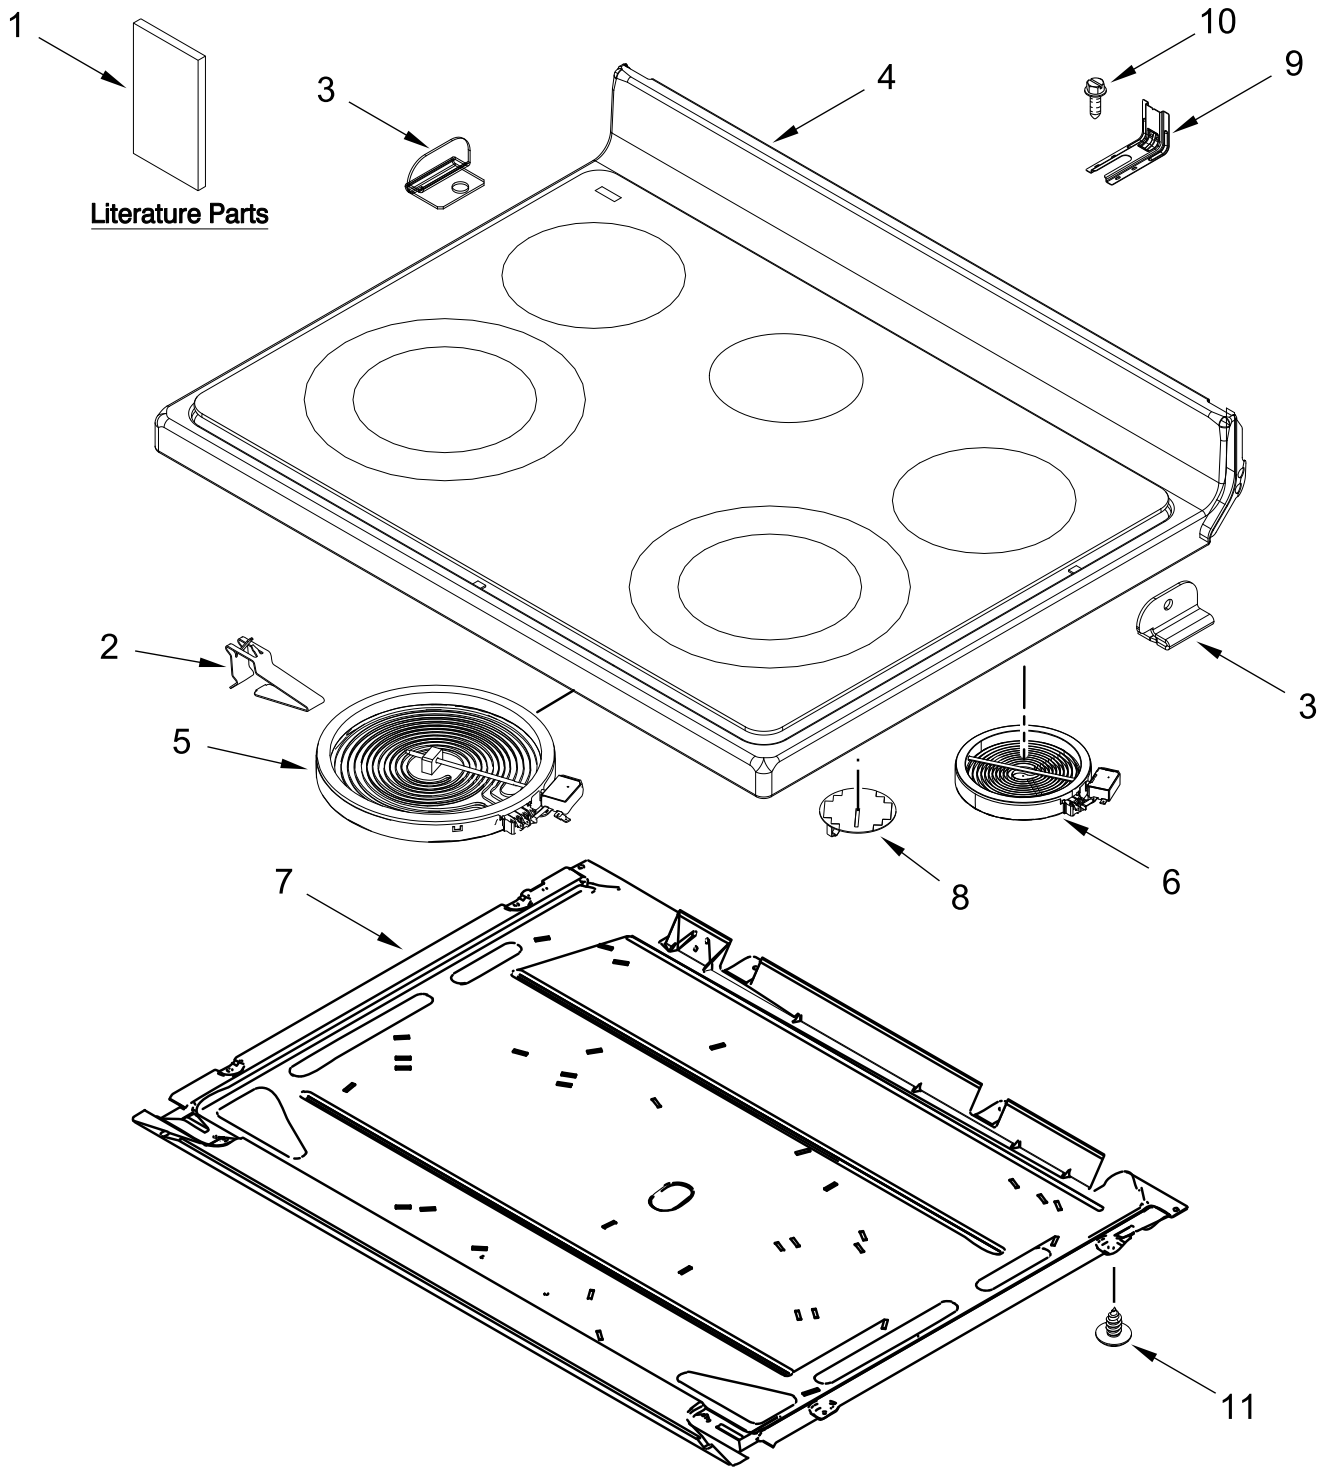

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000 and 1400W)	10	7101P485-60	Screw, Anti-Tip Kit
	W11617173	Owners Manual			(Left Front and Right Front)	11	3196169	Screw
	W11618614	Quick Start Guide						FOLLOWING PARTS NOT ILLUSTRATED
	W11618626	Tech Sheet	6	W10248261	Element (1200W)		W11702766	Harness, Main
2	W11600012	Spring, Element			(Left Rear and Right Rear)		W11134603	Harness, Cooktop (Left)
3	W10607641	Bracket, Cooktop (Left)	7	W10691223	Pan, Radiant Element		W11134845	Harness, Cooktop (Right)
	W10607642	Bracket, Cooktop (Right)	8	W11668631	Element, Warm Zone		W11598759	Harness, Warm Zone
4		Cooktop			(Center)			
	W11629477	Black	9	W11379945	Bracket, Anti-Tip			


CONTROL PANEL PARTS

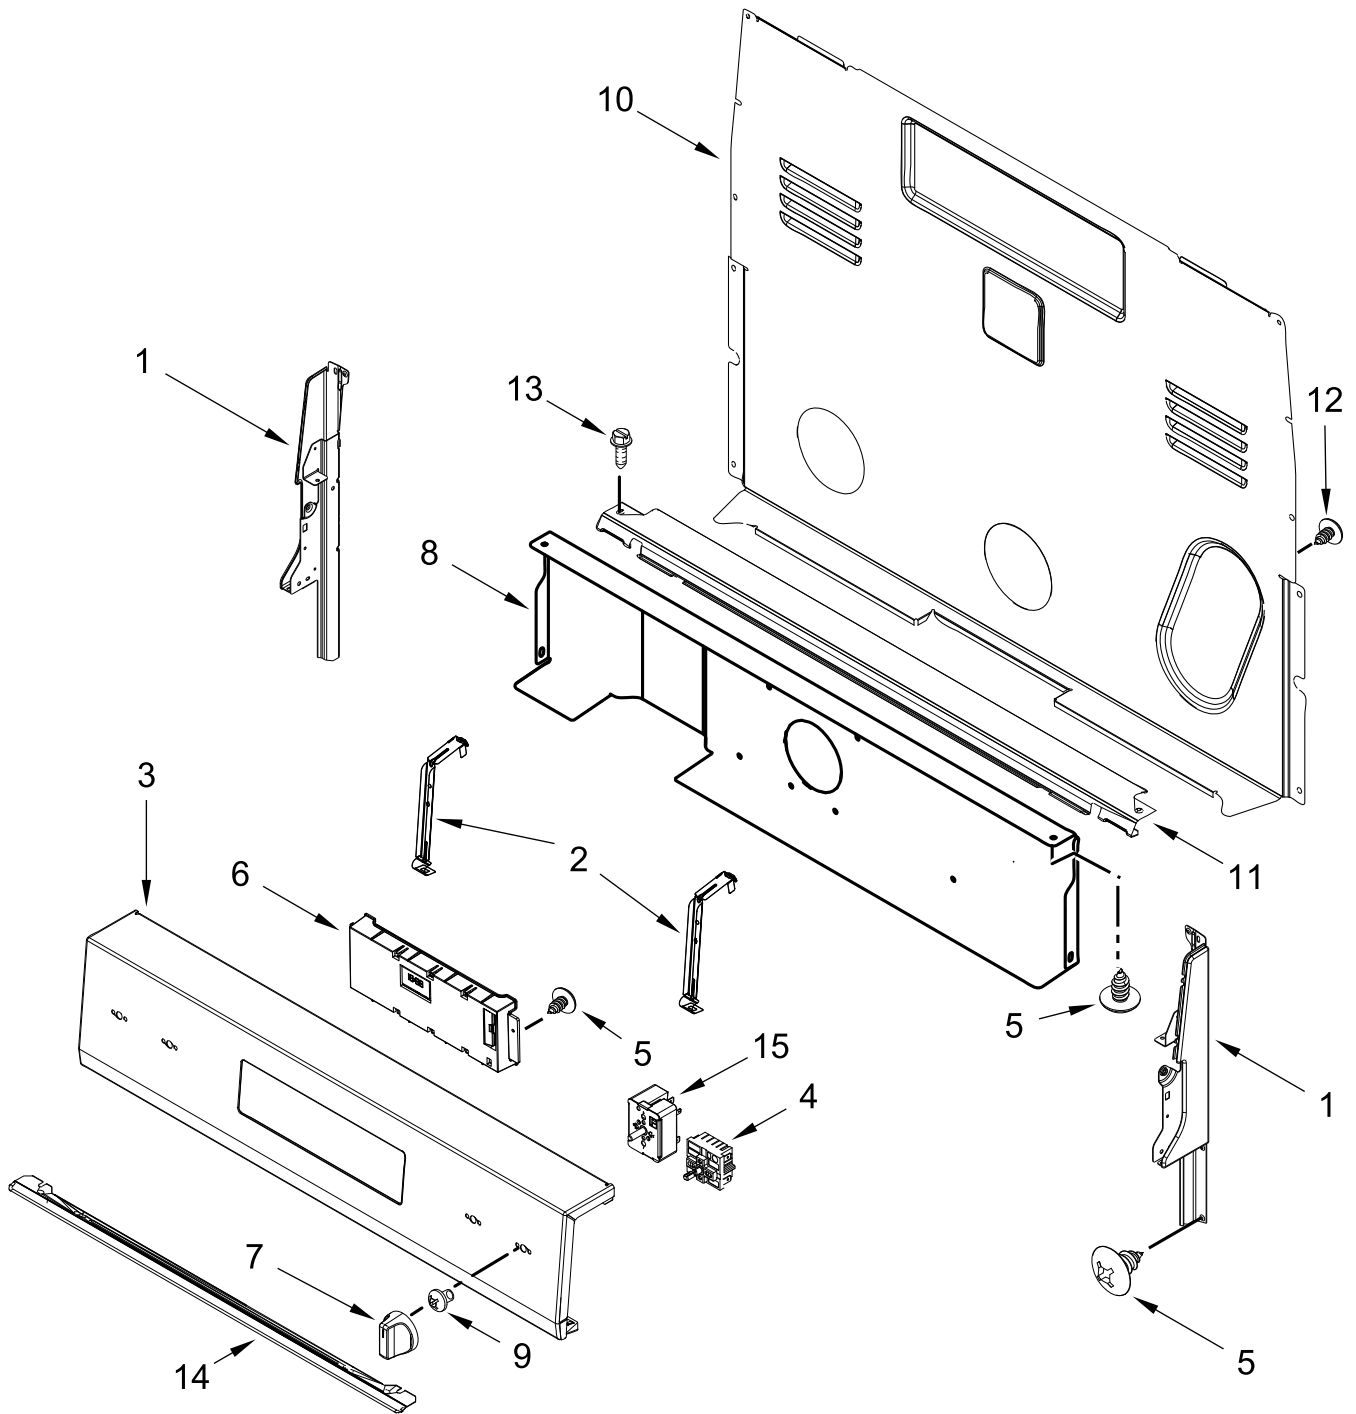

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	3196178	Screw	12	3196169	Screw
	W11213290	Black (Left)	6		Control, Electronic (LCX)	13	3196165	Screw
	W11213292	Black (Right)				14		Bracket, Eye Brow
2	W11290750	Bracket, Control		W11637089	Black		W11443964	Black
3		Console, Assembly	7		Knob			
	W11375821	Stainless		W11331196	Black			
4	W10437092	Switch, Infinite (Left Front and Right Front)	8	W10134247	Shield, Heat			
			9	3400882	Screw			
			10	8272473	Cover, Upper Rear			
	W10578768	Switch, Infinite (Left Rear and Right Rear)	11	W10525121	Bracket, Console Mounting			


CHASSIS PARTS

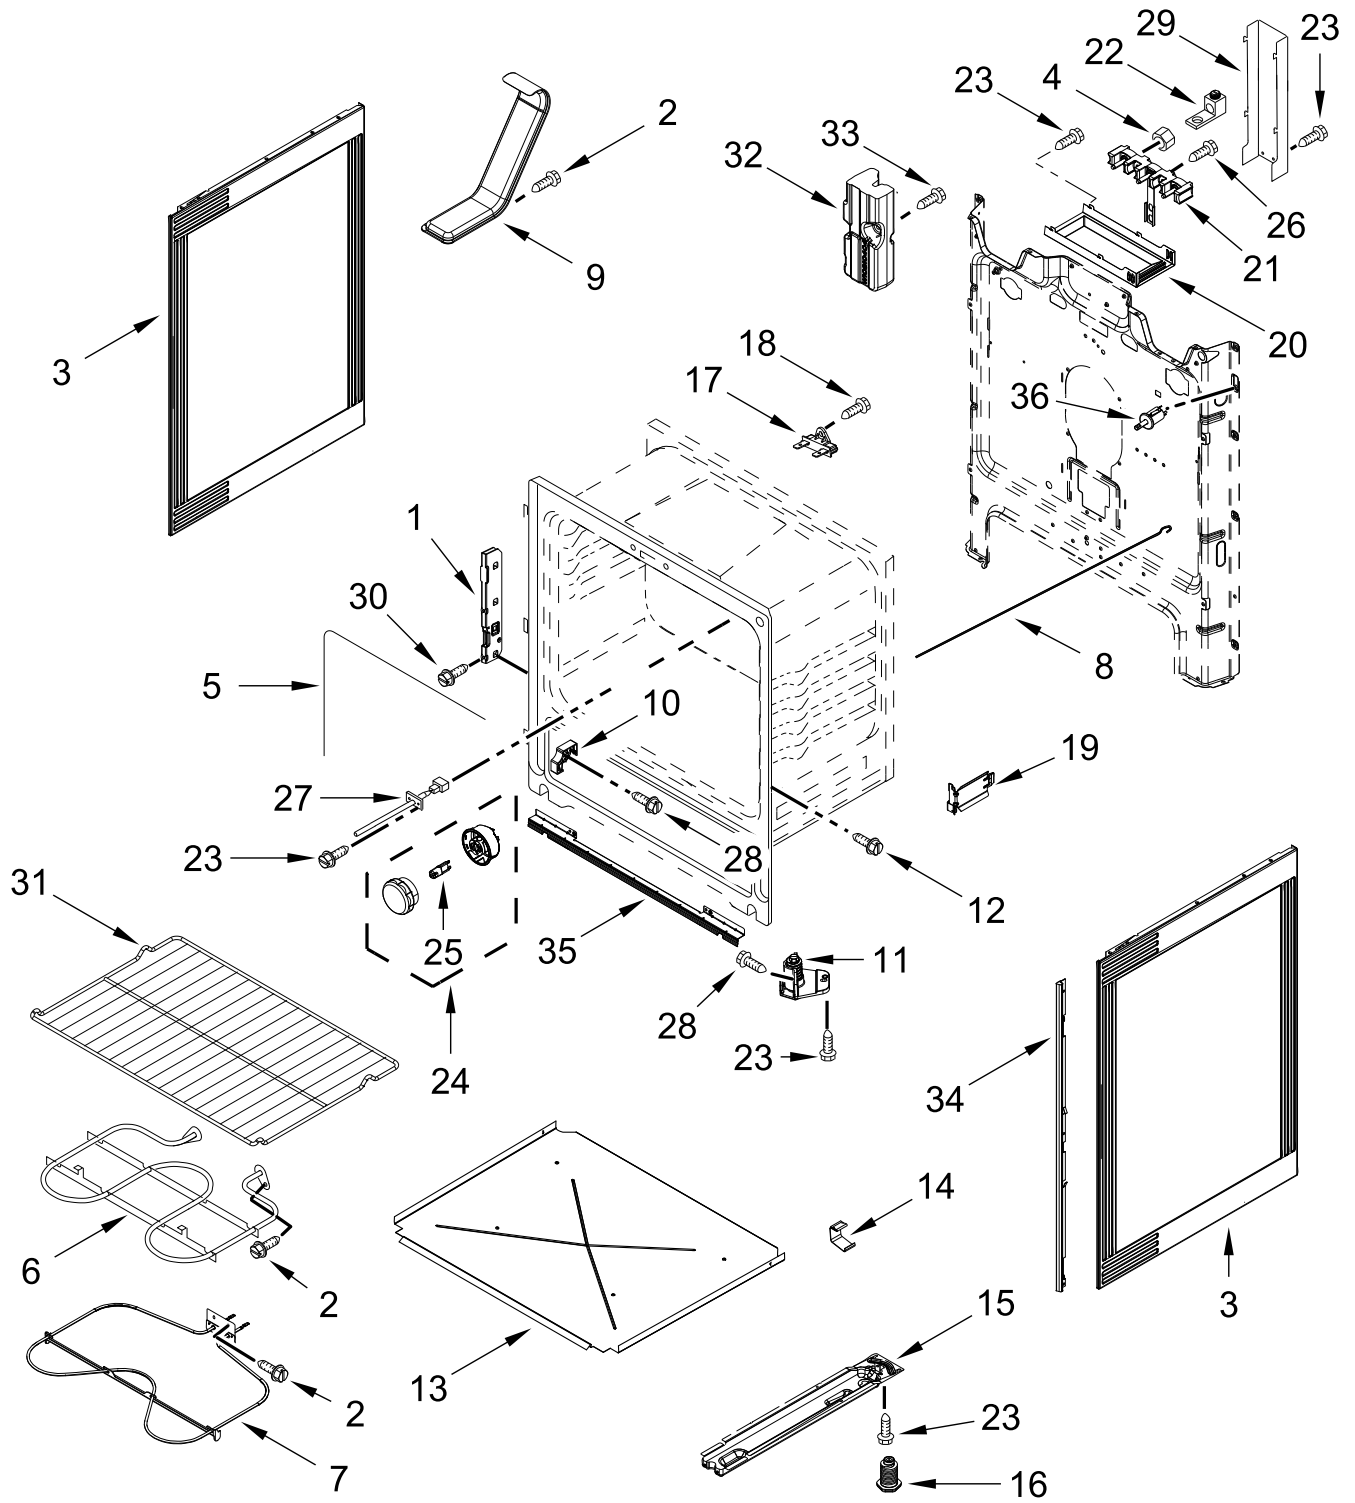

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	15	W10390008	Base Rail Assembly (Left)	27	W10586204	Sensor
2	3196154	Screw				28	3196169	Screw
3		Panel, Side		W10390007	Base Rail Assembly (Right)	29	W10326122	Cover, Terminal Block
	W10162245	Black				30	W10031780	Screw
4	3400029	Nut	16	W10058460	Foot, Leveling	31	W11173792	Rack, Oven
5	W10129032	Seal, Door	17	3196548	Fuse, Thermal	32	W10910404	Counterweight
6	9757340	Element, Broil	18	3196172	Screw	33	W11034869	Screw
7	W11022836	Element, Bake	19	W10404688	Clip, Oven Support	34	W11510560	Barrier Rail, Rubber (Left and Right)
8	9757239	Rod, Door Switch	20	3186034	Bracket, Service	35	W11464547	Bracket, Front Frame
9	W10134285	Tube, Vent	21	W10245259	Block, Terminal	36	W11511828	Switch, Door
10	W10674705	Glide, Drawer Front	22	W10281322	Kit, Bare Wire Adapter Block			FOLLOWING PARTS NOT ILLUSTRATED
11	W10341186	Front Foot Assembly	23	3196178	Screw			
12	W10067840	Screw	24	W11634772	Light Assembly		8273263	Insulation, Wrap
13	8054068	Retainer, Insulation	25	W10571723	Bulb, Halogen 40 Watts		8272611	Insulation, Back
14	W10137382	Clip, Panel	26	3400016	Screw		W10333344	Insulation, Flue


DOOR PARTS

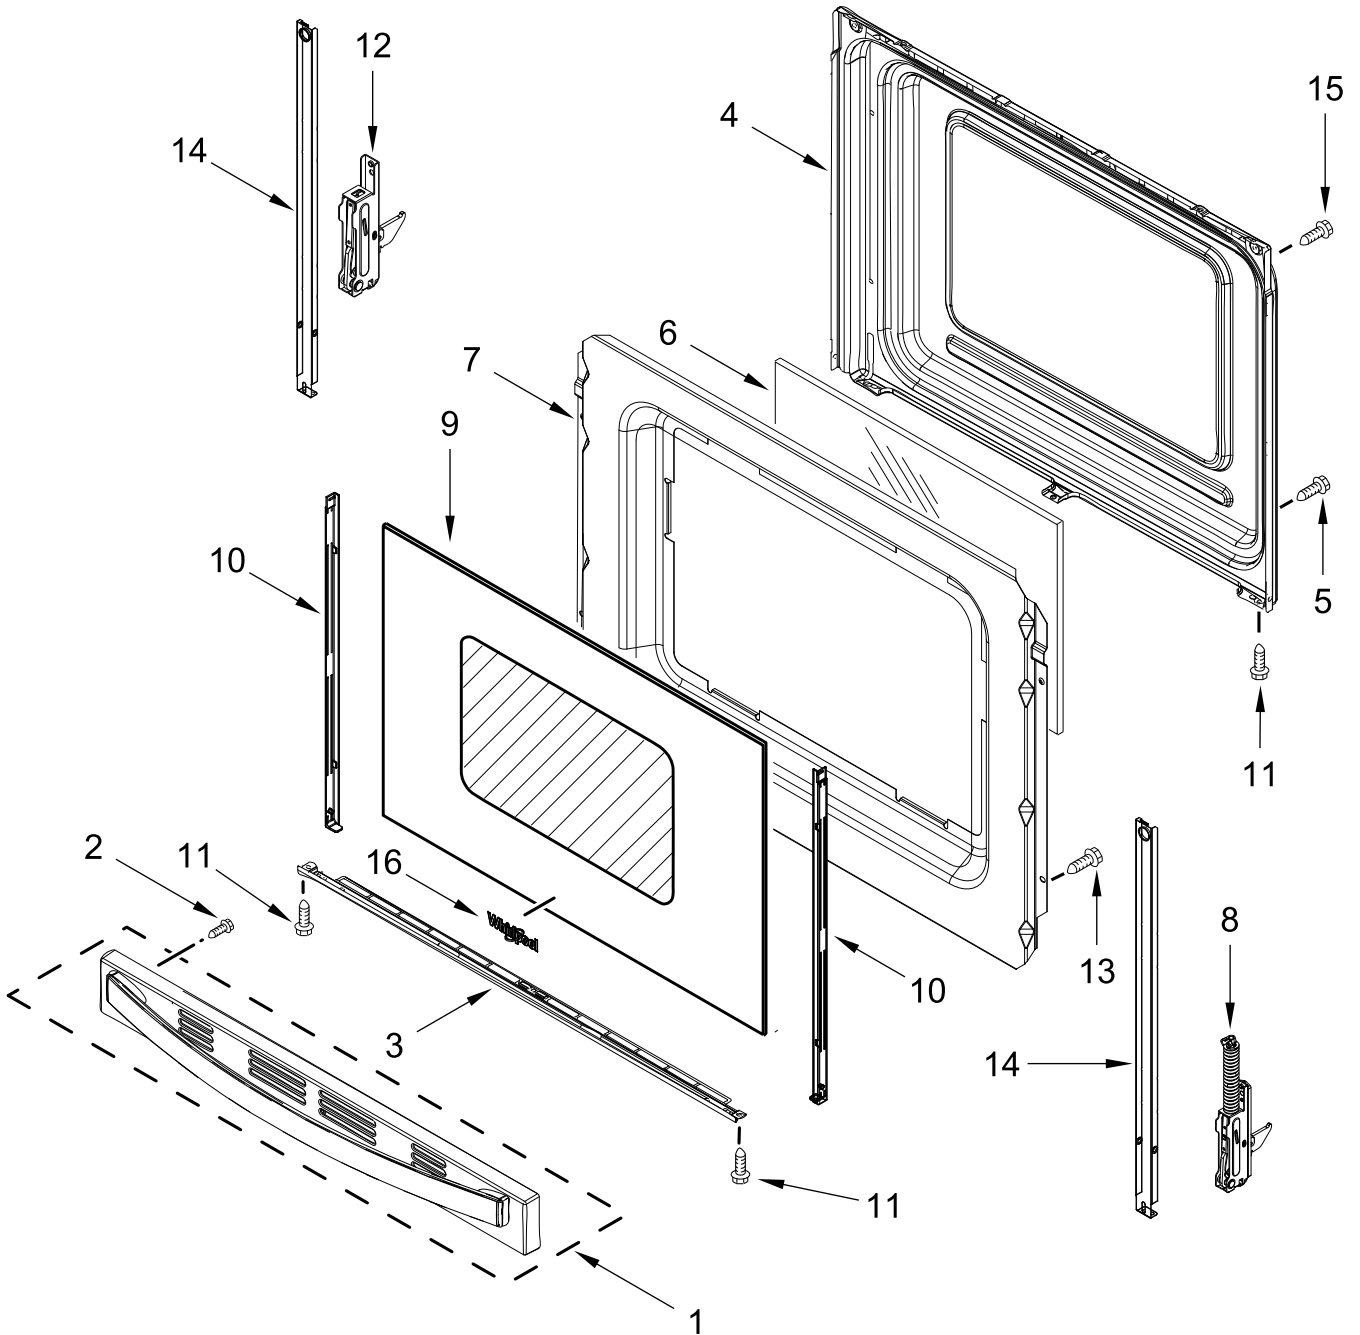

DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	7	W11380221	Retainer, Insulation	12	W10299227	Hinge, Door (Passive)
	W11353054	Stainless	8	W10299225	Hinge, Active	13	W10031780	Screw
2	W10465158	Screw	9		Glass Assembly, Outer Door	14	W11379944	Strap, Door
3		Trim, Lower Door		W11624777	Black	15	W10200660	Screw
	W11444043	Black	10		Trim, Side	16	W10884775	Badge
4	9761344	Liner, Door		W10746436	Black (Left)			
5	W10031790	Screw		W10746435	Black (Right)			
6	W11367326	Glass, Inner	11	W10327235	Screw			

DRAWER PARTS

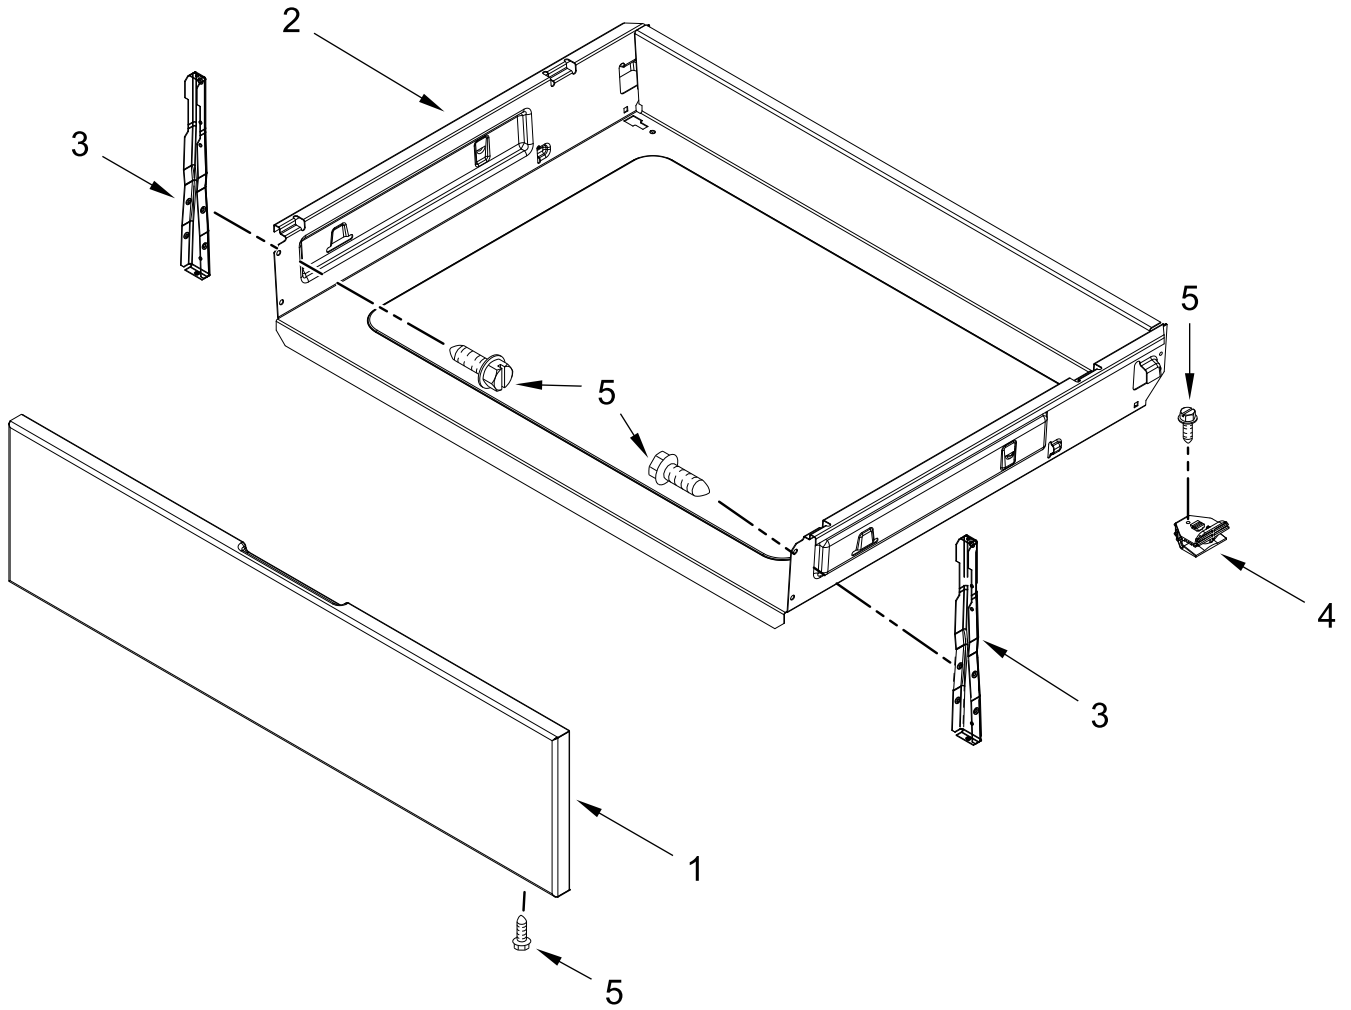

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear
	W10330070	Stainless	3	W10462910	Bracket, Mounting Drawer	5	3196169	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting