




30" ELECTRIC FREESTANDING SELF CLEAN RANGE

MODELS:

YWFC150M0JW3 (White)

YWFC150M0JB3 (Black)


COOKTOP PARTS

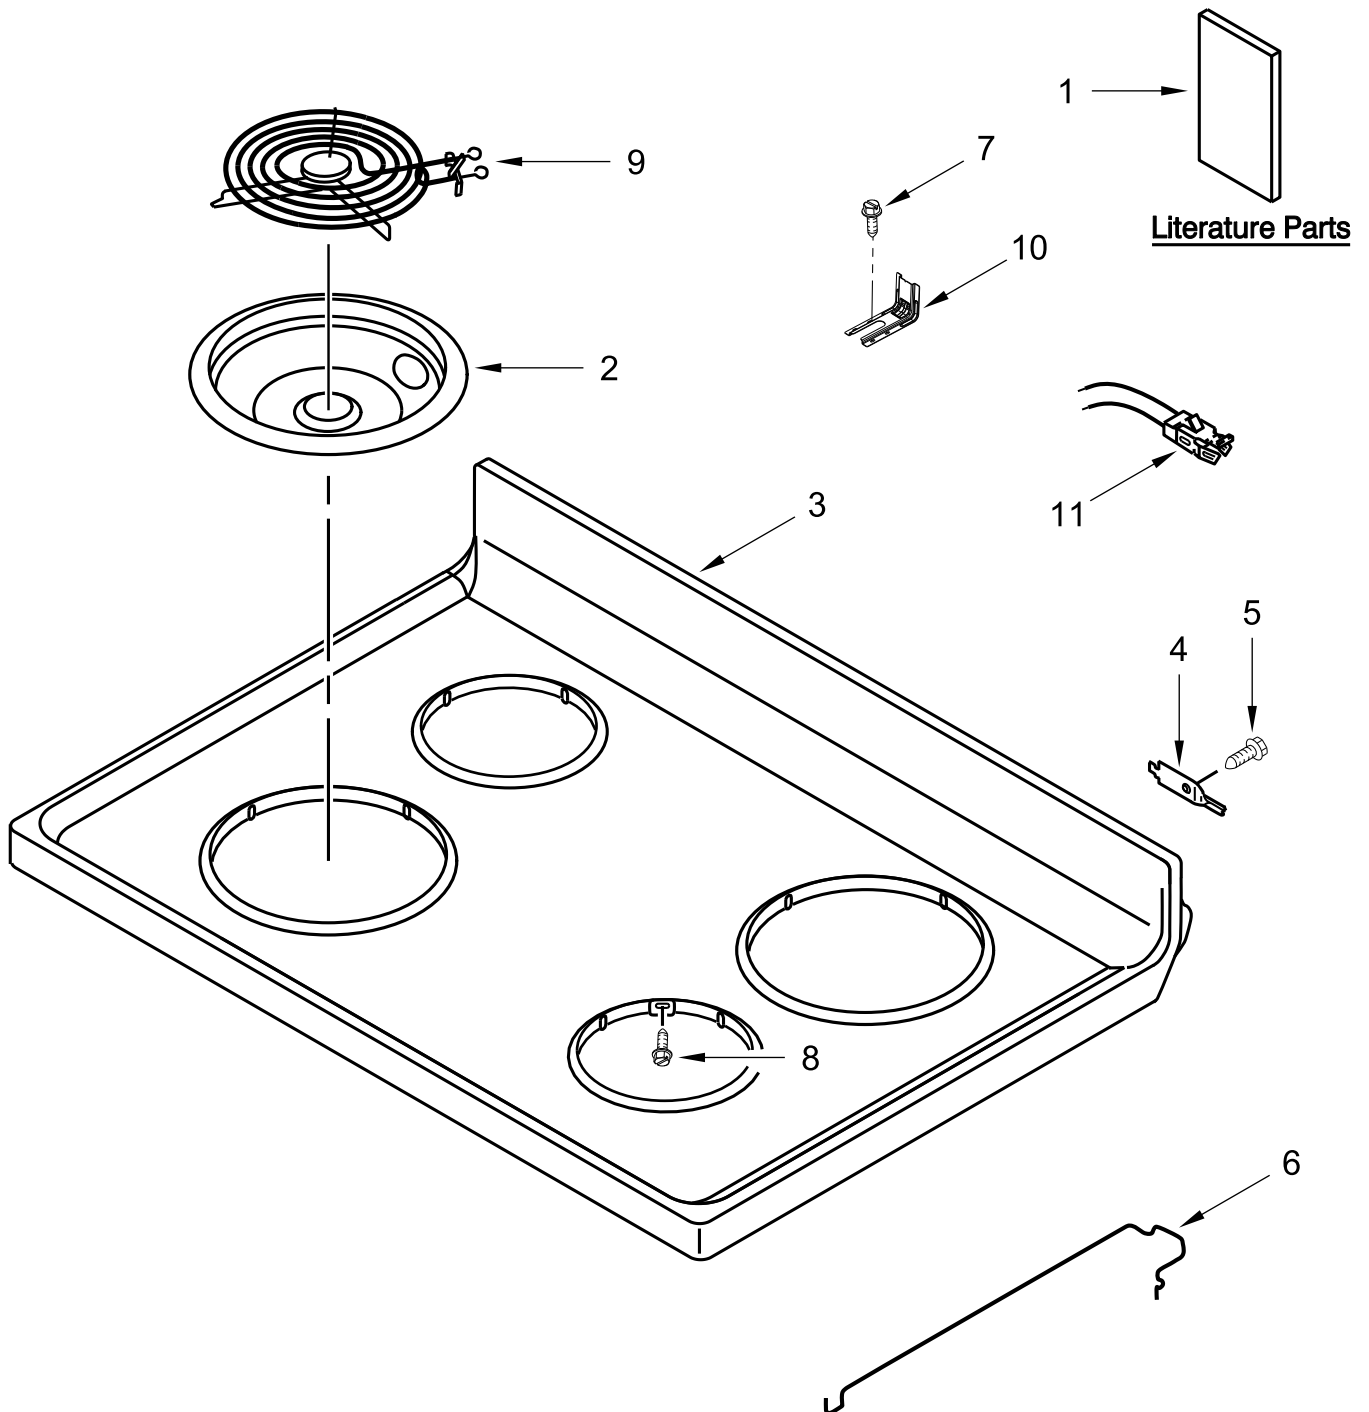

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	3196178	Screw	11	814399	Receptacle, Element
	W11509595	Owners Manual	6	3195812	Rod, Support			
	W11401729	Tech Sheet	7	7101P485-60	Screw, Anti-Tip Kit			FOLLOWING PARTS NOT ILLUSTRATED
2	W10196406	Bowl, Drip (6") (Right Front and Left Rear)	8	3196154	Screw	W11452634		Harness, Main
	W10196405	Bowl, Drip (8") (Left Front and Right Rear)	9	W11364018	Element, Coil Heating (1500W)	W11134651		Harness, Cooktop
					(Right Front and Left Rear)			
				W11364019	Element, Coil Heating (2400W)			
3		Cooktop			(Left Front and Right Rear)			
	3186231	White						
	3186233	Black						
4	3195060	Hinge, Cooktop	10	W11379945	Bracket, Anti-Tip			


CONTROL PANEL PARTS

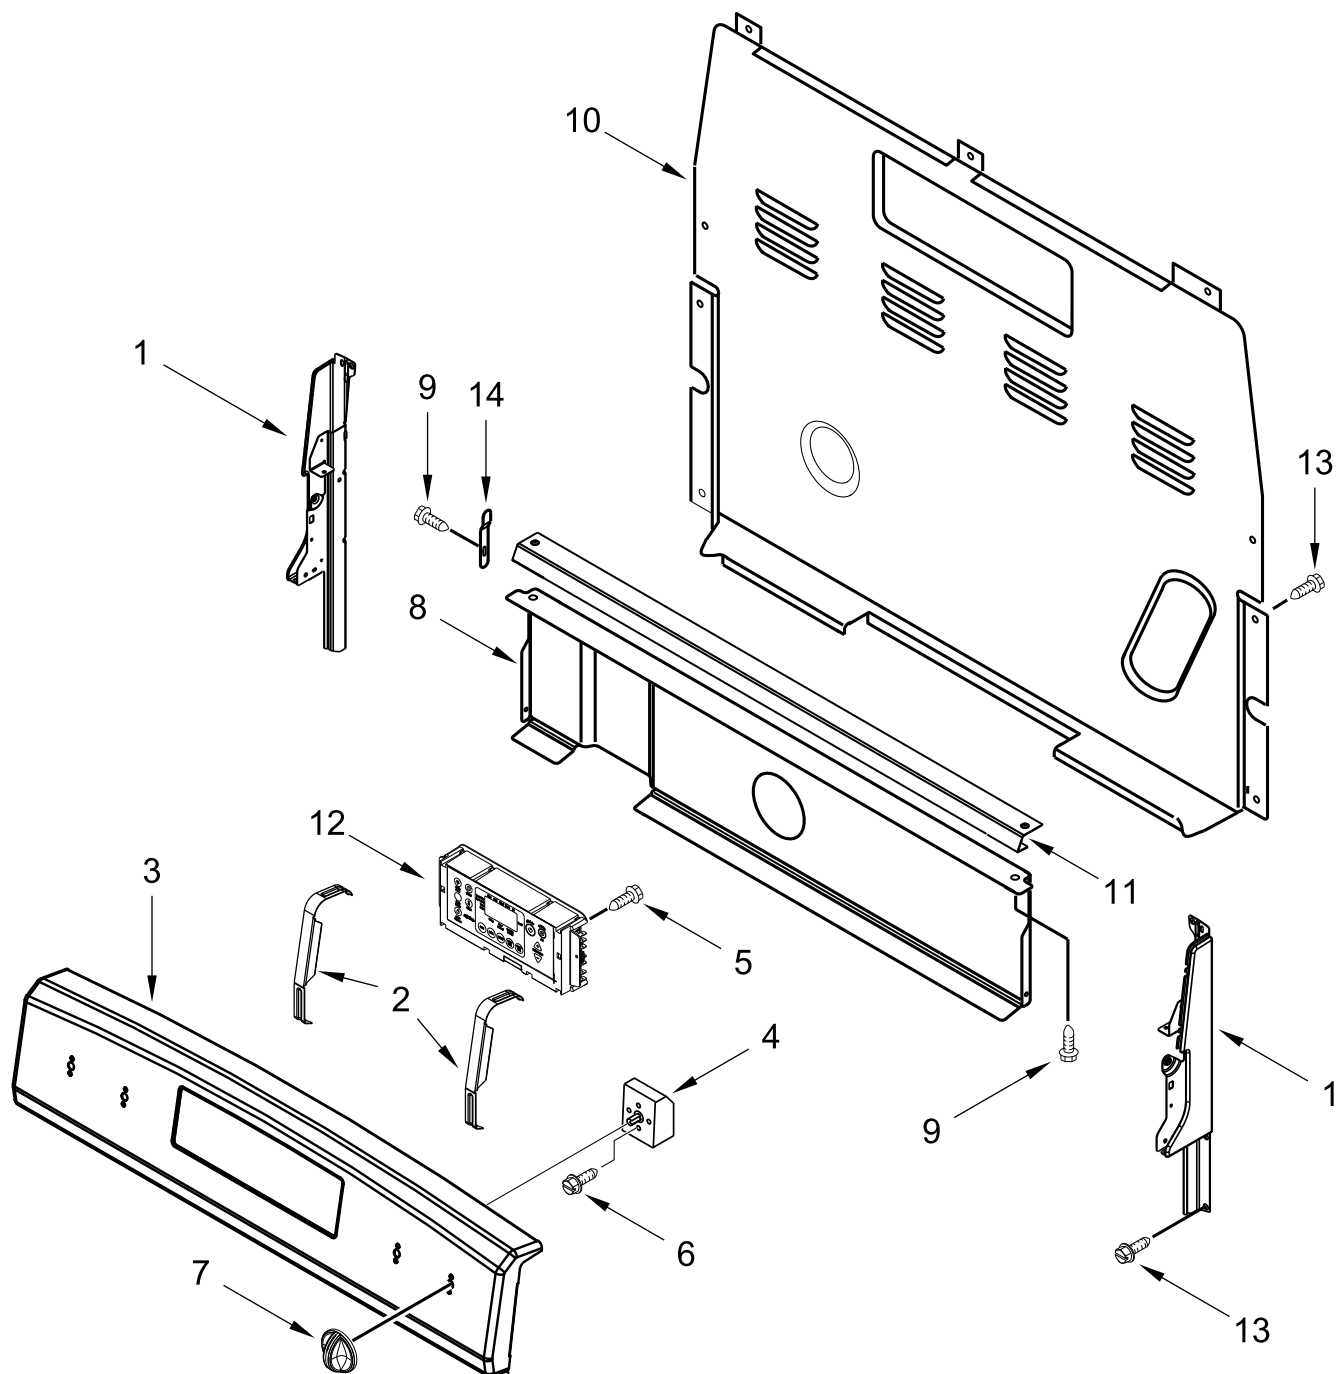

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148952	Switch, Infinite (Yellow)	9	3196165	Screw
	W11130371	White (Left)			(Right Front and Left Rear)	10	8272473	Cover, Upper Rear
	W11130378	White (Right)				11	W10525121	Bracket, Console Mounting
	W11130372	Black (Left)		3148954	Switch, Infinite (Orange)	12		Control, Electronic (LCX)
	W11130379	Black (Right)			(Left Front and Right Rear)		W11511588	White
2	W10695491	Bracket, Control					W11511589	Black
3		Panel, Control				13	3196178	Screw
	W11027441	White	5	3196169	Screw	14	3196200	Clip, Spring
	W11027440	Black	6	3400882	Screw			
			7		Knob, Infinite			
				W11022720	White			
				W11022718	Black			
			8	W10134247	Shield, Heat			


CHASSIS PARTS

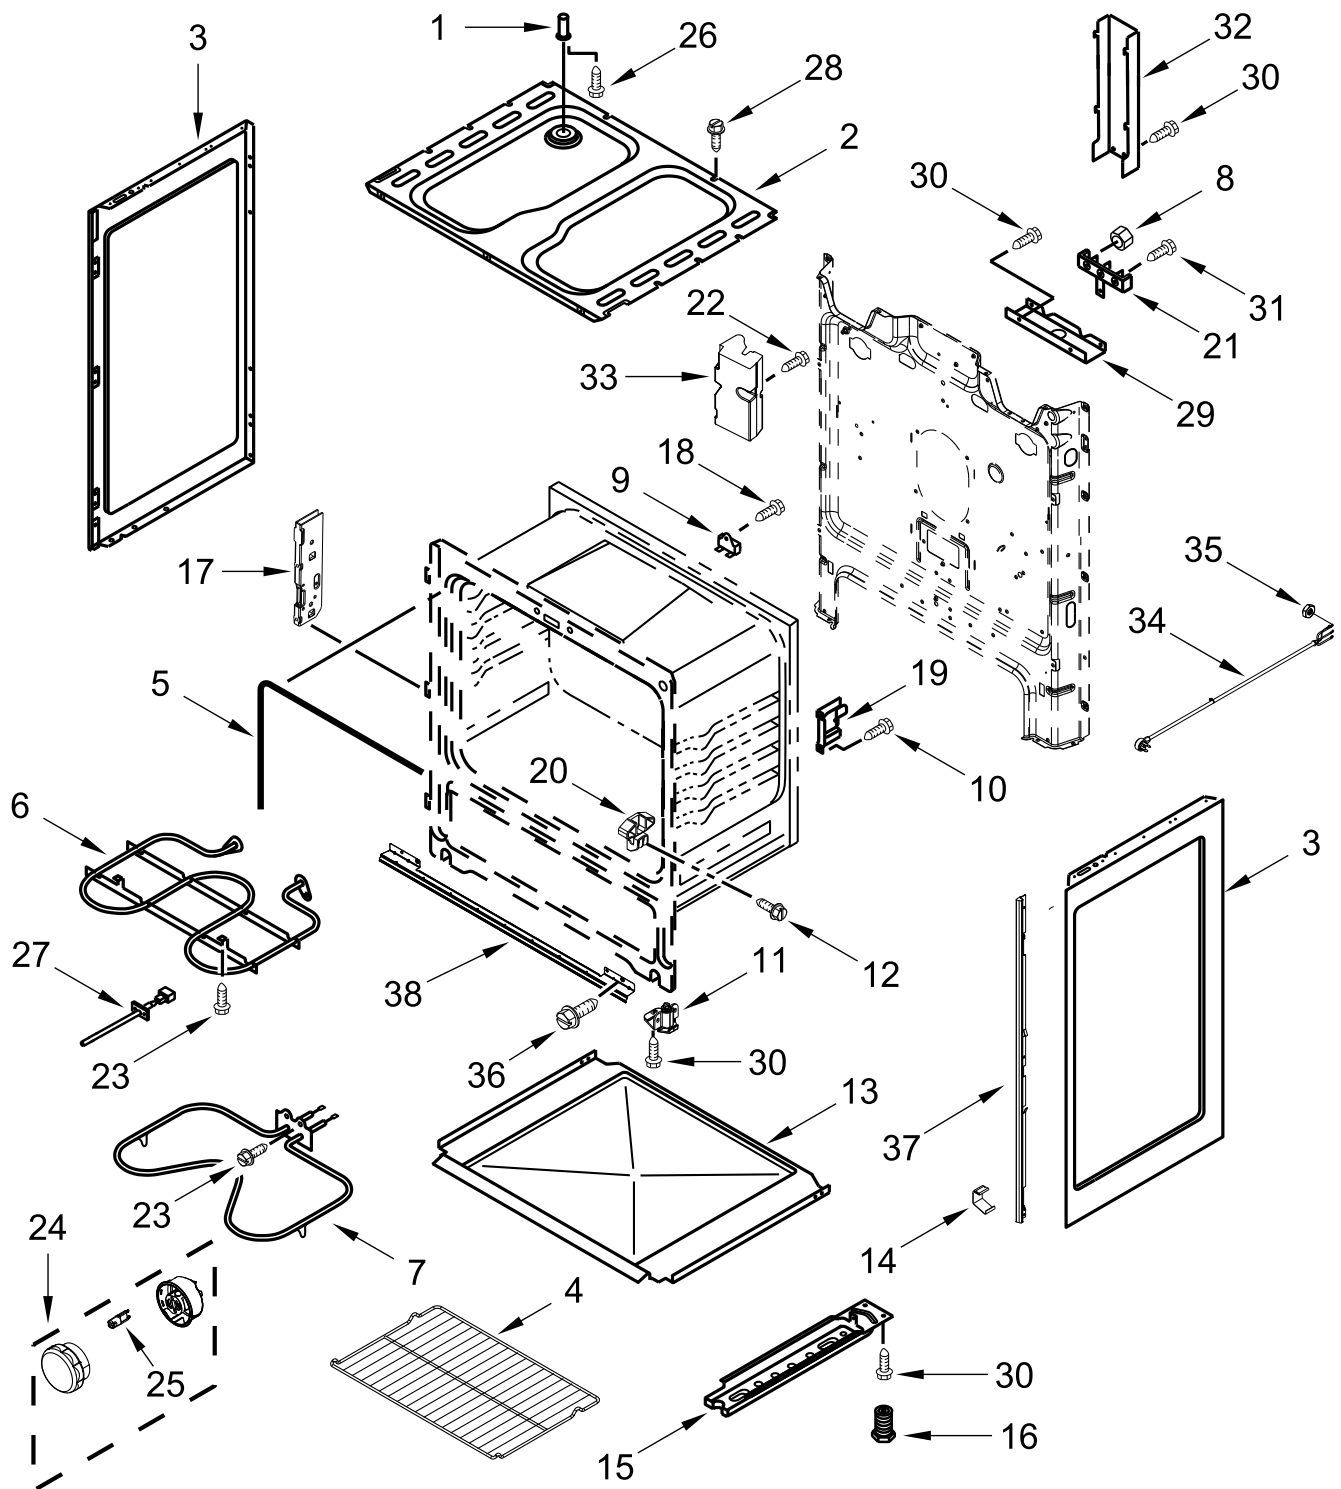

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222267	Tube, Vent	15	W10390008	Base Rail Assembly (Left)	28	3196165	Screw
2	W10209613	Box, Burner				29	3186034	Bracket, Service
3		Panel, Side		W10390007	Base Rail Assembly (Right)	30	3196178	Screw
	W10575396	White				31	3400016	Screw
	W10162245	Black	16	W10058460	Foot, Leveling	32	W10326122	Cover, Terminal Block
4	W11173792	Rack, Oven	17	W10289077	Receiver, Hinge	33	W10910404	Counterweight
5	W10129032	Seal, Door	18	3196172	Screw	34	W10624591	Cord, Power
6	W10308476	Element, Broil	19	W10404688	Clip, Oven Support	35	7103P027-60	Nut
7	W11022836	Element, Bake	20	W10674705	Glide, Drawer Front	36	3196560	Screw
8	3400029	Nut	21	W10246624	Block, Terminal	37	W11510560	Barrier Rail, Rubber (Left & Right)
9	3196548	Fuse, Thermal	22	W11034869	Screw	38	W11464547	Bracket, Front Frame
10	3196169	Screw	23	3196174	Screw			FOLLOWING PARTS NOT ILLUSTRATED
11	W10341186	Front Foot Assembly	24	W11544377	Light Assembly			
12	W10067840	Screw	25	W10571723	Bulb, Halogen 40 Watts			
13	8054068	Retainer, Insulation	26	3196567	Screw		8273263	Insulation, Wrap
14	W10137382	Clip, Panel	27	W10181986	Sensor, Oven		8272611	Insulation, Back


DOOR PARTS

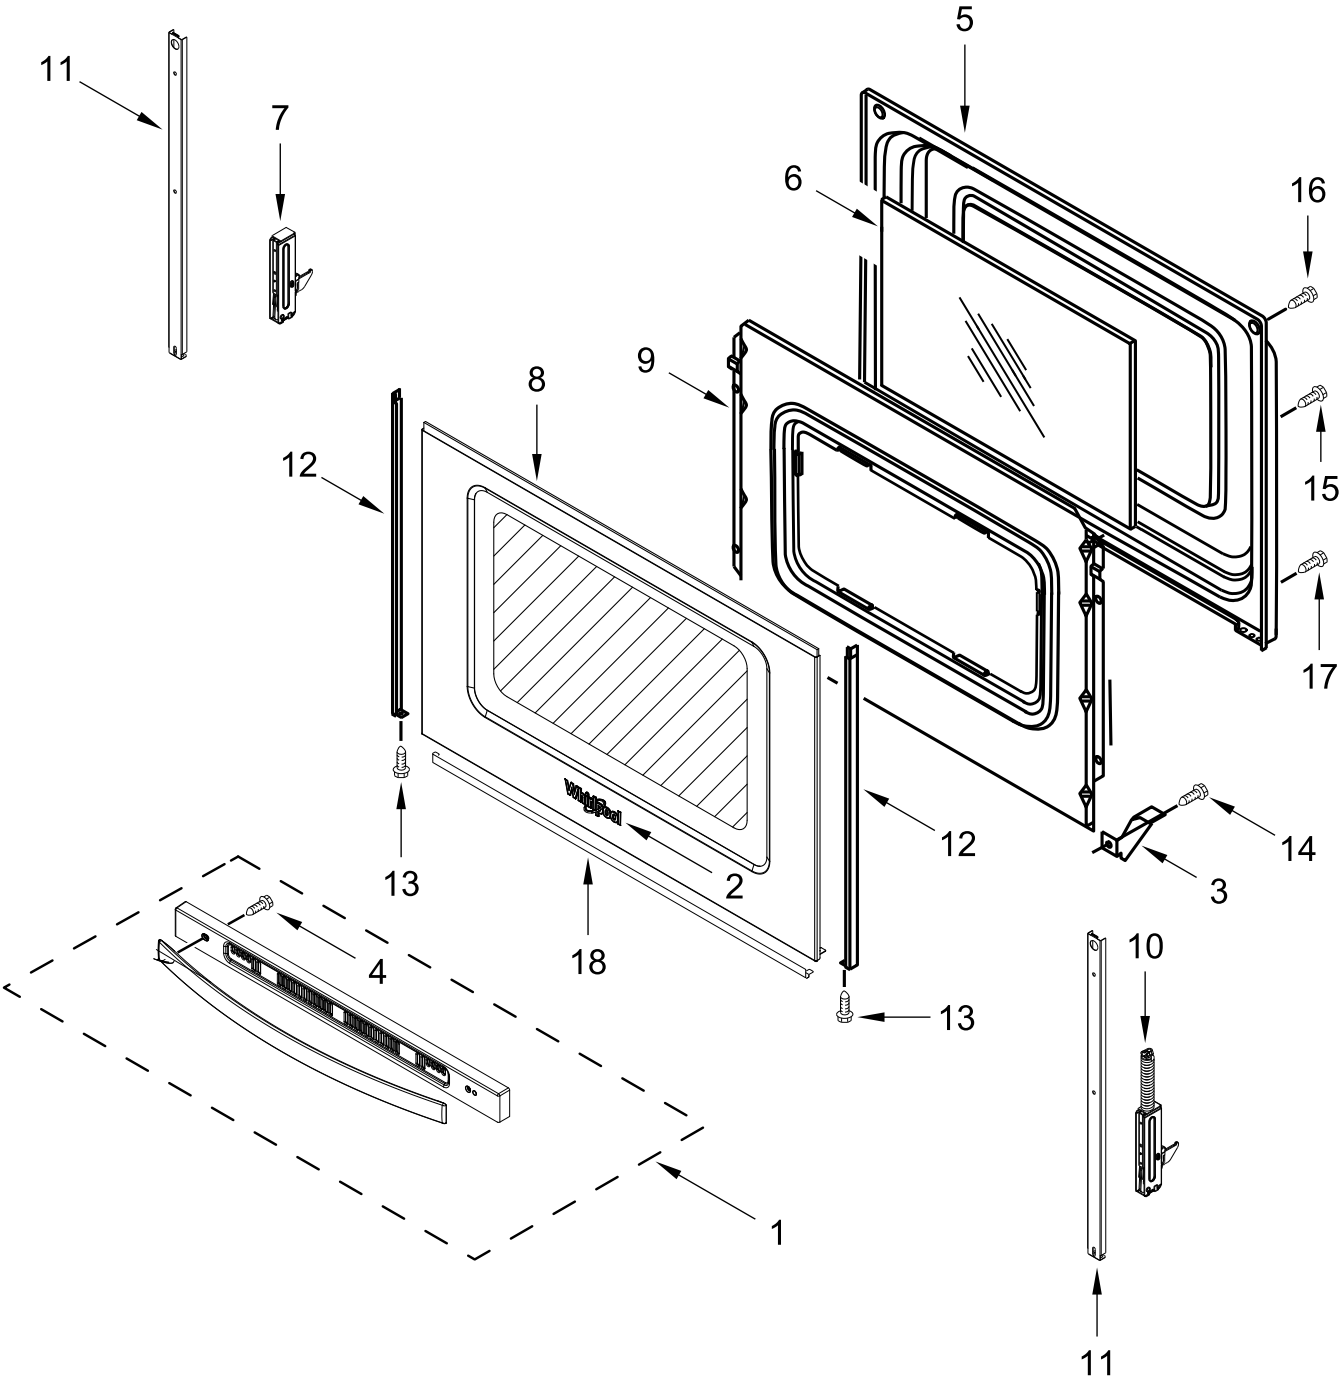

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	9	9761505	Retainer, Insulation	18		Trim, Lower Door
	W11242947	White	10	W10299225	Hinge, Active		W11444042	White
	W11242949	Black	11	W11379944	Strap, Door		W11444043	Black
2	W10884775	Badge	12		Trim, Side			
3	W10137382	Clip, Panel		8523172	White (Left)			
4	W10480830	Screw		8523166	White (Right)			
5	9761344	Liner, Door		W10746436	Black (Left)			
6	W11367326	Glass, Inner		W10746435	Black (Right)			
7	W10299227	Hinge, Door (Passive)	13	W10327235	Screw			
8		Glass Assembly, Outer Door	14	3196165	Screw			
	W10409945	White	15	W10031790	Screw			
	W10409946	Black	16	W10200660	Screw			
			17	W10031780	Screw			

DRAWER PARTS

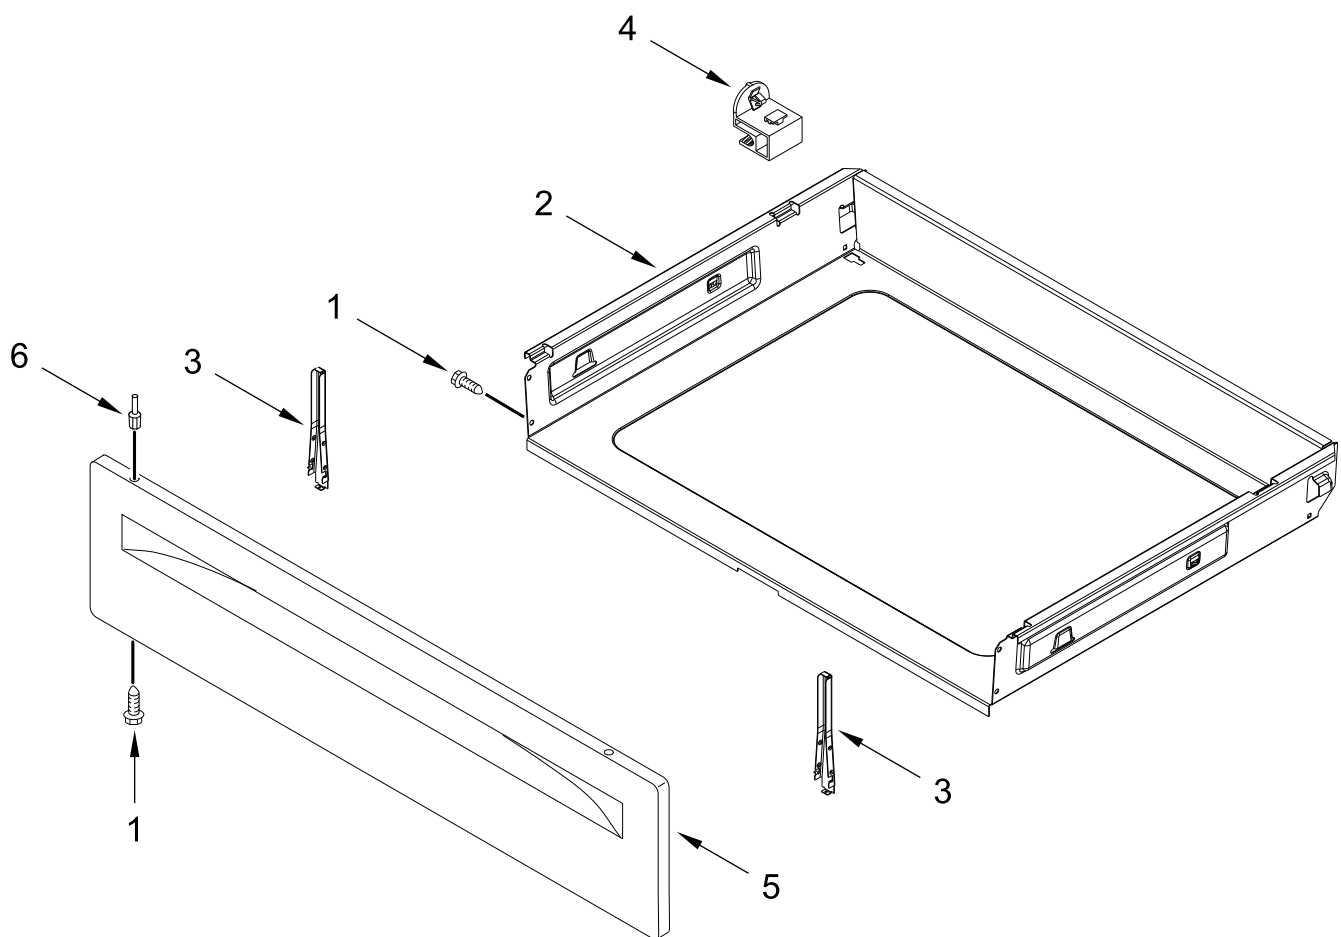

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw	5		Panel, Front	6		Rivet, Push
2	W10688022	Drawer, Storage		W11123901	White		3196814	White
3	W10462912	Bracket, Mounting Drawer		W11123900	Black		3196813	Black
4	W10674708	Glide, Drawer Rear						

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	3184478	Cleaner, Glass
	4396923	Broiler Pan and Grid