




ELECTRIC RANGE

MODELS:

WFC315S0JS4 (Stainless)


COOKTOP PARTS

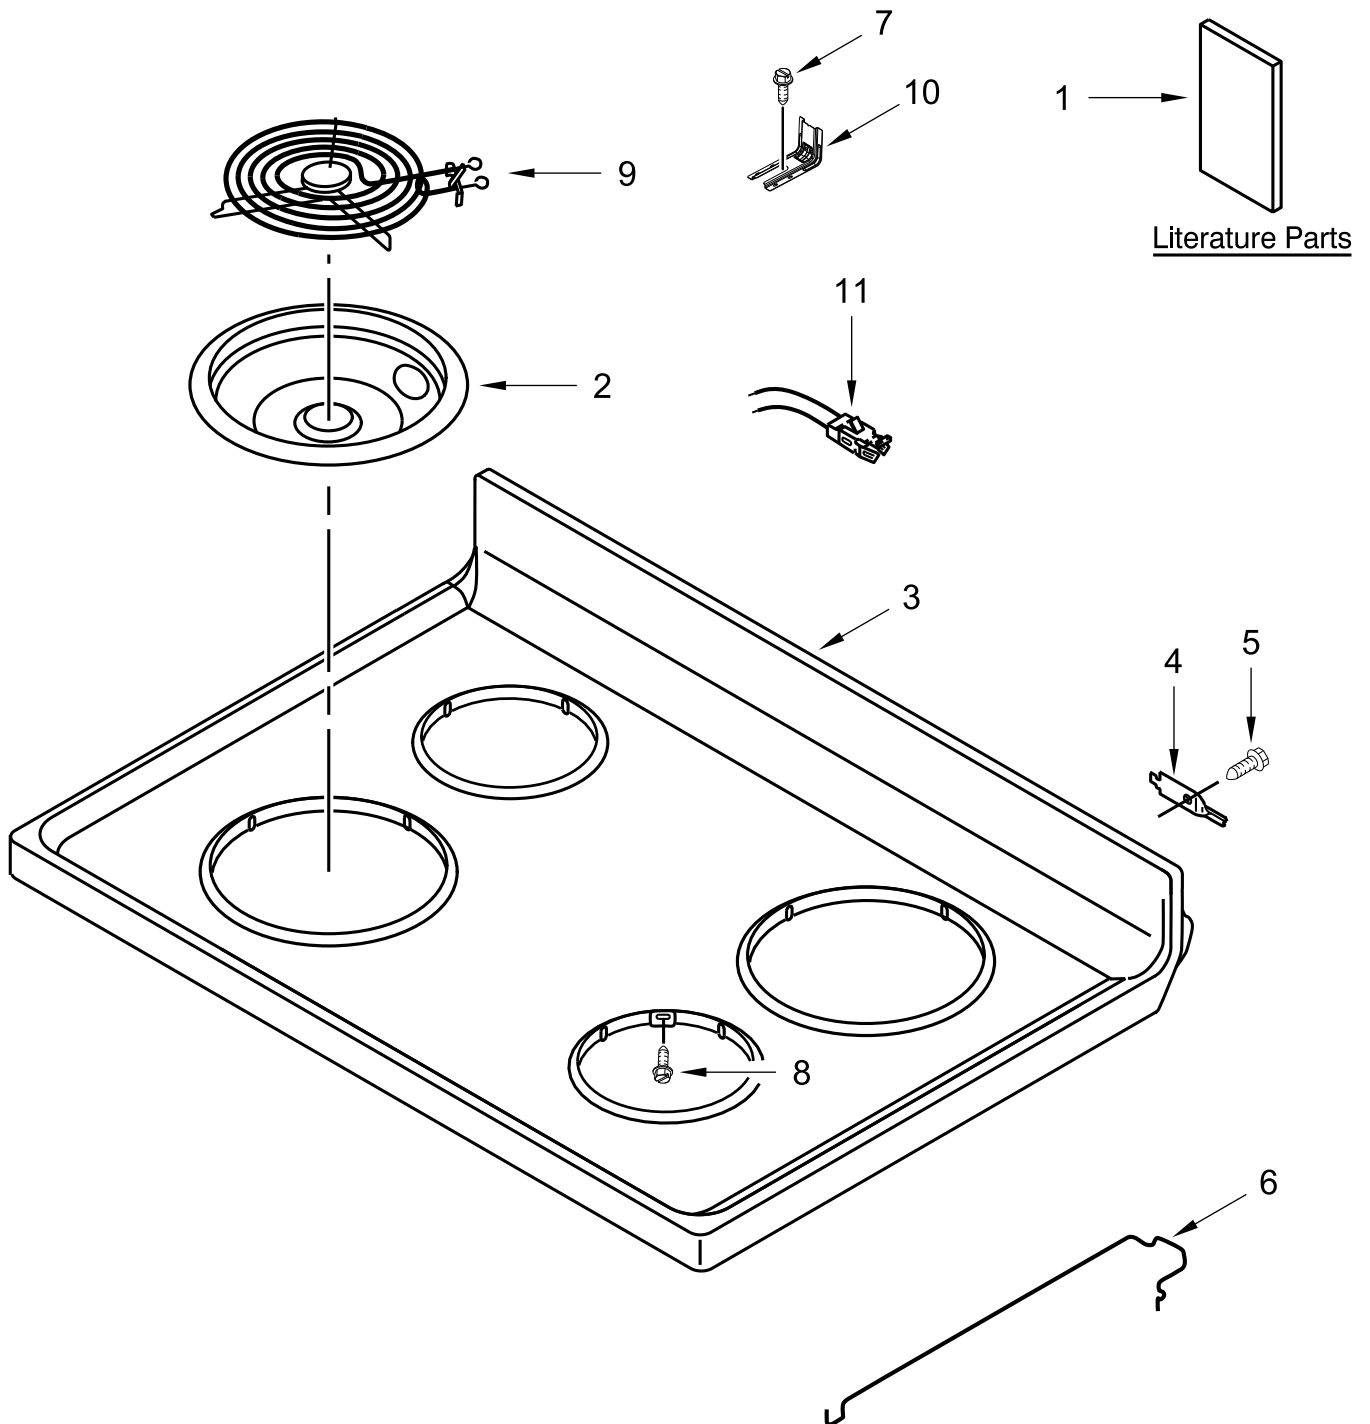

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	3195060	Hinge, Cooktop	10	W11379945	Bracket, Anti-Tip
	W11509617	Owners Manual	5	3196178	Screw	11	814399	Receptacle, Element
	W11435582	Quick Start Guide	6	3195812	Rod, Support			FOLLOWING PARTS NOT ILLUSTRATED
	W11401727	Tech Sheet	7	7101P485-60	Screw, Anti-Tip Kit			
2	W10196406	Bowl, Drip (6 in)	8	3196154	Screw		W11452636	Harness, Wire (Main)
		(Right Front and Left Rear)	9	W11364018	Element, Coil Heating (1500W)		W11134595	Harness, Cooktop
	W10196405	Bowl, Drip (8 in)			(Right Front and Left Rear)			
		(Left Front and Right Rear)	W11364019	Element, Coil Heating (2400W)				
3		Cooktop			(Left Front and Right Rear)			
	3186233	Black						


CONTROL PANEL PARTS

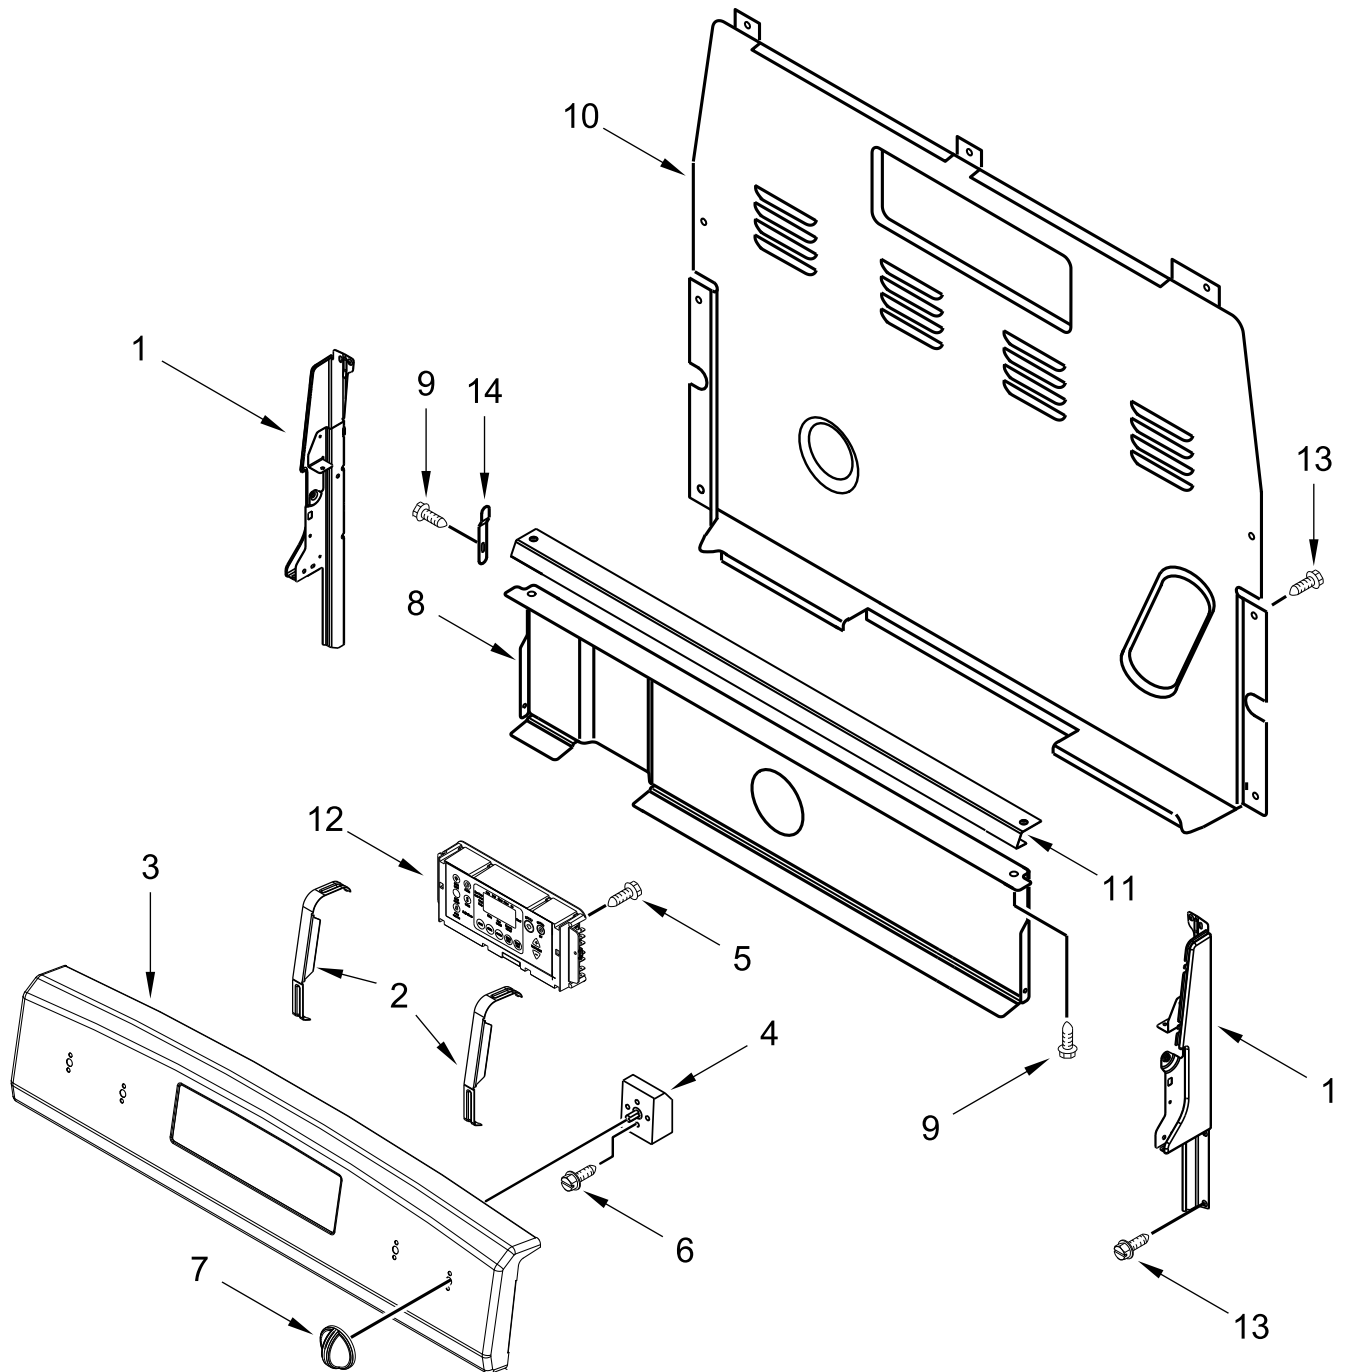

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	3196169	Screw	13	3196178	Screw
	W11130372	Black (Left)	6	3400882	Screw	14	3196200	Clip, Spring
	W11130379	Black (Right)	7		Knob, Infinite			
2	W10695491	Bracket, Control		W11022718	Black			
3		Panel, Control	8	W10134247	Shield, Heat			
	W11027439	Stainless	9	3196165	Screw			
4	3148952	Switch, Infinite (Yellow)	10	8272473	Cover, Upper Rear			
		(Left Front and Right Rear)	11	W10525121	Bracket, Console Mounting			
	3148954	Switch, Infinite (Orange)	12		Control, Electronic (LCX)			
		(Right Front and Left Rear)		W11515104	Black			


CHASSIS PARTS

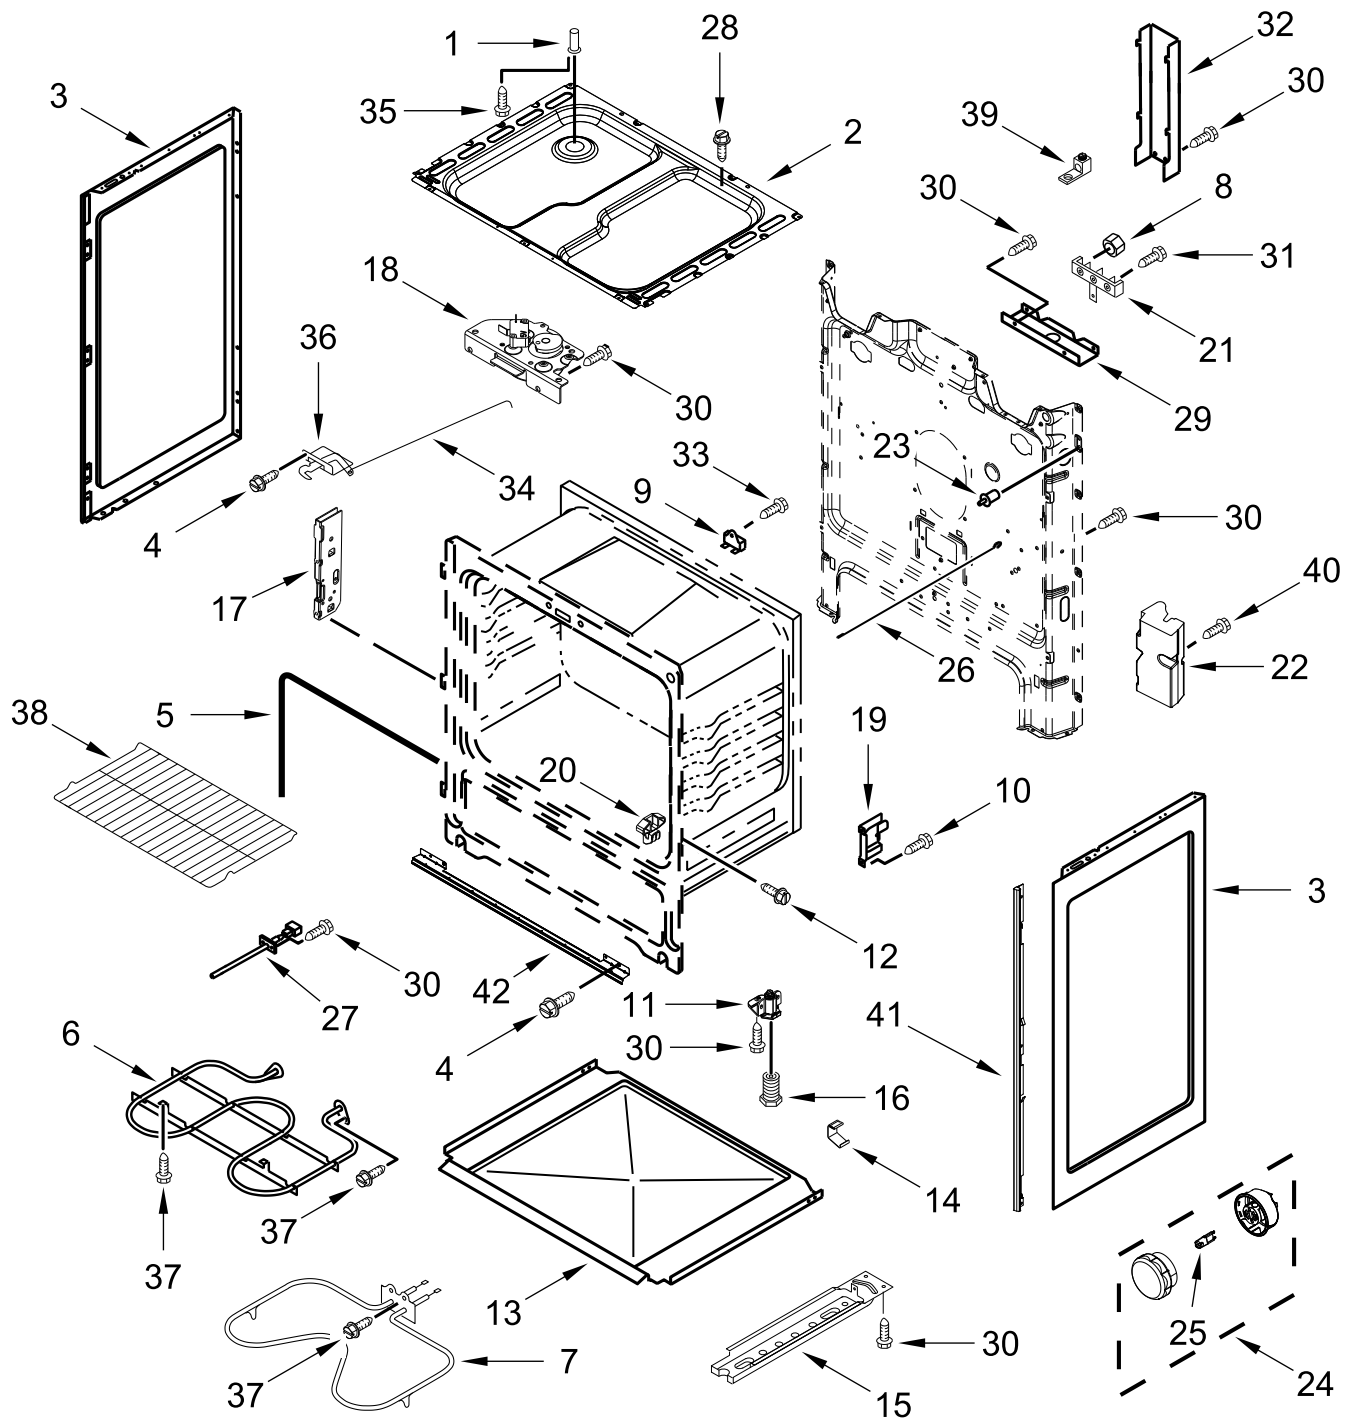

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222268	Vent Tube	17	W10289077	Receiver, Hinge	35	3196567	Screw
2	W11380208	Box, Burner	18	W10107820	Rear Door Latch Assembly	36	9761013	Front Door Latch Assembly
3		Panel, Side						
	W10162245	Black	19	W10404688	Clip, Oven Support	37	3196174	Screw
4	3196560	Screw	20	W10674705	Glide, Drawer Front	38	W11173792	Rack, Oven
5	W11491751	Seal, Door	21	W10245259	Block, Terminal	39	W10281322	Kit, Bare Wire Adapter Block
6	W10308476	Element, Broil	22	W10910404	Counterweight			
7	W11022836	Element, Bake	23	W11511828	Switch, Door	40	W11034869	Screw
8	3400029	Nut	24	W11634772	Light Assembly	41	W11510560	Barrier Rail, Rubber (Left and Right)
9	3196548	Fuse, Thermal	25	W10571723	Bulb, Halogen 40 Watts	42	W11464547	Bracket, Front Frame
10	3196169	Screw						
11	W10341186	Front Foot Assembly	26	9757239	Rod, Door Switch			FOLLOWING PARTS NOT ILLUSTRATED
12	W10067840	Screw	27	W10181986	Sensor, Oven			
13	8054068	Retainer, Insulation	28	3196165	Screw	W10774939		Insulation, Wrap
14	W10137382	Clip, Panel	29	3186034	Bracket, Service	W11127325		Insulation, Back
15	W10390008	Base Rail Assembly (Left)	30	3196178	Screw			
	W10390007	Base Rail Assembly (Right)	31	3400016	Screw			
			32	W10326122	Cover, Terminal Block			
			33	3196172	Screw			
16	W10058460	Foot, Leveling	34	W10078380	Rod, Latch			

DOOR PARTS

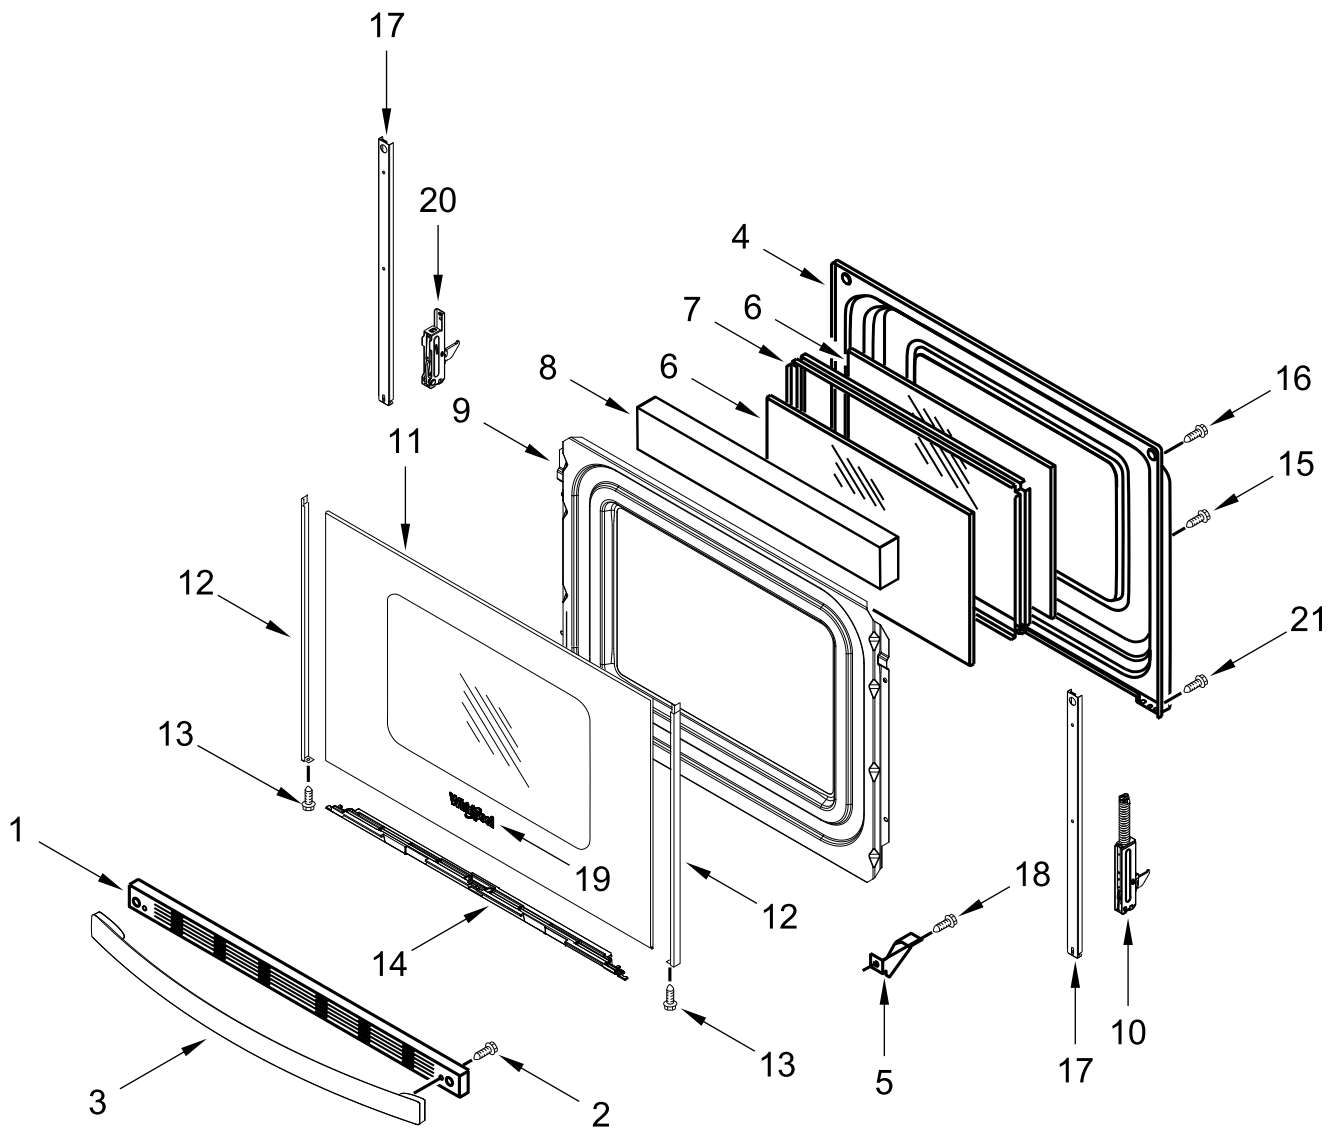


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
2	W10480830	Screw
3		Handle, Door (Includes Standoff)
	W11039070	Stainless
4	9761344	Liner, Door
5	W10137382	Clip, Panel
6	9758162	Glass, Inner
7	W10316950	Frame, Glass

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10278991	Insulation, Door Strip
9	W11380222	Retainer, Insulation
10	W10299224	Hinge, Active (With Spring)
11		Glass, Outer
	W10409946	Black
12		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
13	W10327235	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
14		Trim, Lower
	W11444043	Black
15	W10031790	Screw
16	W10200660	Screw
17	W11379944	Strap, Door
18	3196165	Screw
19	W10884775	Badge
20	W10299227	Hinge, Door (Passive)
21	W10031780	Screw

DRAWER PARTS

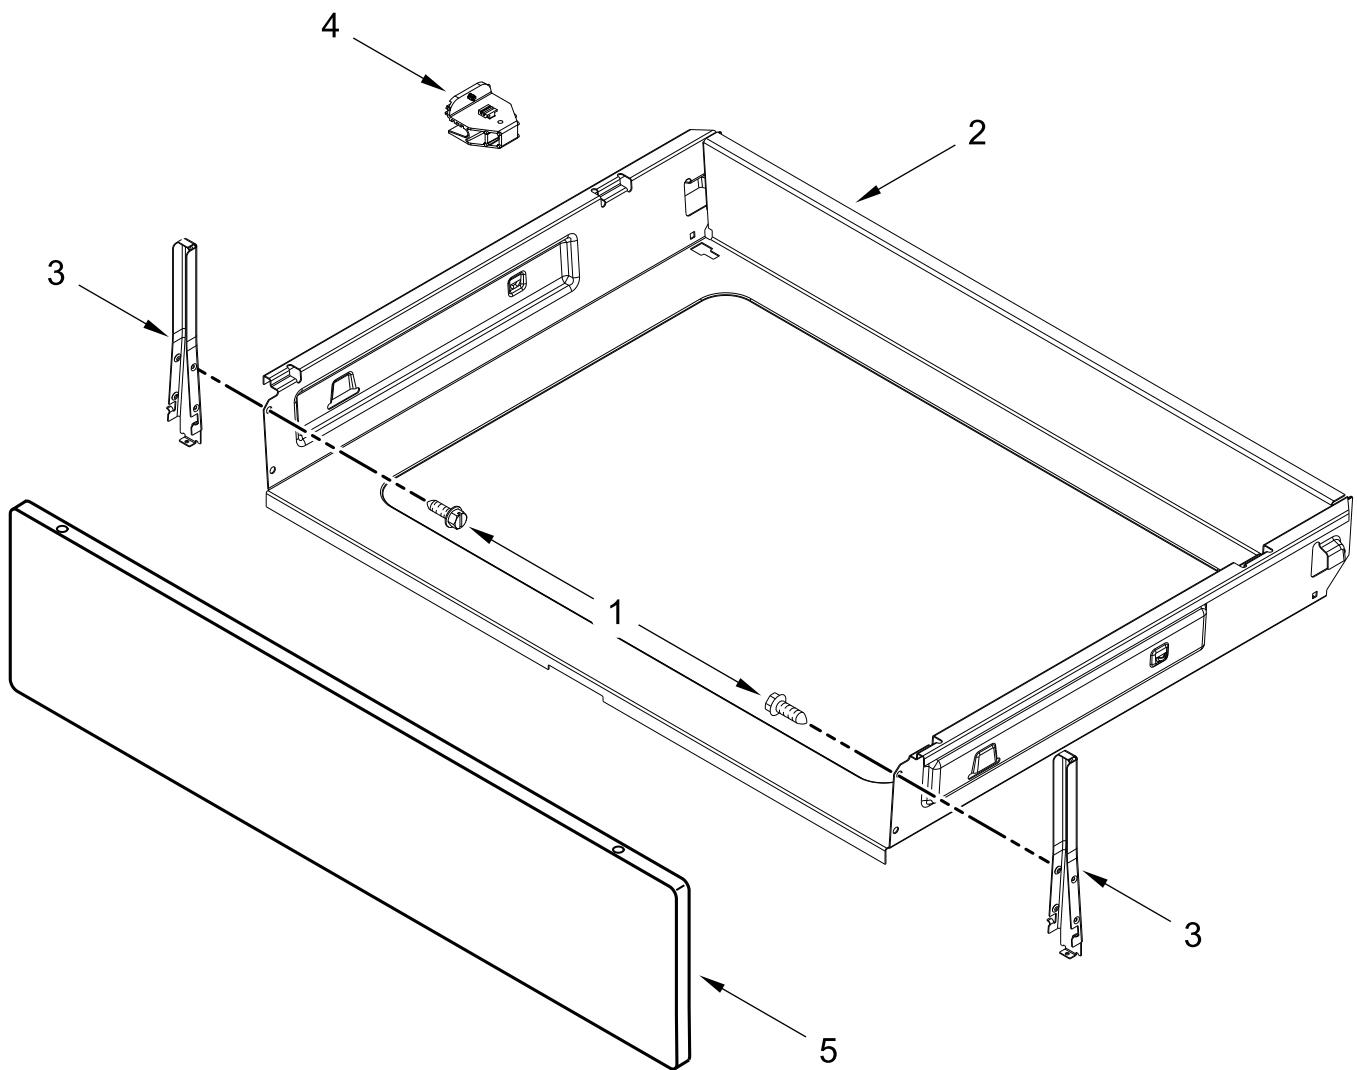

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw
2	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10462910	Bracket, Mounting Drawer
4	W10674708	Glide, Drawer Rear

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W10330070	Stainless

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	3184478	Cleaner, Glass
	4396923	Broiler Pan and Grid