




30" DUAL-FUEL FREESTANDING RANGE

MODELS:

KFDC500JYP01 (Yellow Pepper)


BURNER BOX PARTS

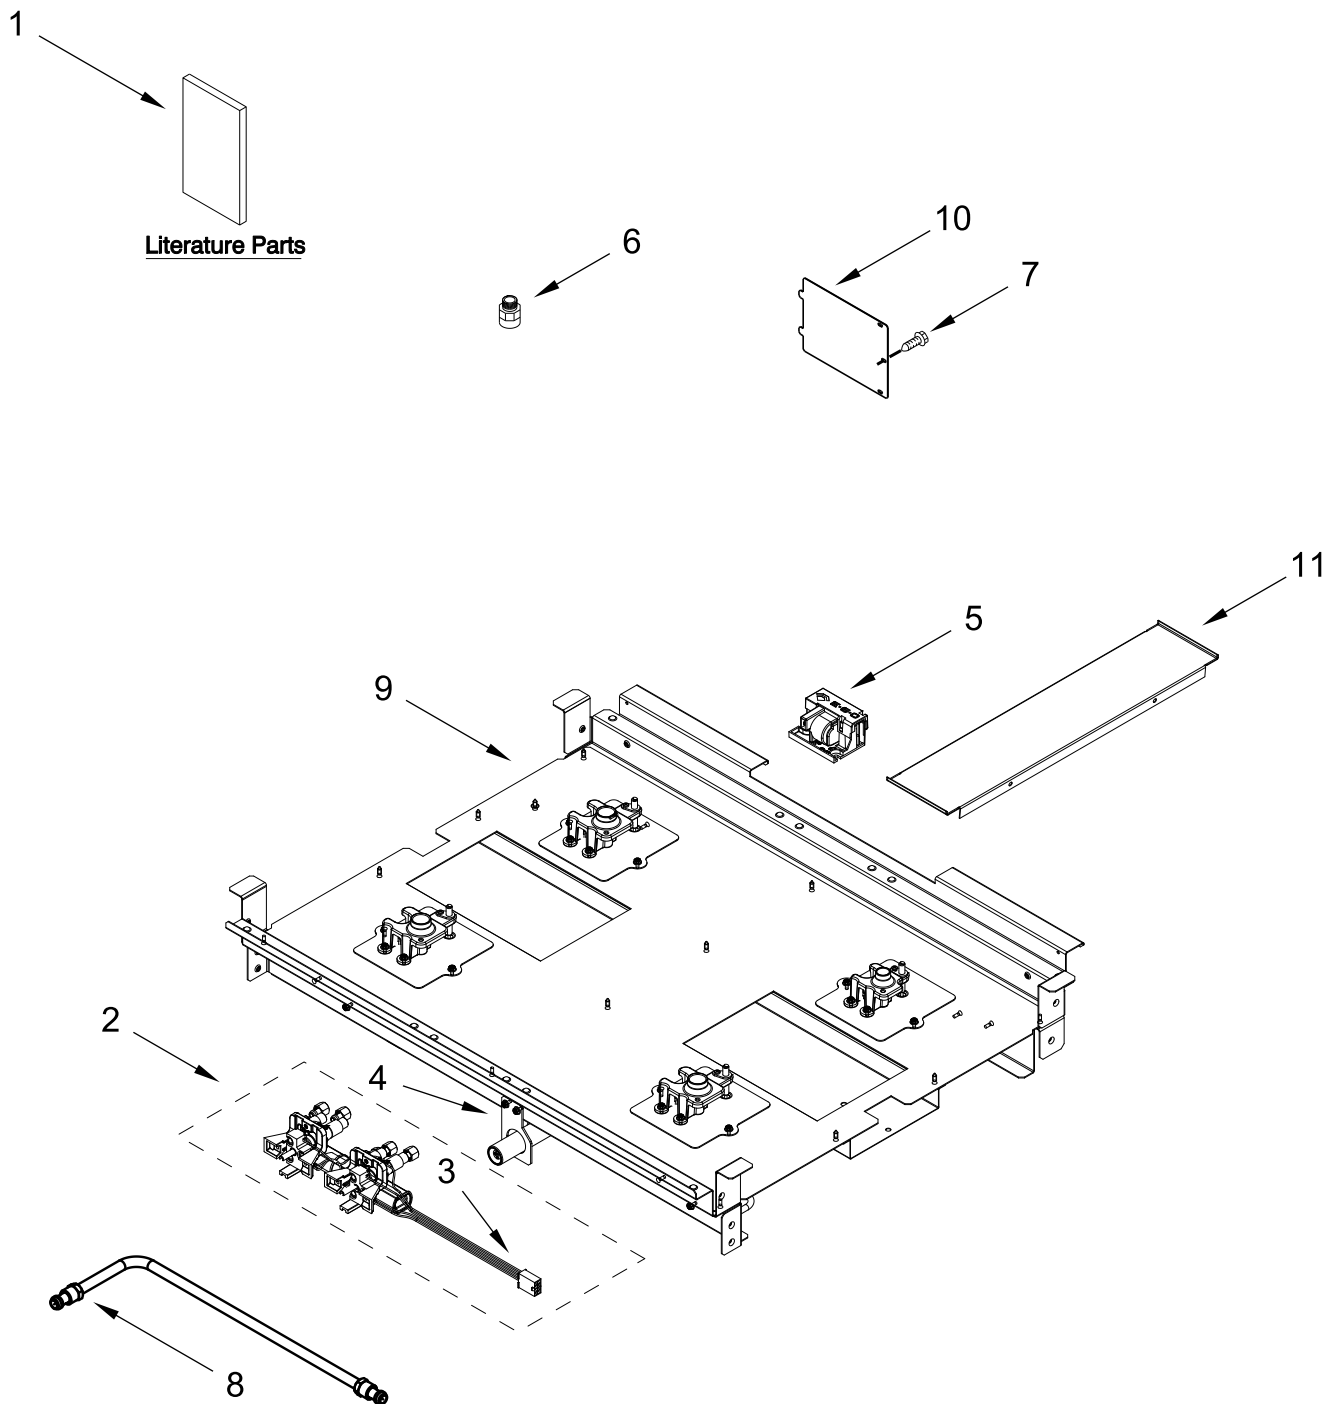

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2	W10892994	Assembly, Valve Manifold	10	W10115843	Cover, Ignition
	W11114331	Guide, Use And Care			(Left Front, Left Rear)	11	W11121361	Filler, Cooktop
	W11508847	Instructions, Installation		W10892997	Assembly, Valve Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11184759	Guide, Internet Connectivity			(Right Front, Right Rear)		W11200301	Harness, Main (30")
	W11202391	Diagram, Wiring (Cooktop)					W11200328	Harness, Cooktop
	W11202385	Diagram, Wiring (Oven)	3	W10903728	Switch, Harness		W10780278	Harness, Door Lock
	W11202289	Sheet, Tech	4	W11121194	Bracket, Manifold		W11200325	Harness, Communication
	W11114332	Guide, Quick Start	5	W11121317	Module, Spark		W11242785	Harness, WIFI
			6	4453116	Adapter, Male		313438	Clip, Harness
			7	7101P426-60	Screw		W11212216	Cord, Power
			8	W10892281	Tube, Manifold Supply (Left)		9759877	Retainer, Strain Relief
				W10892292	Tube, Manifold Supply (Right)		3400015	Screw, Grounding
			9		Box, Burner (Not Serviced)		W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11238042	Kit, LP Conversion


COOKTOP, BURNER AND GRATE PARTS

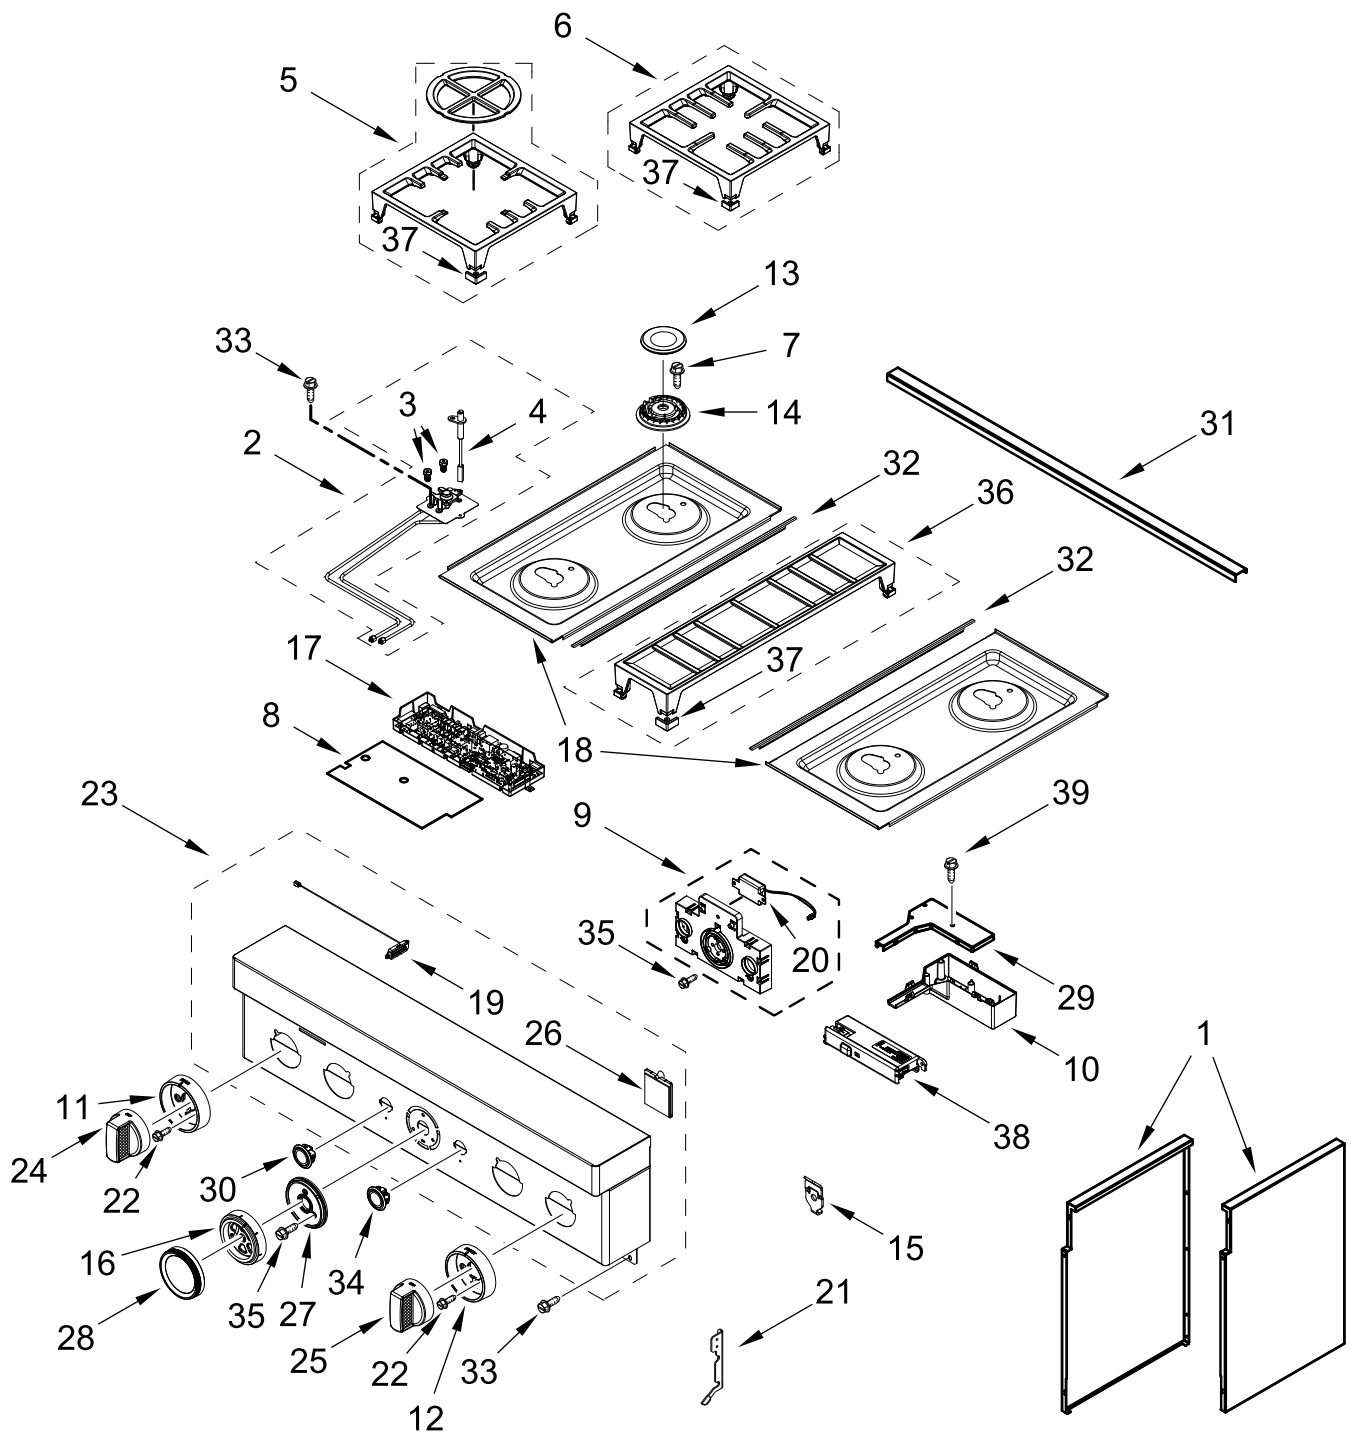

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	5	W11291183	Burner, Grate (With Wok Ring)	19	W11130078	Antenna, WIFI
	W11106880	Panel, Cabinet Side (Right)	6	W11291179	Burner, Grate	20	W10568405	Assembly, Speaker
2	W10892774	Assembly, Orifice Holder (Left Front)	7	W11323261	Screw (8-18 X 1")	21	W10130760	Bracket, Moving Console (Left)
	W10892484	Assembly, Orifice Holder (Left Rear)		W11323309	Screw (8-18 X 1/2")		W10130759	Bracket, Moving Console (Right)
	W10892479	Assembly, Orifice Holder (Right Front)	8	W11281269	Barrier, Appliance Manager	22	W11328357	Screw
	W10892735	Assembly, Orifice Holder (Right Rear)	9	W11436334	Interface, User	23	W10877949	Panel, Console Knob, Single
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	10	W11205795	Cover, WIFI Outer	24	W10912166	Stainless Knob, Dual
	W10892419	Orifice, Main (15K) (Left Rear)	11	W10883433	Bezel (Rear Burners)	25	W10883172	Stainless
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Front)	12	W10881642	Bezel (Front Burners)	26	W10896366	Assembly, Light Pipe
	W10892438	Orifice, Simmer (5K) (Right Rear)	13		Cap, Burner	27		Bezel, Oven
4	W11238757	Igniter (Left Front, Right Front)		W11121389	Black (Set Of 4)		W11500871	Stainless Knob, Oven Temperature
	W10892340	Igniter (Left Rear)	14	W10891746	Spreader, Flame (High) (Left Front, Right Front)	28		Stainless
	W11114379	Igniter (Right Rear)		W10891974	Spreader, Flame (Low) (Left Rear)	29	W11205794	Cover, WIFI Inner
				W10891978	Spreader, Flame (AUX) (Right Rear)	30	W11241511	Button Assembly, Oven Light
			15	W11036559	Spring Clip, Range	31	W11156414	Trim, Island
			16		Knob, Oven Mode	32	W10271524	Trim, T-Strip
				W11500863	Stainless	33	7101P426-60	Black Screw
			17	W11100279	Manager, Appliance (Powermax)	34	W11241510	Button Assembly, Oven Start
			18		Panel, Cooktop	35	3400814	Screw
				W11038235	Black (Left)	36	W11291178	Kit, Grate Filler
				W11038245	Black (Right)	37	W11042504	Bumper, Grate
						38	W11110768	Assembly, WIFI Module
						39	7101P624-60	Screw


CHASSIS PARTS

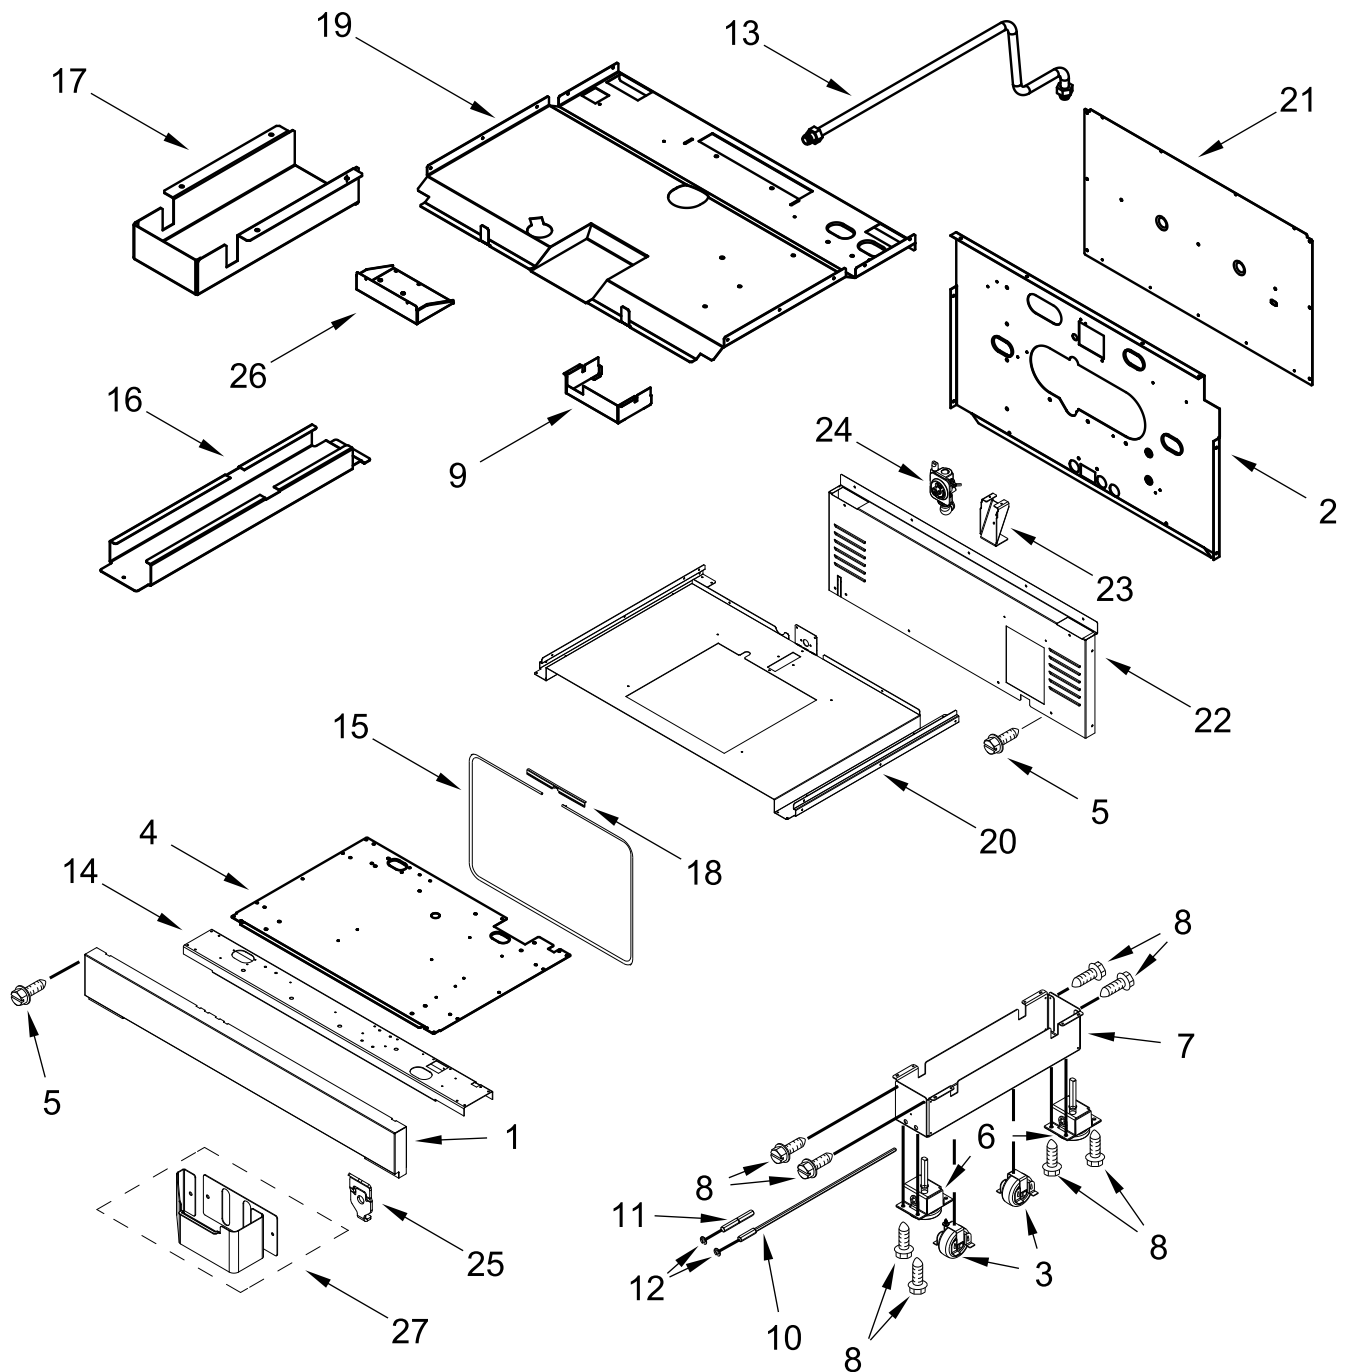

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394780	Kickplate	12	489504	E-Ring	22	W11034134	Panel, Back Bottom
2	W11324989	Back, Chassis	13	W11106963	Tube, Pressure Regulator	23	W11096823	Bracket, Pressure Regulator
3	W10138054	Assembly, Roller	14	W11087491	Support, Channel	24	W10449140	Regulator, Pressure
4	W11109583	Duct, Bottom (30")	15	W11115328	Gasket, Oven (30")	25	W11036559	Spring Clip, Range
5	7101P426-60	Screw	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
6	9760860	Leveler	17	W11368831	Channel, Wire	27	W11199181	Cover, Foot (Left)
7	W10908710	Base, Leveling Leg	18	W11362015	Retainer, Gasket (9" Long)		W11199178	Cover, Foot (Right)
8	4449743	Screw	19	W11324986	Top, Chassis			
9	W11369237	Cabinet, Appliance Manager	20	W11040802	Chassis, Bottom			
10	W10115869	Shaft, Long	21	W11103334	Panel, Back Top			
11	W10115793	Shaft, Short						


OVEN PARTS

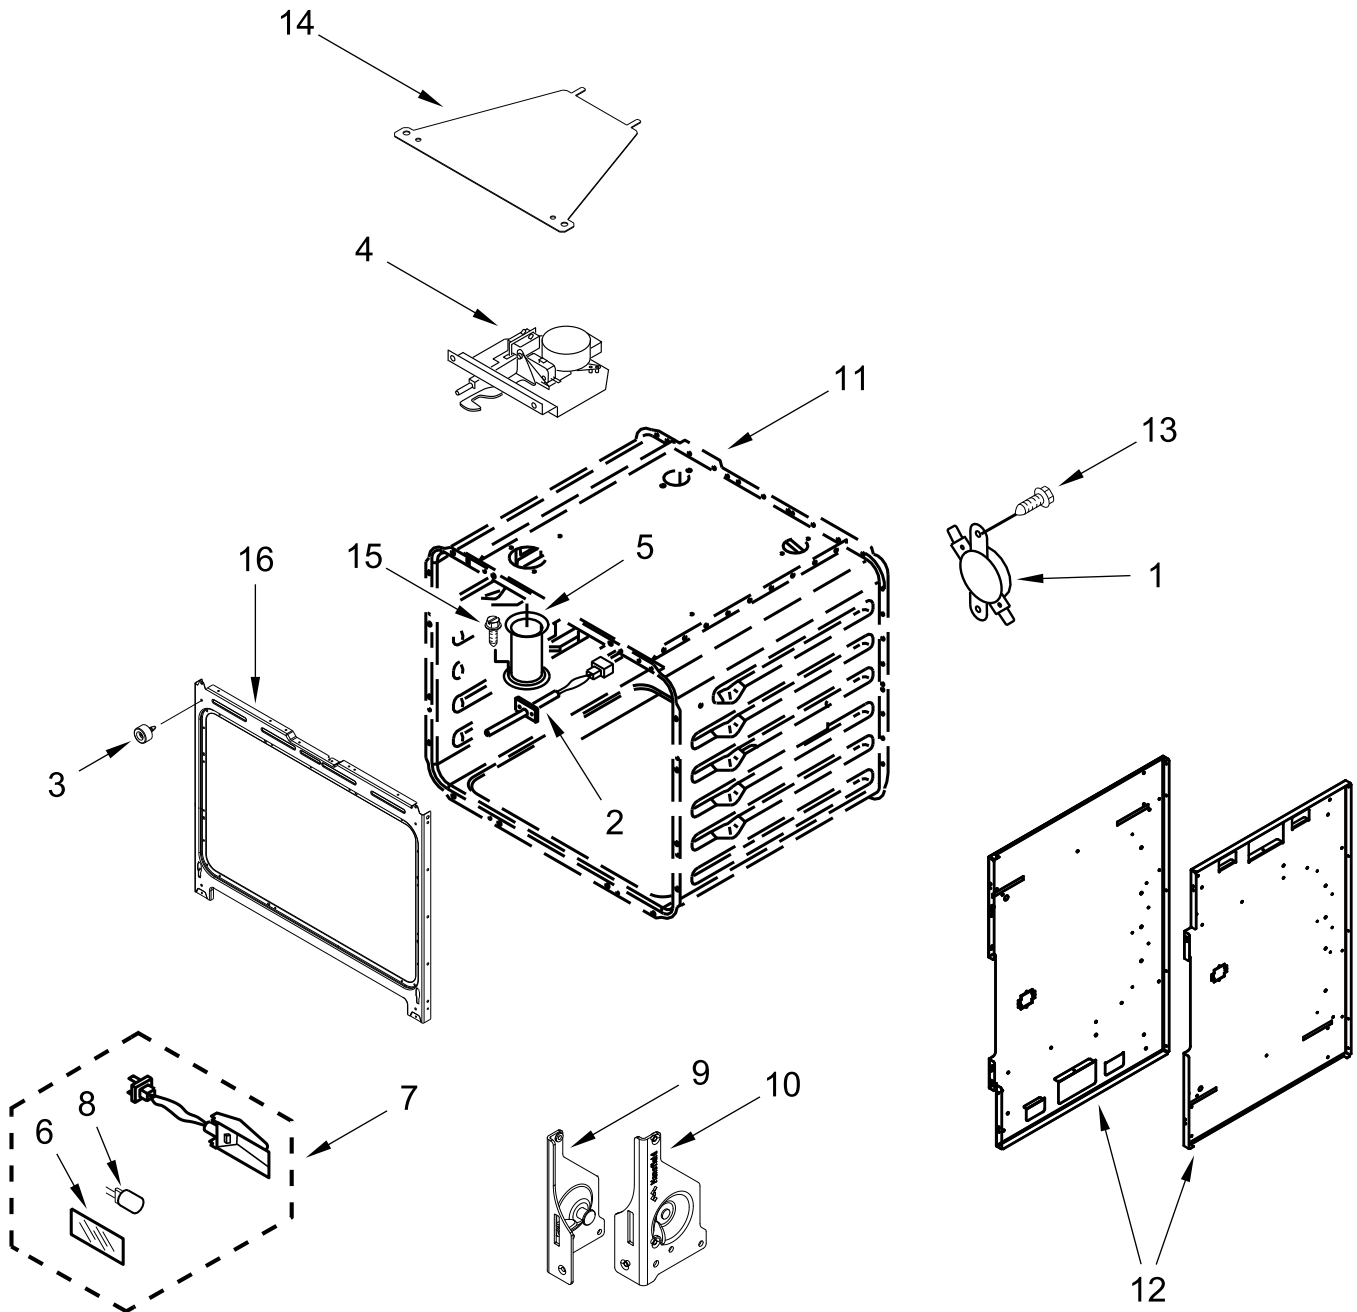

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	15	3196176	Screw
2	W10622170	Probe, Sensor				16	W11192755	Frame, Front
3	W10351278	Bumper & Screw	11		Liner, Oven (Not Serviced)			FOLLOWING PARTS NOT ILLUSTRATED
4	W10830016	Latch, Motorized						
5	W11290663	Tube, Vent	12	W11102297	Chassis, Side (Left)		W10282810	Insulation, Wrap, 30"
6	W10169756	Lens, Light		W11102296	Chassis, Side (Right)		W10282818	Insulation, Back, 30"
7	W11223932	Assembly, Oven Light					3400968	Nut
8	W10169757	Bulb, Light	13	7101P426-60	Screw			
9	W11096294	Receiver, Hinge (Left)	14	W10160858	Cover, Latch			


VENTING PARTS

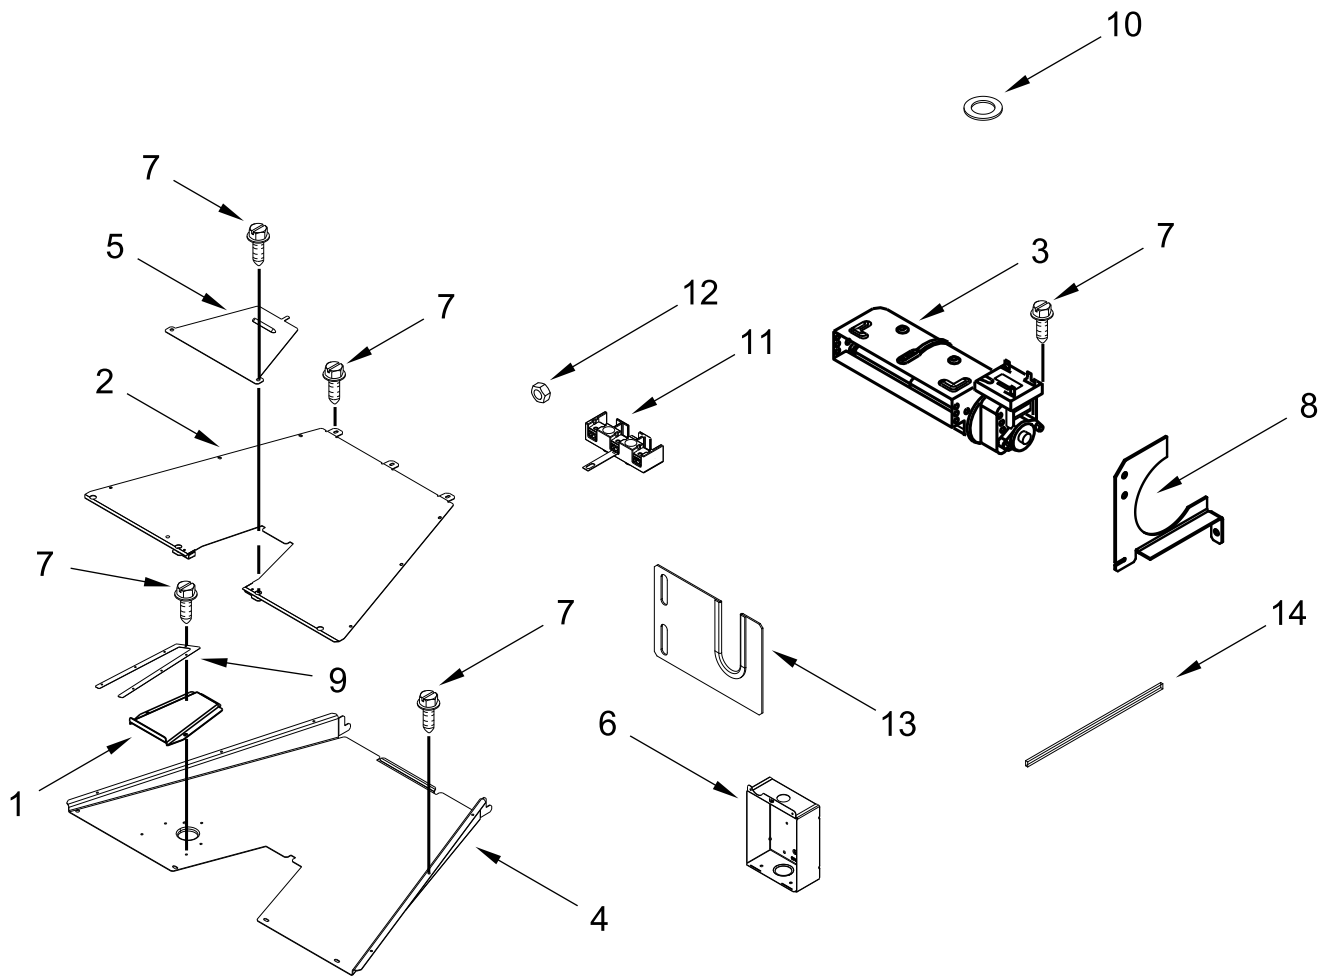

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	6	W11353392	Box, Terminal	13	W11106956	Cover, Channel
2	W11105223	Vent, Cooling Top (30")	7	7101P426-60	Screw	14	W10919715	Gasket
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount			
4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")			
5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney			
			11	9761958	Block, Terminal			
			12	112432	Nut, Hex			


OVEN DOOR PARTS

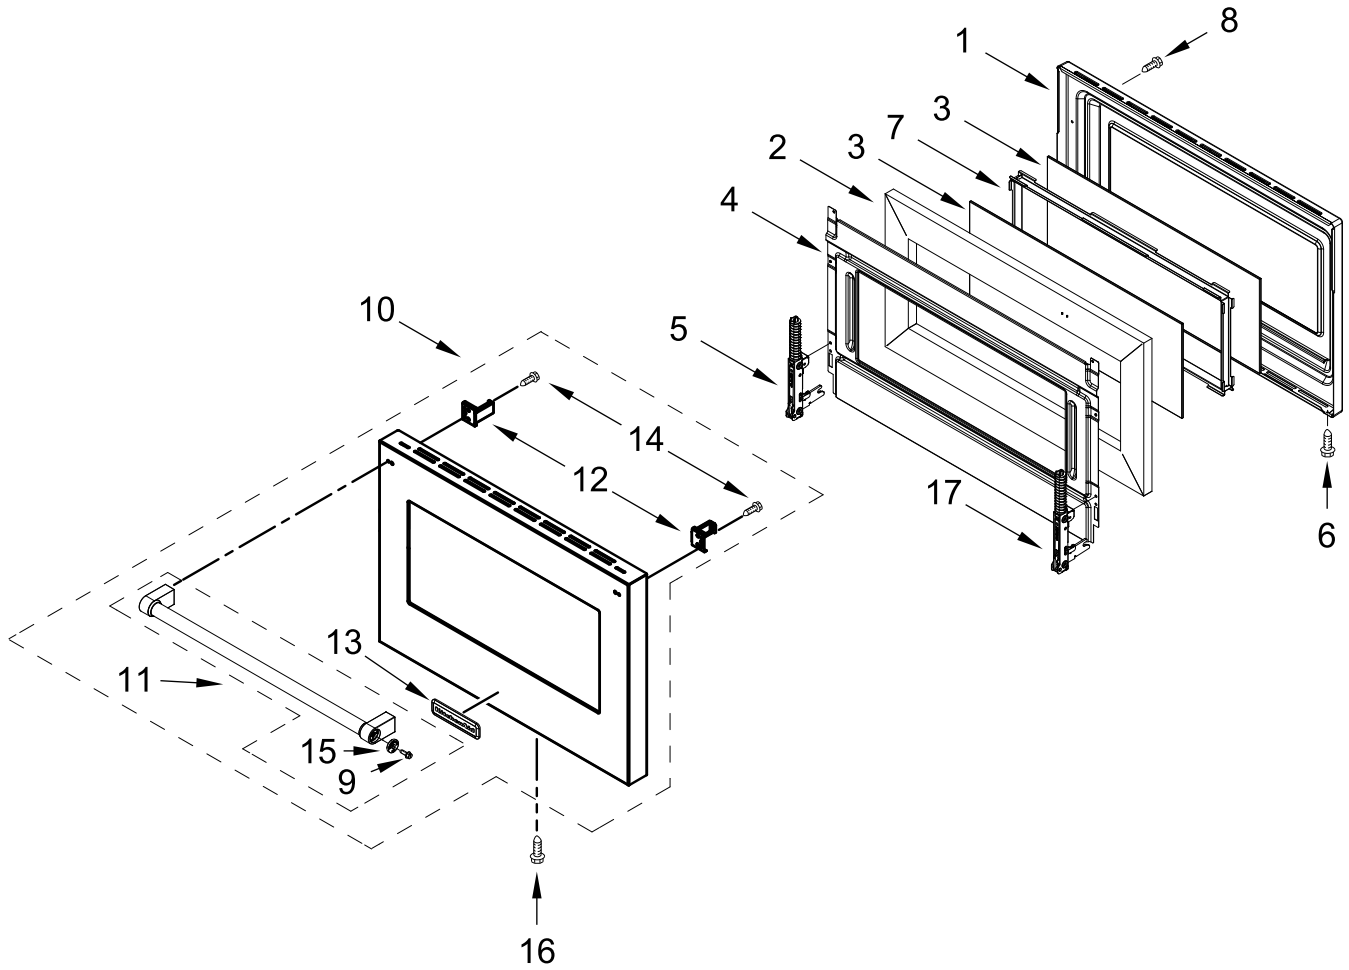

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	13	W10518672	Badge
2	W11413190	Insulation, Door (30")	8	W10898280	Screw	14	W10276043	Screw
3	W11184409	Glass, Inner	9	W10656499	Screw	15	W11361074	Medallion, Handle
4	W11194821	Retainer, Glass	10	W11389288	Assembly, Outer Door (Includes Handle)	16	W10162096	Screw
5	W11390105	Hinge, Door (Left)	11	W11362706	Handle Assembly	17	W11390124	Hinge, Dual (Right)
6	W10607120	Screw	12	W11197830	Bracket, Handle			

INTERNAL OVEN PARTS

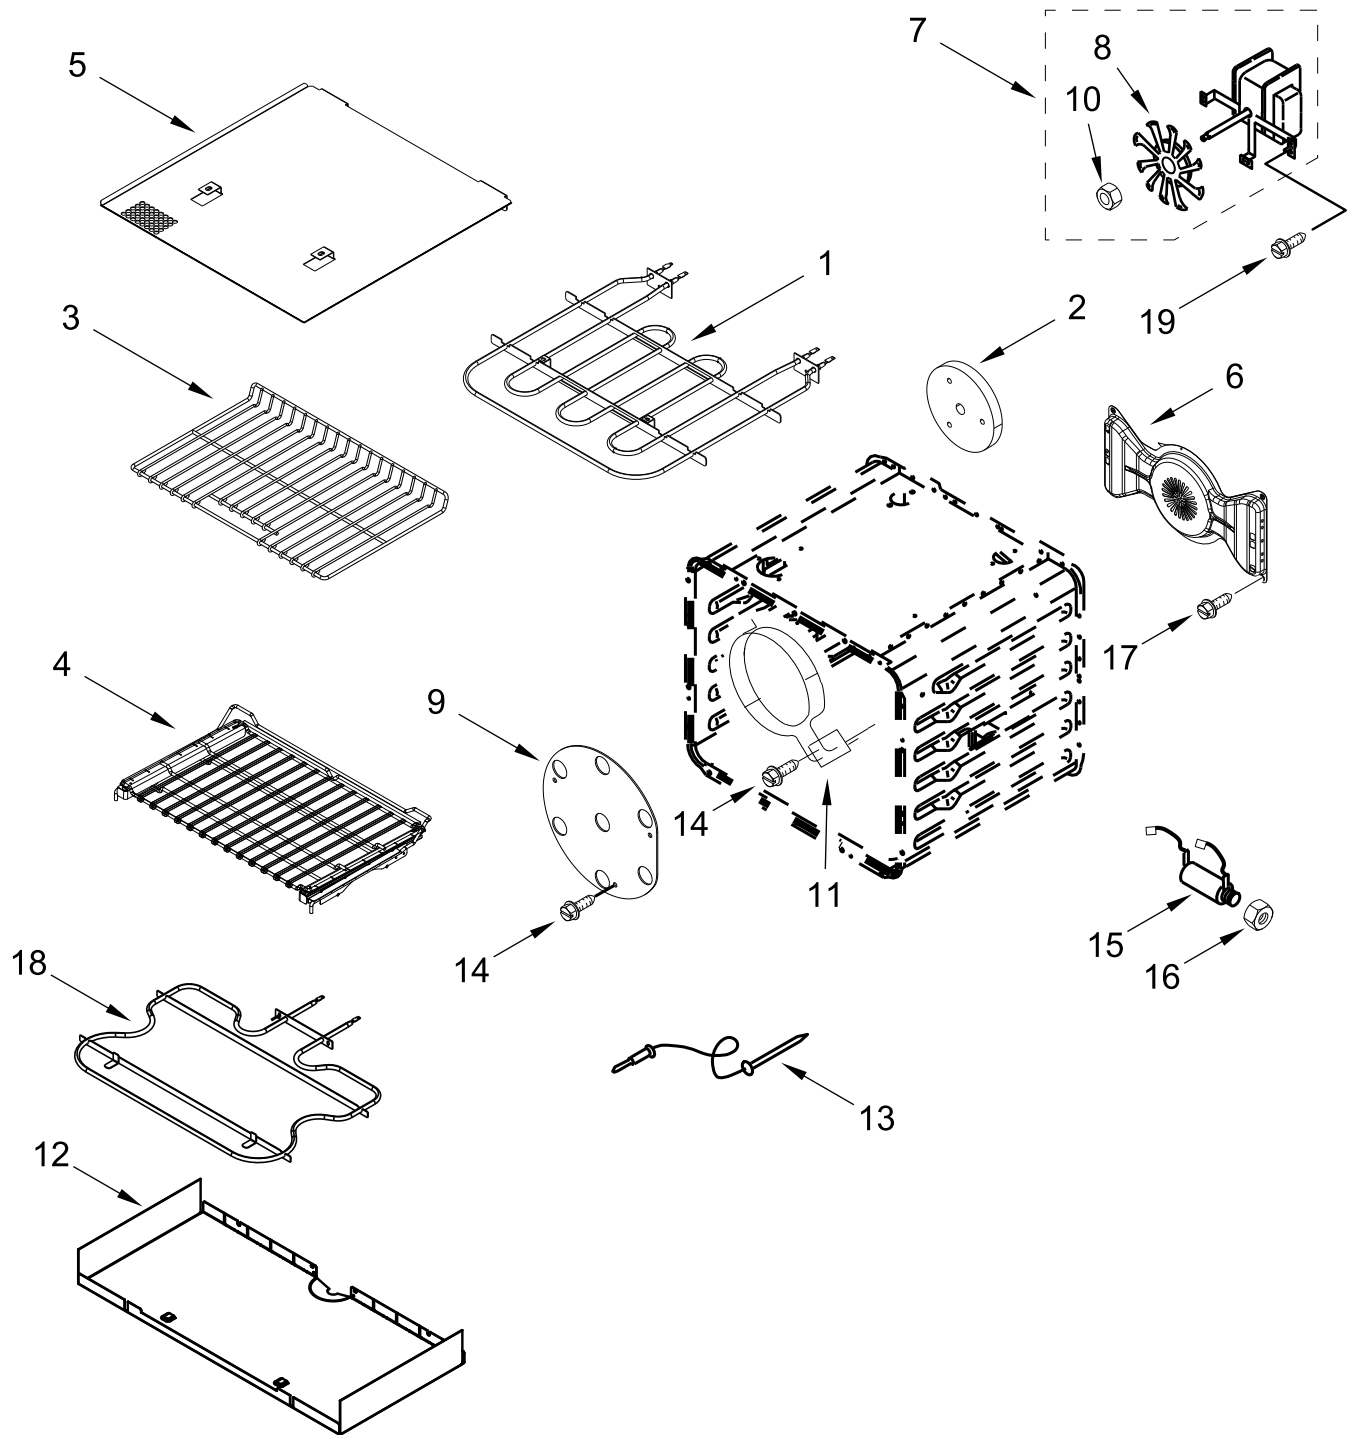

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10115994	Element, Broil	9	W10261523	Plate, Fan	17	W10739592	Screw
2	W10282821	Insulation, Convection Cover	10	W10631504	Nut, Acorn (LH)	18	W10115995	Element, Hidden Bake
3	W10570887	Rack, Oven	11	9762242	Element, Convection Steam	19	W10720084	Screw
4	W11496977	Rack, Sliding Oven	12	W11109421	Tray, Hidden Bake			
5	W10160856	Shield, Element Broil	13	9755542	Probe, Temperature			
6	W11212180	Baffle, Convection	14	4449154	Screw			
7	W10722667	Fan, Convection	15	9755543	Jack, Meat Probe			
8	W10631503	Blade, Fan	16	W11033111	Nut, Locking			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	4396920	Stainless Steel Cleaner & Polish
	31464	Cleaner, Cooktop
	W10216179	Ring, Wok
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
		Backsplash
	W10285447	30" With Shelves
	W10285449	48" With Shelves
	W10115773	Backguard 9"(22.9cm)
	W11238043	Kit, High Altitude
		Medallion, Handle
	W11368841SI	Sl. Silver
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841CF	Copper
	W11368841BN	Bronze
	W11368841DD	Dark Blue