




GAS RANGE
Includes Griddle

MODELS:

KFDC558JBK03 (Imperial Black)


BURNER BOX AND GRIDDLE PARTS

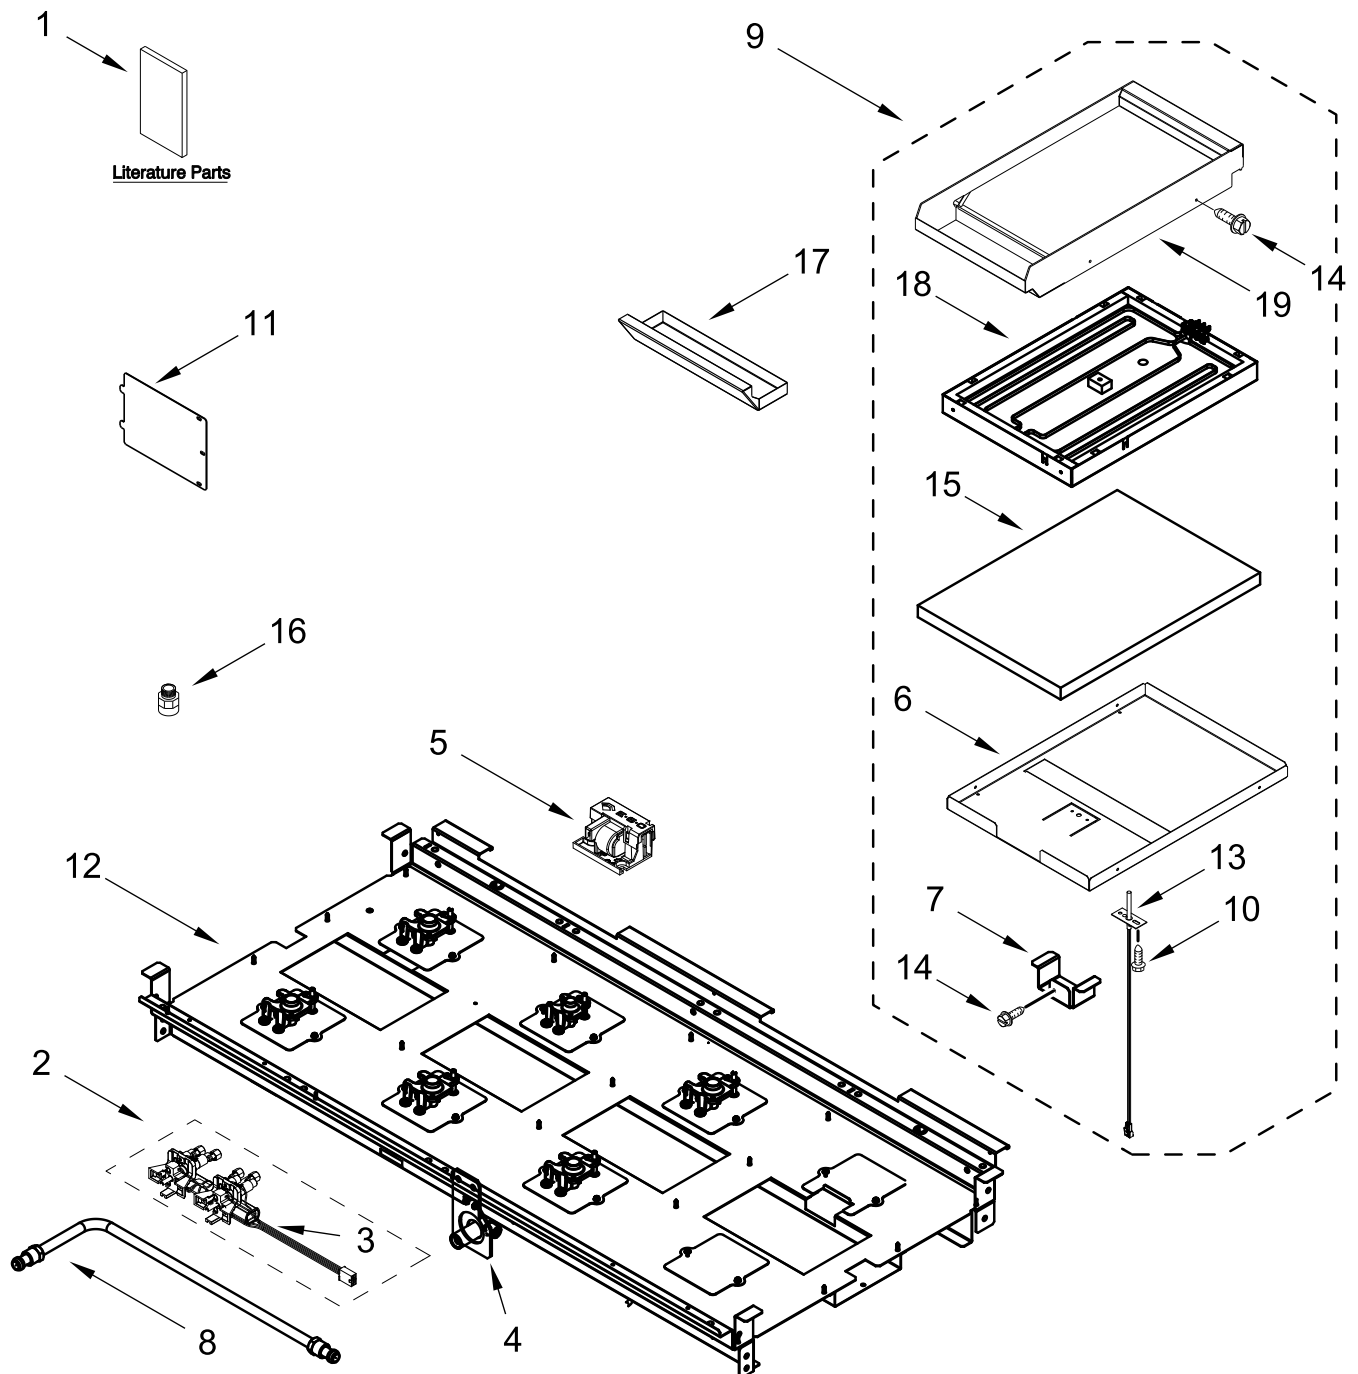

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10903728	Switch, Harness	17	W10276497	Tray, Griddle Drip
	W11508897	Owner's Manual	4	W11121194	Bracket, Manifold	18	W10891698	Element, Griddle
	W11508889	Installation Instructions	5	W11121317	Module, Spark	19	W11360151	Module, Griddle
	W11184759	Guide, Internet Connectivity	6	W11330430	Tray, Griddle Insulation			FOLLOWING PARTS NOT ILLUSTRATED
	W11114332	Guide, Quick Start	7	W11121384	Bracket, Griddle-RTD		W11200302	Harness, Main (30 In)
	W11508932	Wiring Diagram (Cooktop)	8	W10892809	Tube, Manifold Supply (Left)		W11200311	Harness, Main (18 In)
	W11565475	Wiring Diagram (Oven)		W10892804	Tube, Manifold Supply (Left Center)		W10903727	Harness, Griddle
	W11202289	Sheet, Tech		W10892805	Tube, Manifold Supply (Right Center)		W11200329	Harness, Cooktop
2	W11183720	Assembly, Valve Manifold (Left Front And Left Rear)	9	W11505236	Griddle Module Assembly		W10780278	Harness, Door Lock
	W11036612	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	10	3196160	Screw		W11200318	Harness, Communication
	W10892994	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	11	W10115843	Cover, Ignition Box, Burner (Not Serviced)		W11242785	Harness, WIFI
			12				313438	Clip, Harness
			13	W10891584	Sensor, Griddle		W11212216	Cord, Power
			14	W10162096	Screw		9759877	Retainer, Strain Relief
			15	W11121383	Insulation, Griddle		4450800	Screw, Grounding
			16	4453116	Adapter, Male		W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11238042	Kit, LP Conversion


COOKTOP, BURNER AND GRATE PARTS

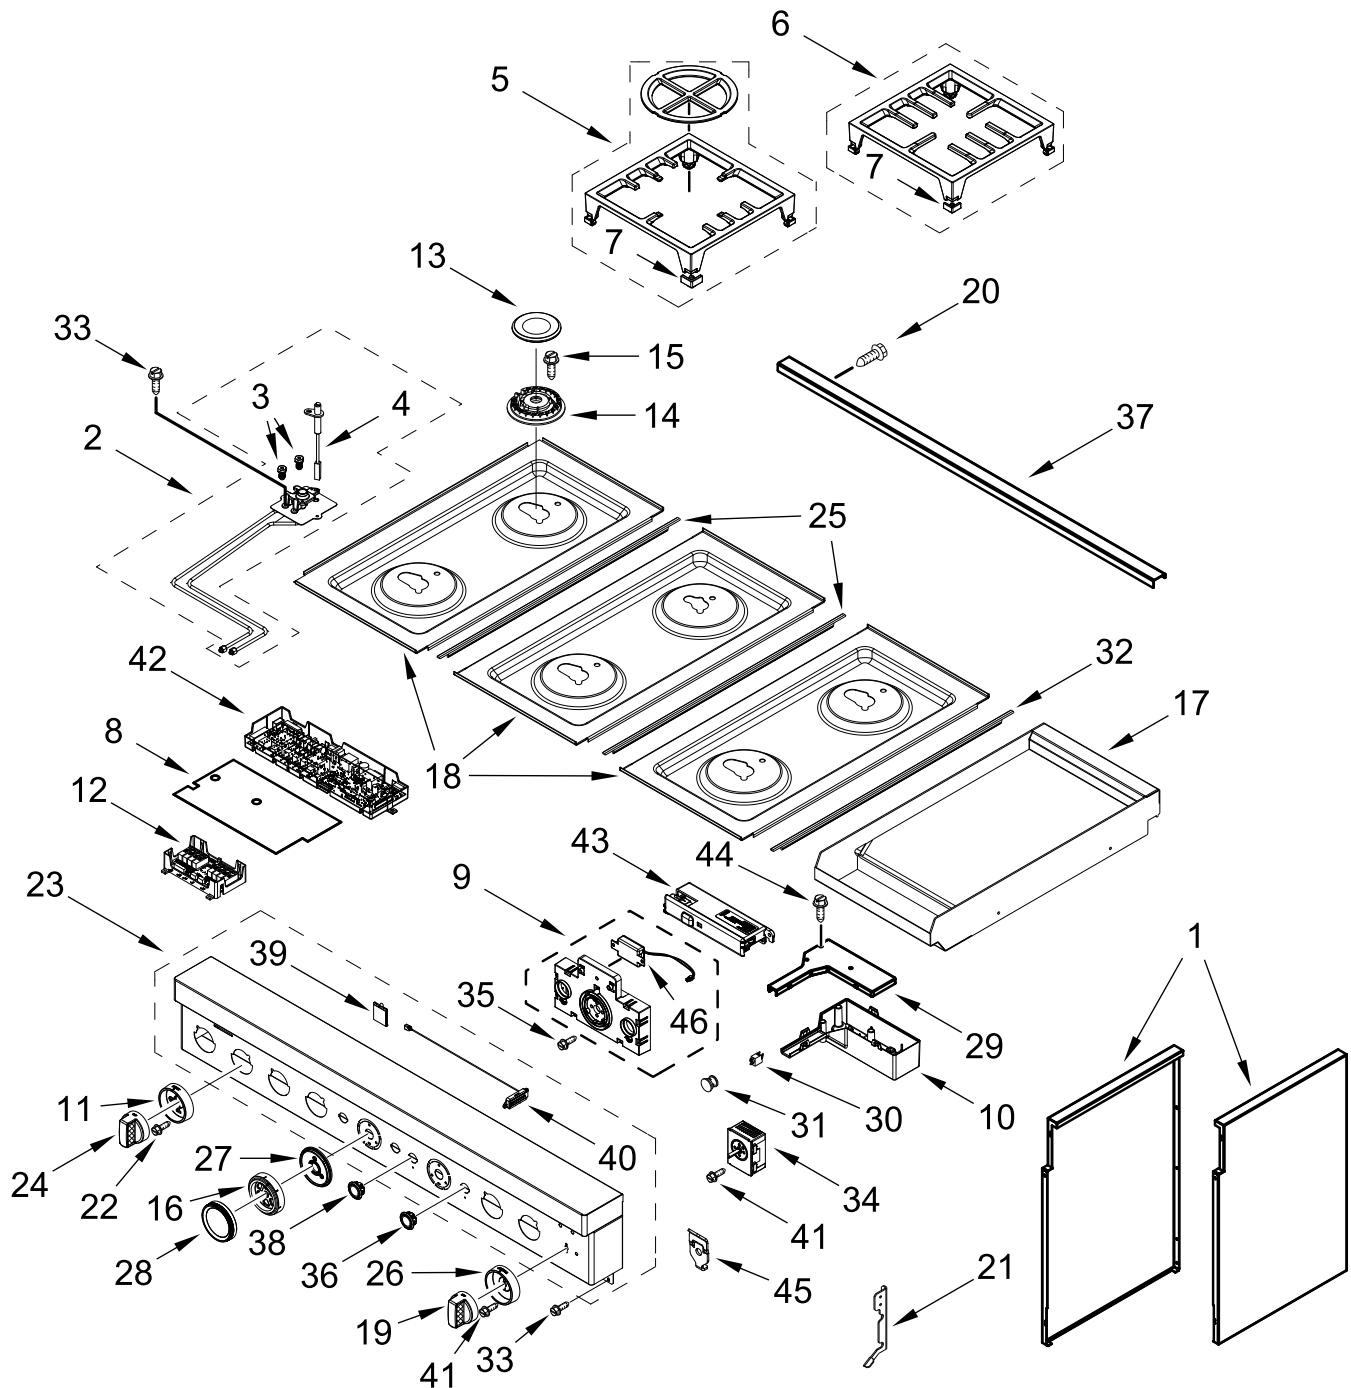

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	6	W11291179	Burner, Grate	21	W10130760	Bracket, Moving Console (Left)
	W11111428	Panel, Cabinet Side (Right)	7	W11042504	Bumper, Grate		W10130759	Bracket, Moving Console (Right)
2	W10892793	Assembly, Orifice Holder (Left Front)	8	W11281269	Barrier, Appliance Manager	22	W11328357	Screw
	W10892492	Assembly, Orifice Holder (Left Rear)	9	W11436331	Interface, User	23	W11700786	Panel, Control
	W11159461	Assembly, Orifice Holder (Left Center Front)	10	W11205795	Cover, WIFI Outer	24		Knob, Burner
	W10892808	Assembly, Orifice Holder (Left Center Rear)	11	W10881642	Bezel (Front Burners)		W10912166	Stainless (Left Rear, Left Center Front, Right Center Rear)
	W10892505	Assembly, Orifice Holder (Right Center Front)		W10883433	Bezel (Rear Burners)		W10883172	Stainless (Left Front, Left Center Rear, Right Center Front)
	W10892446	Assembly, Orifice Holder (Right Center Rear)	12	W10890116	Manager, Appliance (Expansion)	25		Trim, T-Strip
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Center Front)	13		Cap, Burner		W10271524	Black
	W10892419	Orifice, Main (15K) (Left Rear, Left Center Front, Right Center Rear)		W11121390	Black (Includes 6)	26	W10886700	Bezel, Griddle
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Center Front)	14	W10891746	Spreader, Flame (High) (Left Front, Right Center Front)	27		Bezel, Oven
	W10892438	Orifice, Simmer (5K) (Left Center Rear)		W10891974	Spreader, Flame (Low) (Left Rear, Left Center Front, Right Center Rear)		W11500871	Stainless
4	W11238757	Igniter (Left Front, Right Center Front)		W10891978	Spreader, Flame (AUX) (Left Center Rear)	28		Knob, Oven Temperature
	W11114379	Igniter (Left Rear)	15	W11323261	Screw (8-18 X 1 in)		W11500868	Stainless
	W10892340	Igniter (Left Center Front, Left Center Rear, Right Center Rear)		W11323309	Screw (8-18 X 1/2 in)	29	W11205794	Cover, WIFI Inner
5	W11291183	Burner, Grate (With Wok Ring)	16		Knob, Oven Mode	30	W10116114	Light, Indicator Housing
				W11500863	Stainless	31	W10294500	Lens, Indicator Light
			17		Assembly, Griddle Module (Part Number Shown On Burner Box and Griddle Parts Page)	32	W10291193	Trim, L-Strip
						33	7101P426-60	Screw
			18		Panel, Cooktop	34	W11033497	Control, Griddle
				W11038235	Black (Left)	35	3400814	Screw
				W11038257	Black (Left Center)	36	W11241510	Button Assembly, Oven Start
				W11038243	Black (Right Center)	37	W11156418	Trim, Island
			19		Knob, Griddle	38	W11241511	Button Assembly, Oven Light
				W10912167	Stainless	39	W10896366	Assembly, Light Pipe
			20	7101P338-60	Screw	40	W11130078	Antenna, WIFI
						41	W10674068	Screw
						42	W11100281	Manager, Appliance (Powermax)
						43	W11110768	Assembly, WIFI Module
						44	7101P624-60	Screw
						45	W11036559	Spring Clip, Range
						46	W10568405	Assembly, Speaker


CHASSIS PARTS (48 in)

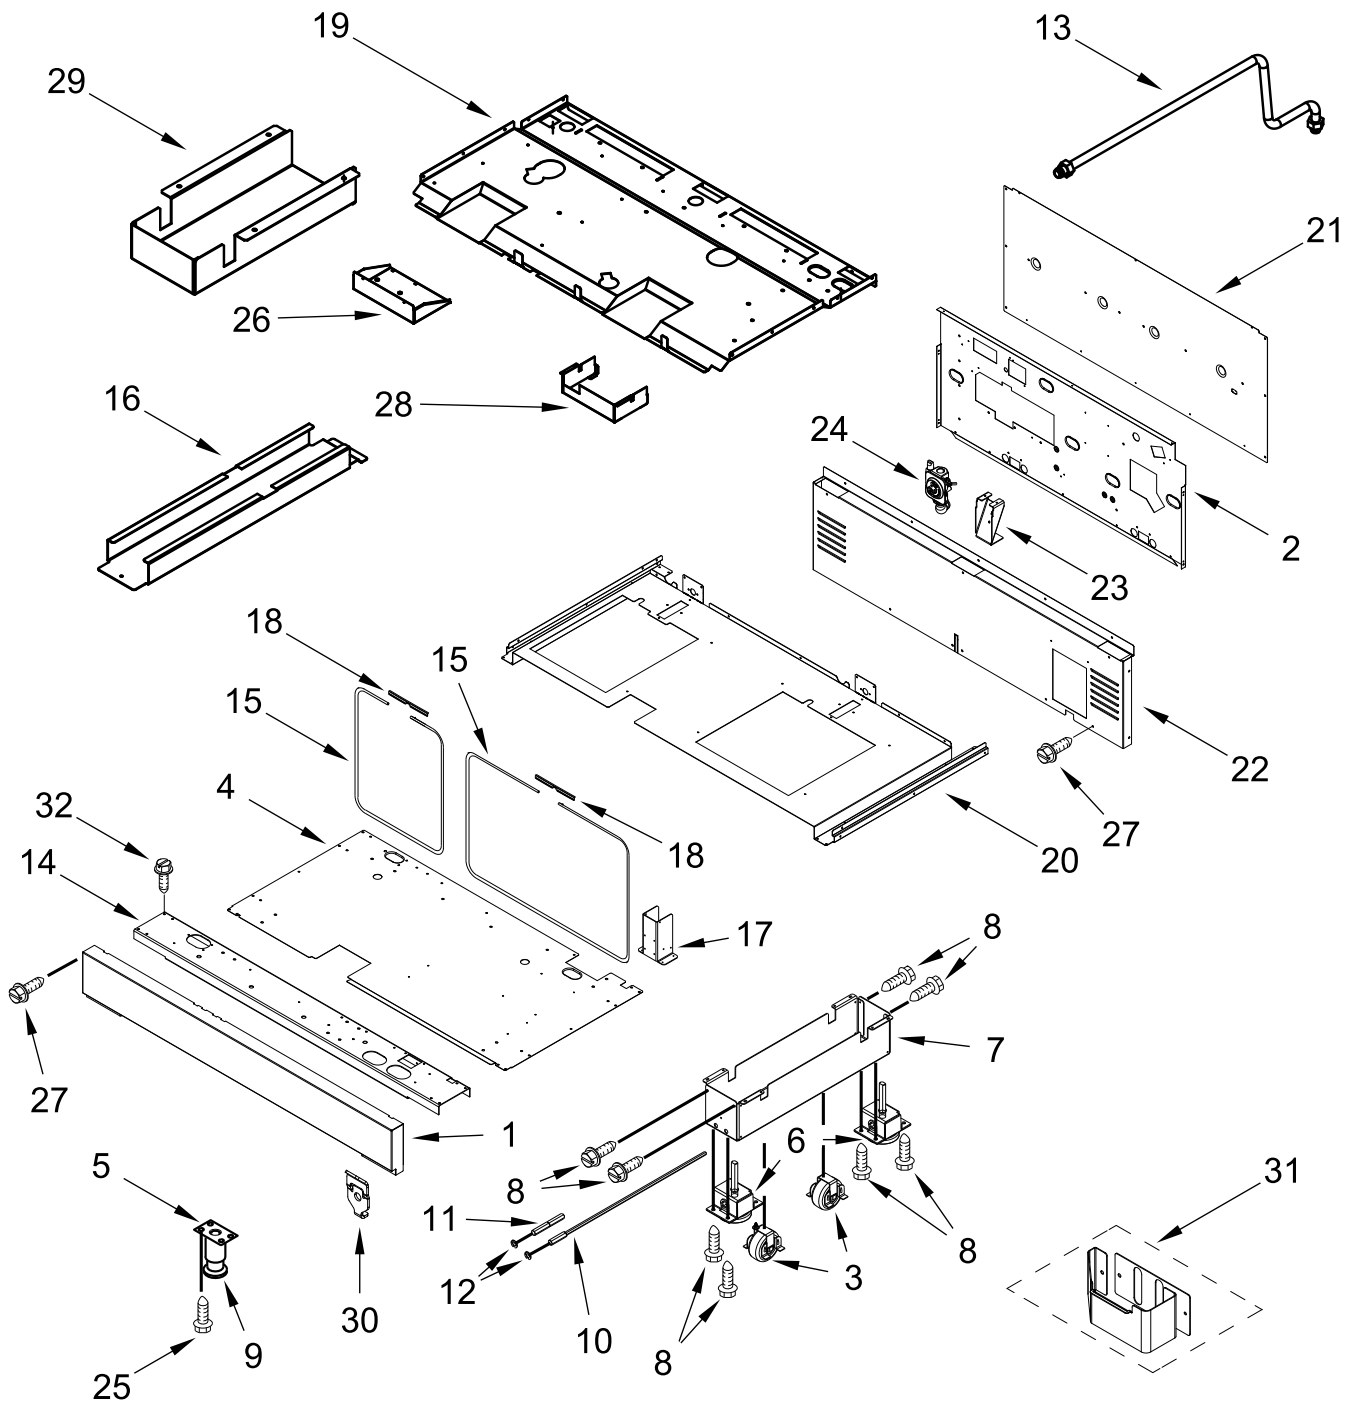

CHASSIS PARTS (48 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11697045	Kickplate	14	W11369238	Support, Channel	24	W10449140	Regulator, Pressure
2	W11324987	Back, Chassis	15	W11115328	Gasket, Cavity (30 In)	25	3400518	Screw
3	W10138054	Assembly, Roller		W11115326	Gasket, Cavity (18 In)	26	W11106341	Drawer, Appliance Manager
4	W11110260	Duct, Bottom (48 in)	16	W11050145	Duct-Chassis, Rear	27	7101P426-60	Screw
5	9759118	Plate, Mounting	17	W10115819	Column, Central	28	W11369237	Cabinet, Appliance Manager
6	9760860	Leveler	18	W11362015	Retainer, Gasket (9 in Long)	29	W11368831	Channel, Wire
7	W10908710	Base, Leveling Leg	19	W11324984	Top, Chassis	30	W11036559	Spring Clip, Range
8	4449743	Screw	20	W11040800	Chassis, Bottom	31	W11199181	Cover, Foot (Left)
9	9759117	Foot, Dual Fuel	21	W11103335	Panel, Back Top		W11199178	Cover, Foot (Right)
10	W10115869	Shaft, Long	22	W11034123	Panel, Back Bottom	32	3196560	Screw
11	W10115793	Shaft, Short						
12	489504	E-Ring	23	W11096823	Bracket, Pressure Regulator			
13	W11106963	Tube, Pressure Regulator						


OVEN PARTS (30 in)

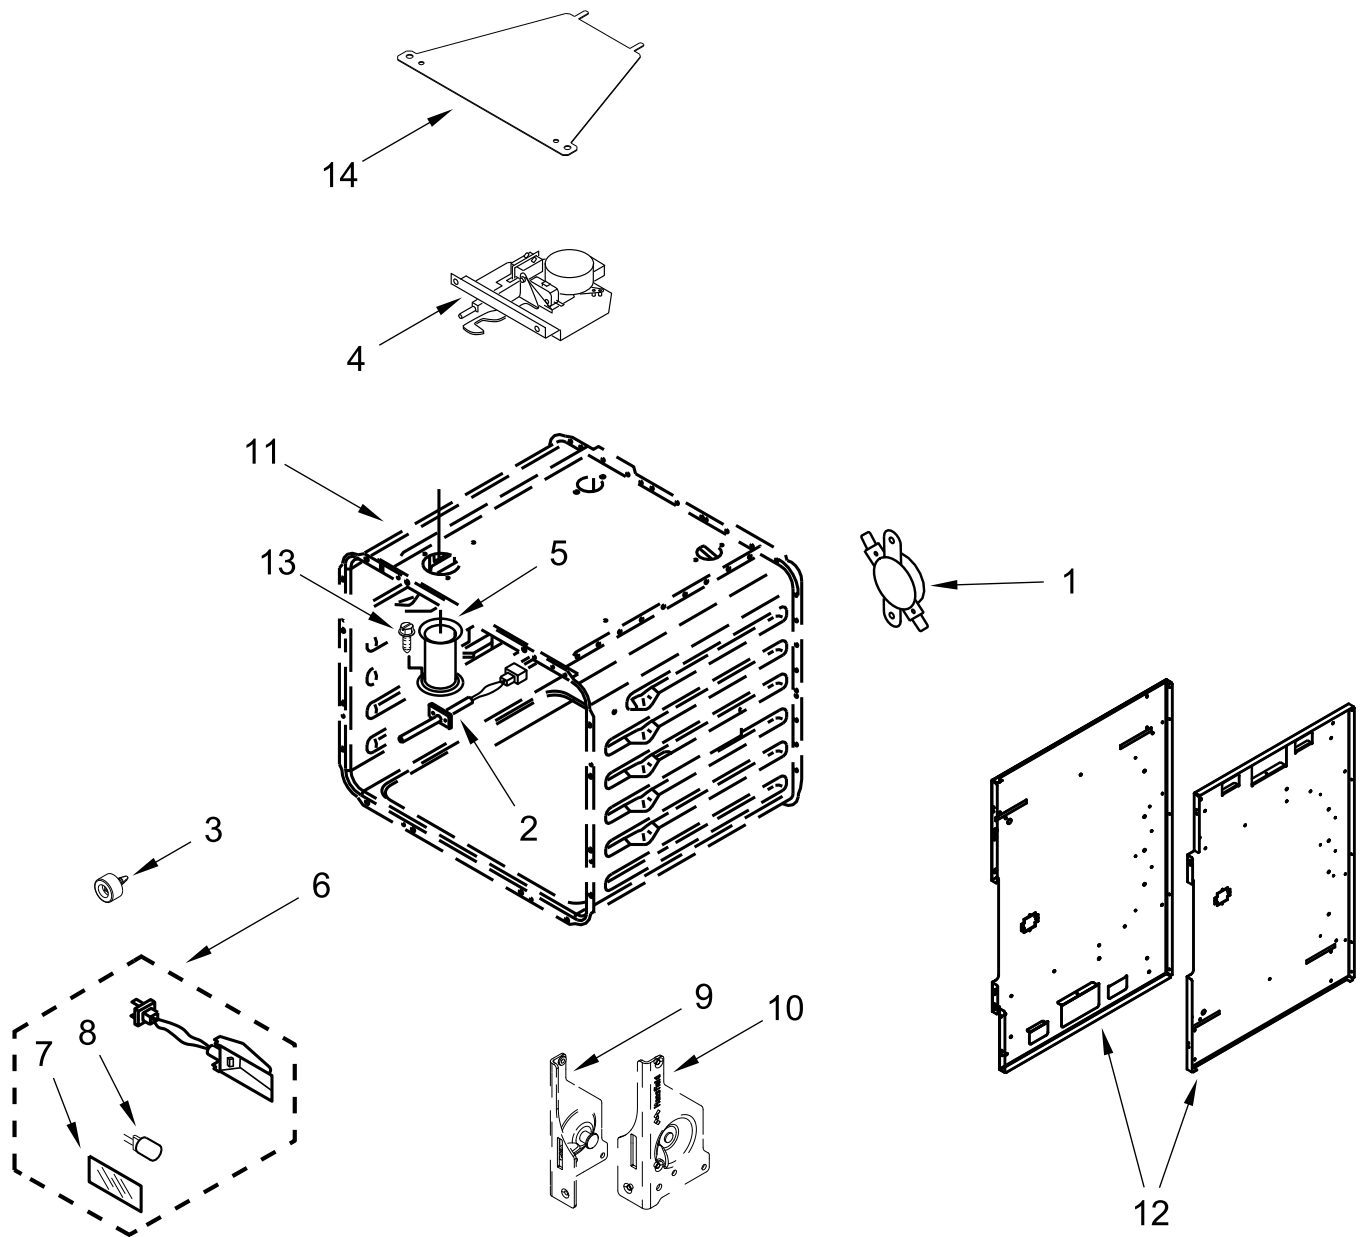

OVEN PARTS (30 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10		Receiver, Hinge (Not Serviced)	14	W10160858	Cover, Latch
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw	11		Liner, Oven (Not Serviced)		W10282810	Insulation, Wrap (30 In)
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)		W10282818	Insulation, Back, (30 In)
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)			
6	W11223932	Assembly, Oven Light	13	3196176	Screw		3400968	Nut
7	W10169756	Lens, Light						
8	W10169757	Bulb, Light						
9		Receiver, Hinge (Not Serviced)						


OVEN PARTS (18 in)

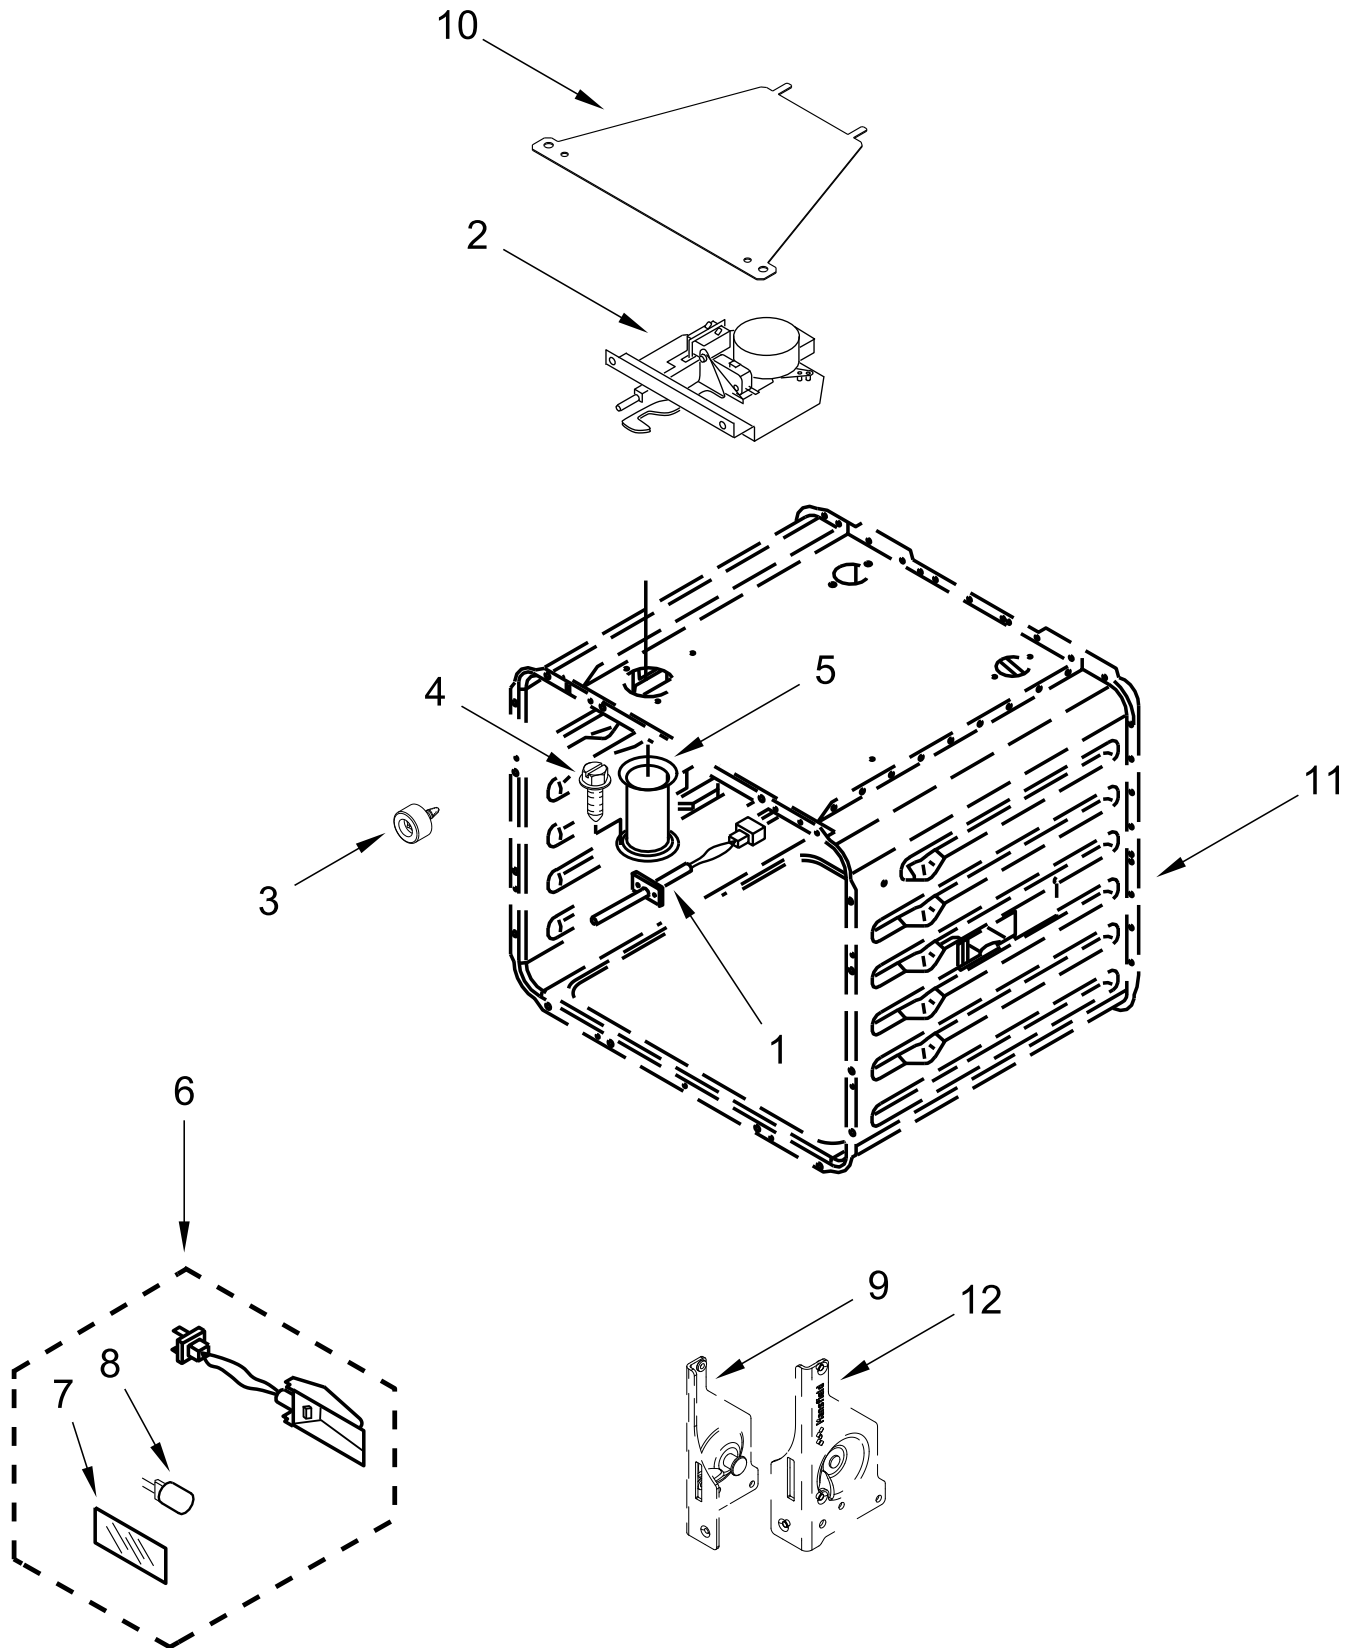

OVEN PARTS (18 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	10	W10160858	Cover, Latch	12		Receiver, Hinge (Not Serviced)
2	W10830016	Latch, Motorized	11		Liner, Oven (Not Serviced)			FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw						
4	3196176	Screw						
5	W10288078	Tube, Vent					W10282820	Insulation, Wrap (18 in)
6	W11223932	Assembly, Oven Light					W11529898	Insulation, Back (18 in)
7	W10169756	Lens, Light					3400968	Nut
8	W10169757	Bulb, Light						
9		Receiver, Hinge (Not Serviced)						


VENTING PARTS

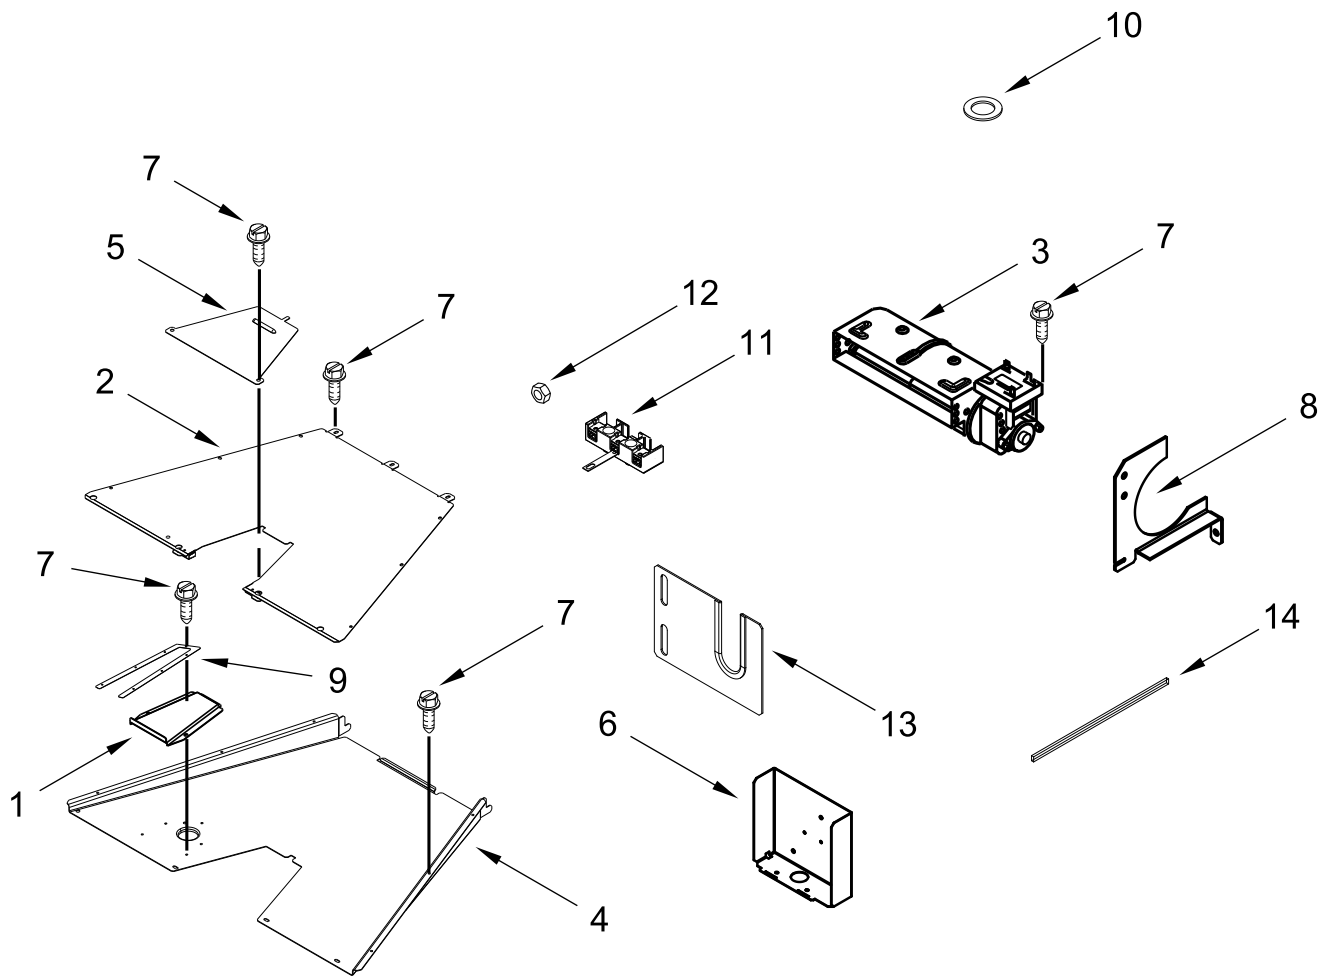

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30 In)	4	W11105222	Vent, Cooling Bottom (30 In)	9	W10270397	Seal, Vent Slope (30 In)
	W10818235	Slope, Exhaust Vent (18 In)		W11113378	Vent, Cooling Bottom (18 In)		W10270402	Seal, Vent Slope (18 In)
2	W11105223	Vent, Cooling Top (30 In)	5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney
	W11113380	Vent, Cooling Top (18 In)	6	W11353392	Box, Terminal	11	9761958	Block, Terminal
3	W11200129	Blower	7	7101P426-60	Screw	12	112432	Nut, Hex
			8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel
						14	W10919715	Gasket


OVEN DOOR PARTS (30 in)

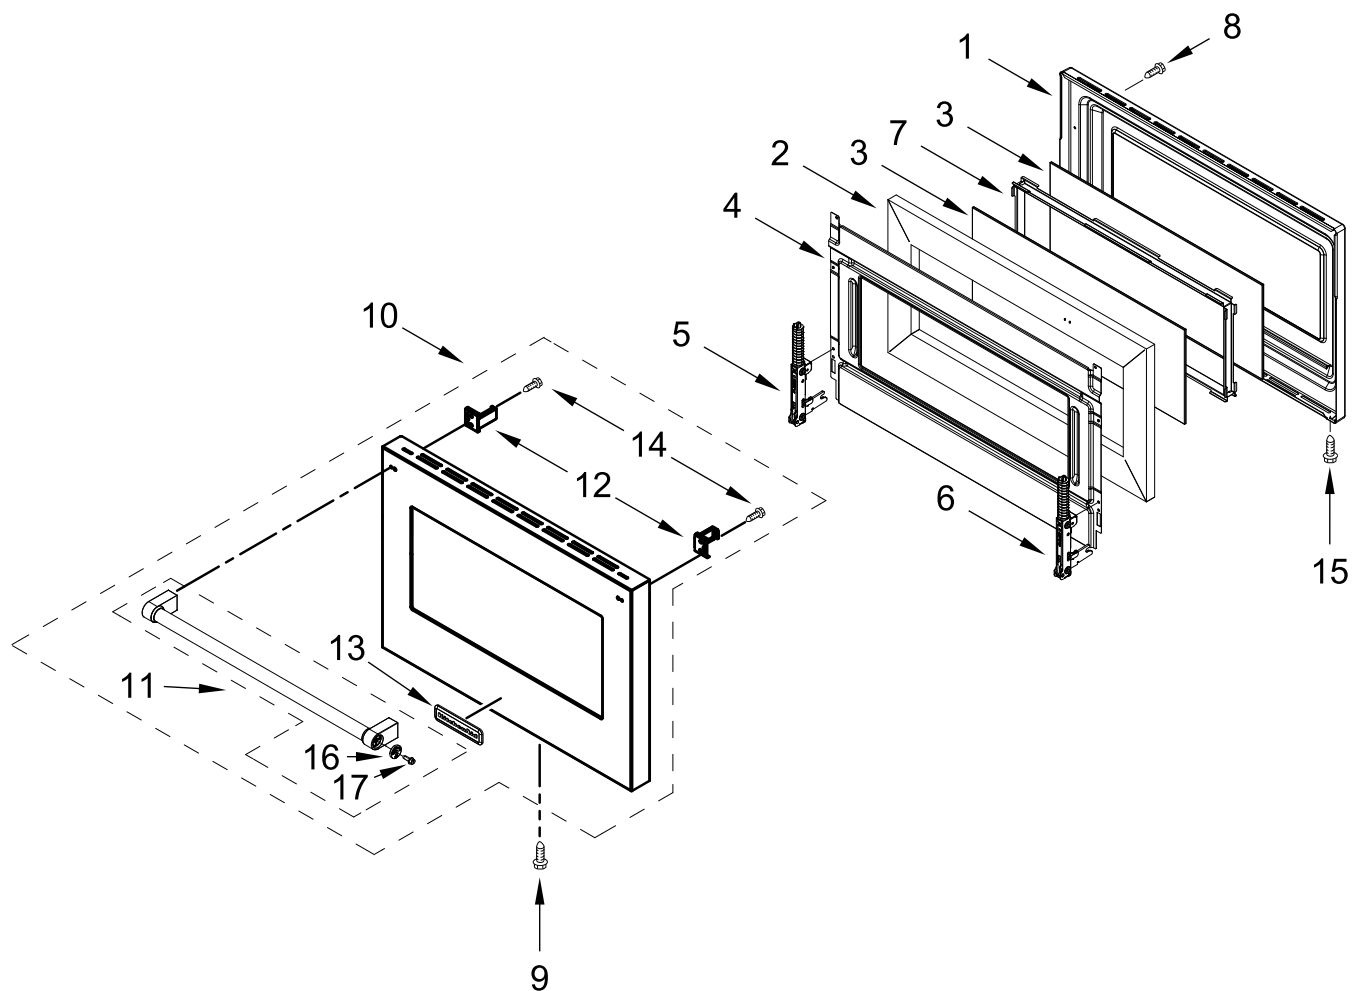

OVEN DOOR PARTS (30 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30 in)	8	W10898280	Screw	13	W10518672	Badge
3	W11184409	Glass, Inner	9	W10162096	Screw	14	W10276043	Screw
4	W11194821	Retainer, Glass	10	W11712126	Outer Door Assembly (Includes Handle)	15	W10607120	Screw
5	W11390105	Hinge, Door (Left)	11	W11362706	Handle Assembly	16	W11361074	Medallion, Handle
6	W11390124	Hinge, Dual (Right)				17	W10656499	Screw


OVEN DOOR PARTS (18 in)

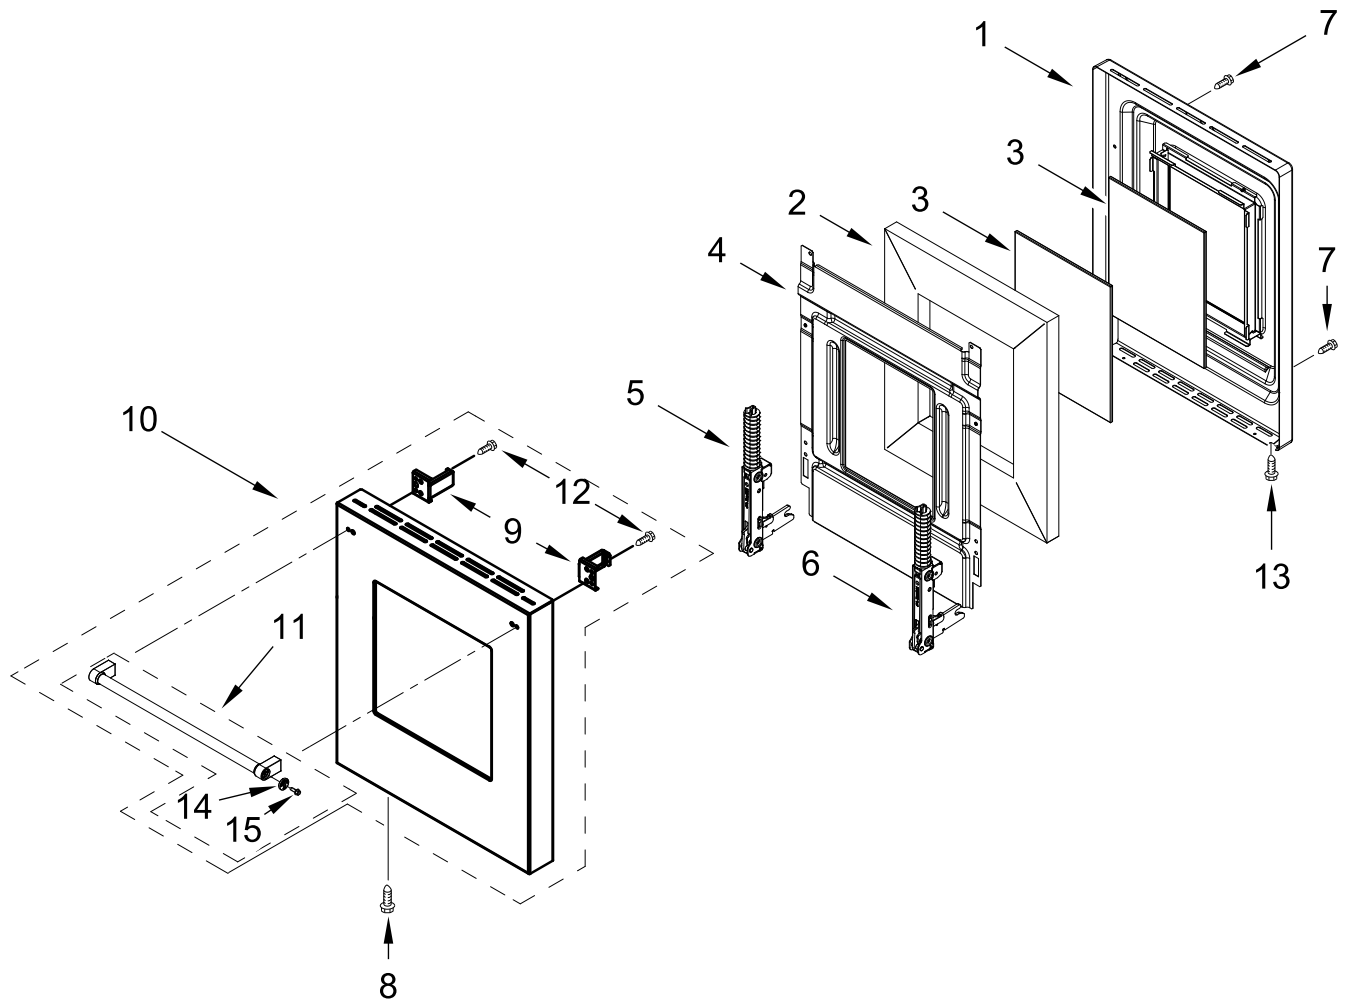

OVEN DOOR PARTS (18 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	12	W10276043	Screw
2	W10884821	Insulation, Door	8	W10162096	Screw	13	W10607120	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	14	W11361074	Medallion, Handle
4	W11194818	Retainer, Glass	10	W11712117	Outer Door Assembly (Includes Handle)	15	W10656499	Screw
5	W11390106	Hinge, Door (Left)						
6	W11390125	Hinge, Door (Right)	11	W11362703	Handle Assembly			


INTERNAL OVEN PARTS (30 in)

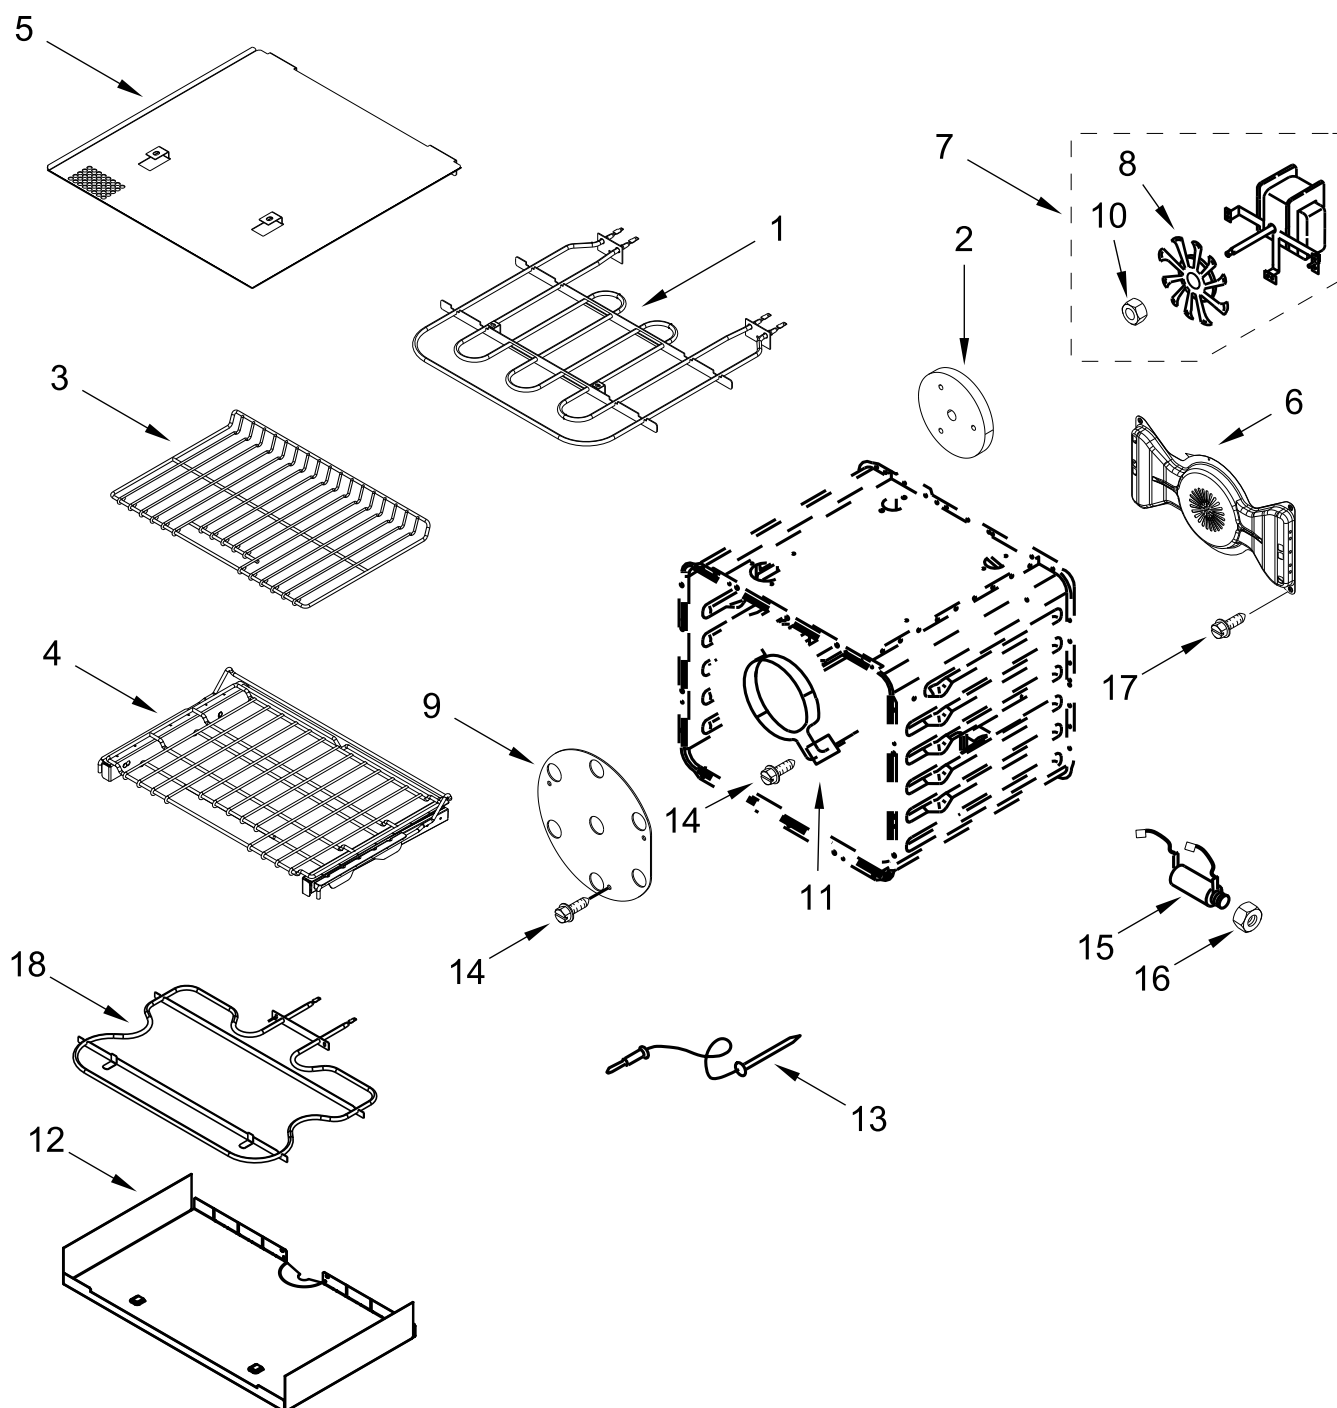

INTERNAL OVEN PARTS (30 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10115994	Element, Broil	7	W10722667	Fan, Convection	13	9755542	Probe, Temperature
2	W10282821	Insulation, Convection Cover	8	W10631503	Blade, Fan	14	4449154	Screw
3	W10570887	Rack, Oven	9	W10261523	Plate, Fan	15	9755543	Jack, Meat Probe
4	W11496977	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)	16	9755546	Nut, Hidden
5	W10160856	Shield, Element Broil	11	9762242	Element, Convection Steam	17	W10739592	Screw
6	W11212180	Baffle, Convection	12	W11109421	Tray, Hidden Bake	18		Element, Hidden Bake (Not Serviced)

INTERNAL OVEN PARTS (18 in)

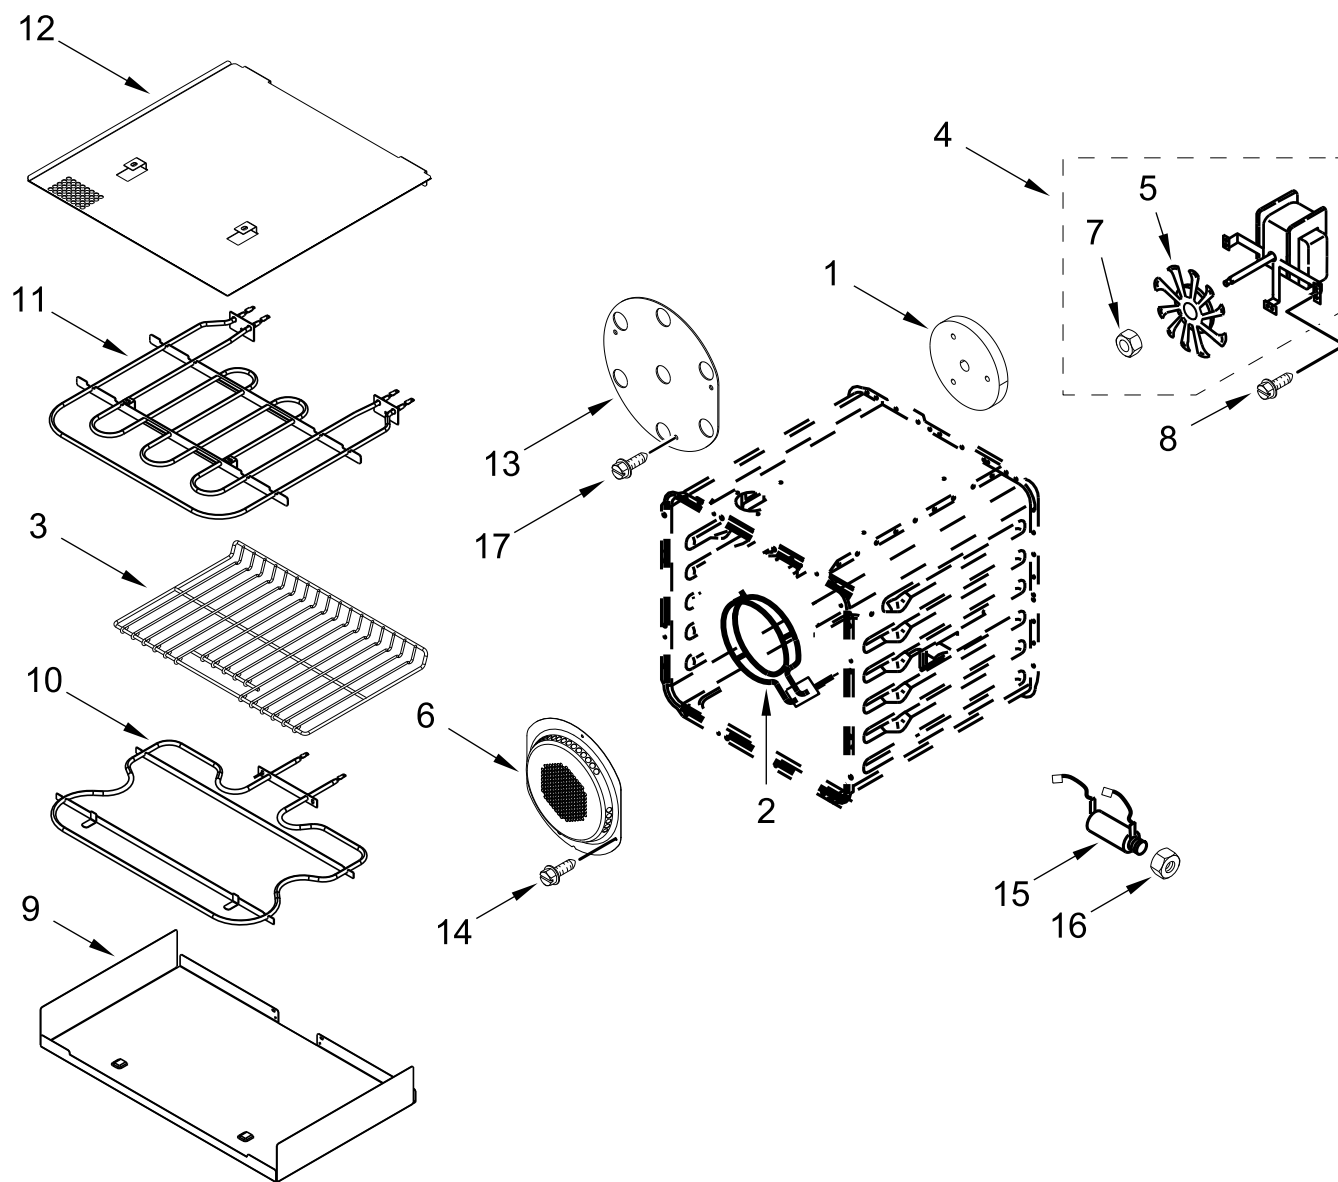

INTERNAL OVEN PARTS (18 in)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	7	W10631504	Nut, Acorn (LH)	14	W10739592	Screw
2	9762242	Element, Convection Steam	8	4449154	Screw	15	9755543	Jack, Meat Probe
3	W10570879	Rack, Oven (18 in)	9	W11110223	Tray, Hidden Bake	16	9755546	Nut, Hidden
4	W10722667	Fan, Convection	10		Element, Hidden Bake (Not Serviced)	17	W10720084	Screw
5	W10631503	Blade, Fan	11	W10116010	Element, Broil			
6	W11211948	Cover, Fan	12	W10160855	Shield, Element Broil			
			13	W10261523	Plate, Fan			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES NOT INCLUDED OR ILLUSTRATED
	W10355051	Cleaner, Cooktop
	W10115777	Backsplash, 48 In Stainless Steel
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48-In With Shelf
	W11238043	Kit, High Altitude Medallion, Handle
	W11368841CF	Copper
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841BN	Bronze
	W11368841DD	Dark Blue