




ELECTRIC RANGE

MODELS:

WEE750H0HB5 (Black)

WEE750H0HW5 (White)


COOKTOP PARTS

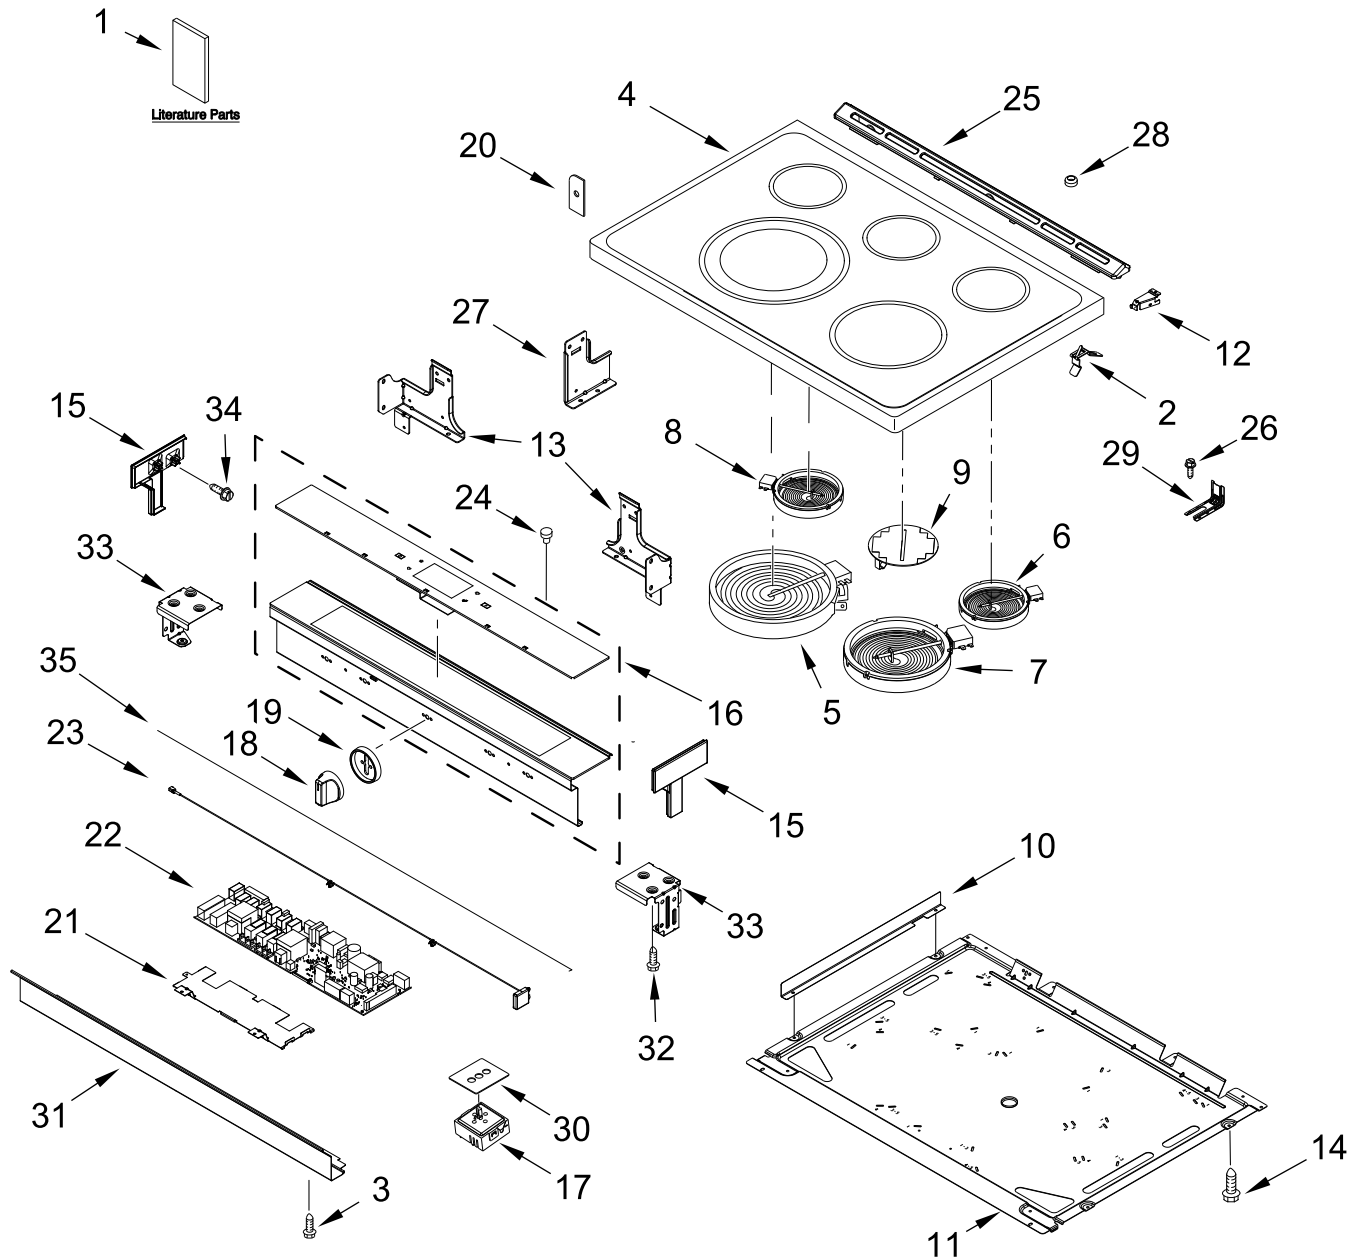

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	15		Endcap	21	W10908536	Bracket, Control
	W11460325	Quick Start Guide		W10854354	Black (Left)	22	W10868153	Control, Electronic (Powermax)
	W11509615	Use and Care Guide		W10854355	White (Left)	23	W11516200	Antenna
	W11335900	Tech, Sheet		W10854358	Black (Right)	24	3196068	Lens, Indicator
	W11327467	Internet Connectivity Guide	16	W10854359	White (Right)	25		Vent, Trim Top
2	W11600012	Spring, Element			Control Panel Assembly (HMI-Central/UI Board)		W10636528	Black
3	3196178	Screw		W11295843	Black		W10636527	White
4		Cooktop		W11293148	White	26	7101P485-60	Screw, Anti-Tip Kit
	W10865119	Black	17	W10437097	Switch, Infinite (Left Front)	27	W10867600	Bracket, Console (Center)
	W10865120	White		W10578768	Switch, Infinite (Right Rear)	28	W10854253	Bumper
5	W11318371	Element (3000W) (Left Front)		W10437092	Switch, Infinite (Right Front)	29	W11379947	Bracket, Anti-Tip
6	W10248261	Element (1200W) (Right Rear)		W10437094	Switch, Infinite (Left Rear)	30	7201P077-60	Gasket, Infinite Switch
7	W11282542	Element (3000W Dual) (Right Front)		W10888698	Switch, Warm Zone (Center)	31		Console, Lower Panel
8	W10342780	Element (1300W) (Left Rear)	18		Knob		W10854346	Black
9	W10799048	Element, Warm Zone (Center Rear)		W10919173	Black (Triple)	32	3196160	Screw
10	W11175271	Bracket, Radiant		W10919177	White (Triple)	33	W10828159	Base, Console (Left)
11	W10536275	Pan, Radiant		W10919174	Black (Warming)		W10828160	Base, Console (Right)
12	W10162253	Brace, Corner (Left)		W10919178	White (Warming)	34	9780274	Screw
	W10162252	Brace, Corner (Right)		W10919175	Black (Dual)	35	W10612719	Gasket, Console and Cooktop
13	W10867592	Support, Cooktop (Right)		W10919179	White (Dual)			FOLLOWING PARTS NOT ILLUSTRATED
	W10867593	Support, Cooktop (Left)		W10919176	Black (Single)		W11451582	Harness, Main
				W10919180	White (Single)		W11134658	Harness, Cooktop
14	3196173	Screw	19		Bezel		W10664316	Clip, Harness (Cooktop)
				W11156712	Black		W11174740	Harness, Console
				W11156715	White		313438	Clip, Harness
			20	W10882900	Gasket			


CHASSIS PARTS

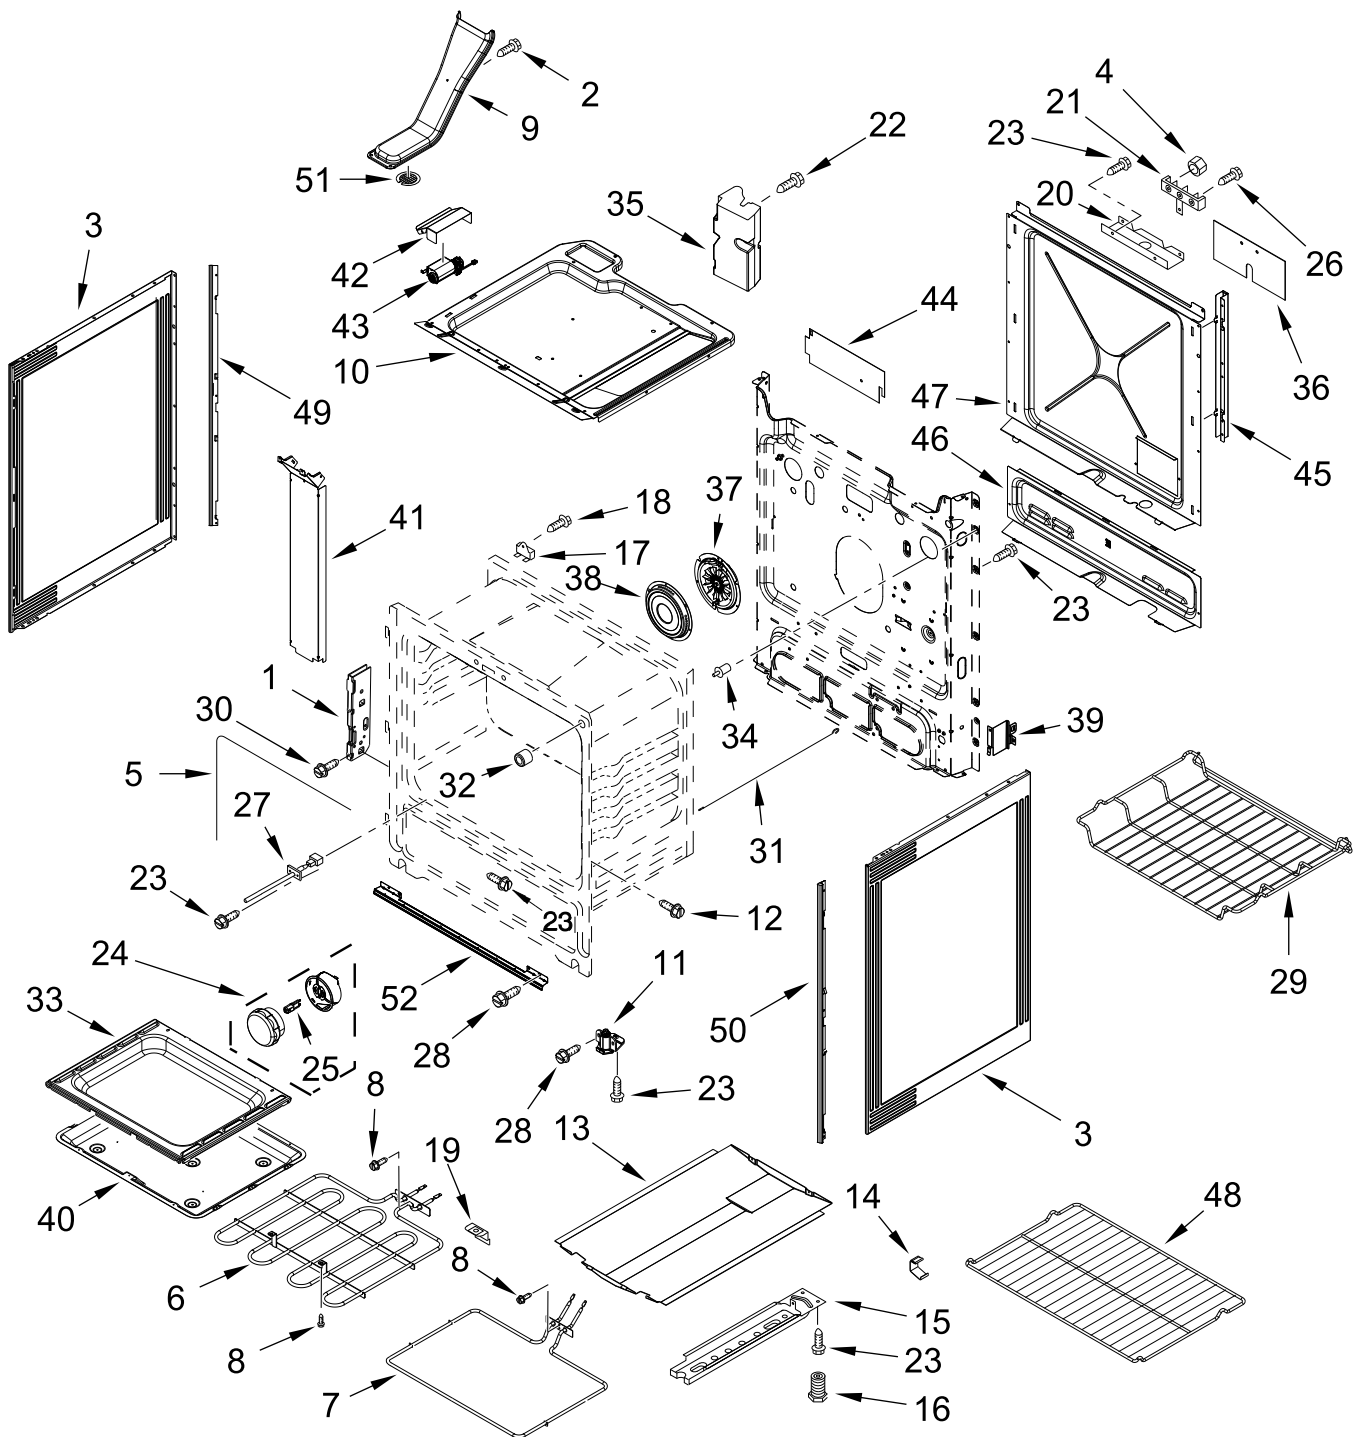

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	20	3186034	Bracket, Service	41	W10162255	Duct, Cover
2	W10362924	Screw	21	W10245259	Block, Terminal	42	W10162254	Duct, Cooling
3		Panel, Side	22	W11034869	Screw	43	W11467246	Cooling Fan
	W10162245	Black	23	3196178	Screw	44	W11117035	Shield, Wire
	W10575396	White	24	W11634772	Light Assembly	45	W10162241	Channel, Rear
4	3400029	Nut	25	W10571723	Bulb, Halogen 40 Watts	46	W10162248	Cover, Wire
5	W11491752	Gasket, Door	26	3400016	Screw	47	W11379355	Cover, Back
6	W11095929	Element, Broil	27	W10586204	Sensor	48	W10531060	Rack, Oven
7	W10774342	Element, Bake	28	3196169	Screw	49	W11510561	Barrier Rail, Rubber (Front Left)
8	W10362924	Screw	29	W10289145	Rack, Oven (Gull-Wing)	50	W11510562	Barrier Rail, Rubber (Front Right)
9	W11122085	Assembly, Flue	30	W10031780	Screw	51	W11092984	Screen, Vent
10	W10289168	Box, Burner SI	31	W10273192	Rod, Door Switch	52	W11620269	Bracket, Front Frame
11	W10341186	Front Foot Assembly	32	9758701	Spacer, Door			FOLLOWING PARTS NOT ILLUSTRATED
12	W10067840	Screw	33	W10774446	Bottom, Oven			
13	W10541959	Shield, Bake	34	W11511828	Switch, Door		W10289173	Insulation, Wrap
14	W10137382	Clip, Panel	35	W10914589	Counterweight		W10575374	Insulation, Bottom
15	W10390008	Base Rail Assembly (Left)	36	W10655441	Shield, Power Cord		4820F015-59	Insulation, Strap
	W10390007	Base Rail Assembly (Right)	37	W10756304	Assembly, Convection		W10162240	Insulation, Back
16	W10058460	Foot, Leveling	38	W10346154	Cover, Convection		7111P017-60	Clamp, Wire
17	3196548	Fuse, Thermal	39	W10273002	Bracket, Oven Support			
18	3196172	Screw	40	W11379357	Bake Pan			
19	W10035900	Support, Oven Bottom						

DOOR PARTS

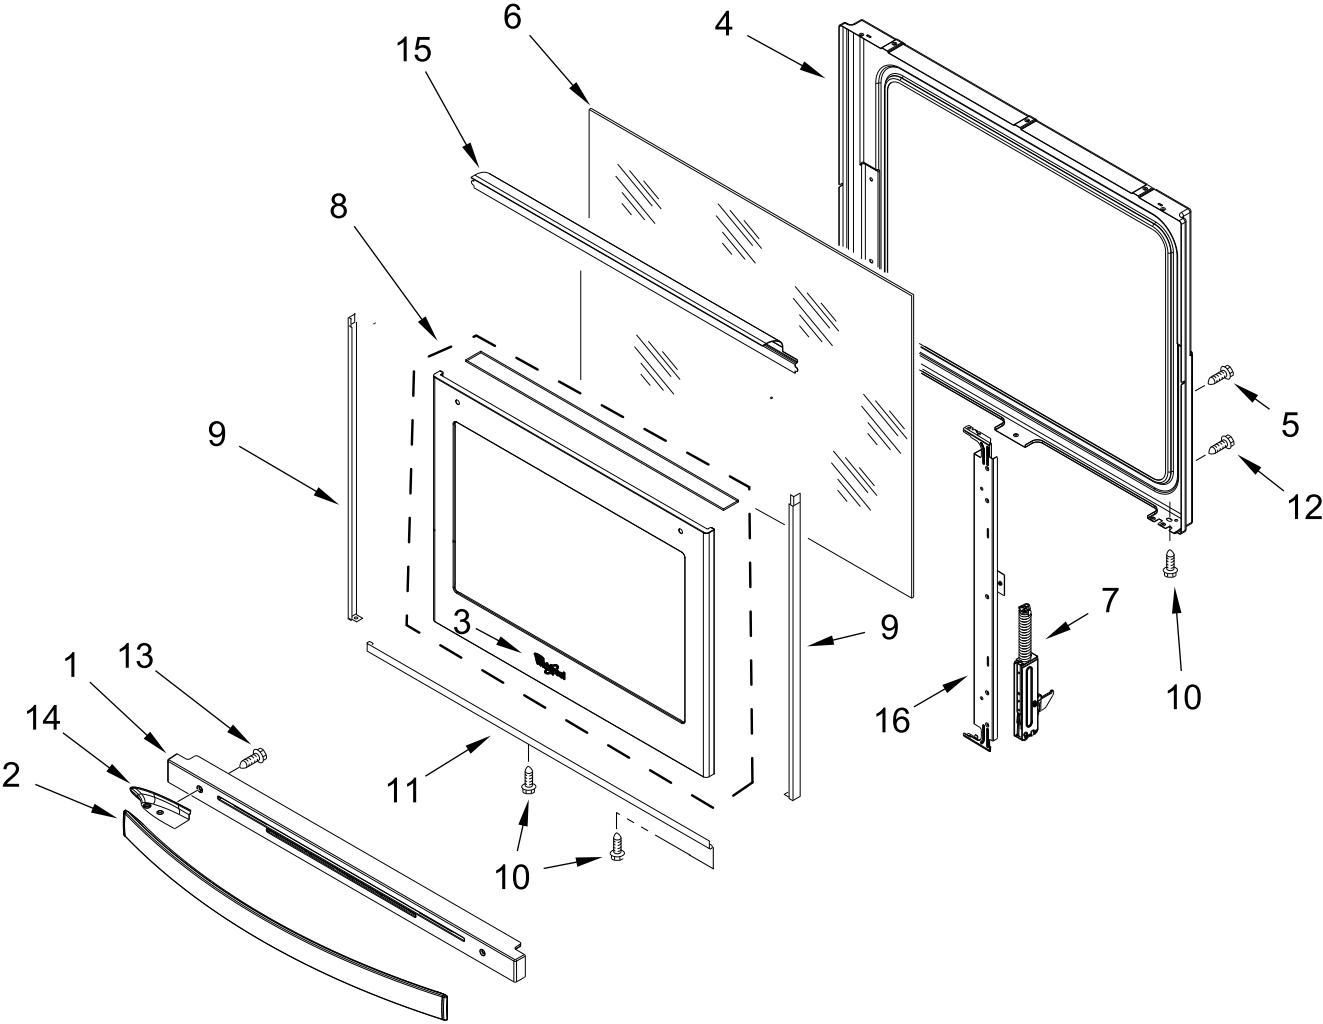


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W10880611	Black
	W10880612	White
2		Assembly, Door Handle
	W11022643	Black
	W11022644	White
3	W10884775	Badge
4	W10297318	Liner, Door
5	W10031790	Screw
6	W10300487	Glass, Inner
7	W10440013	Hinge, Door (Active)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8		Assembly, Outer Door
	W11687919	Black
	W10871830	White
9		Trim, Door Side
	W10334004	Black
	W10334003	White
10	W10327235	Screw
11		Trim, Door
	W10334031	Black
	W10333990	White
12	W10031780	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10317886	Screw
14		Standoff, Handle
15	W10294853	Bracket, Glass Liner
16	W10294851	Rail, Door
	W10917796	Black
	W10917797	White

DRAWER PARTS

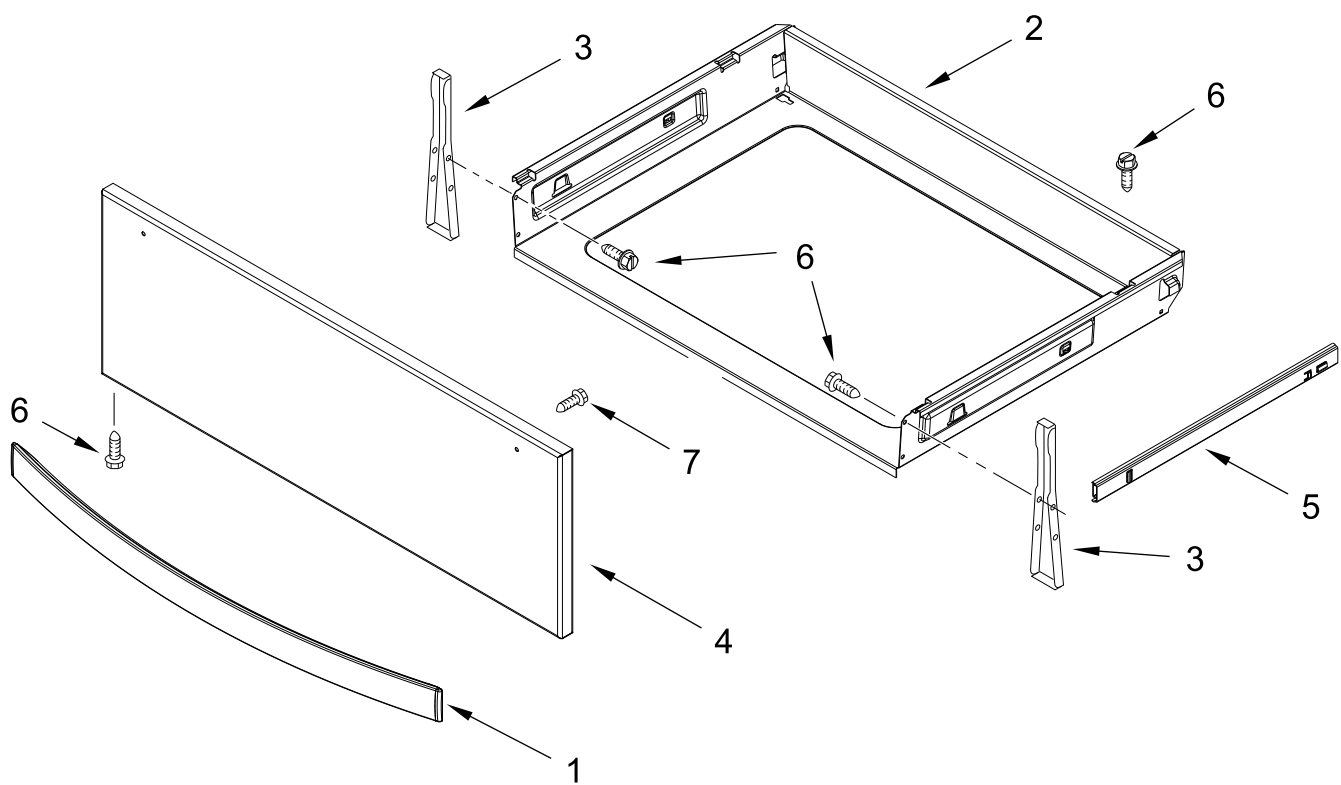

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer
	W11022643	Black
	W11022644	White
2	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10318026	Bracket, Mounting
4		Panel, Drawer Front
	W11449686	Black
	W11449681	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
6	3196169	Screw
7	W10498399	Screw

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit and Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10391473	Pad, Cooktop Cleaning
	W10432019	Alt Cleaning Kit
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	W10432539	Griddle
	4396927	Rack, Oven (Split)
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432545	Kit, Grill Assembly, Trim (Includes Blind Threaded Insert)
	W10675026	Black
	W10675027	White
	W10675028	Stainless Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)