




## **GAS RANGE**

### **MODELS:**

KFGC506JSS07 (Stainless)


# BURNER BOX PARTS

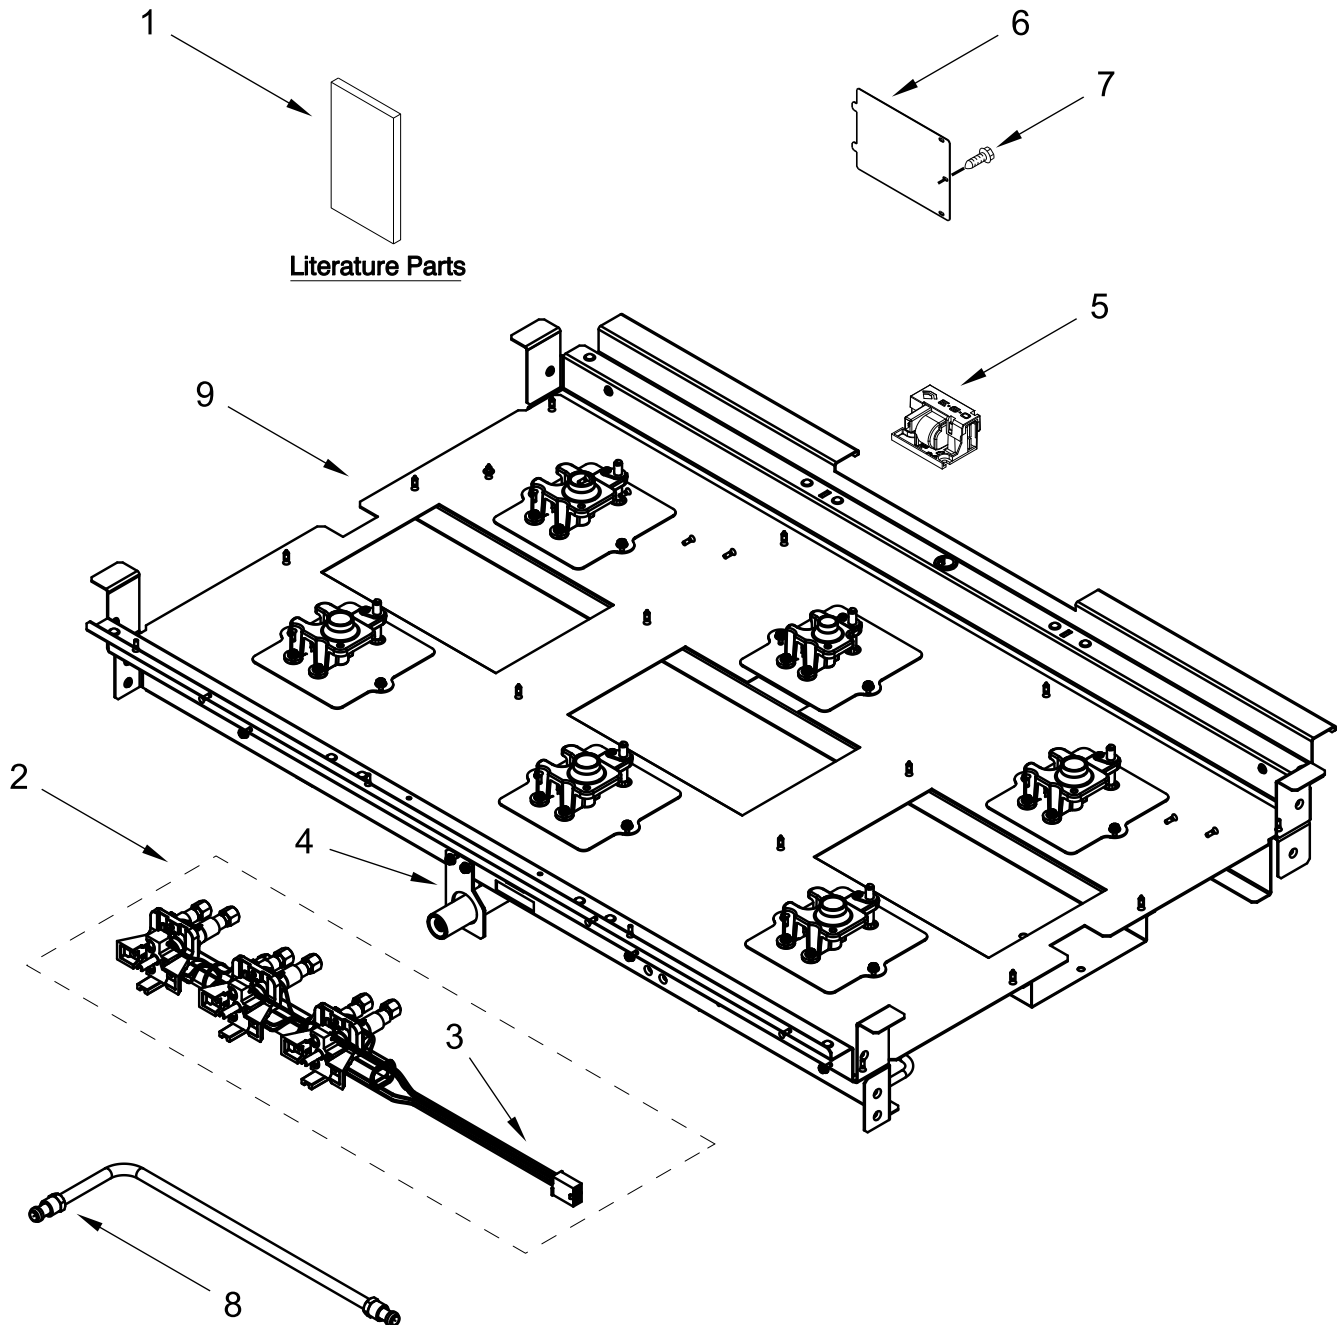

# BURNER BOX PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                               | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>            | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                 |
|-----------------------------|-----------------|------------------------------------------------------------------|-----------------------------|-----------------|-------------------------------|-----------------------------|-----------------|------------------------------------|
| 1                           |                 | Literature Parts                                                 | 6                           | W10115843       | Cover, Ignition               | 9                           |                 | Box, Burner (Not Serviced)         |
|                             | W11508863       | Use and Care Guide                                               | 7                           | 7101P426-60     | Screw                         |                             |                 |                                    |
|                             | W11508887       | Installation Instructions                                        | 8                           | W10892073       | Tube, Manifold Supply (Left)  |                             |                 | FOLLOWING PARTS NOT ILLUSTRATED    |
|                             | W11184759       | Guide, Internet Connectivity                                     |                             | W10892334       | Tube, Manifold Supply (Right) | W11448063                   |                 | Harness, Main (36 in)              |
|                             | W11575703       | Diagram, Wiring (Cooktop)                                        |                             |                 |                               | W11200332                   |                 | Harness, Cooktop                   |
|                             | W11565467       | Tech Sheet                                                       |                             |                 |                               | W10780278                   |                 | Harness, Door Lock                 |
|                             | W11364680       | Guide, Quick Start                                               |                             |                 |                               | W11200325                   |                 | Harness, Communication             |
| 2                           | W10892995       | Assembly, Valve Manifold (Left Front, Left Rear, Center Rear)    |                             |                 |                               | W11242785                   |                 | Harness, WIFI                      |
|                             | W10893005       | Assembly, Valve Manifold (Center Front, Right Front, Right Rear) |                             |                 |                               | 313438                      |                 | Clip, Harness                      |
| 3                           | W10903729       | Switch, Harness                                                  |                             |                 |                               | W10624584                   |                 | Cord, Power                        |
| 4                           | W11121194       | Bracket, Manifold                                                |                             |                 |                               | 4450800                     |                 | Screw, Grounding                   |
| 5                           | W11121317       | Module, Spark                                                    |                             |                 |                               | W10253333                   |                 | Bracket, Anti-Tip                  |
|                             |                 |                                                                  |                             |                 |                               | 7101P485-60                 |                 | Screw, Anti-Tip Kit                |
|                             |                 |                                                                  |                             |                 |                               | W11238042                   |                 | Kit, LP Conversion                 |
|                             |                 |                                                                  |                             |                 |                               | W11311196                   |                 | Ignitor Wire, Wire-Electrode Bake  |
|                             |                 |                                                                  |                             |                 |                               | W11311197                   |                 | Ignitor Wire, Wire-Electrode Broil |


# COOKTOP, BURNER AND GRATE PARTS

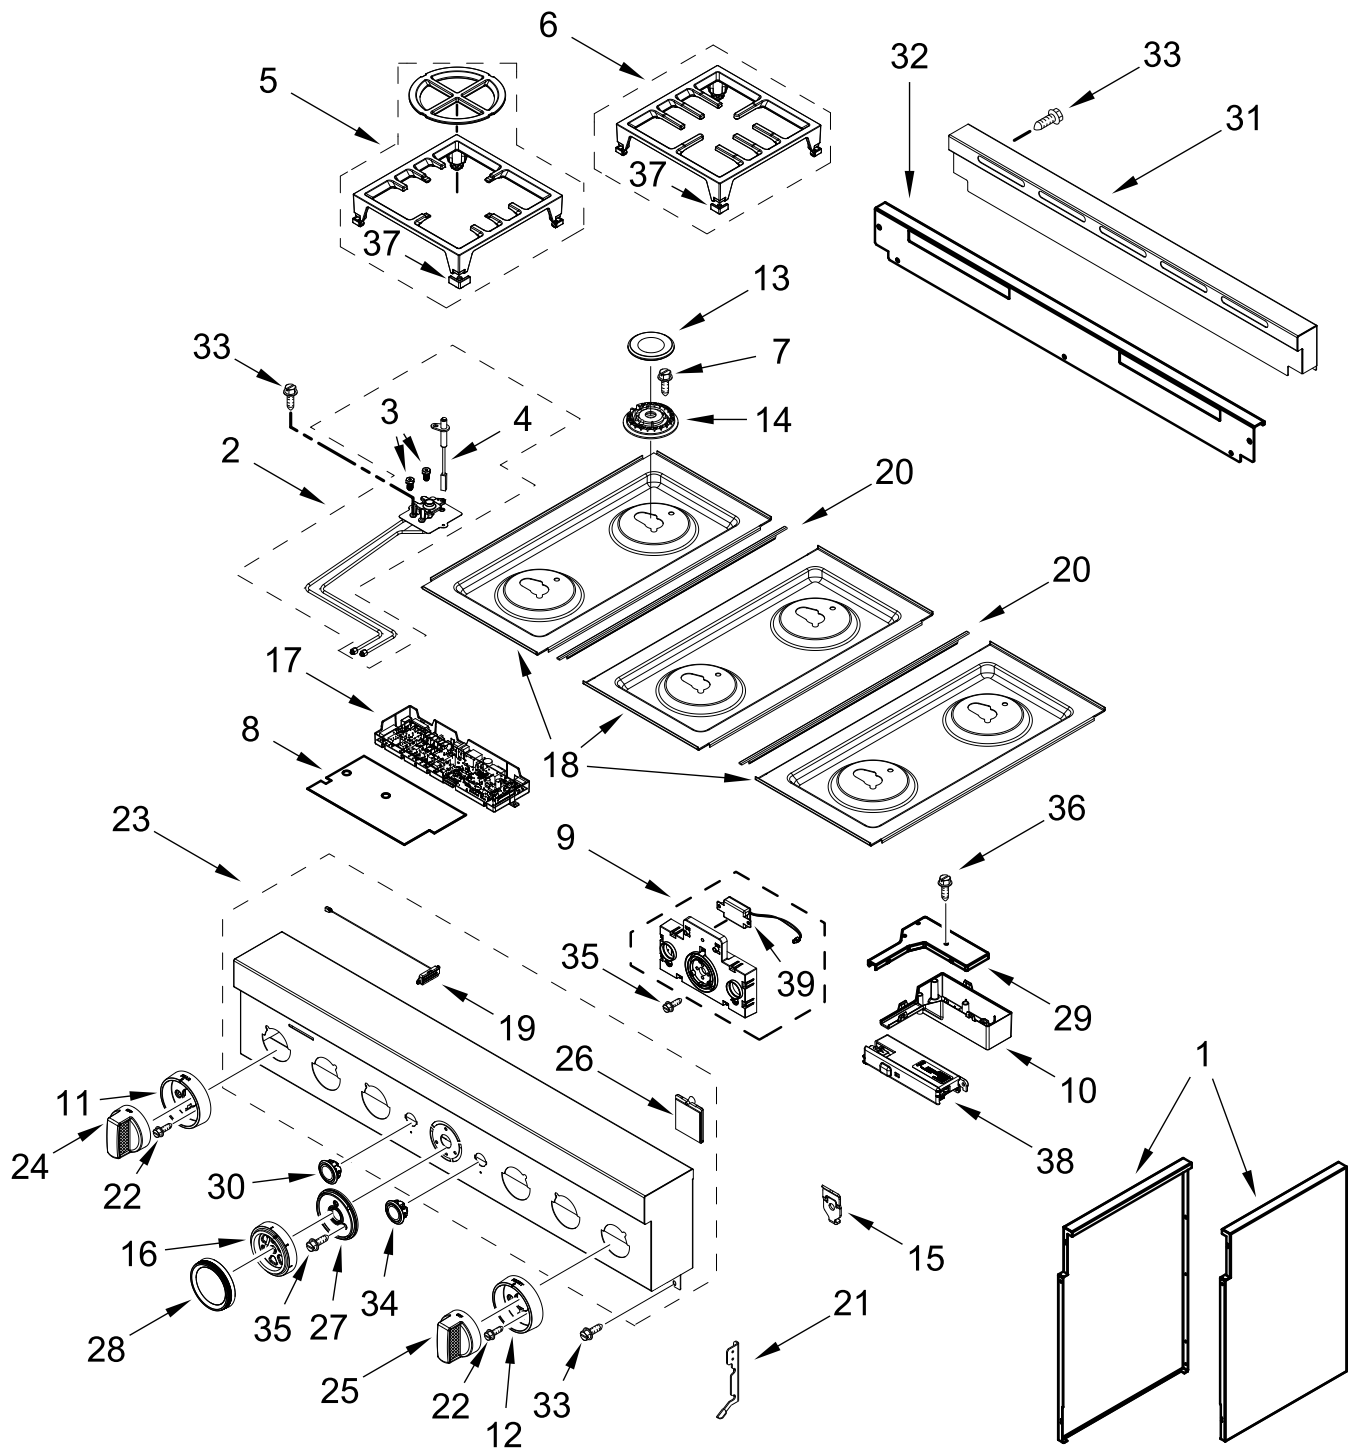

# COOKTOP, BURNER AND GRATE PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                        | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                              | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>              |
|-----------------------------|-----------------|-----------------------------------------------------------|-----------------------------|-----------------|-------------------------------------------------|-----------------------------|-----------------|---------------------------------|
| 1                           | W11106881       | Panel, Cabinet Side (Left)                                | 5                           | W11291183       | Burner, Grate (With Wok Ring)                   | 21                          | W10130760       | Bracket, Moving Console (Left)  |
|                             | W11106880       | Panel, Cabinet Side (Right)                               | 6                           | W11291179       | Burner, Grate                                   |                             | W10130759       | Bracket, Moving Console (Right) |
| 2                           | W10892774       | Assembly, Orifice Holder (Left Front)                     | 7                           | W11323261       | Screw (8-18 X 1 in)                             | 22                          | W11328357       | Screw                           |
|                             | W10892492       | Assembly, Orifice Holder (Left Rear)                      |                             | W11323309       | Screw (8-18 X 1/2 in)                           | 23                          | W11700785       | Panel, Console                  |
|                             | W11159467       | Assembly, Orifice Holder (Center Front)                   | 8                           | W11281269       | Barrier, Appliance Manager                      | 24                          |                 | Knob, Single                    |
|                             | W10892725       | Assembly, Orifice Holder (Center Rear)                    | 9                           | W11436337       | Interface, User                                 |                             | W10912166       | Stainless Knob, Dual            |
|                             | W10892731       | Assembly, Orifice Holder (Right Front)                    | 10                          | W11205795       | Cover, WIFI Outer                               | 25                          | W10883172       | Stainless                       |
|                             | W10892477       | Assembly, Orifice Holder (Right Rear)                     | 11                          | W10883433       | Bezel (Rear Burners)                            | 26                          | W10896366       | Assembly, Light Pipe            |
| 3                           | W10892422       | Orifice, Main (17.4K) (Left Front, Right Front)           | 12                          | W10881642       | Bezel (Front Burners)                           | 27                          |                 | Bezel, Oven                     |
|                             | W10892419       | Orifice, Main (15K) (Left Rear, Right Rear, Center Front) | 13                          |                 | Cap, Burner                                     |                             | W11500871       | Stainless                       |
|                             | W10892435       | Orifice, Simmer (2.6K) (Left Front, Right Front)          |                             | W11121390       | Black (Includes 6)                              | 28                          |                 | Knob, Oven Temperature          |
|                             | W10892438       | Orifice, Simmer (5K) (Center Rear)                        | 14                          | W10891746       | Spreader, Flame (High)                          |                             | W11500868       | Stainless                       |
| 4                           | W11238757       | Igniter (Left Front, Right Front)                         |                             | W10891974       | Spreader, Flame (Low) (Left Front, Right Front) | 29                          | W11205794       | Cover, WIFI Inner               |
|                             | W10892340       | Igniter (Center Front, Center Rear)                       |                             |                 | Spreader, Flame (AUX) (Center Rear)             | 30                          | W11241511       | Button Assembly, Oven Light     |
|                             | W11114379       | Igniter (Left Rear, Right Rear)                           | 15                          | W11036559       | Spring Clip, Range                              | 31                          | W11476245       | Trim, Island                    |
|                             |                 |                                                           | 16                          |                 | Knob, Oven Mode                                 | 32                          | W10323250       | Insert, Island Trim             |
|                             |                 |                                                           |                             | W11500865       | Stainless                                       | 33                          | 7101P426-60     | Screw                           |
|                             |                 |                                                           | 17                          | W11543345       | Manager, Appliance (Powermax)                   | 34                          | W11241510       | Button Assembly, Oven Start     |
|                             |                 |                                                           | 18                          |                 | Panel, Cooktop                                  | 35                          | 3400814         | Screw                           |
|                             |                 |                                                           |                             | W11038235       | Black (Left)                                    | 36                          | 7101P624-60     | Screw                           |
|                             |                 |                                                           |                             | W11038257       | Black (Center)                                  | 37                          | W11042504       | Bumper, Grate                   |
|                             |                 |                                                           |                             | W11038248       | Black (Right)                                   | 38                          | W11110768       | Assembly, WIFI Module           |
|                             |                 |                                                           | 19                          | W11130078       | Antenna, WIFI                                   | 39                          | W10568405       | Assembly, Speaker               |
|                             |                 |                                                           | 20                          |                 | Trim, T-Strip                                   |                             |                 |                                 |
|                             |                 |                                                           |                             | W10271524       | Black                                           |                             |                 |                                 |


# CHASSIS PARTS

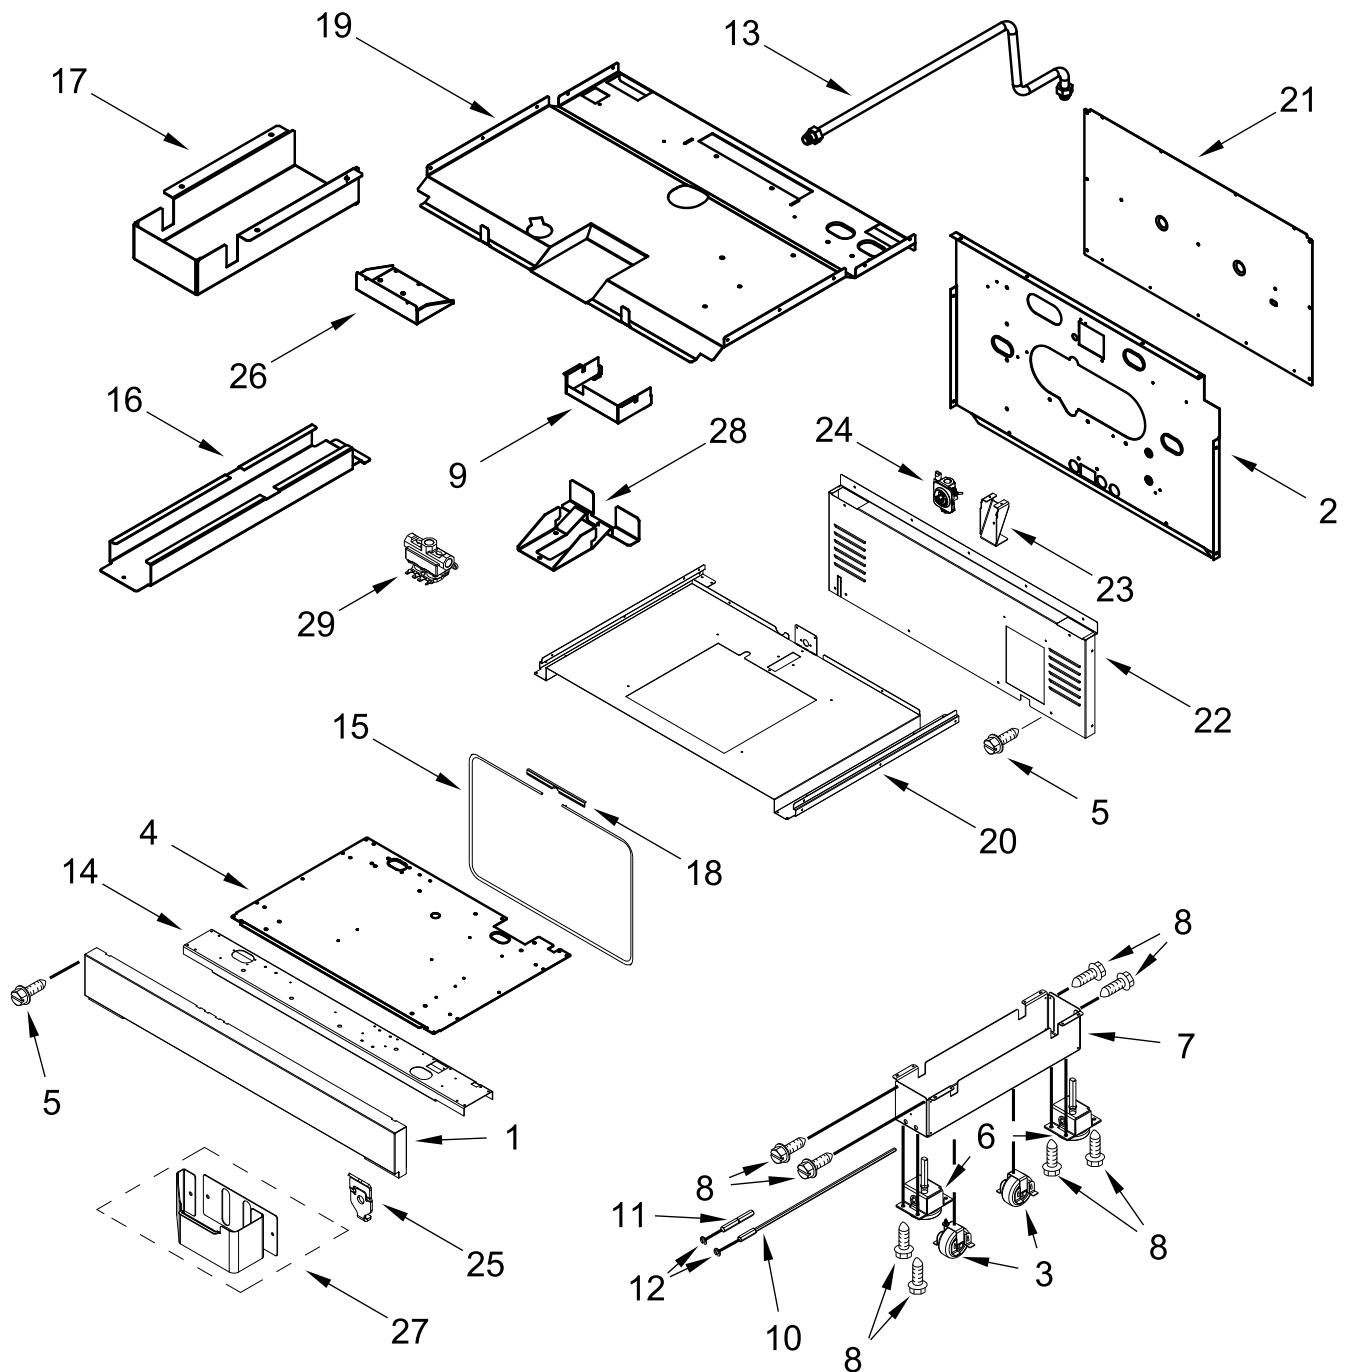

# CHASSIS PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>         | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>           | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>          |
|-----------------------------|-----------------|----------------------------|-----------------------------|-----------------|------------------------------|-----------------------------|-----------------|-----------------------------|
| 1                           | W11697033       | Kickplate                  | 13                          | W11181648       | Tube, Pressure Regulator     | 23                          | W11096823       | Bracket, Pressure Regulator |
| 2                           | W11324988       | Back, Chassis              | 14                          | W11087493       | Support, Channel             | 24                          | W10896959       | Regulator, Pressure         |
| 3                           | W10138054       | Assembly, Roller           | 15                          | W11115330       | Gasket, Oven (36 in)         | 25                          | W11036559       | Spring Clip, Range          |
| 4                           | W11095572       | Duct, Bottom (36 in)       | 16                          | W11050145       | Duct-Chassis, Rear           | 26                          | W11106341       | Drawer, Appliance Manager   |
| 5                           | 7101P426-60     | Screw                      | 17                          | W11368831       | Channel, Wire                | 27                          | W11199181       | Cover, Foot (Left)          |
| 6                           | 9760860         | Leveler                    | 18                          | W11362015       | Retainer, Gasket (9 in Long) |                             | W11199178       | Cover, Foot (Right)         |
| 7                           | W10908710       | Base, Leveling Leg         | 19                          | W11324985       | Top, Chassis                 | 28                          | W11190223       | Bracket, Bake Alignment     |
| 8                           | 4449743         | Screw                      | 20                          | W11040801       | Chassis, Bottom              | 29                          | W10145680       | Valve, Dual                 |
| 9                           | W11369237       | Cabinet, Appliance Manager | 21                          | W11103333       | Panel, Back Top              |                             |                 |                             |
| 10                          | W10115869       | Shaft, Long                | 22                          | W11034133       | Panel, Back Bottom           |                             |                 |                             |
| 11                          | W10115793       | Shaft, Short               |                             |                 |                              |                             |                 |                             |
| 12                          | 489504          | E-Ring                     |                             |                 |                              |                             |                 |                             |

# OVEN PARTS

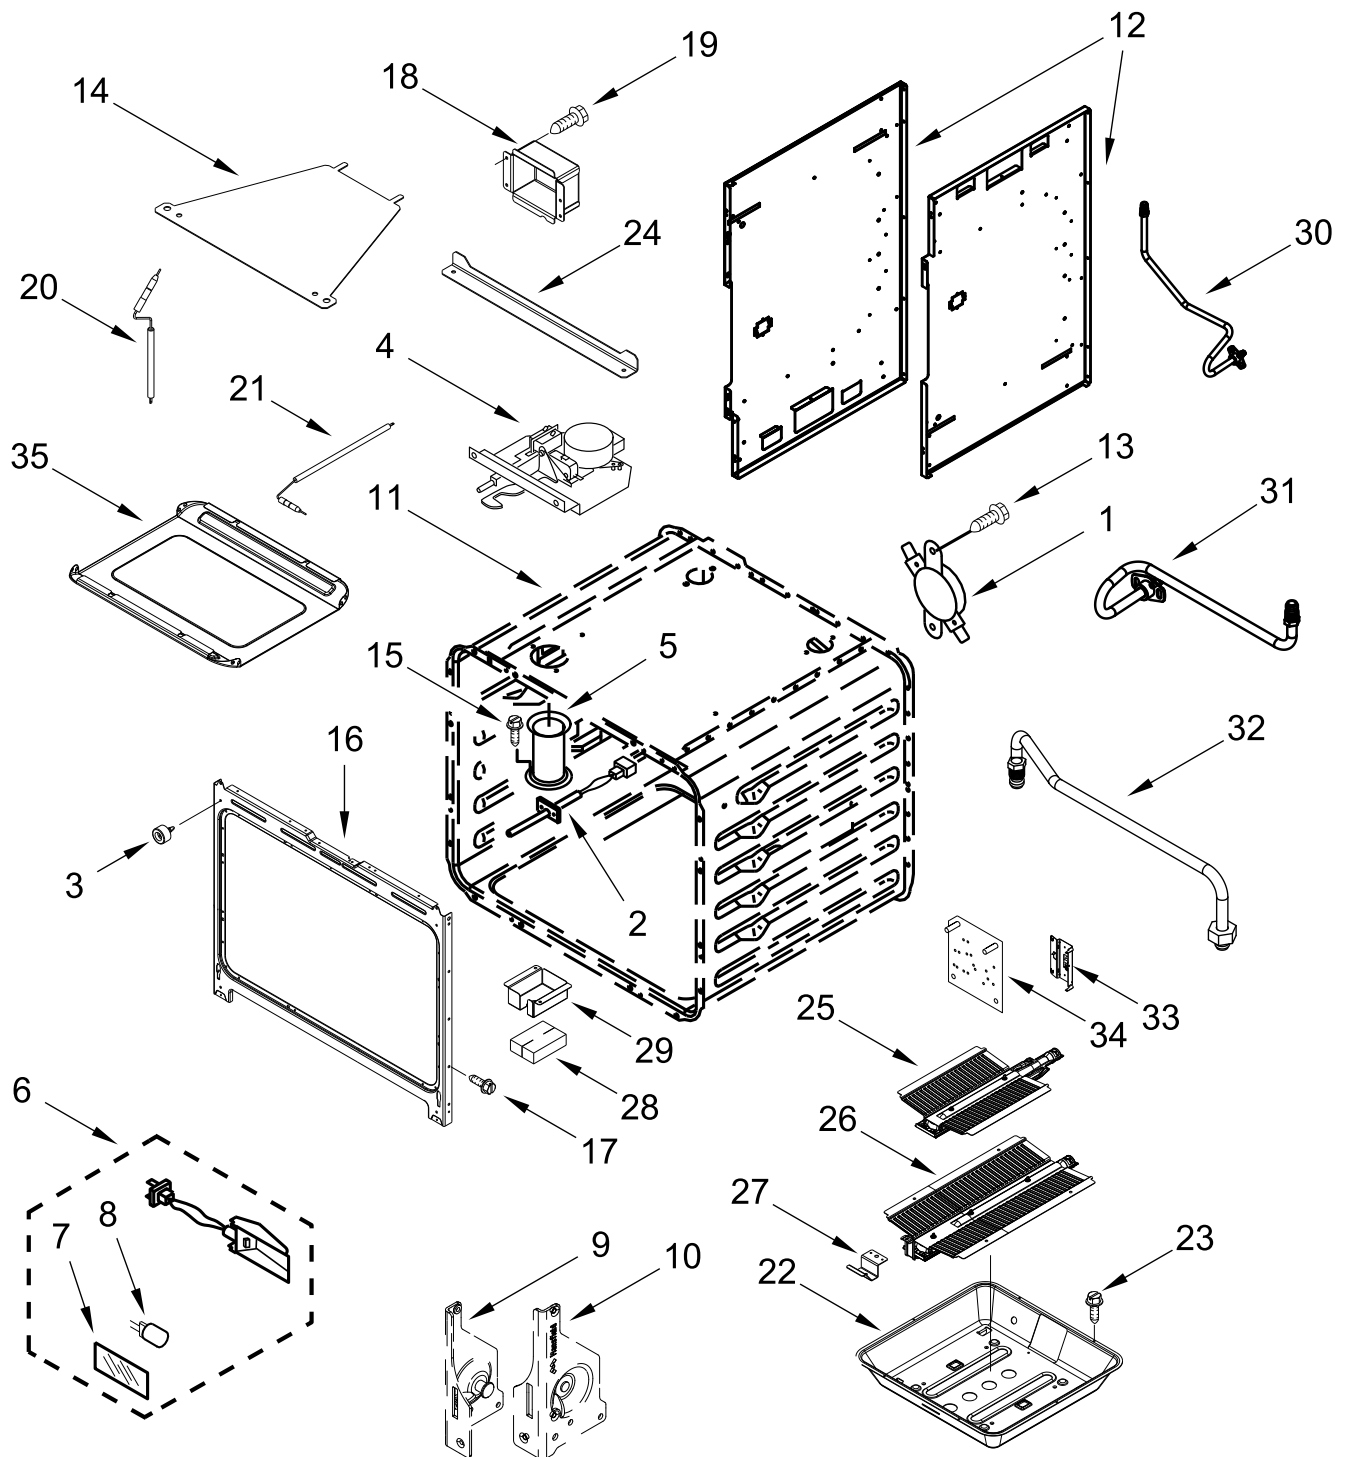

# OVEN PARTS

## Illus.

| <u>No.</u> | <u>Part No.</u> | <u>Description</u>             |
|------------|-----------------|--------------------------------|
| 1          | 4450249         | Thermostat (TOD)               |
| 2          | W10622170       | Probe, Sensor                  |
| 3          | W10351278       | Bumper and Screw               |
| 4          | W10830016       | Latch, Motorized               |
| 5          | W10145743       | Tube, Vent                     |
| 6          | W11223932       | Assembly, Oven Light           |
| 7          | W10169756       | Lens, Light                    |
| 8          | W10169757       | Bulb, Light                    |
| 9          |                 | Receiver, Hinge (Not Serviced) |
| 10         |                 | Receiver, Hinge (Not Serviced) |
| 11         |                 | Liner, Oven (Not Serviced)     |
| 12         | W11102297       | Chassis, Side (Left)           |
|            | W11102296       | Chassis, Side (Right)          |
| 13         | 7101P426-60     | Screw                          |


## Illus.

| <u>No.</u> | <u>Part No.</u> | <u>Description</u>      |
|------------|-----------------|-------------------------|
| 14         | W10160858       | Cover, Latch            |
| 15         | 3196176         | Screw                   |
| 16         | W11192749       | Frame, Front            |
| 17         | 3196560         | Screw                   |
| 18         | W10308051       | Box, Broil              |
| 19         | 7101P434-60     | Screw                   |
| 20         | W11182863       | Electrode, Broil        |
| 21         | W11205400       | Electrode, Bake         |
| 22         | W10145744       | Support, Bake Pan       |
| 23         | 12992902        | Screw                   |
| 24         | W10317437       | Bracket, Broil Standoff |
| 25         | W10878504       | Burner, Bake            |
| 26         | W10311335       | Burner, Broil           |
| 27         | W10308040       | Bracket, Bake Burner    |
| 28         | W10311009       | Insulation, Broil Cover |
| 29         | W10310985       | Cover, Broil            |
| 30         | W11109238       | Tube, Broil             |

## Illus.

| <u>No.</u> | <u>Part No.</u> | <u>Description</u>              |
|------------|-----------------|---------------------------------|
| 31         | W11106980       | Tube, Bake                      |
| 32         | W11107279       | Tube, Gas                       |
| 33         | W10145362       | Bracket-Board, DSI              |
| 34         | W10511278       | Module, Spark DSI               |
| 35         | W10496809       | Pan, Oven Bottom                |
|            |                 | FOLLOWING PARTS NOT ILLUSTRATED |
|            | W10282811       | Insulation, Wrap                |
|            | W11108226       | Insulation, Back, 36 in         |
|            | W10299356       | Insulation, Bottom              |
|            | 3400968         | Nut                             |


# VENTING PARTS

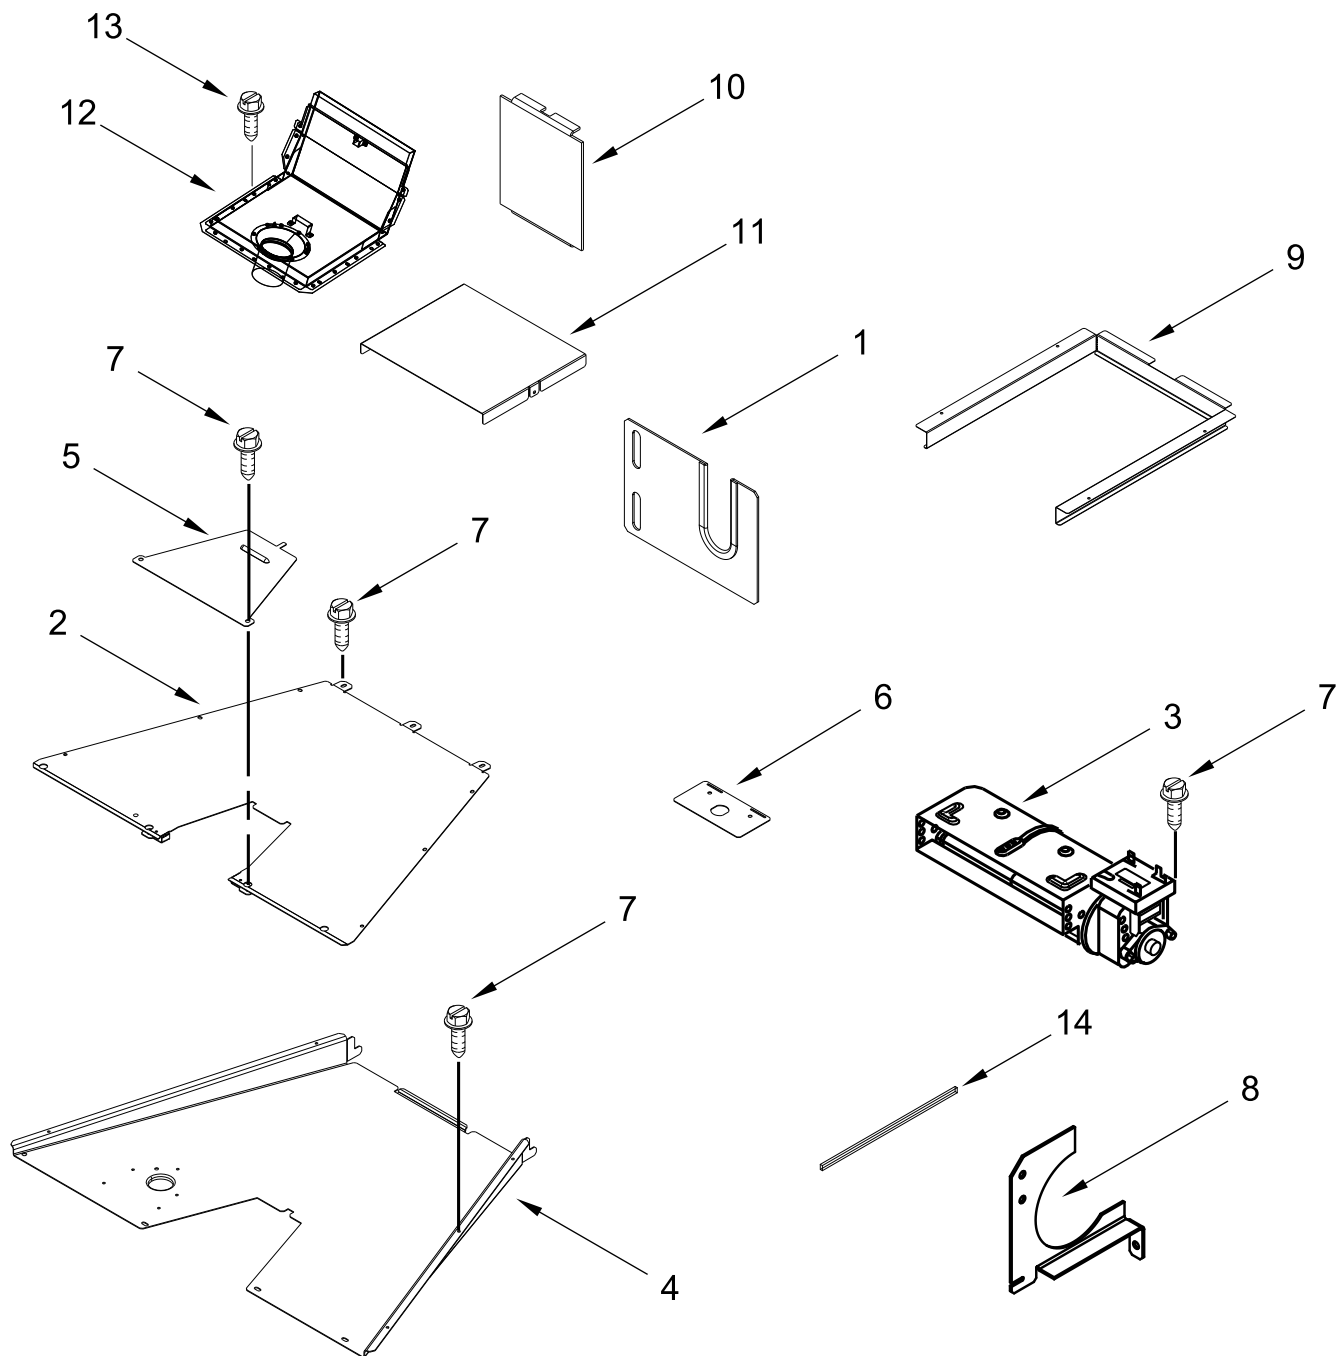

# VENTING PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>           | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>        | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                |
|-----------------------------|-----------------|------------------------------|-----------------------------|-----------------|---------------------------|-----------------------------|-----------------|-----------------------------------|
| 1                           | W11106956       | Cover, Channel               | 5                           | W11109518       | Plate, Cooling Latch      | 10                          | W10246087       | Insulation, Chimney               |
| 2                           | W11105221       | Vent, Cooling Top (30 in)    | 6                           | W10115855       | Holder, Strain Relief     | 11                          | W10246086       | Retainer, Insulation              |
| 3                           | W11200129       | Blower                       | 7                           | 7101P426-60     | Screw                     | 12                          | W10340579       | Vent, Chimney Box (30 in / 36 in) |
| 4                           | W11091676       | Vent, Cooling Bottom (30 in) | 8                           | W11047754       | Bracket, Blower Mount     | 13                          | 3400805         | Screw (Zinc)                      |
|                             |                 |                              | 9                           | W10145363       | Duct, Primary Air (30 in) | 14                          | W10919715       | Gasket                            |


# OVEN DOOR PARTS

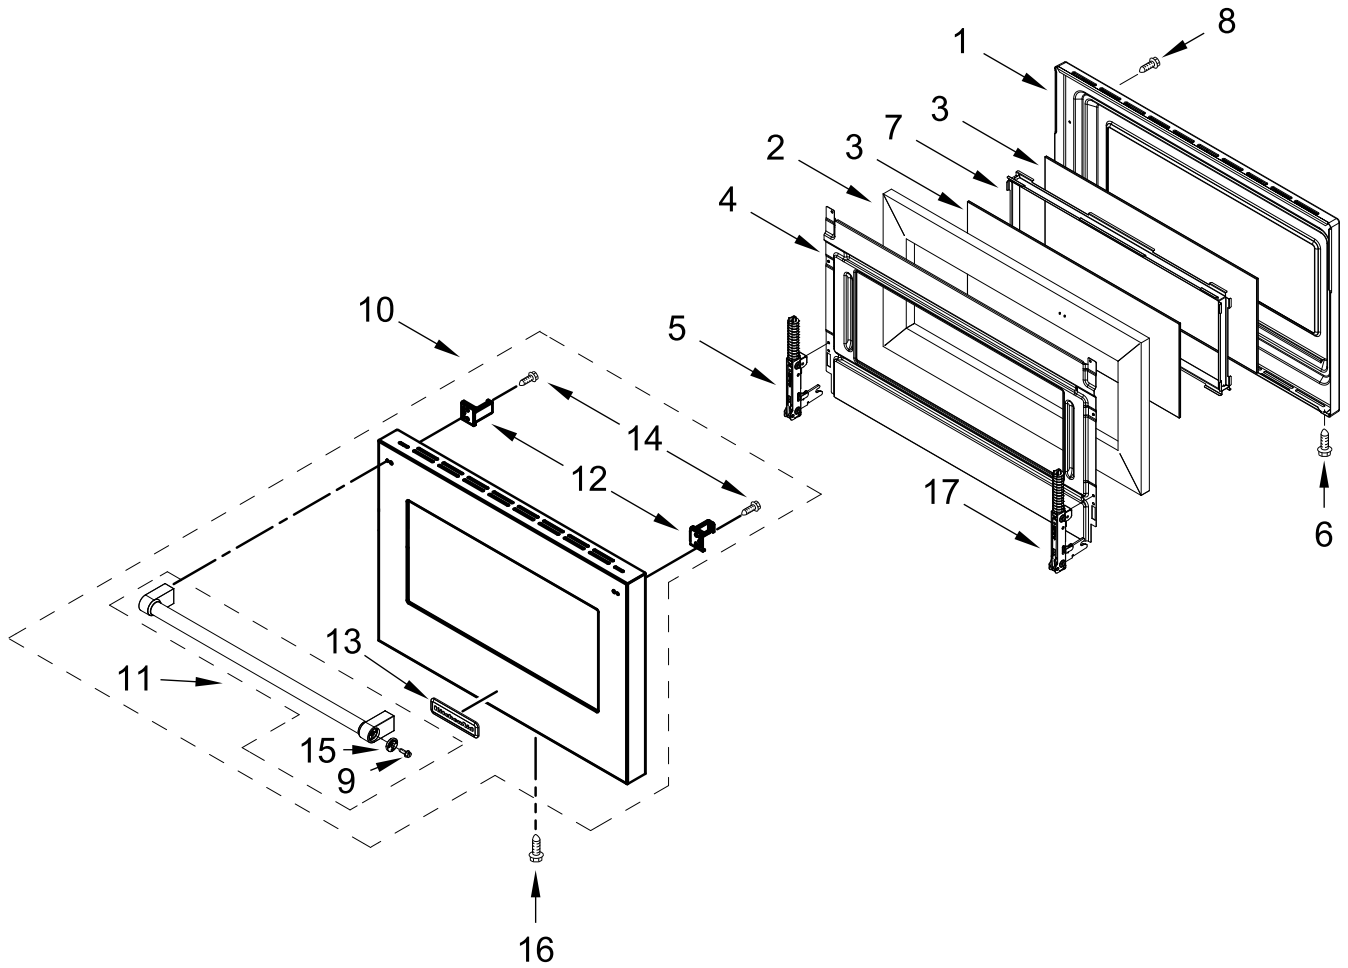

# OVEN DOOR PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u> | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                       | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>  |
|-----------------------------|-----------------|--------------------|-----------------------------|-----------------|------------------------------------------|-----------------------------|-----------------|---------------------|
| 1                           | W11036772       | Liner, Door        | 7                           | W11194814       | Frame, Glass                             | 12                          | W11197830       | Bracket, Handle     |
| 2                           | W10884823       | Insulation, Door   | 8                           | W10898280       | Screw                                    | 13                          | W10518672       | Badge               |
| 3                           | W11036791       | Glass, Inner       | 9                           | W10656499       | Screw                                    | 14                          | W10276043       | Screw               |
| 4                           | W11194820       | Retainer, Glass    | 10                          | W11712133       | Outer Door Assembly<br>(Includes Handle) | 15                          | W11361073       | Medallion, Handle   |
| 5                           | W11096978       | Hinge, Door (Left) | 11                          | W11362710       | Door Handle<br>Assembly                  | 16                          | W10162096       | Screw               |
| 6                           | W10607120       | Screw              |                             |                 |                                          | 17                          | W11096977       | Hinge, Door (Right) |

# INTERNAL OVEN PARTS

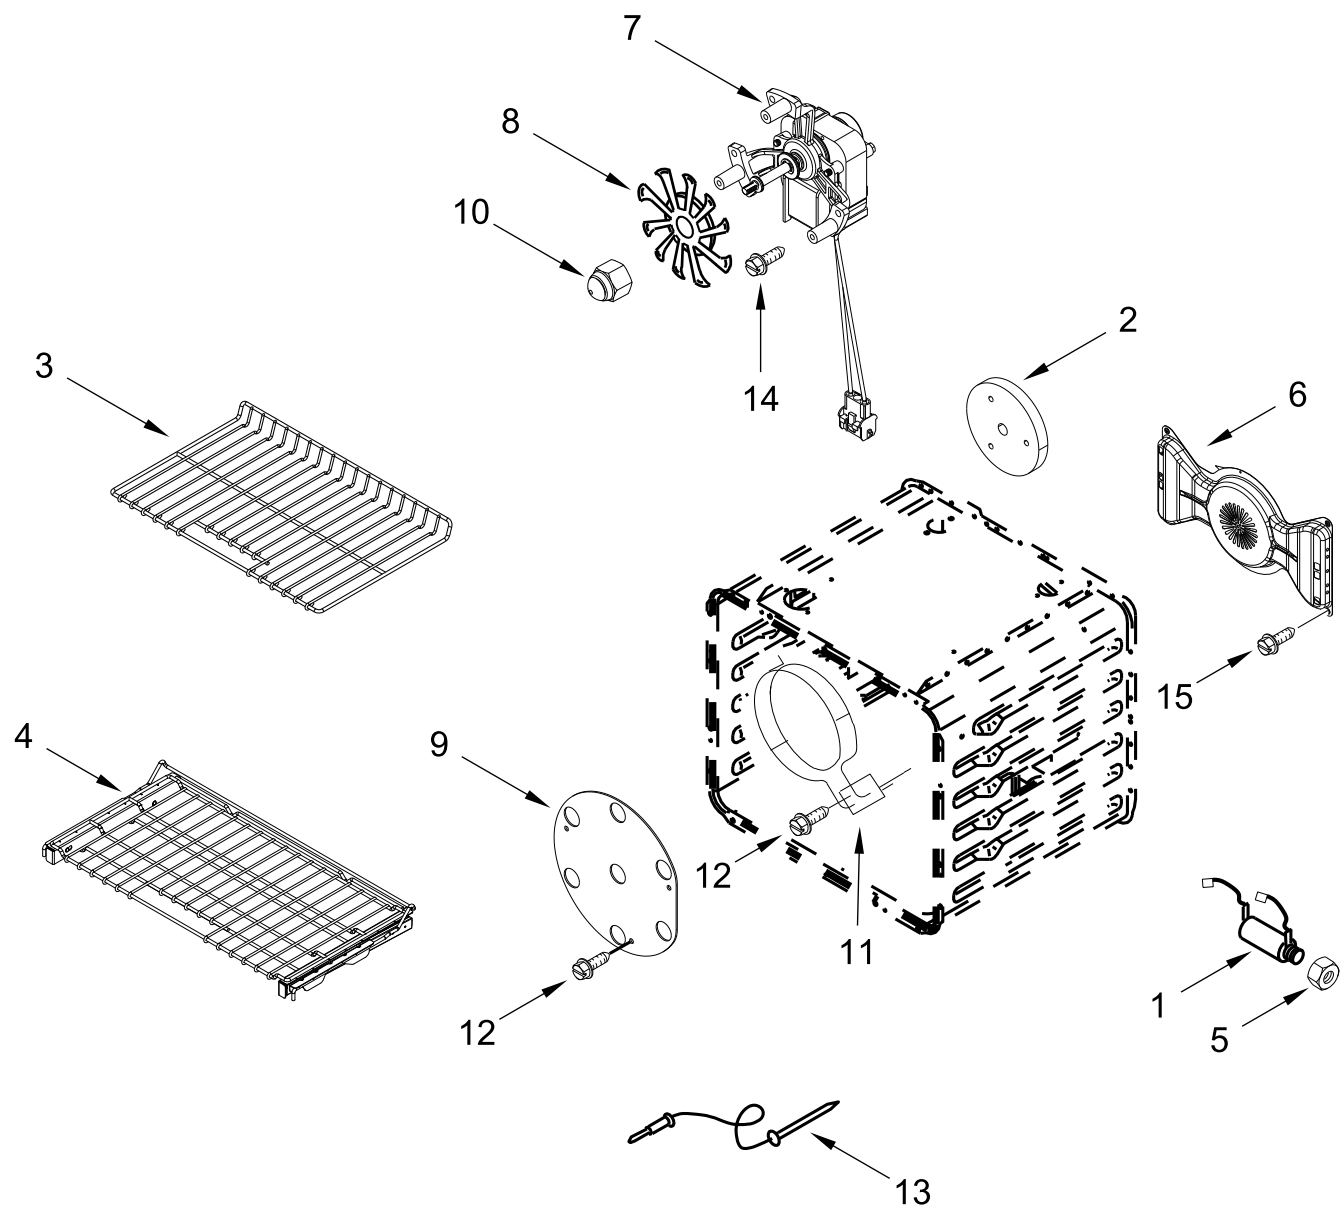

# INTERNAL OVEN PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>           | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>       | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------------------|-----------------|------------------------------|-----------------------------|-----------------|--------------------------|-----------------------------|-----------------|--------------------|
| 1                           | 9755543         | Jack, Meat Probe             | 7                           | W10631506       | Motor, Convection        | 13                          | 9755542         | Probe, Temperature |
| 2                           | W10282821       | Insulation, Convection Cover | 8                           | W10631503       | Blade, Fan               | 14                          | W10720084       | Screw              |
| 3                           | W10822069       | Rack, Oven                   | 9                           | W10261523       | Plate, Fan               | 15                          | W10739592       | Screw              |
| 4                           | W11496903       | Rack, Sliding Oven           | 10                          | W10631504       | Nut, Acorn (LH)          |                             |                 |                    |
| 5                           | 9755546         | Nut, Hidden                  | 11                          | W11098505       | Element, Convection Heat |                             |                 |                    |
| 6                           | W11212180       | Baffle, Convection           | 12                          | 4449154         | Screw                    |                             |                 |                    |

# OPTIONAL PARTS (NOT INCLUDED)

**Illus.**

**No.**

**Part No.**

**Description**

ACCESSORIES

30-48KITRC Gas Range Connector  
Kit

W10355051 Cleaner, Cooktop  
Backsplash

W10285448 36-in With Shelf

4396923 Broiler Pan and Grid

4396096RB Griddle  
Medallion, Handle

W11368841BOBlack ANO

W11368841BNBronze

W11368841CF Copper

W11368841DDD Dark Blue

W11368841MP Marscapone (Cream)

W11368841NENew Gold

W11368841RERed ANO