




ELECTRIC RANGE

MODELS:

WEE515S0LS3 (Stainless)


COOKTOP PARTS

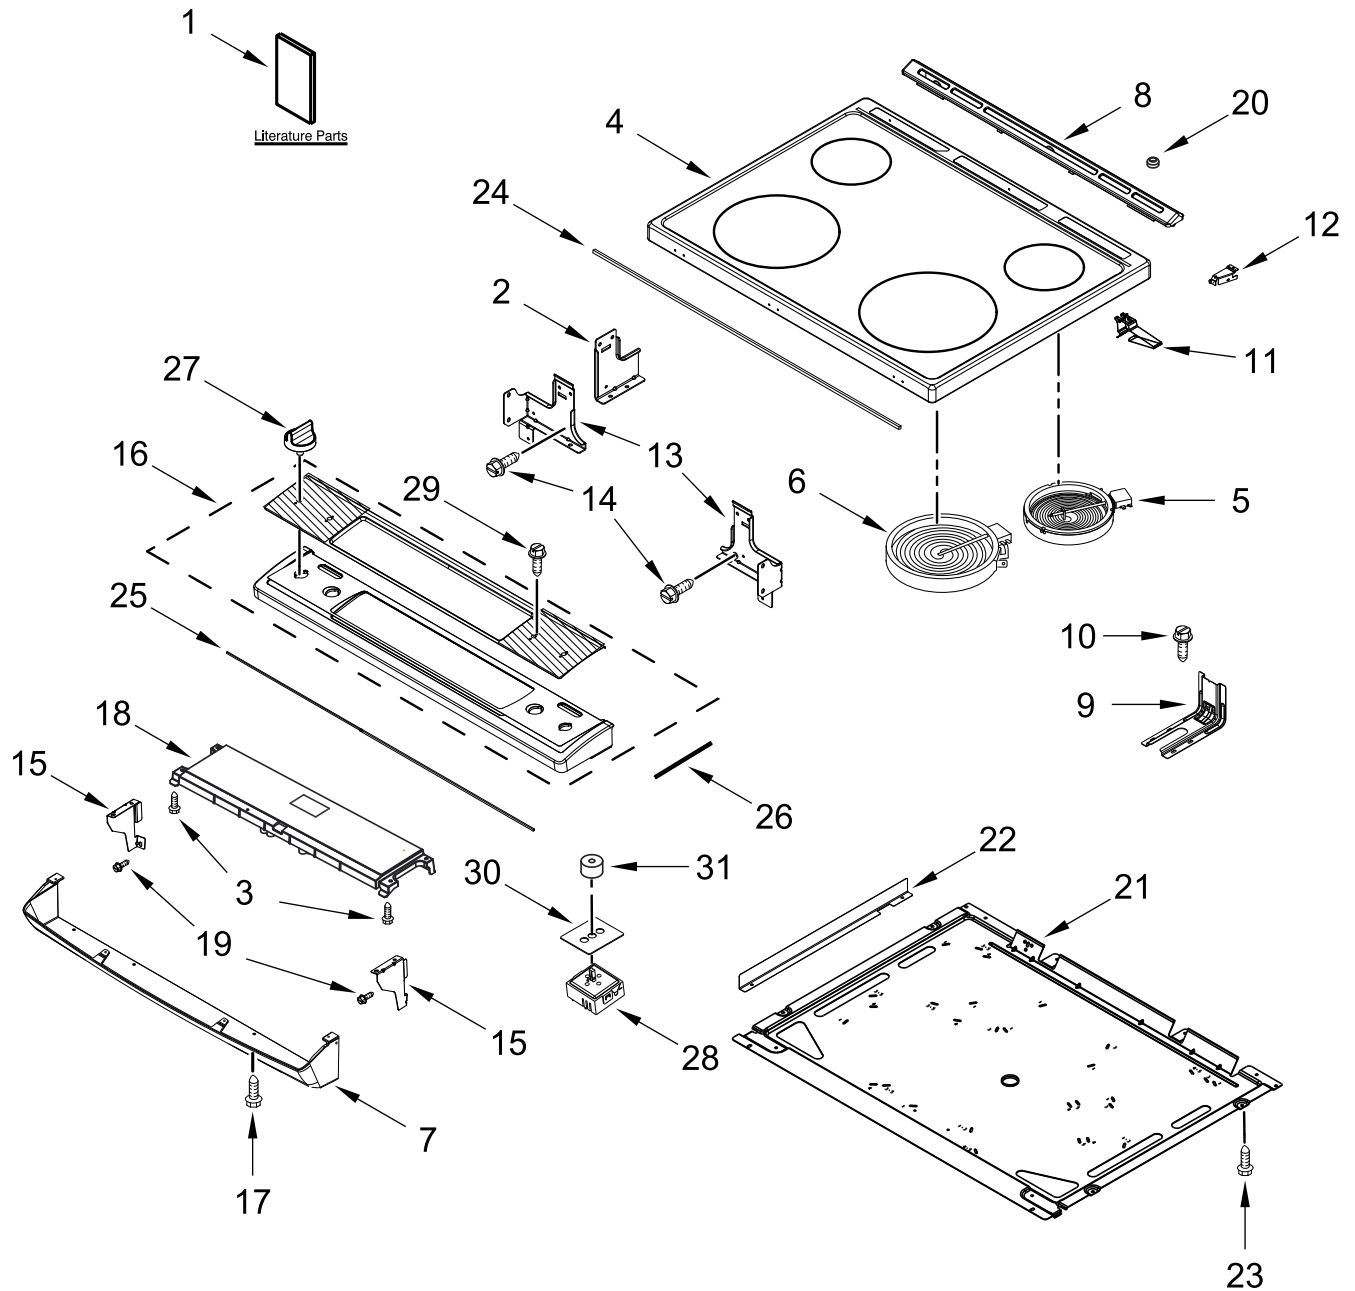

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	13	W10814304	Support, Cooktop (Right)	27		Knob
	W11509605	Owners Manual		W10814303	Support, Cooktop (Left)		W10850027	Stainless
	W11508915	Quick Start Guide				28	W10437092	Switch, Infinite (Left Front, Right Front)
	W11508781	Tech Sheet	14	3196169	Screw		W10578768	Switch, Infinite (Left Rear, Right Rear)
2	W10814305	Bracket, Console (Center)	15	W10547960	Bracket, Console (Left)			
3	9780274	Screw		W10547961	Bracket, Console (Right)	29	W10674068	Screw
4		Cooktop				30	7201P077-60	Gasket, Infinite Switch
	W11523804	Black	16		Assembly, Console	31	W10702912	Gasket, Switch Stem
5	W10248261	Element (1200W) (Left Rear, Right Rear)		W11512196	Stainless			FOLLOWING PARTS NOT ILLUSTRATED
6	W11282542	Element (3000W Dual) (Left Front, Right Front)	17	W10516115	Screw		W11453734	Harness, Main
			18	W11546962	Electronic, Control (LCX)		W10664316	Clip, Harness (Cooktop)
7		Console, Lower Panel	19	3196178	Screw		W11171886	Harness, Cooktop
	W10816943	Black	20	W10854253	Bumper		313438	Clip, Harness
8		Vent, Trim Top	21	W10536275	Pan, Radiant		7111P017-60	Clamp, Wire
	W10636528	Black	22	W11175271	Bracket, Radiant		W11226230	Harness, Console
9	W11379947	Bracket, Anti-Tip	23	3196173	Screw			
10	7101P485-60	Screw, Anti-Tip Kit	24	W10612719	Gasket, Console and Cooktop			
11	W11600012	Spring, Element	25	W10689101	Gasket, Console			
12	W10162253	Brace, Corner (Left)	26	W10689102	Gasket, Console Short			
	W10162252	Brace, Corner (Right)						


CHASSIS PARTS

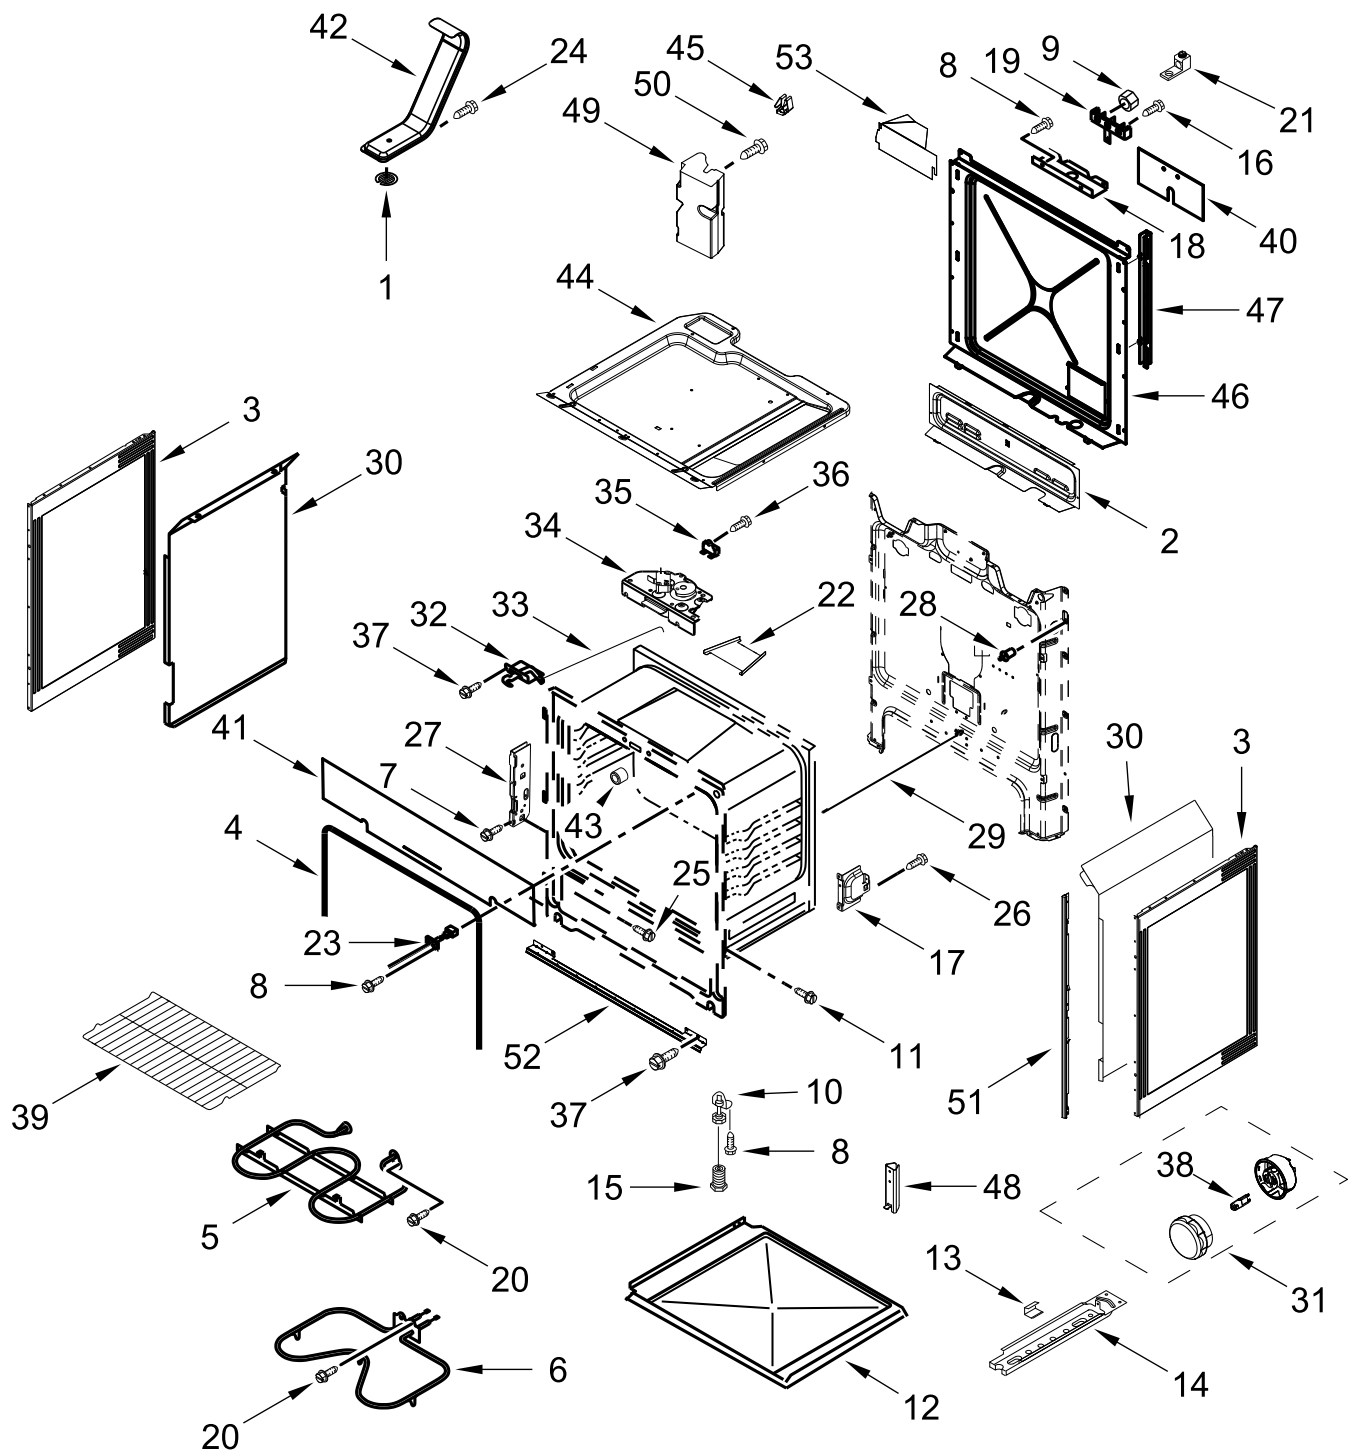

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	21	W10281322	Kit, Bare Wire Adapter Block	39	W11173792	Rack, Oven
2	W10162248	Cover, Wire	22	W10853401	Baffle, Upper Chassis	40	W10655441	Shield, Power Cord
3		Panel, Side	23	W10586204	Sensor	41	W10848443	Chassis, Upper Insulation
	W10162245	Black	24	W10362924	Screw	42	W11122085	Assembly, Flue
4	W11491751	Seal, Door	25	3400080	Screw	43	9758701	Spacer, Door
5	W10583047	Element, Broil	26	3196169	Screw	44	W10814301	Chassis, Support Upper
6	W10535148	Bake, Element	27	W10289077	Receiver, Hinge	45	W10866583	Clip-Panel, Ratcheting
7	W10031780	Screw	28	W11511828	Switch, Door	46	W11379354	Cover, Back
8	3196178	Screw	29	9757239	Rod, Door Switch	47	W10162241	Channel, Rear
9	3400029	Nut	30	W11379353	Retainer, Insulation (Left)	48	W10674705	Glide, Drawer Front
10	W10341186	Front Foot Assembly		W11379943	Retainer, Insulation (Right)	49	W10914589	Counterweight
11	W10067840	Screw	31	W11634772	Light Assembly	50	W11034869	Screw
12	W10312471	Tray, Insulation	32	9761013	Front Door Latch Assembly	51	W11510561	Barrier Rail, Rubber (Front Left)
13	W10137382	Clip, Panel	33	W10078370	Rod, Push Latch		W11510562	Barrier Rail, Rubber (Front Right)
14	W10390008	Base Rail Assembly (Left)	34	W10107820	Rear Door Latch Assembly	52	W11464547	Bracket, Front Frame
	W10390007	Base Rail Assembly (Right)	35	3196548	Fuse, Thermal	53	W10818358	Shield, Wire
15	W10058460	Foot, Leveling	36	3196172	Screw			FOLLOWING PARTS NOT ILLUSTRATED
16	W10327235	Screw	37	3196560	Screw			
17	W10355173	Bracket, Oven Support	38	W10571723	Bulb, Halogen 40 Watts		W10830993	Insulation, Wrap
18	3186034	Bracket, Service					W10815385	Insulation, Back
19	W10245259	Block, Terminal						
20	3196154	Screw						


DOOR PARTS

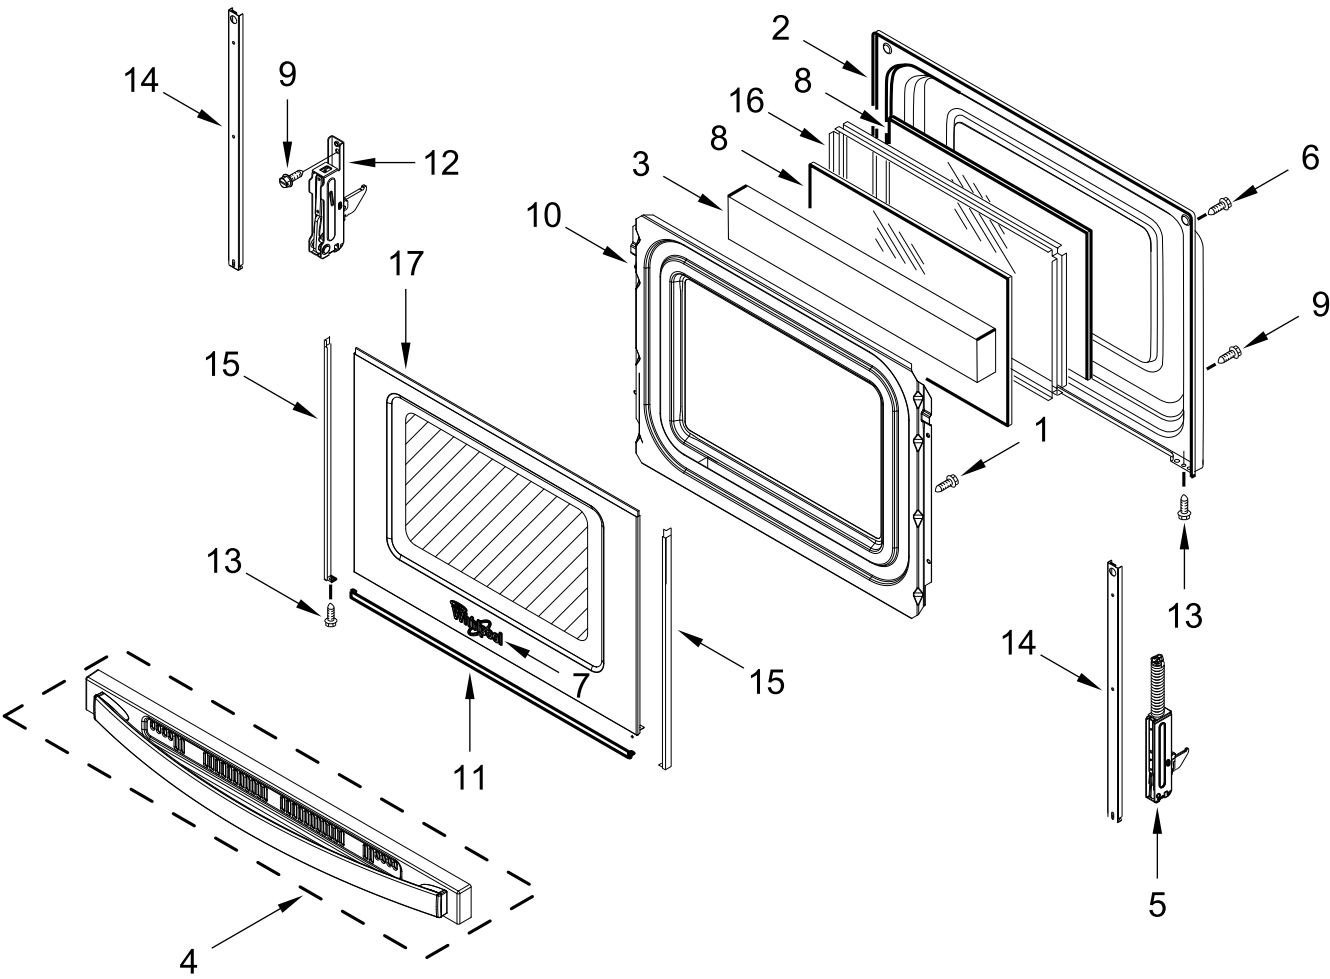

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	6	W10200660	Screw	13	W10327235	Screw
2	9761344	Liner, Door	7	W10884775	Badge	14	W11379944	Strap, Door
3	W10278991	Insulation, Door Strip	8	9758162	Glass, Inner	15		Trim, Door
4		Handle and Vent Assembly	9	W10031780	Screw		W10746436	Black (Left)
	W11242950	Stainless	10	W11380222	Retainer, Insulation		W10746435	Black (Right)
5	W10388635	Hinge, Door (Active)	11		Trim, Lower Door	16	W10316950	Frame, Glass
				W11444043	Black	17		Glass, Outer Door
			12	W10440013	Hinge, Door (Active)		W11687920	Black

DRAWER PARTS

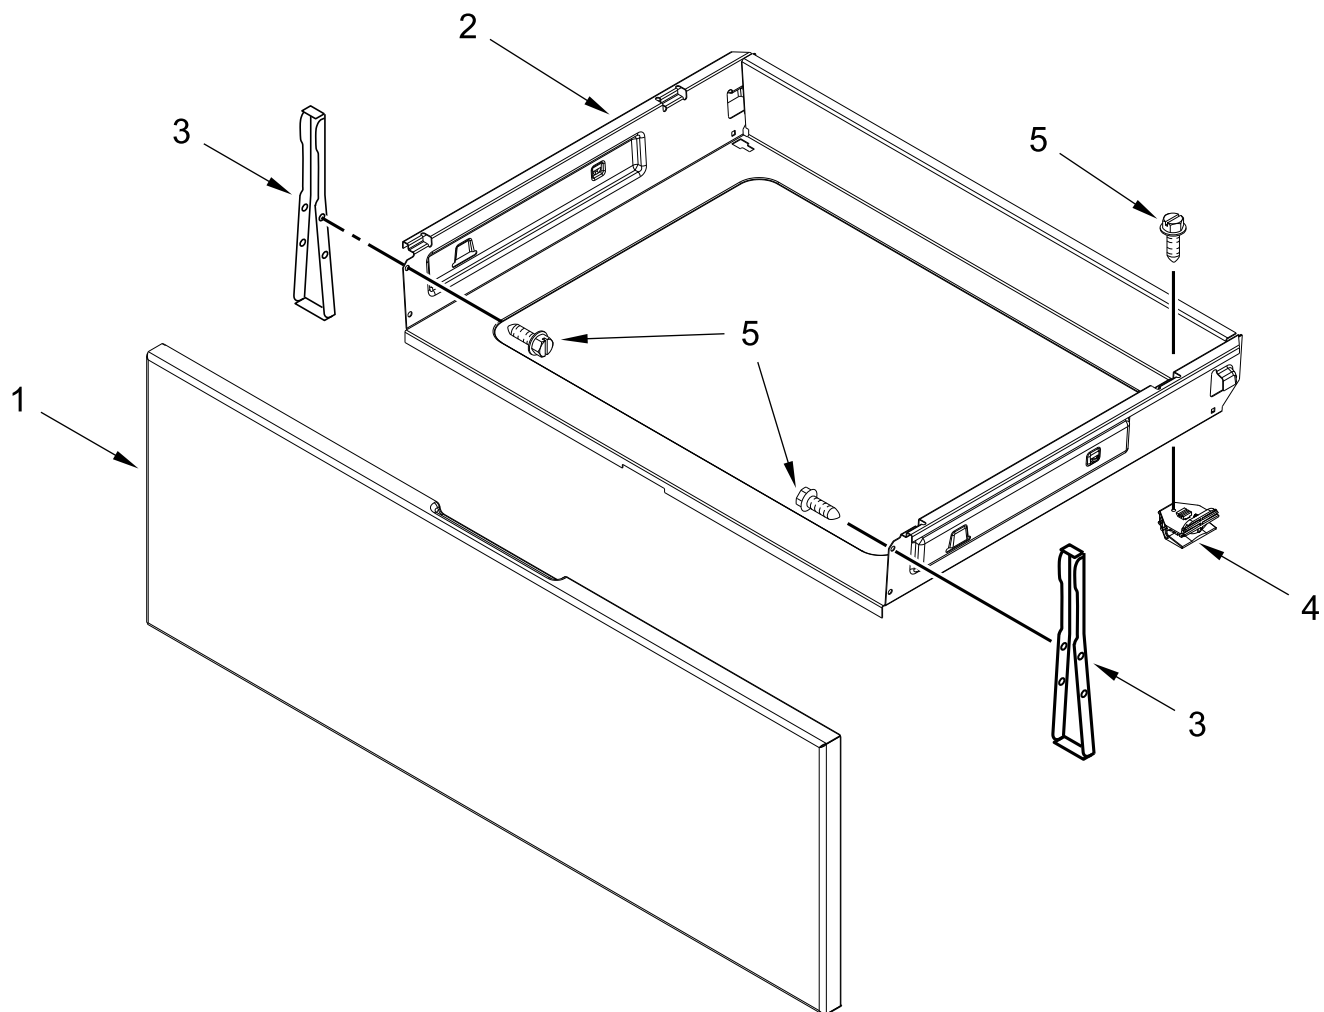

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11190207	Panel, Front Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
2	W10688022	Drawer, Storage
3	W10462909	Bracket, Mounting

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10674708	Glide, Drawer Rear
5	3196169	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting