




30" ELECTRIC SLIDE-IN SELF-CLEAN RANGE

MODELS:

WEE515SALB2 (Black)


COOKTOP PARTS

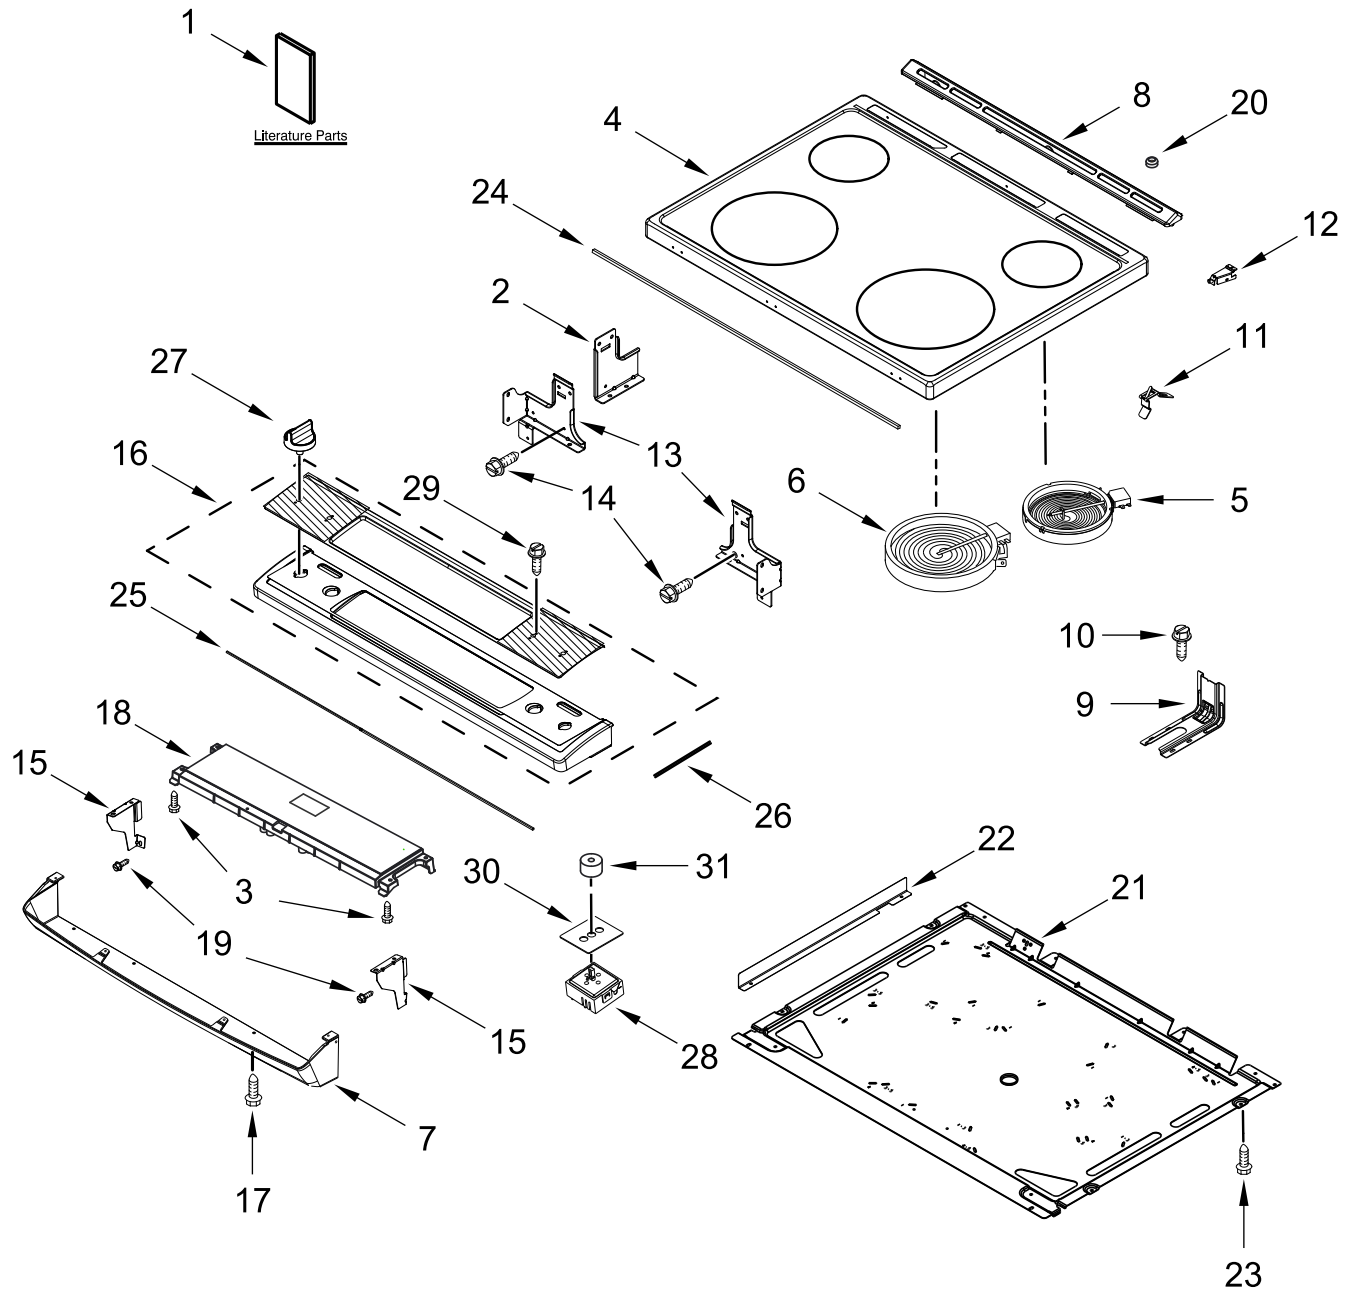

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	12	W10162253	Brace, Corner (Left)	25	W10689101	Gasket, Console
	W11509607	Owners Manual		W10162252	Brace, Corner (Right)	26	W10689102	Gasket, Console Short
	W11508915	Quick Start Guide	13	W10814304	Support, Cooktop (Right)	27		Knob
	W11508781	Tech Sheet		W10814303	Support, Cooktop (Left)		W10905965	Black
2	W10814305	Bracket, Console (Center)				28	W10437092	Switch, Infinite (Left Front, Right Front)
3	9780274	Screw	14	3196169	Screw		W10578768	Switch, Infinite (Left Rear, Right Rear)
4		Cooktop	15	W10547960	Bracket, Console (Left)	29	W10674068	Screw
	W11523804	Black		W10547961	Bracket, Console (Right)	30	7201P077-60	Gasket, Infinite Switch
5	8273994	Element (1200W) (Left Rear, Right Rear)				31	W10702912	Gasket, Switch Stem
6	W11282542	Element (3000W Dual) (Left Front, Right Front)	16		Assembly, Console			FOLLOWING PARTS NOT ILLUSTRATED
				W11512199	Black		W11453734	Harness, Main
7		Console, Lower Panel	17	W10516115	Screw		W10664316	Clip, Harness (Cooktop)
	W10816943	Black	18	W11546962	Electronic, Control (LCX)		W11171886	Harness, Cooktop
8		Vent, Trim Top	19	3196178	Screw		313438	Clip, Harness
	W10636528	Black	20	W10854253	Bumper		7111P017-60	Clamp, Wire
9	W11379947	Bracket, Anti-Tip	21	W10536275	Pan, Radiant		W11226230	Harness, Console
10	7101P485-60	Screw, Anti-Tip Kit	22	W11175271	Bracket, Radiant		3196520	Clip, Wire
11	W10225448	Spring, Element	23	3196173	Screw			
			24	W10612719	Gasket, Console/ Cooktop			


CHASSIS PARTS

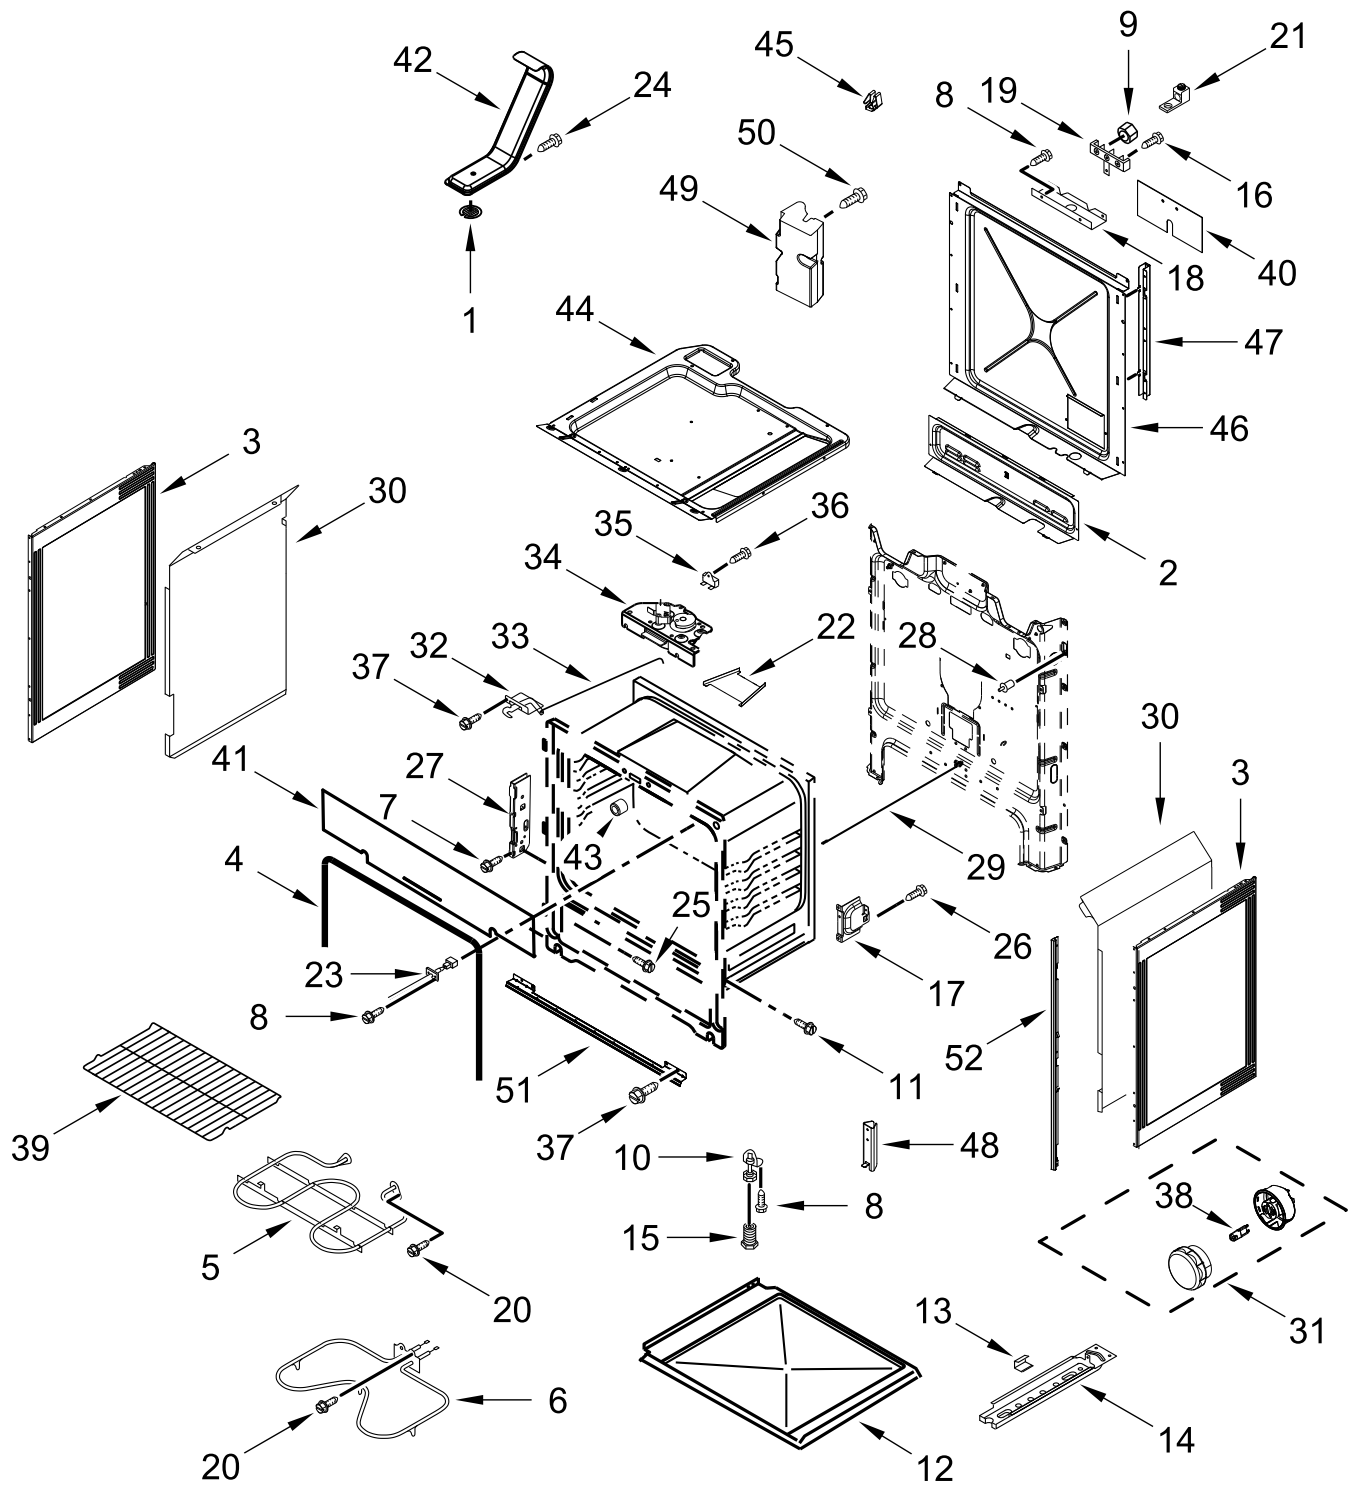

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	21	W10281322	Kit, Bare Wire Adapter Block	39	W11173792	Rack, Oven
2	W10162248	Cover, Wire	22	W10853401	Baffle, Upper Chassis	40	W10655441	Shield, Power Cord
3		Panel, Side	23	W10586204	Sensor	41	W10848443	Chassis, Upper Insulation
	W10162245	Black	24	W10362924	Screw	42	W11122085	Assembly, Flue
4	W11491751	Seal, Door	25	3400080	Screw	43	9758701	Spacer, Door
5	W10583047	Element, Broil	26	3196169	Screw	44	W10814301	Chassis, Support Upper
6	W10535148	Bake, Element	27	W10289077	Receiver, Hinge	45	W10866583	Clip-Panel, Ratcheting
7	W10031780	Screw	28	W10627802	Switch, Door	46	W11379354	Cover, Back
8	3196178	Screw	29	9757239	Rod, Door Switch	47	W10162241	Channel, Rear
9	3400029	Nut	30	W11379353	Retainer, Insulation (Left)	48	W11181076	Bracket, Reinforcing
10	W10341186	Front Foot Assembly		W11379943	Retainer, Insulation (Right)	49	W10914589	Counterweight
11	W10067840	Screw	31	W11544377	Light Assembly	50	W11034869	Screw
12	W10312471	Tray, Insulation	32	9761013	Front Door Latch Assembly	51	W11464547	Bracket, Front Frame
13	W10137382	Clip, Panel	33	W10078370	Rod, Push Latch	52	W11510561	Barrier Rail, Rubber (Front Left)
14	W10390008	Base Rail Assembly (Left)	34	W10107820	Rear Door Latch Assembly		W11510562	Barrier Rail, Rubber (Front Right)
	W10390007	Base Rail Assembly (Right)	35	3196548	Fuse, Thermal			FOLLOWING PARTS NOT ILLUSTRATED
15	W10058460	Foot, Leveling	36	3196172	Screw			
16	W10327235	Screw	37	3196560	Screw	W10830993		Insulation, Wrap
17	W10355173	Bracket, Oven Support	38	W10571723	Bulb, Halogen 40 Watts	W10815385		Insulation, Back
18	3186034	Bracket, Service						
19	W10245259	Block, Terminal						
20	3196154	Screw						

DOOR PARTS

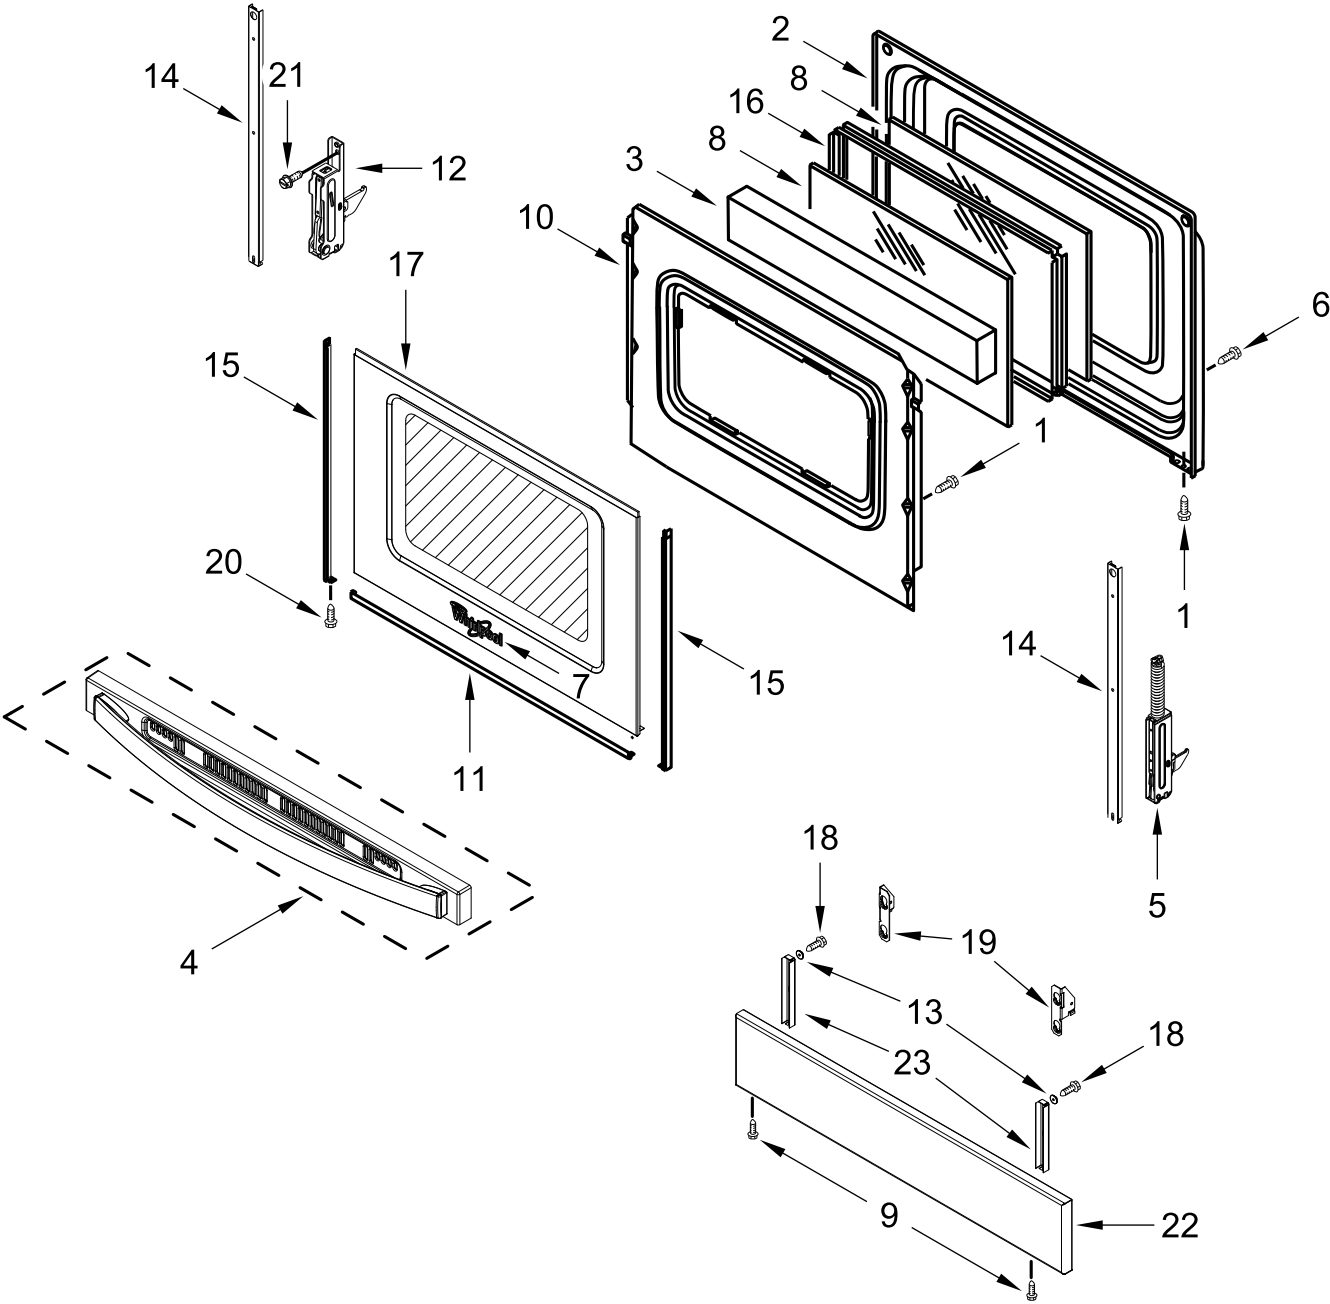

DOOR PARTS

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw
2	9761344	Liner, Door
3	W10278991	Insulation, Door Strip
4		Handle and Vent Assembly
	W11242949	Black
5	W10388635	Hinge, Door (Active)
6	W10200660	Screw
7	W10884775	Badge
8	9758162	Glass, Inner
9	3196169	Screw
10	9761357	Retainer, Insulation

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
11		Trim, Lower Door
	W11444043	Black
12	W10440013	Hinge, Door (Active)
13	8004P024-60	Spacer, Side Panel
14	W11379944	Strap, Door
15		Trim, Door
	W10746436	Black (Left)
	W10746435	Black (Right)
16	W10316950	Frame, Glass
17		Glass, Outer Door
	W10884159	Black

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
18	W10673879	Screw
19	W11096901	Mounting Bracket, Toe Panel (Left)
	W11096902	Mounting Bracket, Toe Panel (Right)
20	W10327235	Screw
21	W10031780	Screw
22		Panel, Toe
	W11037793	Black
23	W11039147	Bracket, Toe Panel

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting