




ELECTRIC RANGE

MODELS:

WFE775H0HZ5 (Stainless)

WFE775H0HV5 (Black Stainless)


COOKTOP PARTS

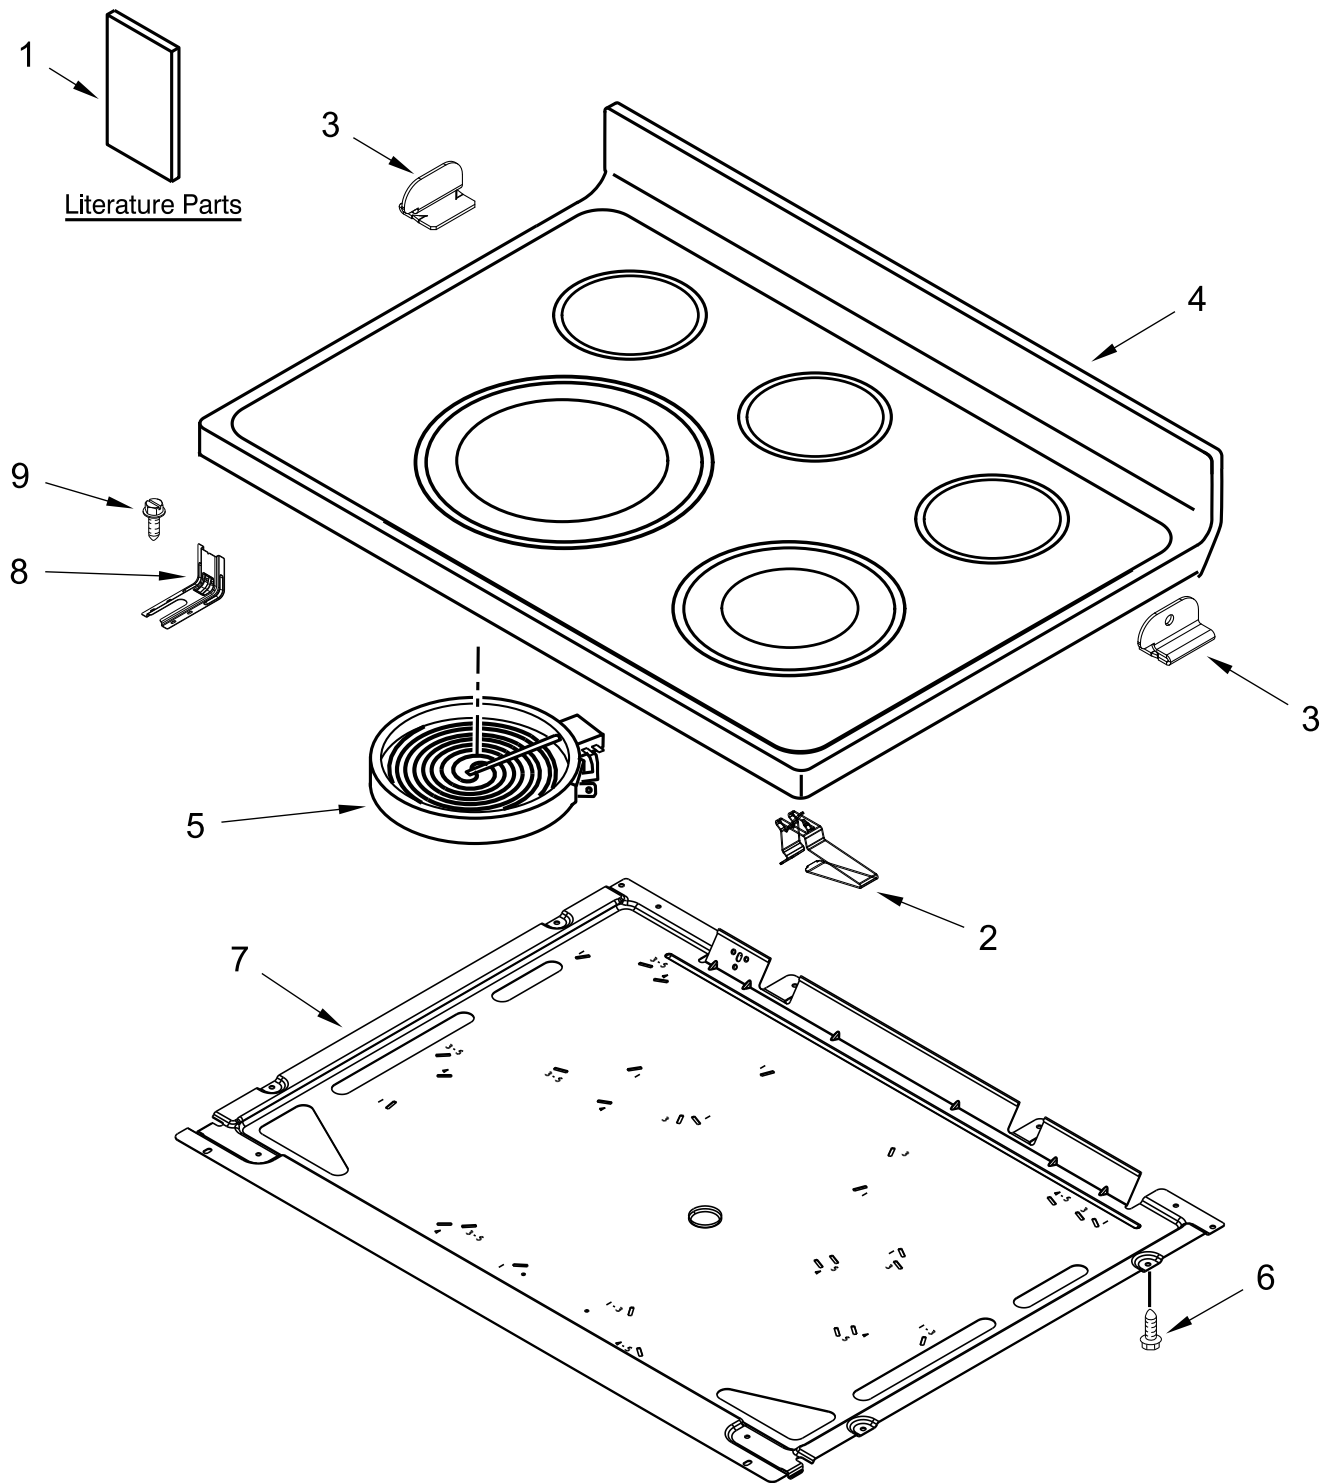

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10342780	Element (1300W)	8	W11379945	Bracket, Anti-Tip
	W11435580	Guide, Quick Start (English and French)		W10248261	Element (1200W)	9	7101P485-60	Screw, Anti-Tip Kit
	W11509589	Owner's Manual			(Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11326953	Tech Sheet		W11282542	Element (3000W Dual)		W11451584	Harness, Main
	W11326954	Wiring Diagram			(Right Front)		W11134592	Harness, Warm Zone
2	W11600012	Spring, Element		W10799048	Element, Warm Zone		W11176668	Harness, Cooktop (Right)
3	W10607641	Bracket, Cooktop (Left)			(Center Rear)		W11176669	Harness, Cooktop (Left)
	W10607642	Bracket, Cooktop (Right)		W10711900	Element (3000W)			
					(Left Front)			
4		Cooktop	6	3196169	Screw			
	W10865058	Black	7	W10691223	Pan, Radiant Element			


CONTROL PANEL PARTS

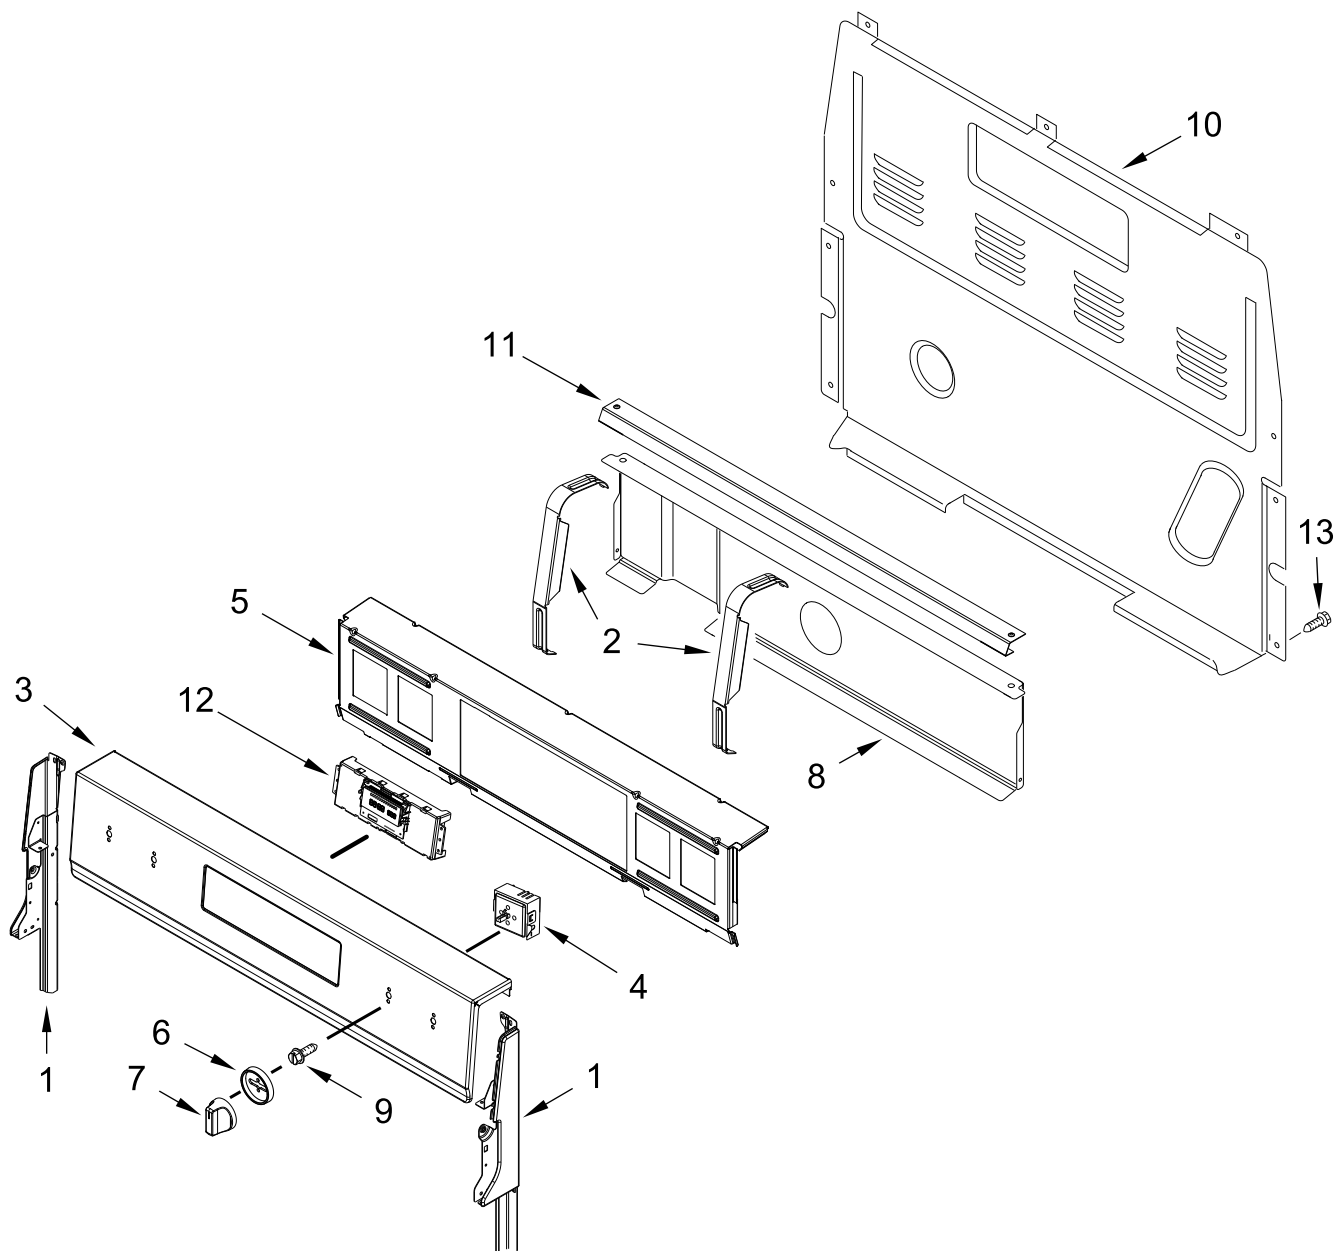

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	W10901802	Panel, Backer	12		Control, Electronic (LCX)
	W11213290	Black (Left)	6		Bezel			
	W11213292	Black (Right)		W10918419	Stainless		W11511567	Black
2	W10856361	Bracket, Control		W10917223	Black Stainless	13	3196178	Screw
3		Console	7		Knob			
	W10869985	Stainless		W10917219	Stainless			
	W10881622	Black Stainless		W10917220	Black Stainless			
4	W10437092	Switch, Infinite (Left Front and Right Front)	8	W10134247	Shield, Heat			
			9	W10498399	Screw			
	W10578768	Switch, Infinite (Right Rear)	10	8272473	Cover, Upper Rear			
	W10437094	Switch, Infinite (Left Rear)	11	W10525121	Bracket, Console Mounting			


CHASSIS PARTS

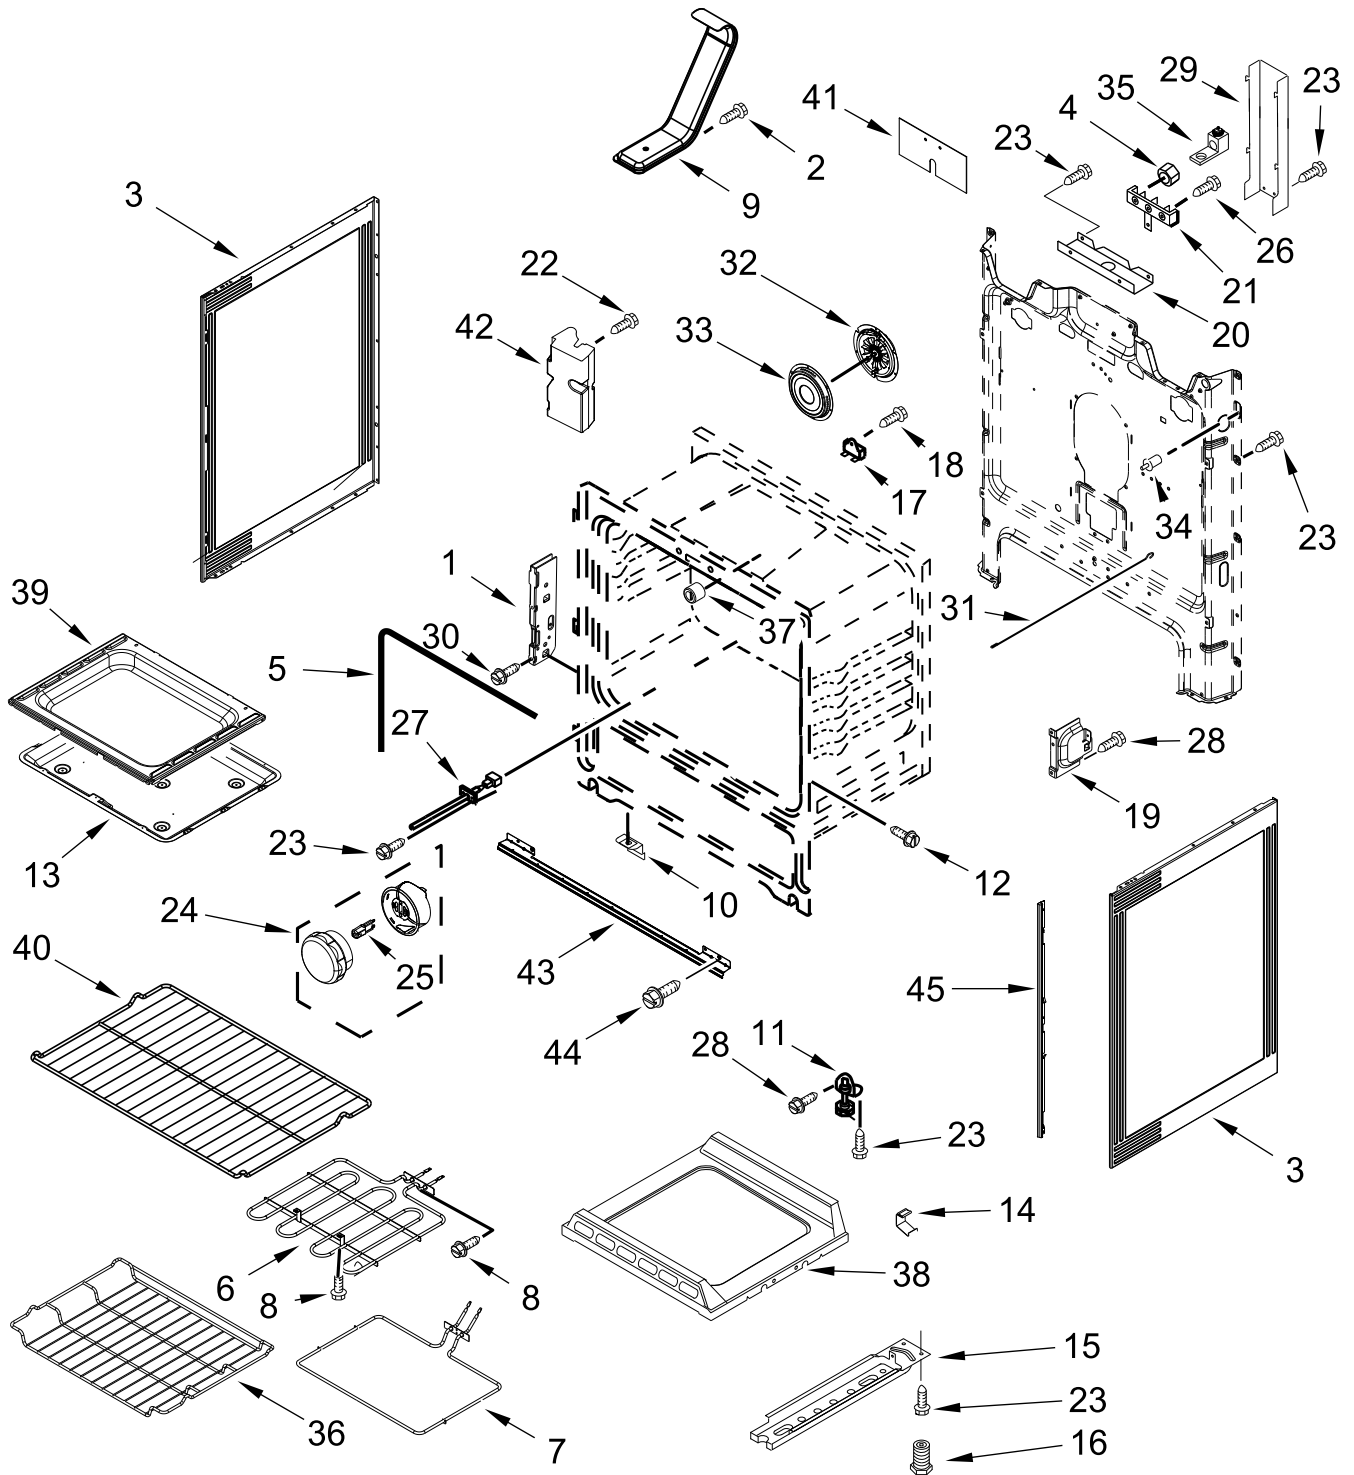

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	19	W10273002	Bracket, Oven Support	38	W10726740	Shield, Heat
2	3196165	Screw	20	3186034	Bracket, Service	39	W10774446	Bottom, Oven
3		Panel, Side	21	W10245259	Block, Terminal	40	W10531060	Rack, Oven
	W10162245	Black	22	W11034869	Screw	41	W10655441	Shield, Power Cord
4	3400029	Nut	23	3196178	Screw	42	W10910404	Counterweight
5	W11491752	Gasket, Door	24	W11634772	Light Assembly	43	W11620269	Bracket, Front Frame
6	W11095929	Element, Broil	25	W10571723	Bulb, Halogen 40 Watts	44	3196560	Screw
7	W10774342	Element, Bake	26	3400016	Screw	45	W11510560	Barrier Rail, Rubber (Left and Right)
8	W10362924	Screw	27	W10586204	Sensor			FOLLOWING PARTS NOT ILLUSTRATED
9	W10134285	Tube, Vent	28	3196169	Screw			
10	W10035900	Support, Oven Bottom	29	W10326122	Cover, Terminal Block	W10194393		Insulation, Wrap
11	W10341186	Front Foot Assembly	30	W10031780	Screw	W10225524		Insulation, Back
12	W10067840	Screw	31	W10273192	Rod, Door Switch	W10225523		Insulation, Bottom
13	W11379357	Bake Pan	32	W11353930	Fan, Convection	4820F015-59		Insulation, Strap
14	W10137382	Clip, Panel	33	W10346154	Cover, Convection			
15	W10390007	Base Rail Assembly (Right)	34	W11511828	Switch, Door			
	W10390008	Base Rail Assembly (Left)	35	W10281322	Kit, Bare Wire Adapter Block			
16	W10058460	Foot, Leveling	36	W10289145	Rack, Oven (Gull-Wing)			
17	3196548	Fuse, Thermal	37	9758701	Spacer, Door			
18	3196172	Screw						


DOOR PARTS

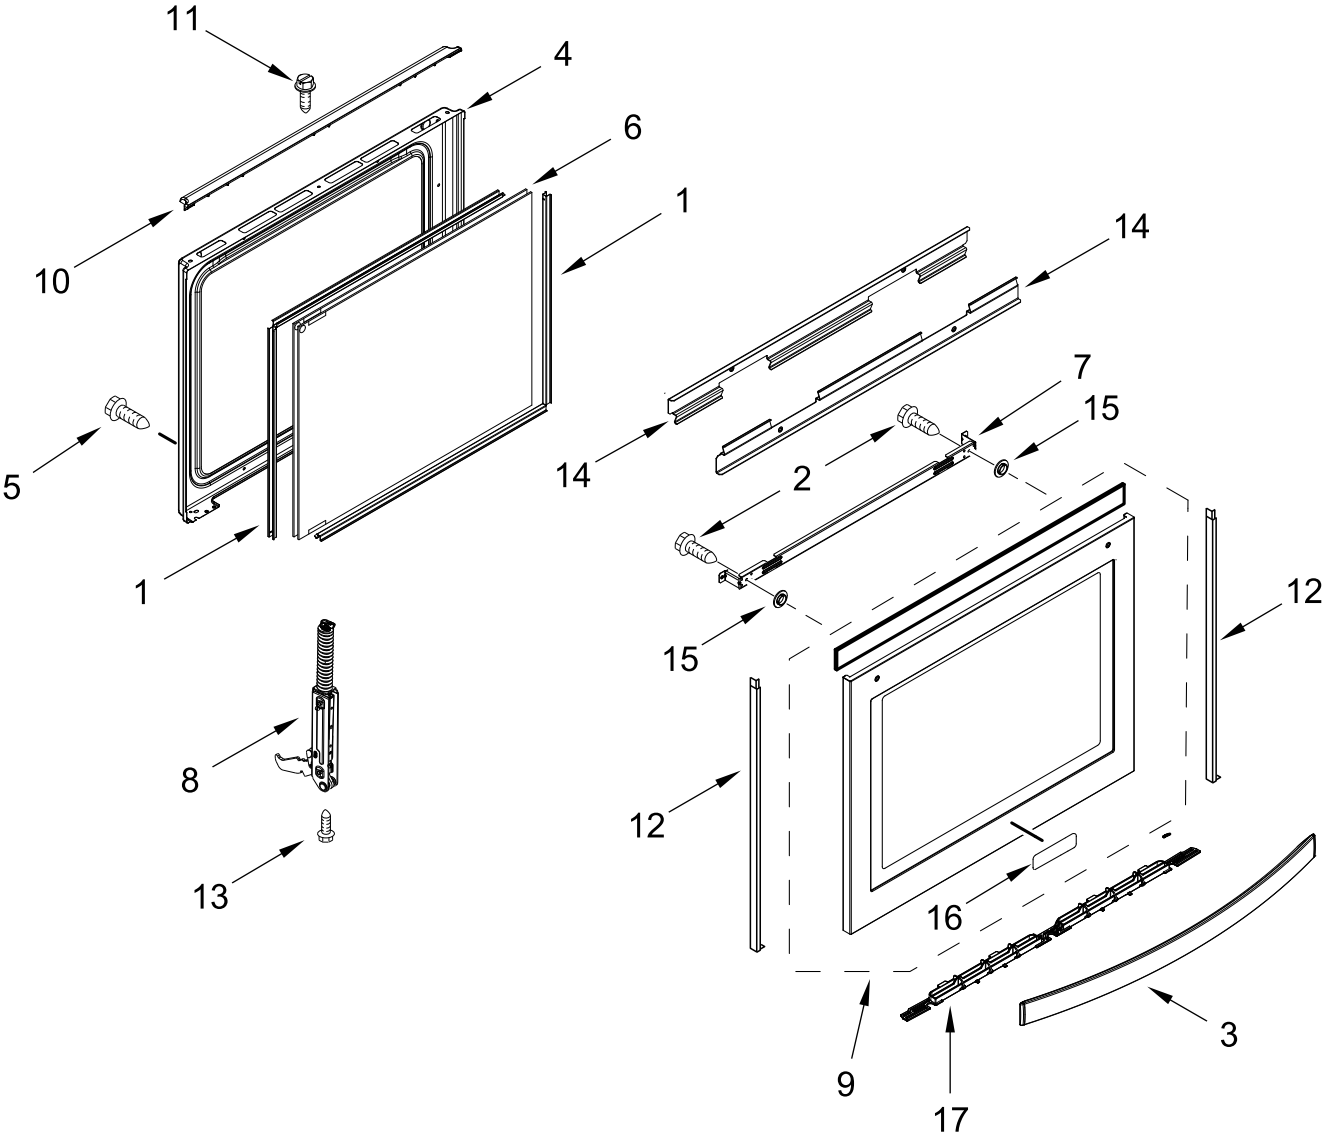

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11379948	Glass Spacer	9		Glass Assembly, Outer Door	15	W10319024	Washer, Door
2	W11091878	Screw				16	W10884775	Badge
3		Handle, Door		W10864214	Stainless	17	W11440161	Bottom, Door Cover
	W10918786	Stainless			Black Stainless			
	W10903342	Black Stainless	10		Vent, Trim			
4	W10826568	Liner, Door		W10887939	Black			
5	W10031790	Screw	11	W10327235	Screw			
6	W11223202	Glass, Inner	12	W10813139	Rail, Vertical Support			
7	W10541911	Bracket, Glass Upper Handle	13	W10031780	Screw			
8	W10885519	Hinge, Door (Active)	14	W10813140	Rail, Horizontal Support			

DRAWER PARTS

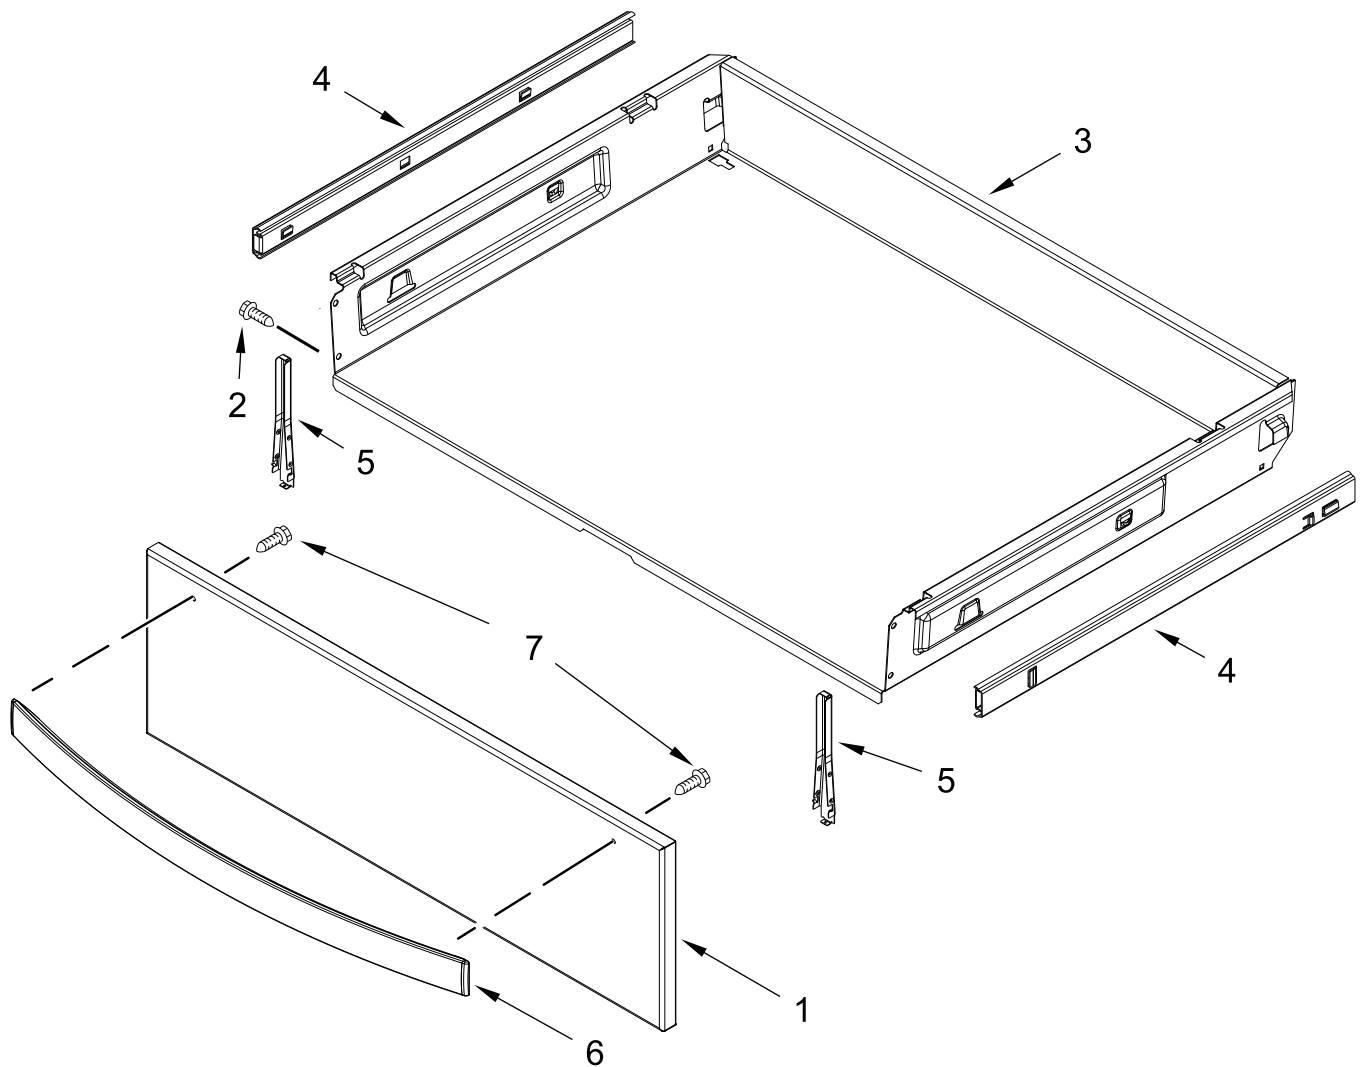

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10688022	Drawer, Storage	6		Handle, Door
	W11190211	Stainless	4	W10441804	Slide, Drawer (Left)		W10918786	Stainless
	W11449763	Black Stainless		W10441805	Slide, Drawer (Right)		W10903342	Black Stainless
2	3196169	Screw	5	W10318027	Bracket, Drawer	7	3400882	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting