




ELECTRIC RANGE

MODELS:

AER6603SFB5 (Black)


COOKTOP PARTS

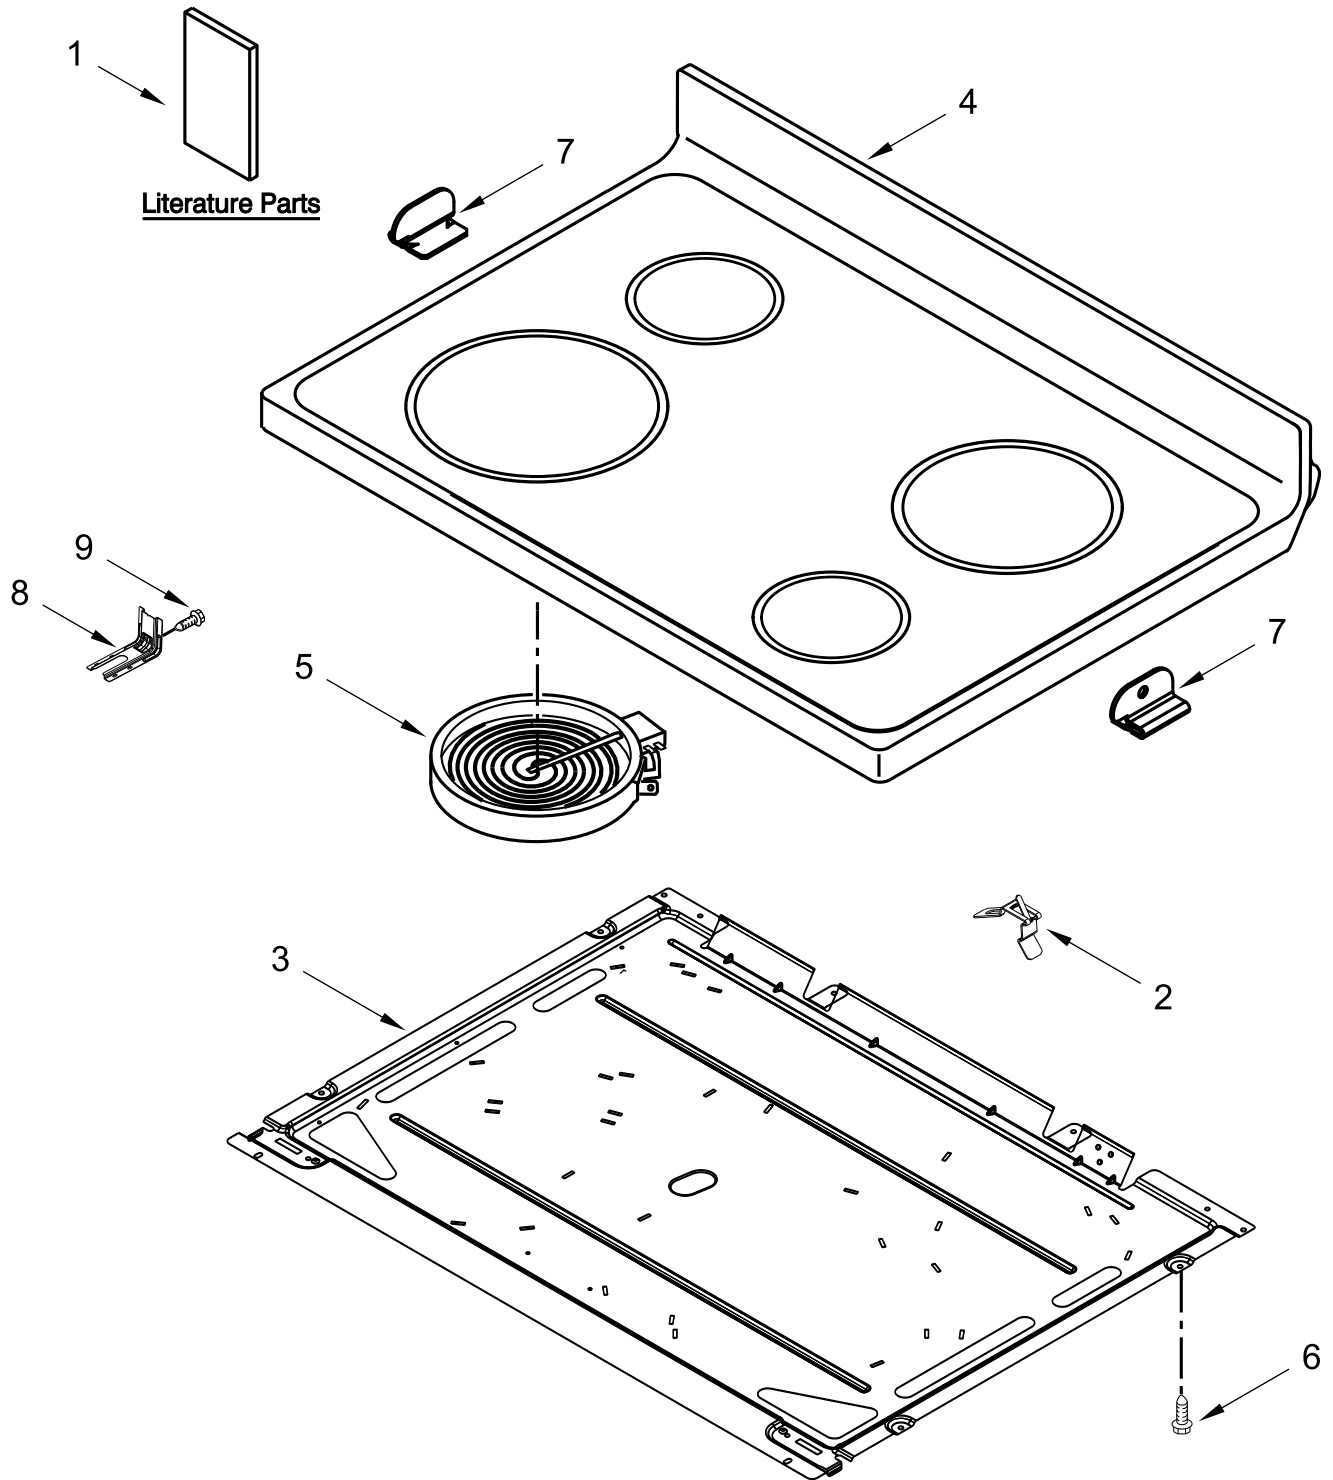

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000 and 1400W)	8	W11379945	Bracket, Anti-Tip
	W11469631	Quick Start Guide			(Left Front)	9	7101P485-60	Screw, Anti-Tip Kit
	W11509598	User Instructions		8273994	Element (1200W)			FOLLOWING PARTS NOT ILLUSTRATED
	W11393929	Sheet, Tech			(Left Rear and Right Front)		W11452623	Harness, Main
2	W10225448	Spring, Element		8273993	Element (1800W)		W11134603	Harness, Cooktop (Left)
3	W10691223	Pan, Radiant Element			(Right Rear)		W11134551	Harness, Cooktop (Right)
4		Cooktop	6	3196169	Screw			
	W10853125	Black	7	W10607641	Bracket, Cooktop (Left)			
				W10607642	Bracket, Cooktop (Right)			


CONTROL PANEL PARTS

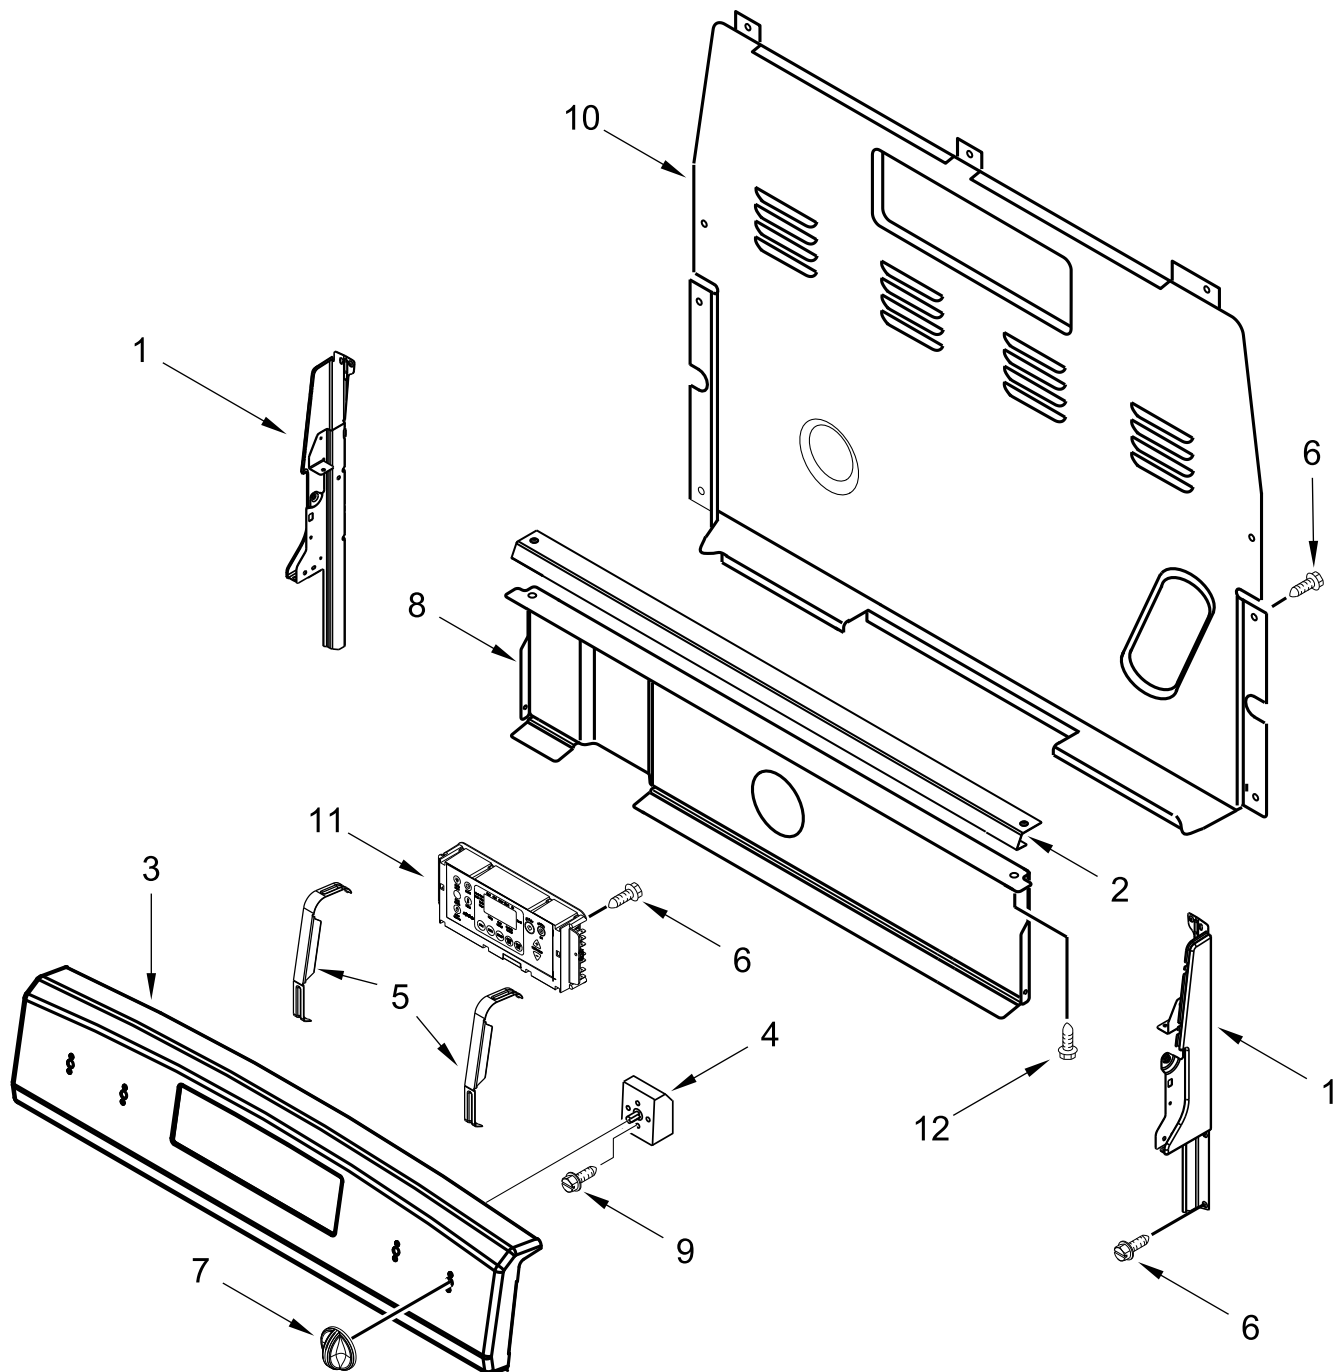

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	7		Knobs
	W11130372	Black (Left)			(Left Front)		W10844801	Black
	W11130379	Black (Right)		3148951	Switch, Infinite	8	W10134247	Shield, Heat
2	W10525121	Bracket, Console Mounting			(Left Rear and Right Front)	9	3400882	Screw
3		Panel, Console		3148953	Switch, Infinite (Green)	10	8272473	Cover, Upper Rear
	W11157020	Black			(Right Rear)	11		Control, Electronic (LCX)
			5	W10695491	Bracket, Control		W11515098	Black
			6	3196178	Screw	12	3196165	Screw


CHASSIS PARTS

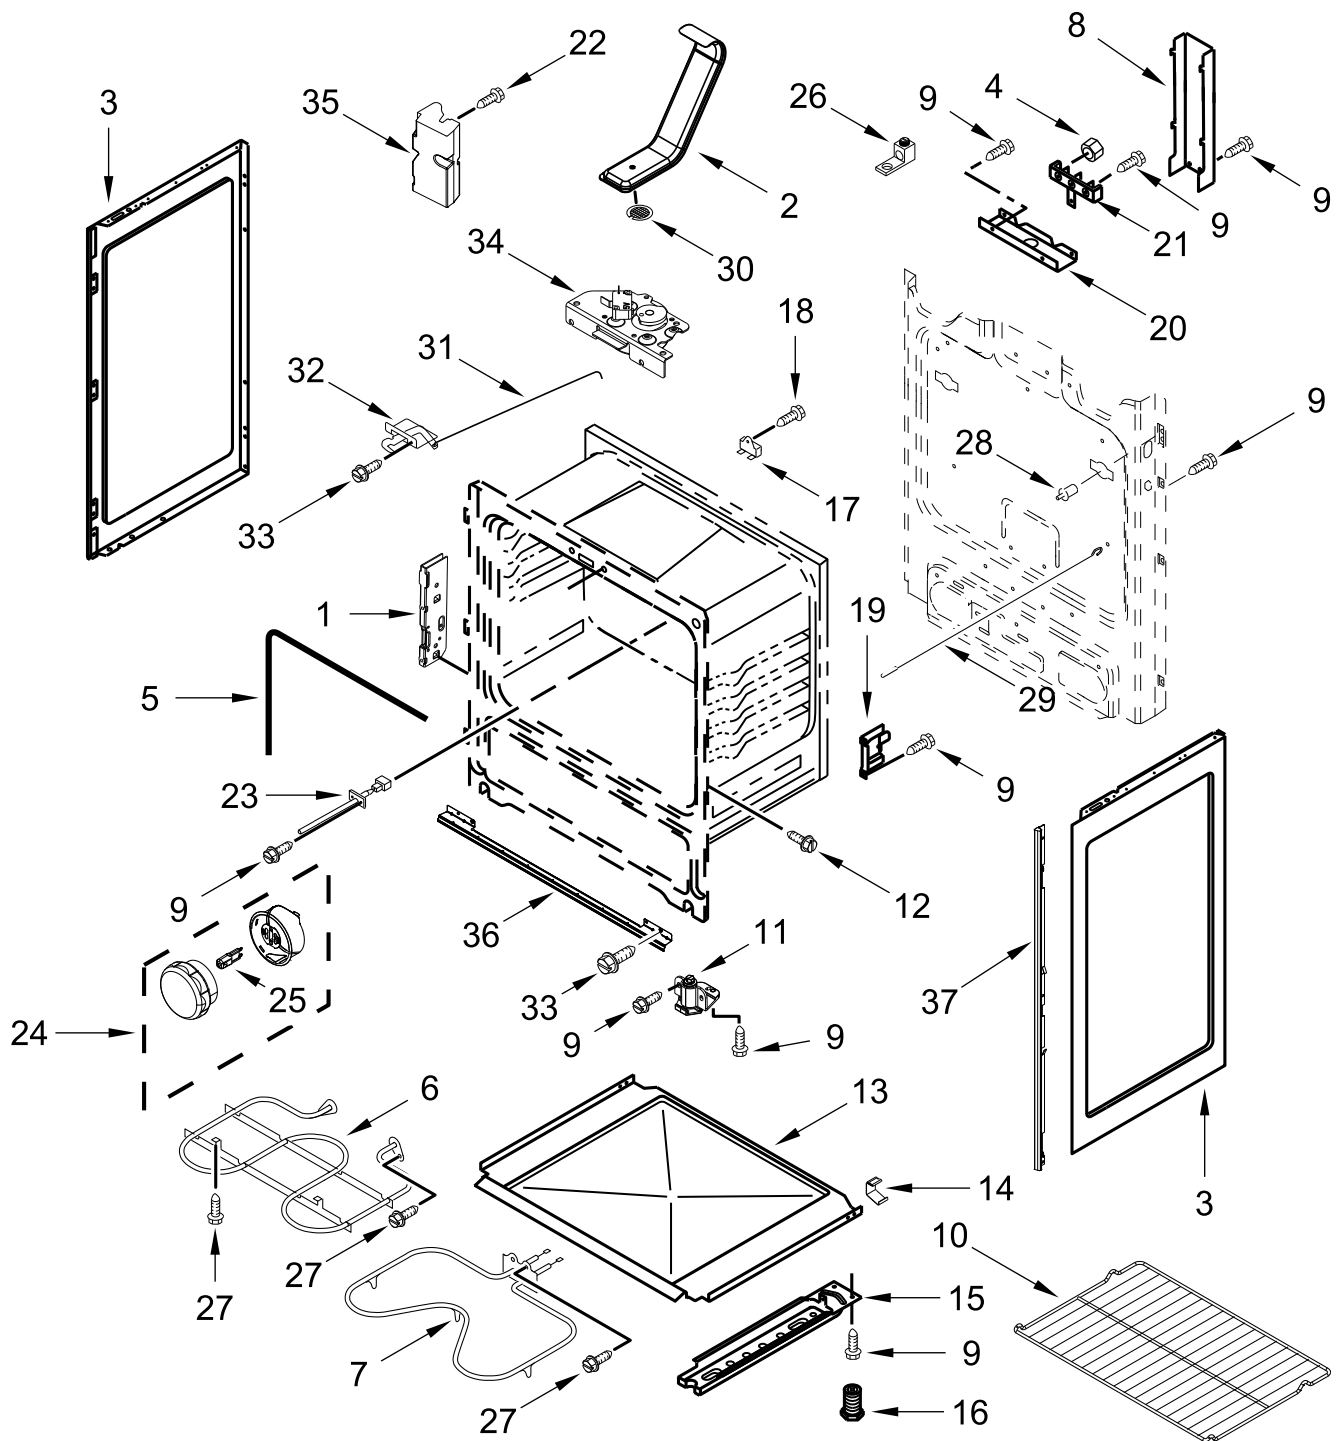

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	15	W10390008	Base Rail Assembly (Left)	28	W11511828	Switch, Door
2	W10134285	Tube, Vent				29	9757239	Rod, Door Switch
3		Panel, Side		W10390007	Base Rail Assembly (Right)	30	W11092984	Screen, Vent
	W10162245	Black				31	W10078380	Rod, Latch
4	3400029	Nut	16	W10058460	Foot, Leveling	32	9761013	Front Door Latch Assembly
5	W11491751	Seal, Door	17	3196548	Fuse, Thermal			
6	9757340	Element, Broil	18	3196172	Screw	33	3196560	Screw
7	W11111743	Element, Bake	19	W10404688	Clip, Oven Support	34	W10107820	Rear Door Latch Assembly
8	W10326122	Cover, Terminal Block	20	3186034	Bracket, Service			
9	3196169	Screw	21	W10245259	Block, Terminal	35	W10910404	Counterweight
10	W11173792	Rack, Oven	22	W11034869	Screw	36	W11464547	Bracket, Front Frame
11	W10341186	Front Foot Assembly	23	W10181986	Sensor, Oven	37	W11510560	Barrier Rail, Rubber (Left and Right)
12	W10067840	Screw	24	W11544377	Light Assembly			FOLLOWING PARTS NOT ILLUSTRATED
13	8054068	Retainer, Insulation	25	W10571723	Bulb, Halogen 40 Watts			
14	W10137382	Clip, Panel	26	W10281322	Kit, Bare Wire Adapter Block	W10333344		Insulation, Flue
						W10774939		Insulation, Wrap
			27	3196154	Screw	W11127325		Insulation, Back

DOOR PARTS

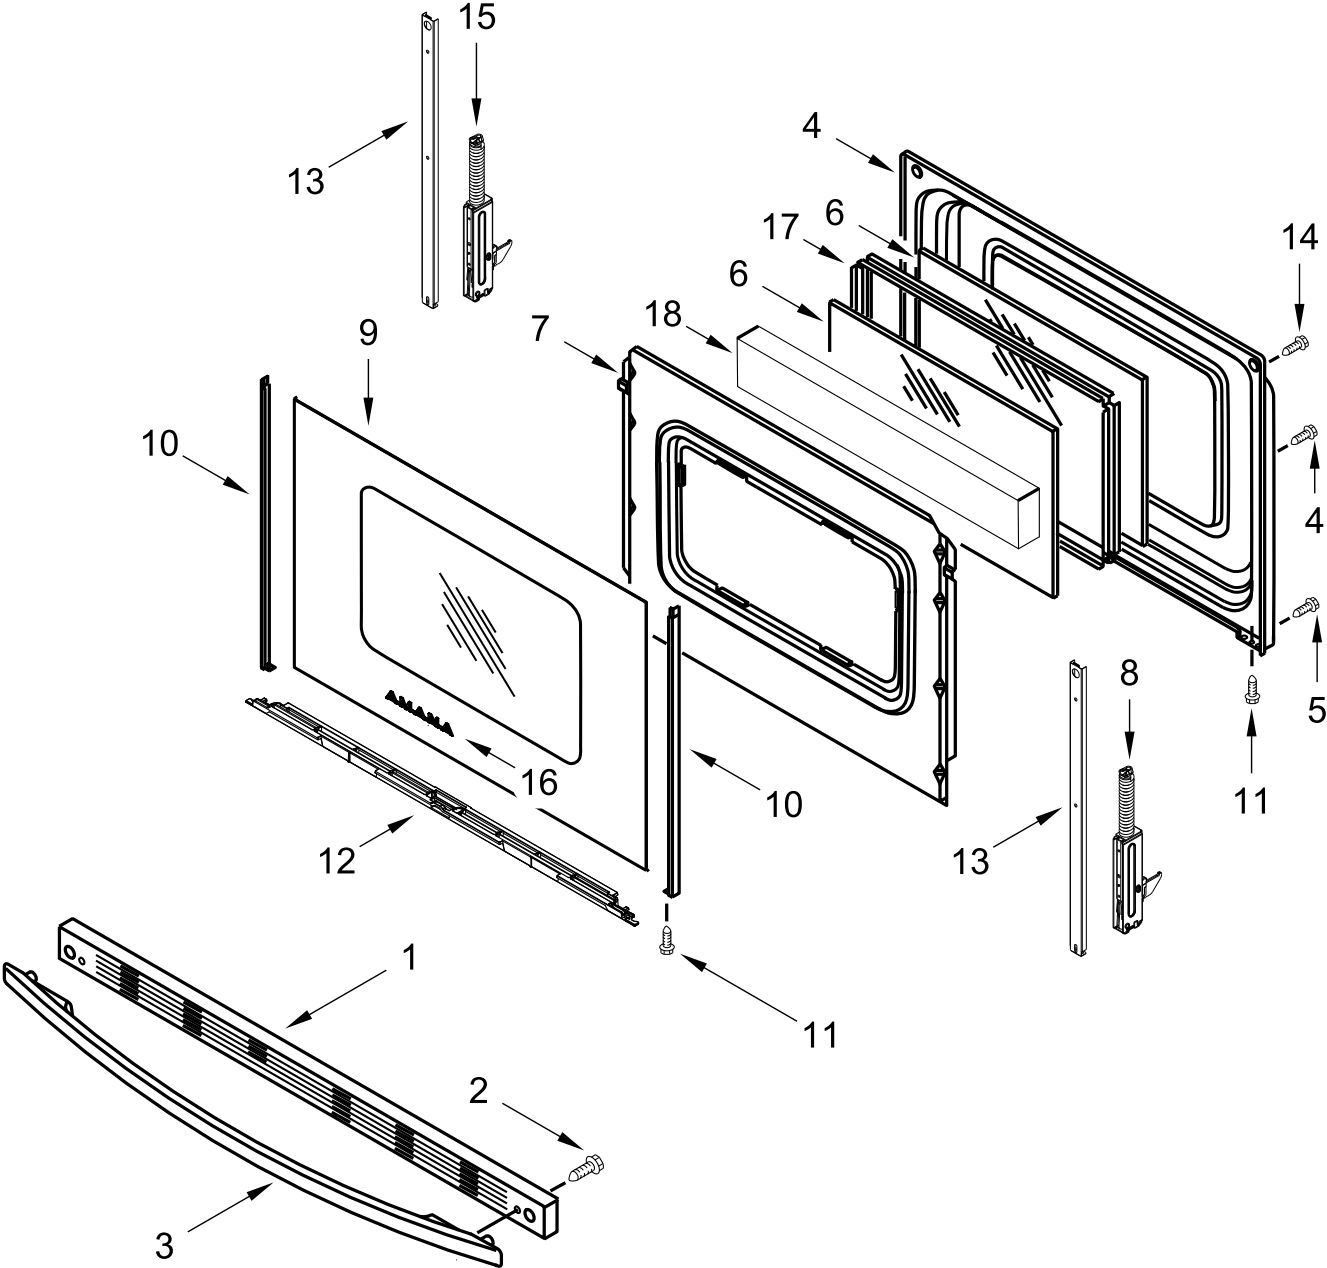


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
2	W10168559	Screw
3		Handle, Door
	W10323589	Black
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner
7	9761357	Retainer, Insulation

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10299226	Hinge, Active
9		Glass, Outer
	W10886896	Black
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
11	W10327235	Screw
12		Trim, Lower
	W11444043	Black

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W11379944	Strap, Door
14	W10200660	Screw
15	W10299227	Hinge, Door (Passive)
16		Badge
	W10846751	Black
17	W10316950	Frame, Glass
18	W10278991	Insulation, Door Strip

DRAWER PARTS

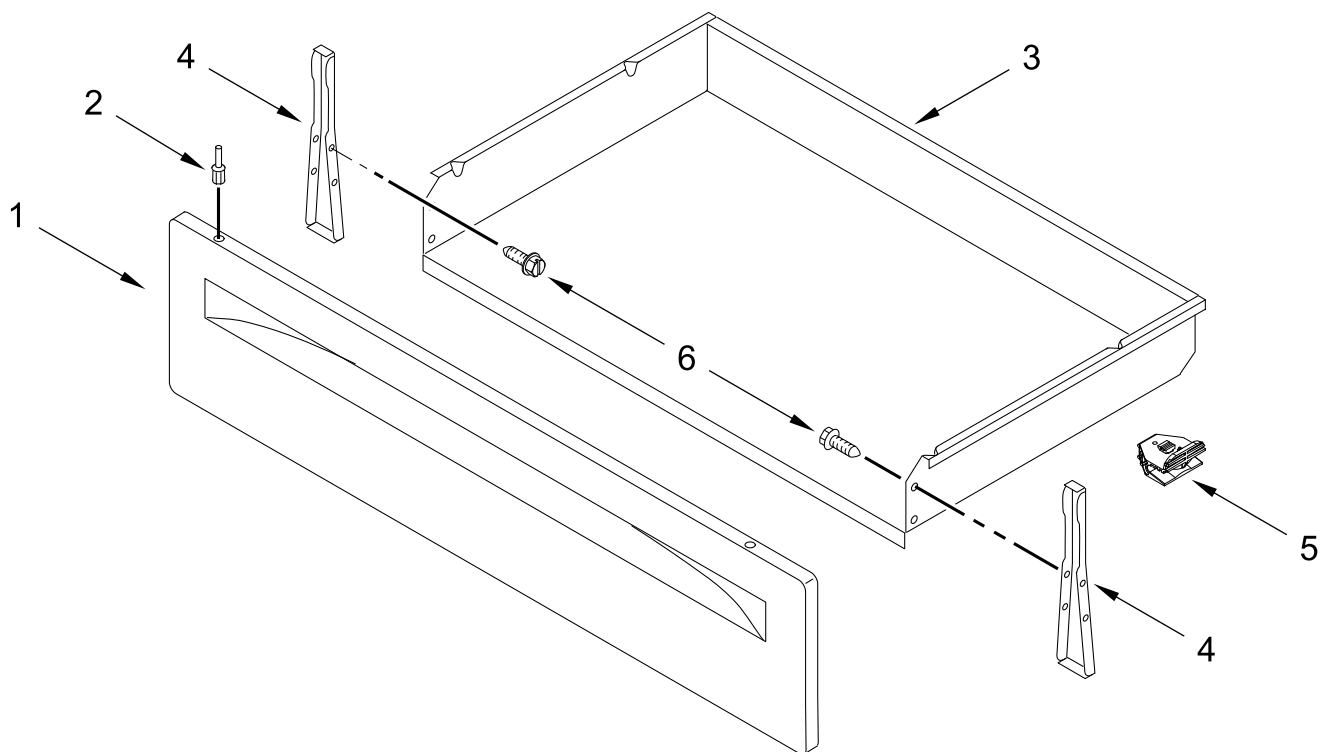

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10688022	Drawer, Storage	5	W10674708	Glide, Drawer Rear
	W11123900	Black	4	W10462912	Bracket, Mounting Drawer		W10674705	Glide, Drawer Front
2		Rivet, Push				6	3196169	Screw
	3196813	Black						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	8212473	Universal Silver
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	3191048	Glass Cleaner
	4396923	Broiler Pan and Grid