




GAS RANGE

MODELS:

WEG745H0LZ5 (Stainless)


COOKTOP PARTS

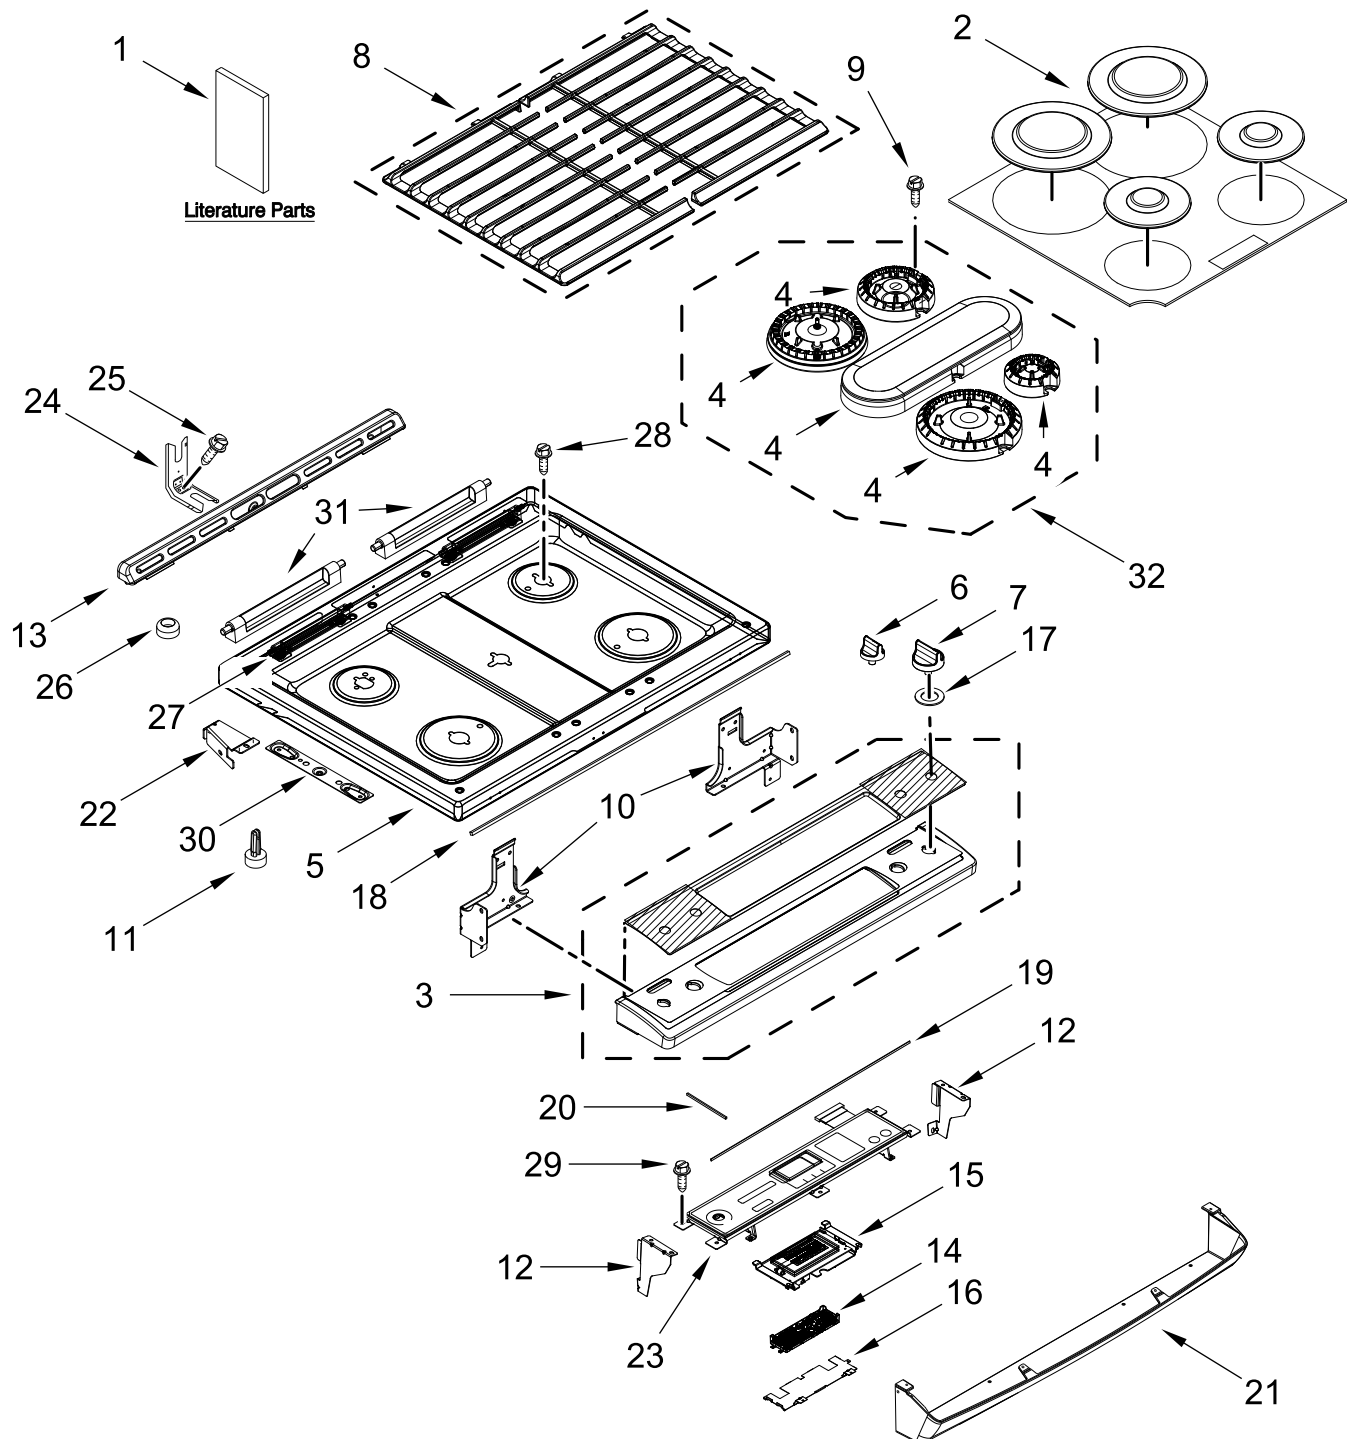

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	10	W11563529	Bracket, Support (Left)	23		Assembly, Active Overlay
	W11426594	Owners Manual		W10598048	Bracket, Console (Center)		W11527907	Black
	W11524751	Quick Start Guide		W11563527	Bracket, Support (Right)	24	W11379947	Bracket, Anti-Tip
	W11565458	Tech Sheet				25	7101P485-60	Screw, Anti-Tip Kit
2		Burner Cap Kit	11	8016P022-60	Glide, Main Top	26	W10854253	Bumper
	W11498499	Black (Set of 4)	12	W10547960	Bracket, Console (Left)	27		Hinge, Grate (Not Serviced)
3		Console		W10547961	Bracket, Console (Right)	28	3196172	Screw
	W11527534	Stainless				29	9780274	Screw
4	W11352018	Spreader, Flame (Left Front and Right Front)	13		Trim, Vent	30	W10879790	Grate Hinge Spacer
	W11352021	Spreader, Flame (Left Rear)		W10577781	Black	31	W10826075	Rear, Hinge-Grate (Stainless Model Only)
	W11352020	Spreader, Flame (Right Rear)	14	W11541191	Electronic, Control MRC2	32	W11368533	Burner Kit
	W11367086	Spreader, Flame (Center)	15	W10759327	Assembly, Display			FOLLOWING PARTS NOT ILLUSTRATED
			16	W10558372	Bracket, Control		W11458864	Harness, Main
5		Cooktop (Includes Hinges)	17		Bushing		W10754419	Harness, Bake and Broil
	W11411996	Black		W10739036	Black		W10575120	Harness, Keypad
6		Knob (Mini)	18	W11512127	Gasket, Console and Cooktop		W10598169	Harness, Display
	W11514146	Stainless	19	W10689101	Gasket, Console		313438	Clip, Harness
7		Knob	20	W10689102	Gasket, Console Short		3196520	Clip, Wire
	W11513755	Stainless	21		Console, Lower Panel		W10580229	Wire, Ground
8		Grate Kit		W10570527	Black		7111P017-60	Clamp, Wire
	W11353429	Black	22	W10162253	Brace, Corner (Left)		3196896	Clip, Wire
9	W10673618	Screw		W10162252	Brace, Corner (Right)		W10340851	Reducer, Venturi (Choke)


CHASSIS PARTS

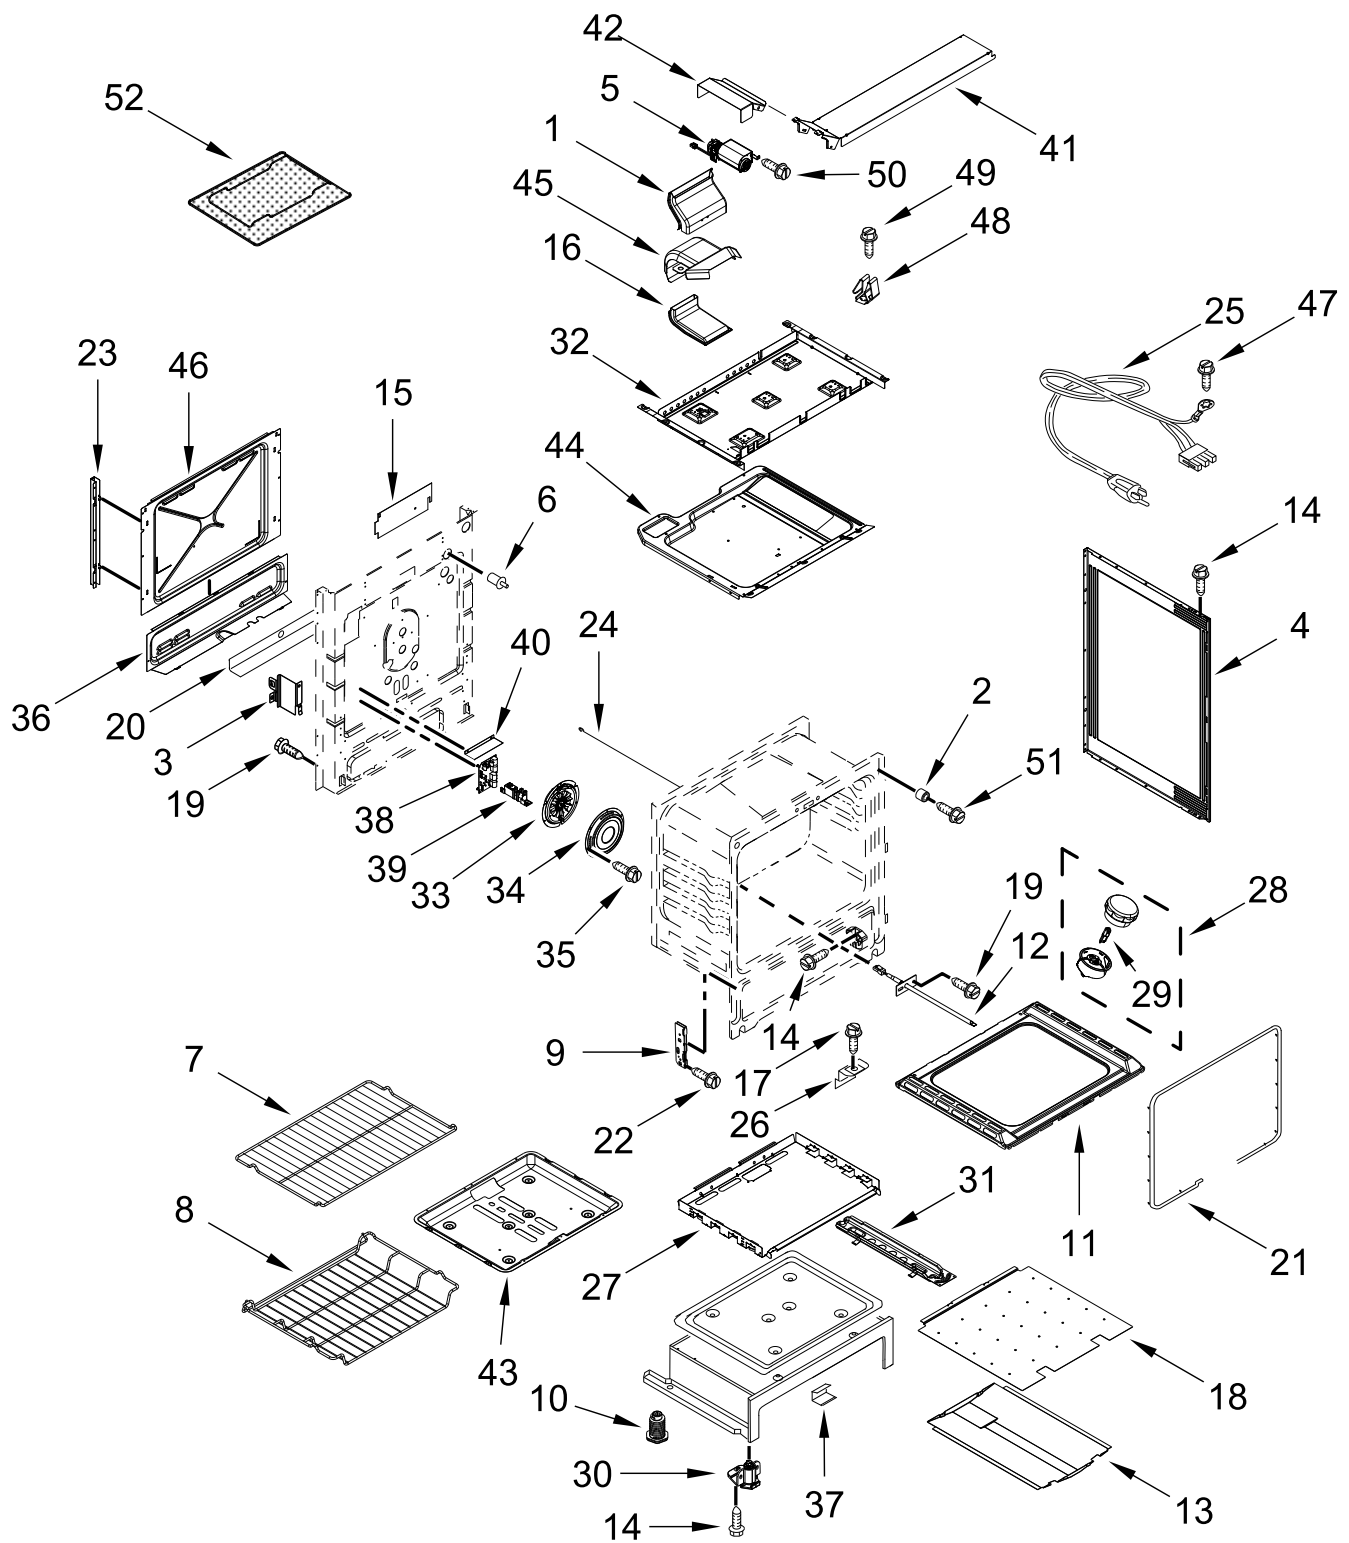

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10614920	Assembly, Flue	20	W10435470	Brace, Main Back	37	W10137382	Clip, Panel
2	9758701	Spacer, Door	21	W11491752	Gasket, Door	38	W10457998	Module, Spark (0 plus 2)
3	W10273002	Bracket, Oven Support	22	W10031780	Screw	39	W11350452	Spark Module
4		Panel, Side	23	W10162241	Channel, Rear	40	W11206138	Guard, Splash
	W10162245	Black	24	W10273192	Rod, Door Switch	41	W10162254	Duct, Cooling
5	W11467246	Cooling Fan	25	W10910642	Cord, Power	42	W10162255	Duct, Cover
6	W11511828	Switch, Door	26	W10035900	Support, Oven Bottom	43	W11379356	Pan, Bake
7	W10531060	Rack, Oven	27	W10541959	Shield, Bake	44	W10289168	Box, Burner SI
8	W10289145	Rack, Oven (Gull-Wing)	28	W11634772	Light Assembly	45	W10162257	Duct, Cooktop
9	W10289077	Receiver, Hinge	29	W10571723	Bulb, Halogen 40 Watts	46	W11379354	Cover, Back
10	W10058460	Foot, Leveling	30	W10341186	Front Foot Assembly	47	3196173	Screw
11	W10211368	Bottom, Oven	31	W10390008	Base Rail Assembly (Left)	48	W10645947	Grommet
12	W10586204	Sensor		W10390007	Base Rail Assembly (Right)	49	W10516115	Screw
13	3601P356-45	Baffle, Bake Burner				50	W10067840	Screw
14	3196178	Screw	32	W10558276	Burner, Box Gas	51	3196560	Screw
15	W10818358	Shield, Wire	33	W11353926	Convection Assembly	52	W11661815	Basket, Airfry
16	W11040249	Assembly, Flue (Upper)	34	W10346154	Cover, Convection			FOLLOWING PARTS NOT ILLUSTRATED
17	W10362924	Screw	35	W10362924	Screw		4820F015-59	Insulation, Strap
18	W10323077	Diffuser, Flame	36	W10162249	Cover, Wire		W10289173	Insulation, Wrap
19	3196178	Screw					W10162240	Insulation, Back


MANIFOLD PARTS

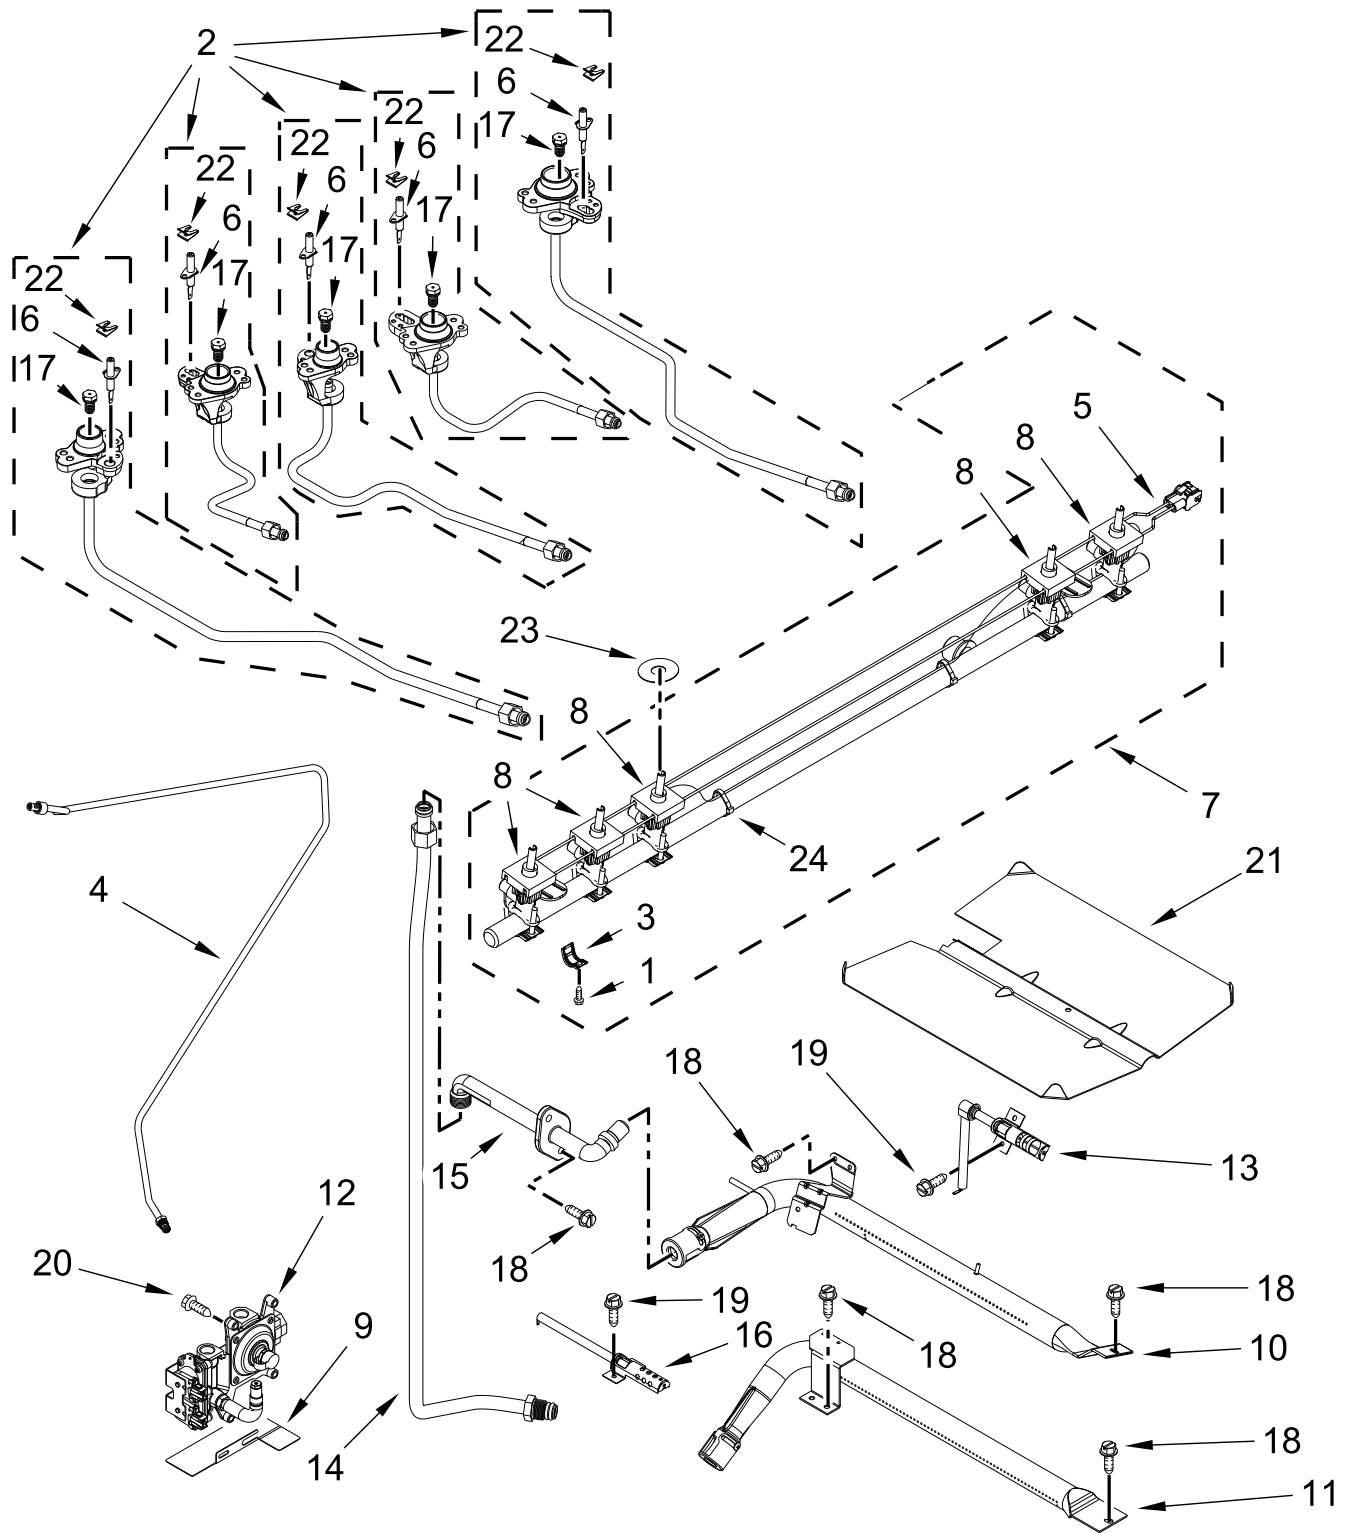

MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11577790	Screw	7	W11512353	Assembly, Manifold	17	W10849722	Orifice (18K)
2	W11186510	Assembly, Orifice (Left Front)	8	W11511818	Valve, Gas (Left Front and Right Front)		W10849719	Orifice (5K) (Left Rear)
	W11186507	Assembly, Orifice (Left Rear)		W11511819	Valve, Gas (Left Rear)		W10849717	Orifice (15K) (Right Front)
	W11186523	Assembly, Orifice (Right Front)		W11511824	Valve, Gas (Right Rear and Center)		W10849714	Orifice (9.5K) (Right Rear)
	W11186519	Assembly, Orifice (Right Rear)					W10849715	Orifice (8K) (Center)
	W11186516	Assembly, Orifice (Center)	9	W10224921	Bracket, Aegis	18	3196178	Screw
3	W10949105	Bracket, Saddle Valve	10	W10439242	Burner, Broiler	19	3196385	Screw
4	W10552140	Tube, Supply	11	W10680035	Burner, Bake	20	3400016	Screw
5	W11537740	Harness, Spark Switch	12	W10554066	Valve, Regulator	21	3601P336-45	Baffle, Broil Burner
6	W10669526	Electrode, Burner (Left Front)	13	W10324262	Igniter, Bake	22	W10827923	Electrode, Spring
	W10669525	Electrode (Left Rear)	14	W10306050	Tube, Broil Supply (Broiler Fitting To Valve)	23	W11507167	Seal, Switch Shaft
	W10669524	Electrode, Burner (Right Front and Center)	15	W10583216	Fitting, Broil Burner	24	W10182767	Tie, Manifold Wire
	W10669523	Electrode, Burner (Right Rear)	16	W10333842	Electrode, Broil			FOLLOWING PARTS NOT ILLUSTRATED
							W10566083	Kit, LP Conversion
							W10566535	LP Conversion Kit (Bake and Broil)
							W10400494	Orifice, LP Bake
							W10465078	Orifice, LP Broil

DOOR PARTS

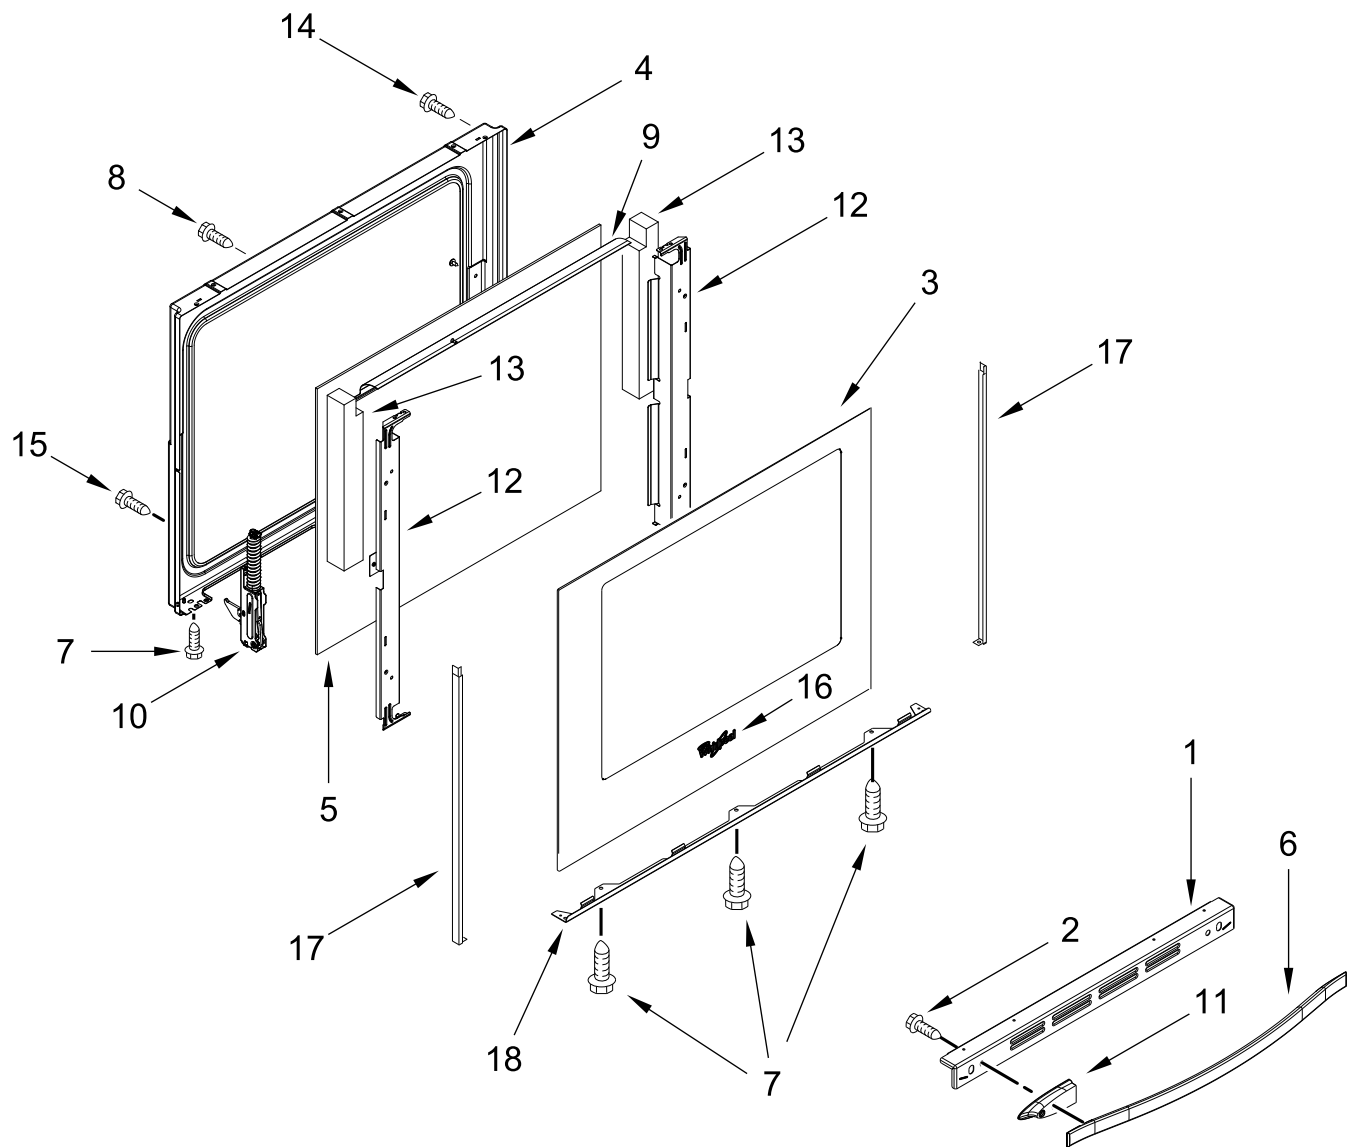


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W11519842	Stainless
2	W10477496	Screw
3		Glass, Outer
	W10871829	Black
4	W10297318	Liner, Door
5	W10300487	Glass, Inner
6		Handle, Door
	W10918786	Stainless
7	W10327235	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10031790	Screw
9	W10294853	Bracket, Glass Liner
10	W10440013	Hinge, Door (Active)
11		Standoff, Handle
	W10917796	Black
12	W10294851	Rail, Door
13	W10772958	Insulation, Door
14	W10317886	Screw
15	W10031780	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
16	W10884775	Badge
17		Trim, Door
	W10334004	Black
18		Trim, Bottom Door
	W10334031	Black

DRAWER PARTS

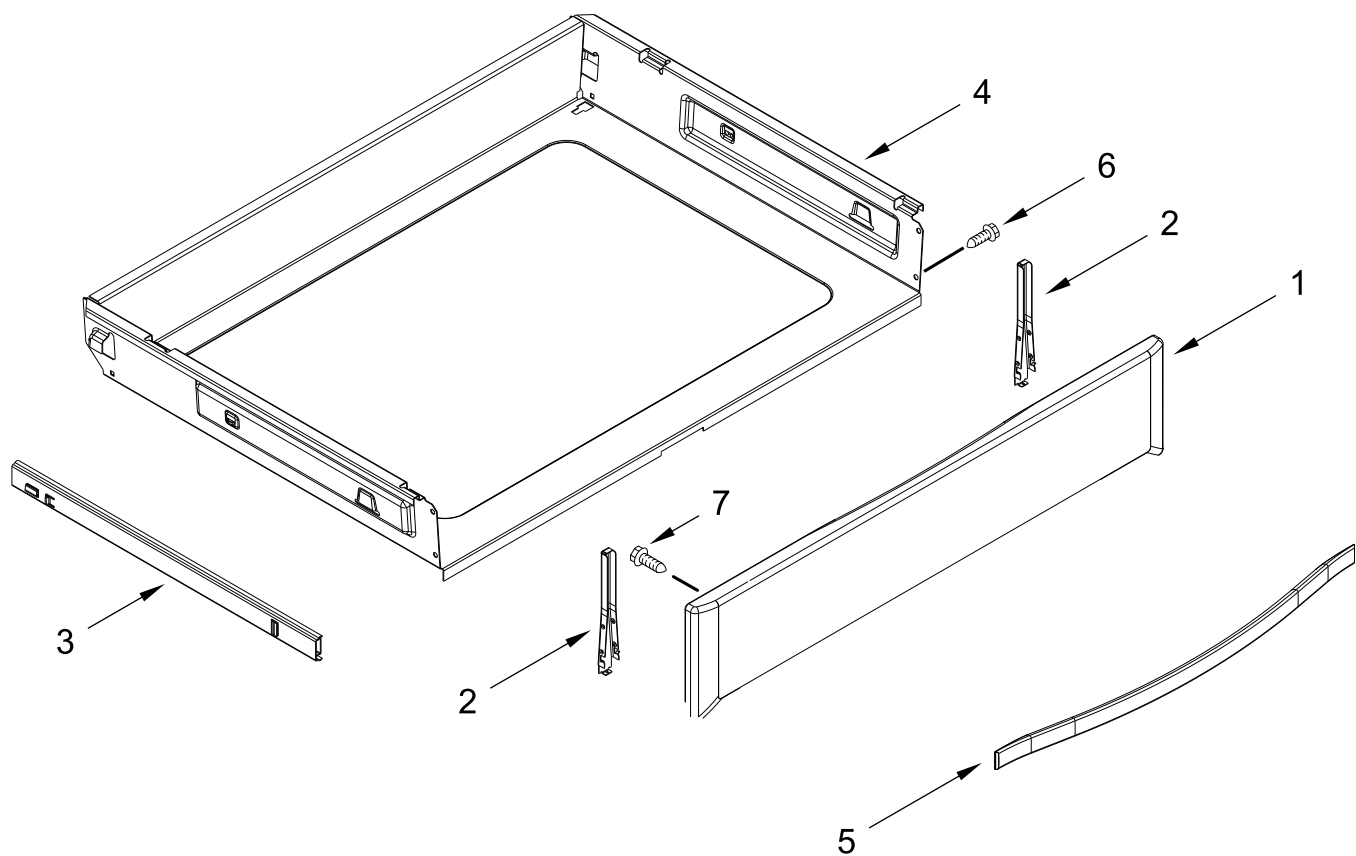

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10441804	Slide, Drawer (Left)	5		Handle, Drawer
	W11449702	Stainless		W10441805	Slide, Drawer (Right)		W10918786	Stainless
2	W10318026	Bracket, Mounting	4	W10688022	Drawer, Storage	6	3196169	Screw
						7	W10498399	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350939	Enamel, Black
	285006	Black
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	W10391473	Pad, Cooktop Cleaning
	WA906B	Scraper, Cooktop
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432545	Kit, Grill
	W10432019	Alt Cleaning Kit Assembly, Trim (Includes Blind Threaded Insert)
		(5/8 in)
	W10675026	Black
	W10675027	White
	W10675028	Stainless (1 1/8 in)
	W10731886	Black
	W10731885	White
	W10731887	Stainless Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless