




GAS RANGE

MODELS:

KFGC558JSC05 (Scorched Orange)


BURNER BOX AND GRIDDLE PARTS

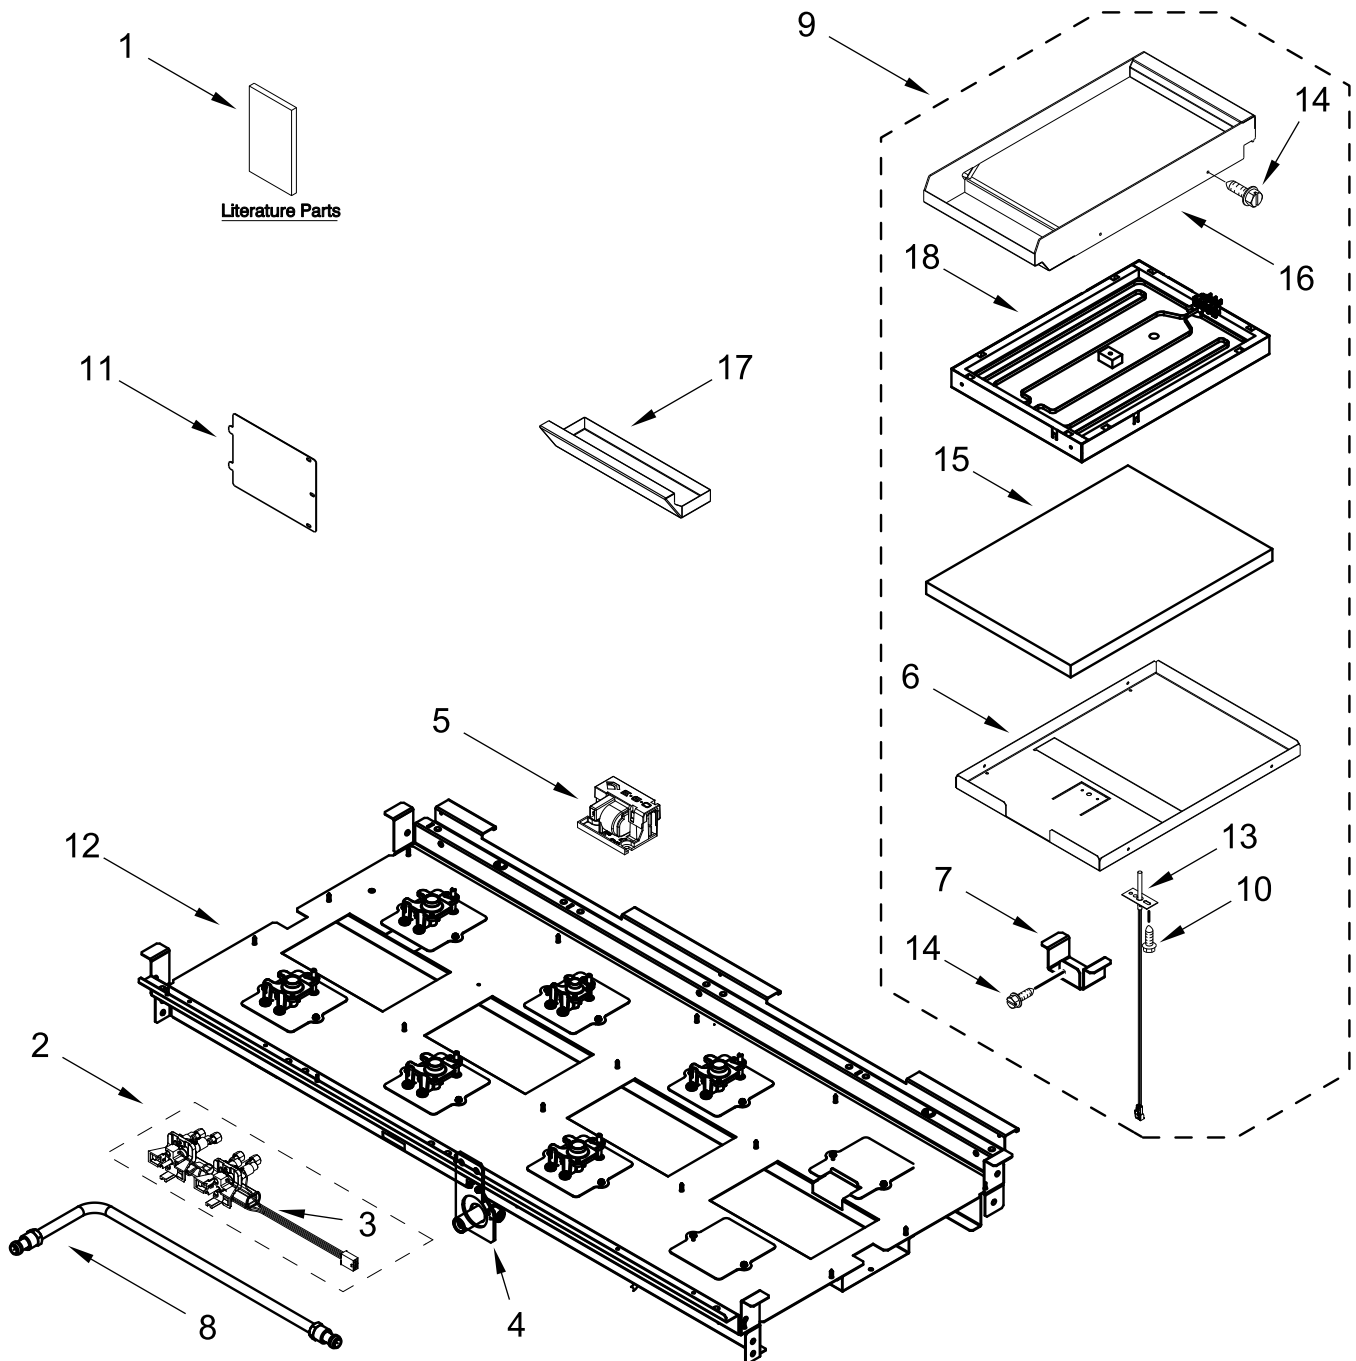

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W11330430	Tray, Griddle Insulation	18	W10891698	Element, Griddle
	W11508863	Use and Care Guide	7	W11121384	Bracket, Griddle-RTD			FOLLOWING PARTS NOT ILLUSTRATED
	W11508887	Installation Instructions	8	W10892809	Tube, Manifold Supply (Left)	W11448064		Harness, Main (48 in)
	W11184759	Guide, Internet Connectivity		W10892804	Tube, Manifold Supply (Left Center)	W10903727		Harness, Griddle
	W11364680	Guide, Quick Start		W10892805	Tube, Manifold Supply (Right Center)	W11200329		Harness, Cooktop
	W11575704	Wiring Diagram (Cooktop)				W10780278		Harness, Door Lock
	W11565468	Tech Sheet	9	W11505236	Griddle Module Assembly	W11200318		Harness, Communication
2	W11183720	Assembly, Valve Manifold (Left Front And Left Rear)	10	3196160	Screw	W11242785		Harness, WIFI
	W11036612	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	11	W10115843	Cover, Ignition	313438		Clip, Harness
			12		Box, Burner (Not Serviced)	W10624584		Cord, Power
	W10892994	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	13	W10891584	Sensor, Griddle	4450800		Screw, Grounding
			14	W10162096	Screw	W10253333		Bracket, Anti-Tip
			15	W11121383	Insulation, Griddle	7101P485-60		Screw, Anti-Tip Kit
			16	W11360151	Module, Griddle	W11238042		Kit, LP Conversion
			17	W10276497	Tray, Griddle Drip	W11311196		Ignitor Wire, Wire-Electrode Bake
3	W10903728	Switch, Harness				W11311197		Ignitor Wire, Wire-Electrode Broil
4	W11121194	Bracket, Manifold						
5	W11121317	Module, Spark						


COOKTOP, BURNER AND GRATE PARTS

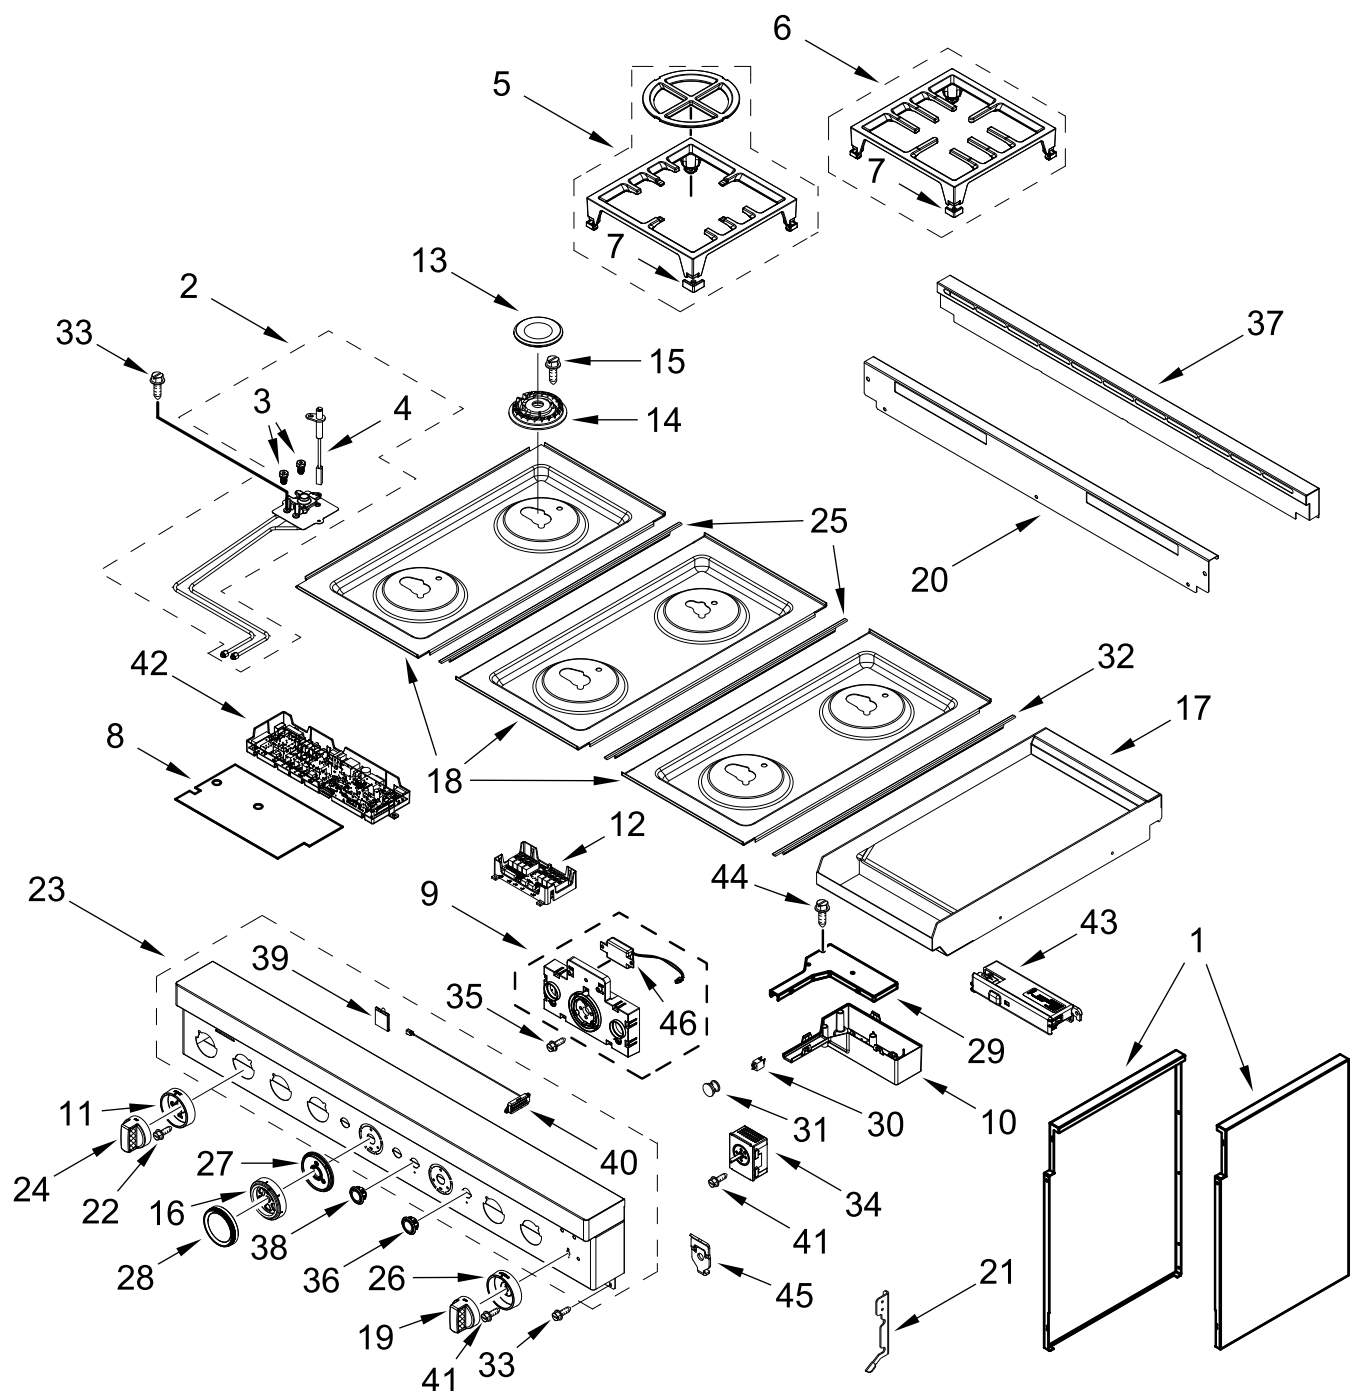

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	9	W11436336	User Interface	24		Knob, Burner
	W11111428	Panel, Cabinet Side (Right)	10	W11205795	Cover, WIFI Outer		W10912166	Stainless (Left Rear, Left Center Front, Right Center Rear)
2	W10892793	Assembly, Orifice Holder (Left Front)	11	W10881642	Bezel (Front Burners)		W10883172	Stainless (Left Front, Left Center Rear, Right Center Front)
	W10892492	Assembly, Orifice Holder (Left Rear)		W10883433	Bezel (Rear Burners)	25		Trim, T-Strip
	W11159461	Assembly, Orifice Holder (Left Center Front)	12	W10871065	Manager, Appliance (Expansion)		W10271524	Black
	W10892808	Assembly, Orifice Holder (Left Center Rear)	13		Cap, Burner	26	W10886700	Bezel, Griddle
	W10892505	Assembly, Orifice Holder (Right Center Front)		W11121390	Black (Includes 6)	27		Bezel, Oven
	W10892446	Assembly, Orifice Holder (Right Center Rear)	14	W10891746	Spreader, Flame (High) (Left Front, Right Center Front)	28	W11500871	Stainless Knob, Oven Temperature
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Center Front)		W10891974	Spreader, Flame (Low) (Left Rear, Left Center Front, Right Center Rear)		W11500869	Stainless (For 18 in Oven)
	W10892419	Orifice, Main (15K) (Left Rear, Left Center Front, Right Center Rear)		W10891978	Spreader, Flame (AUX) (Left Center Rear)		W11500868	Stainless (For 30 in Oven)
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Center Front)	15	W11323261	Screw (8-18 X 1 in)	29	W11205794	Cover, WIFI Inner
	W10892438	Orifice, Simmer (5K) (Left Center Rear)		W11323309	Screw (8-18 X 1/2 in)	30	W10116114	Light, Indicator Housing
4	W11238757	Igniter (Left Front, Right Center Front)	16		Knob, Oven Mode	31	W10294500	Lens, Indicator Light
	W11114379	Igniter (Left Rear)		W11500864	Stainless (For 18 in Oven)	32	W10291193	Trim, L-Strip
	W10892340	Igniter (Left Center Front, Left Center Rear, Right Center Rear)		W11500865	Stainless (For 30 in Oven)	33	7101P426-60	Screw
5	W11291183	Burner, Grate (With Wok Ring)	17		Assembly, Griddle Module (Part Number Shown On Burner Box and Griddle Parts Page)	34	W11033497	Control, Griddle
6	W11291179	Burner, Grate	18		Panel, Cooktop	35	3400814	Screw
7	W11042504	Bumper, Grate		W11038235	Black (Left)	36	W11241510	Button Assembly, Oven Start
8	W11281269	Barrier, Appliance Manager		W11038257	Black (Left Center)	37	W11476244	Island Trim
				W11038243	Black (Right Center)	38	W11241511	Button Assembly, Oven Light
			19		Knob, Griddle	39	W10896366	Assembly, Light Pipe
				W10912167	Stainless	40	W11130078	Antenna, WIFI
			20	W10323252	Trim, Island Insert	41	7101P309-60	Screw
			21	W10130760	Bracket, Moving Console (Left)	42	W11543346	Manager, Powermax Appliance
				W10130759	Bracket, Moving Console (Right)	43	W11110768	Assembly, WIFI Module
			22	W11328357	Screw	44	7101P624-60	Screw
			23	W10877951	Panel, Control	45	W11036559	Spring Clip, Range
						46	W10568405	Assembly, Speaker


CHASSIS PARTS

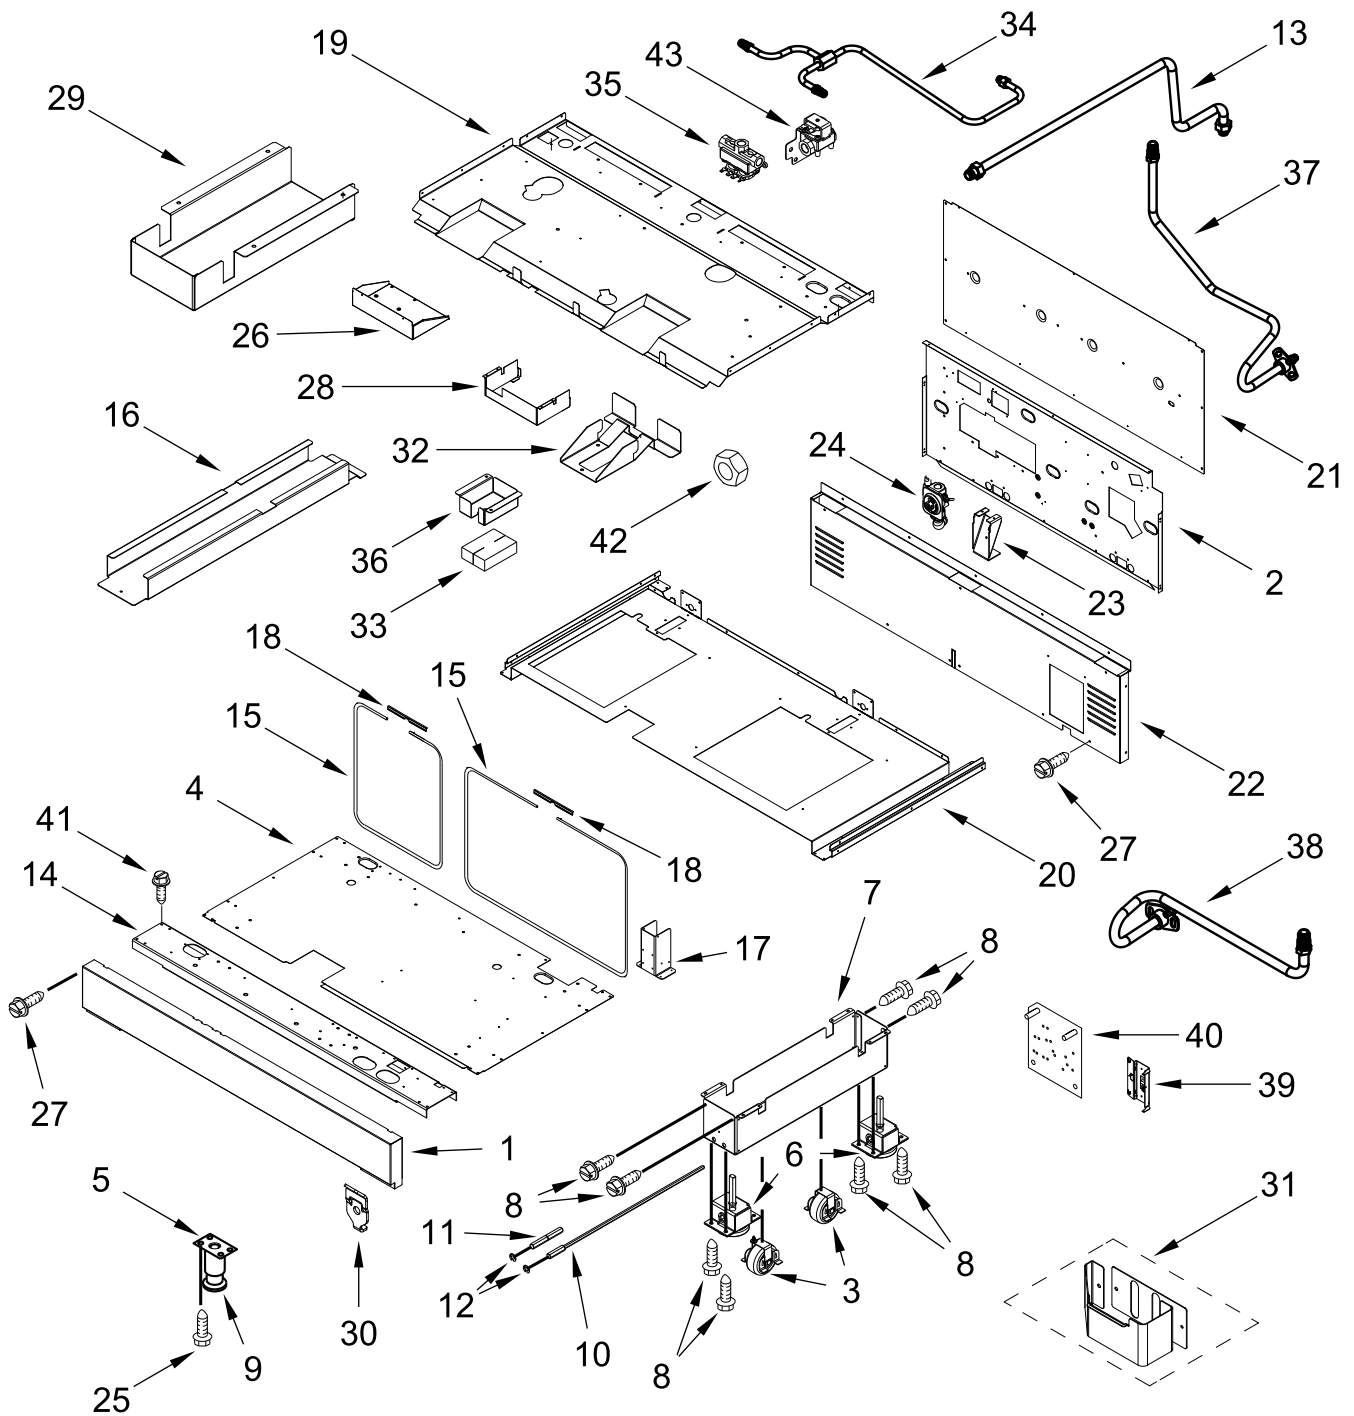

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394817	Kickplate	17	W10115819	Column, Central	31	W11199181	Cover, Foot (Left)
2	W11324987	Back, Chassis	18	W11362015	Retainer, Gasket (9 in Long)		W11199178	Cover, Foot (Right)
3	W10138054	Assembly, Roller	19	W11324984	Top, Chassis	32	W11190223	Bracket, Bake Alignment
4	W11110260	Duct, Bottom (48 in)	20	W11040800	Chassis, Bottom	33	W10311009	Insulation, Broil Cover
5	9759118	Plate, Mounting	21	W11103335	Panel, Back Top	34	W11112366	Tube, Valve (Double)
6	9760860	Leveler	22	W11034123	Panel, Back Bottom	35	W10145680	Valve, Dual
7	W10908710	Base, Leveling Leg	23	W11096823	Bracket, Pressure Regulator	36	W10310985	Cover, Broil
8	4449743	Screw	24	W10896959	Regulator, Pressure	37	W11109238	Tube, Broil
9	9759117	Foot, Dual Fuel	25	3400518	Screw	38	W11106980	Tube, Bake
10	W10115869	Shaft, Long	26	W11106341	Drawer, Appliance Manager	39	W10145362	Bracket-Board, DSI
11	W10115793	Shaft, Short	27	7101P426-60	Screw	40	W10511278	Module, Spark DSI
12	489504	E-Ring	28	W11369237	Cabinet, Appliance Manager	41	3196560	Screw
13	W11181648	Tube, Pressure Regulator	29	W11368831	Channel, Wire	42	112432	Nut, Hex
14	W11369238	Support, Channel	30	W11036559	Spring Clip, Range	43	W10311268	Valve, Single
15	W11115328	Gasket, Oven (30 in)						
	W11115326	Gasket, Oven (18 in)						
16	W11050145	Duct-Chassis, Rear						


OVEN PARTS (30 In)

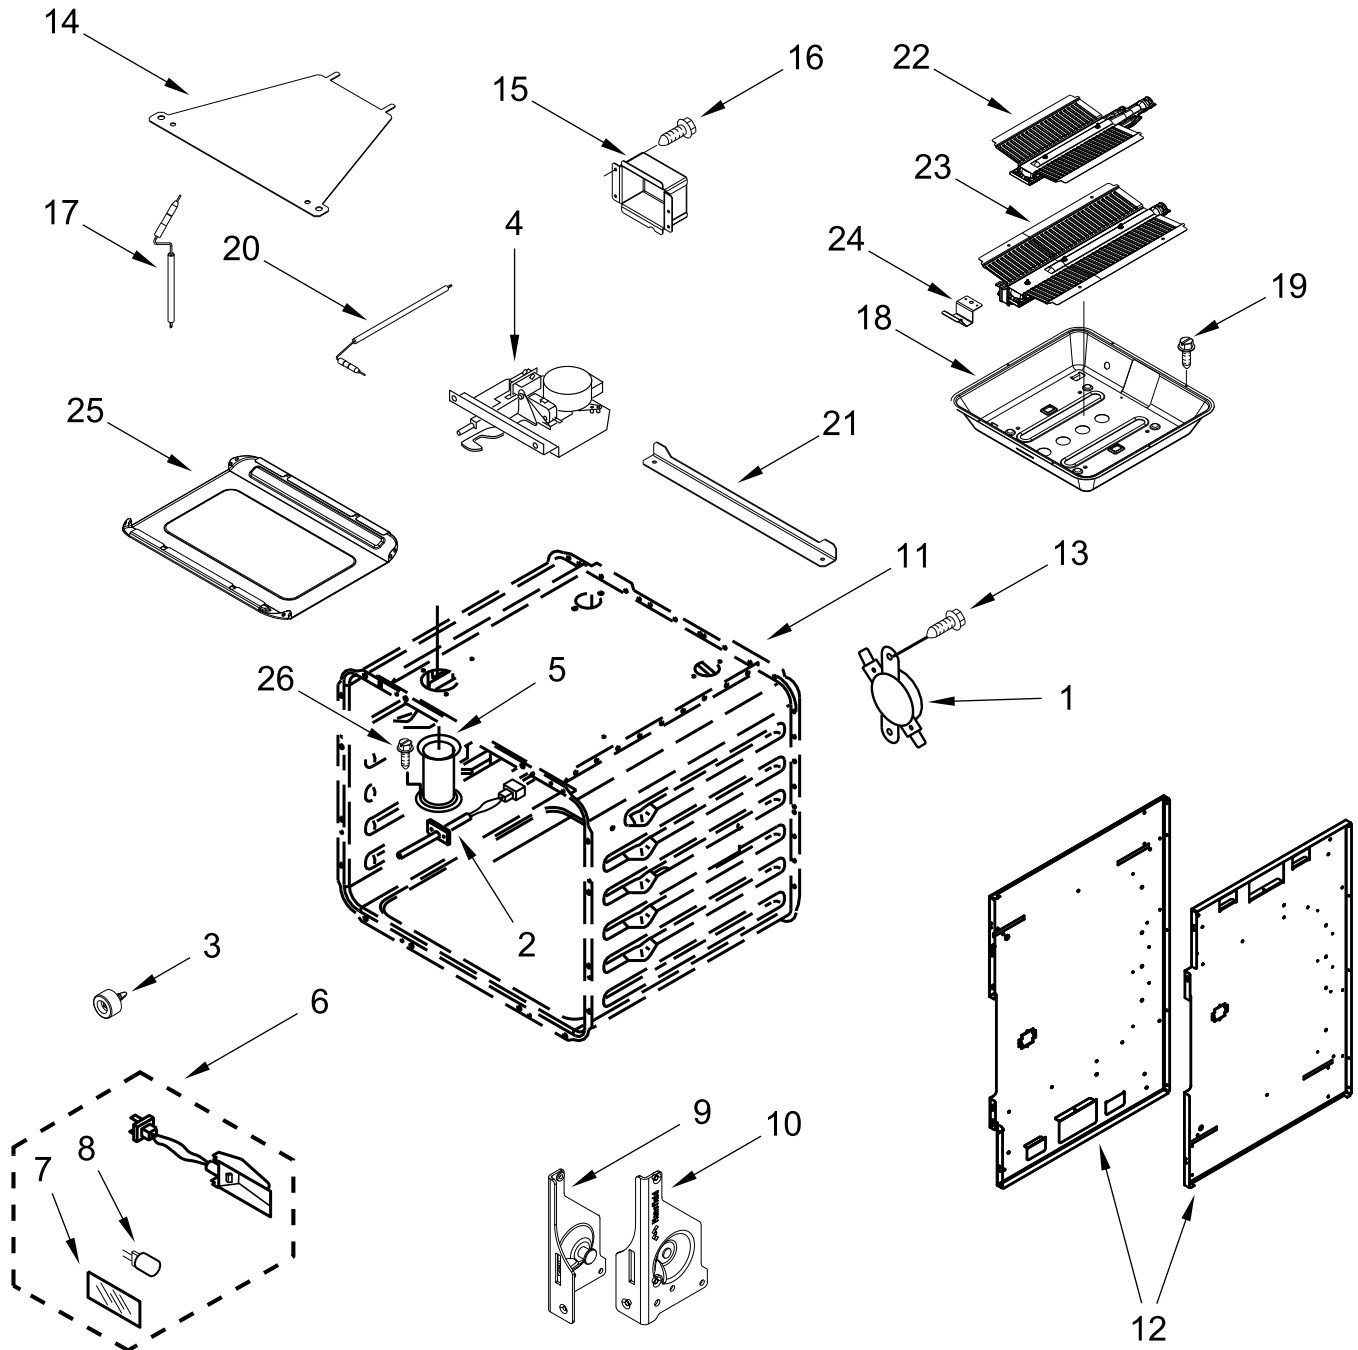

OVEN PARTS (30 In)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	23	W10311335	Burner, Broil
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	24	W10308040	Bracket, Bake Burner
3	W10351278	Bumper and Screw	13	7101P426-60	Screw	25	W10496809	Pan, Oven Bottom
4	W10830016	Latch, Motorized	14	W10160858	Cover, Latch	26	3196176	Screw
5	W10145743	Tube, Vent	15	W10308051	Box, Broil			FOLLOWING PARTS NOT ILLUSTRATED
6	W11223932	Assembly, Oven Light	16	7101P434-60	Screw	W10282810		Insulation, Wrap (30 In)
7	W10169756	Lens, Light	17	W11182863	Electrode, Broil	W11109145		Insulation, Back (30 in)
8	W10169757	Bulb, Light	18	W10145744	Support, Bake Pan	W10299354		Insulation, Bottom
9	W11096294	Receiver, Hinge (Left)	19	12992902	Screw	3400968		Nut
10	W11096293	Receiver, Hinge (Right)	20	W11205400	Electrode, Bake			
11		Liner, Oven (Not Serviced)	21	W10317437	Bracket, Broil Standoff			
			22	W10878504	Burner, Bake			


OVEN PARTS (18 In)

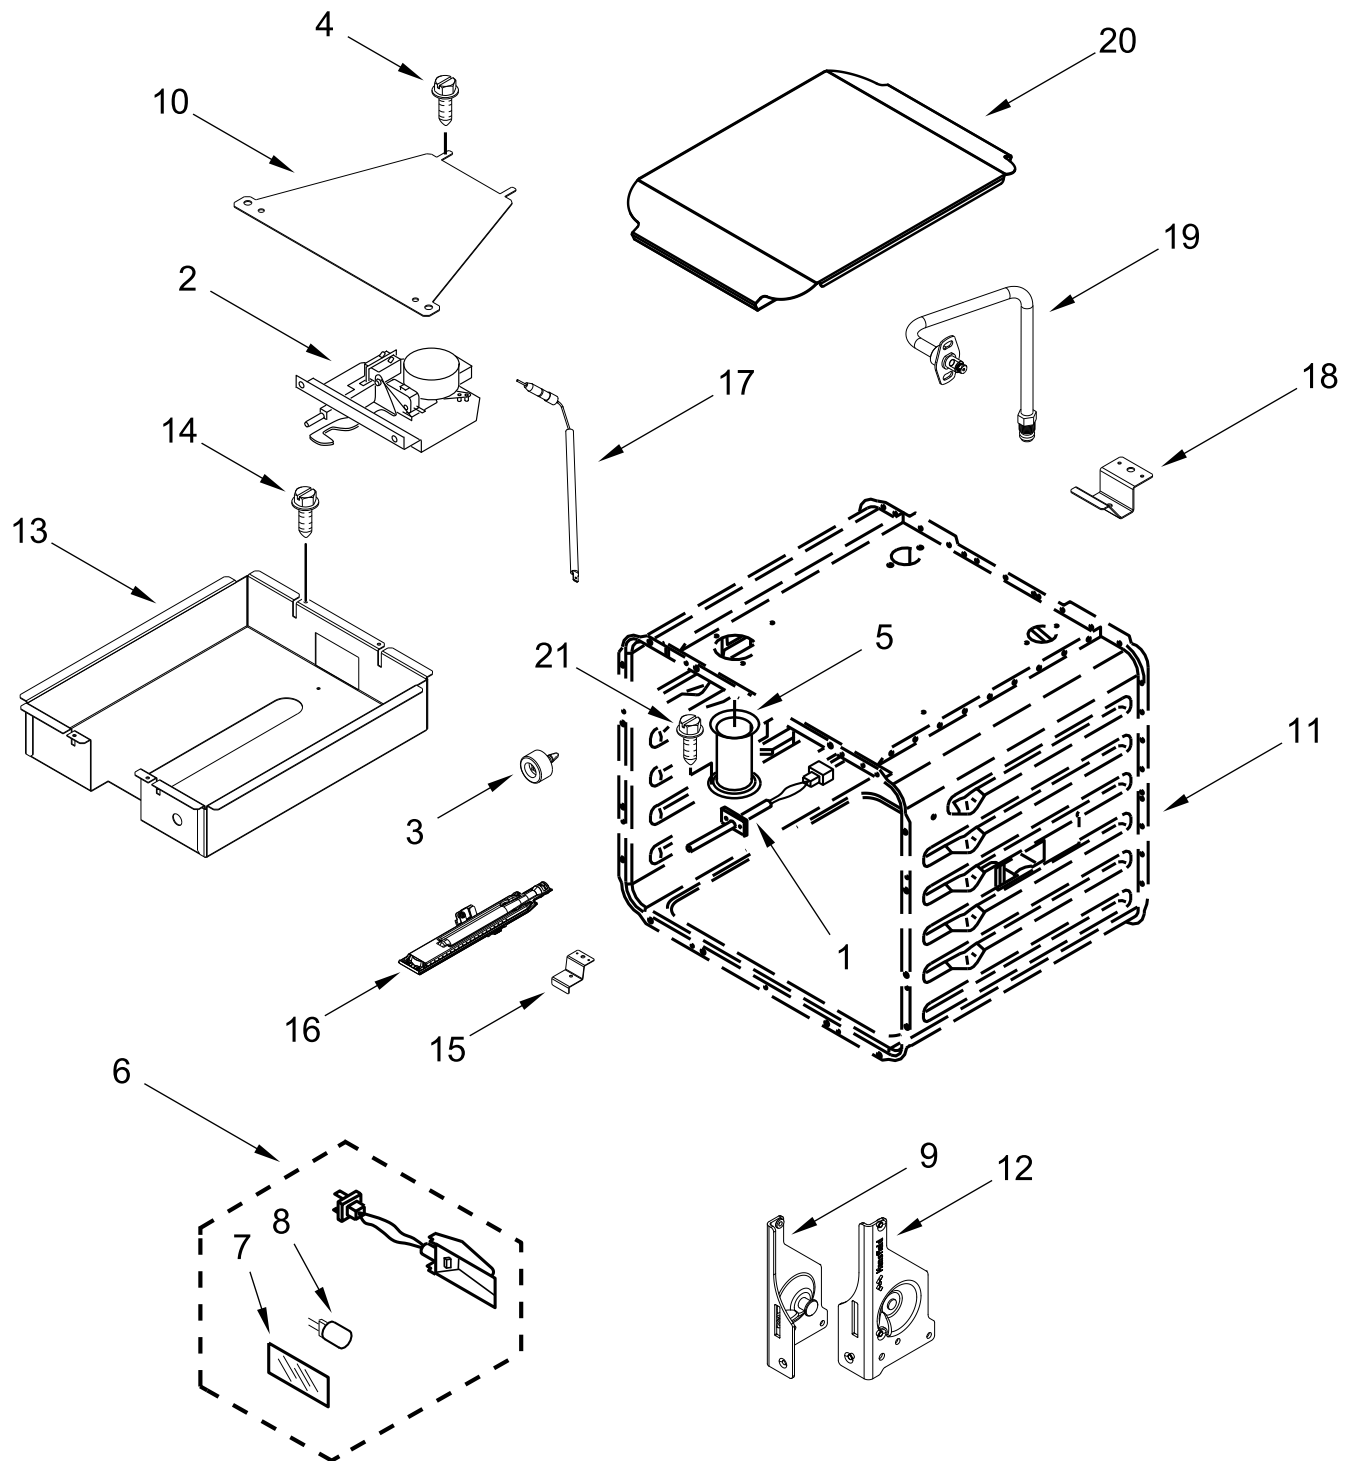

OVEN PARTS (18 In)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	11		Liner, Oven (Not Serviced)	18	W10308040	Bracket, Bake Burner
2	W10830016	Latch, Motorized				19	W10145706	Tube, Bake
3	W10351278	Bumper and Screw	12	W11096293	Receiver, Hinge (Right)	20	W11211936	Cover, Bake
4	7101P426-60	Screw				21	3196176	Screw
5	W10145743	Tube, Vent	13	W10145651	Support, Bake Pan			FOLLOWING PARTS NOT ILLUSTRATED
6	W11223932	Assembly, Oven Light	14	12992902	Screw	W10282820		Insulation, Wrap, 18 in
7	W10169756	Lens, Light	15	W10308041	Bracket, Bake Burner (18 in Cavity)	W10299353		Insulation, Back, 18 in
8	W10169757	Bulb, Light				W10299355		Insulation, Bottom
9	W11096294	Receiver, Hinge (Left)	16	W10878505	Burner, Bake W/O Spreader	3400968		Nut
10	W10160858	Cover, Latch	17	W11205400	Electrode, Bake			


VENTING PARTS

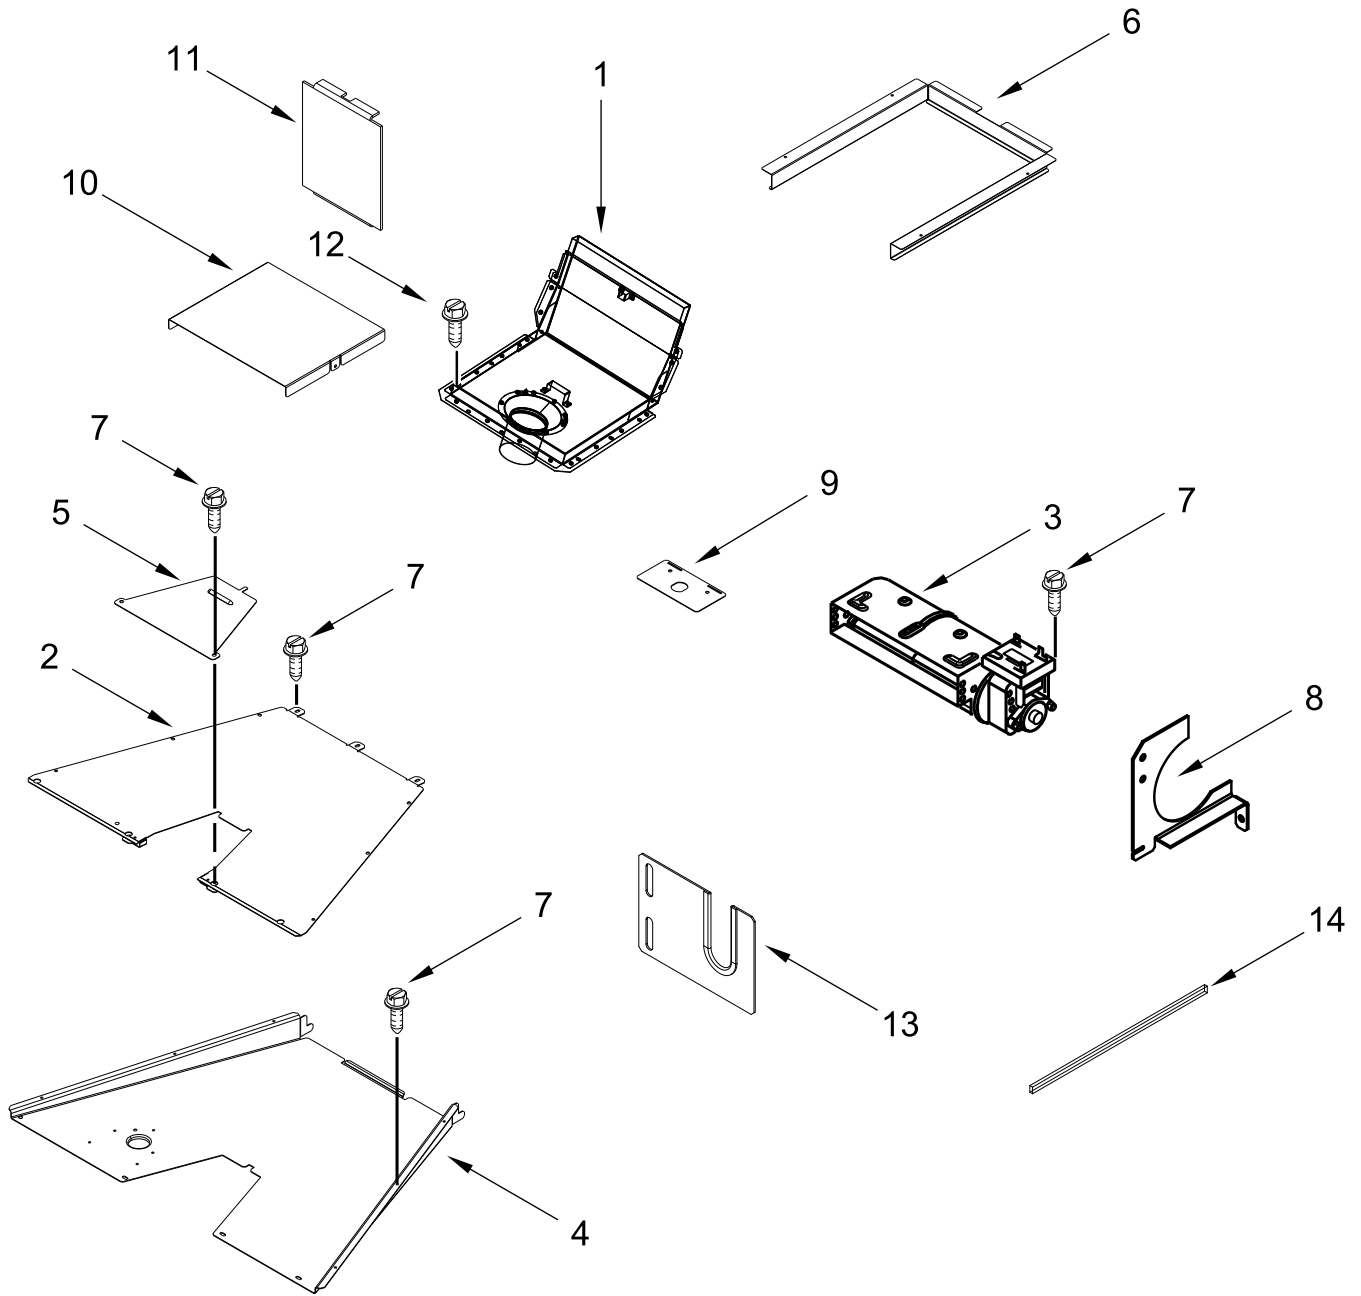

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30 in / 36 in)	4	W11091676	Vent, Cooling Bottom (30 in)	7	7101P426-60	Screw
	W11476247	Vent, Chimney Box (18 in)		W11113377	Vent, Cooling Bottom (18 in)	8	W11047754	Bracket, Blower Mount
2	W11105221	Vent, Cooling Top (30 in)	5	W11109518	Plate, Cooling Latch	9	W10115855	Holder, Strain Relief
	W11113379	Vent, Cooling Top (18 in)	6	W10145363	Duct, Primary Air (30 in)	10	W10246086	Retainer, Insulation
3	W11200129	Blower		W10145364	Duct, Primary Air (18 in)	11	W10246087	Insulation, Chimney
						12	3400805	Screw (Zinc)
						13	W11106956	Cover, Channel
						14	W10919715	Gasket


OVEN DOOR PARTS (30 In)

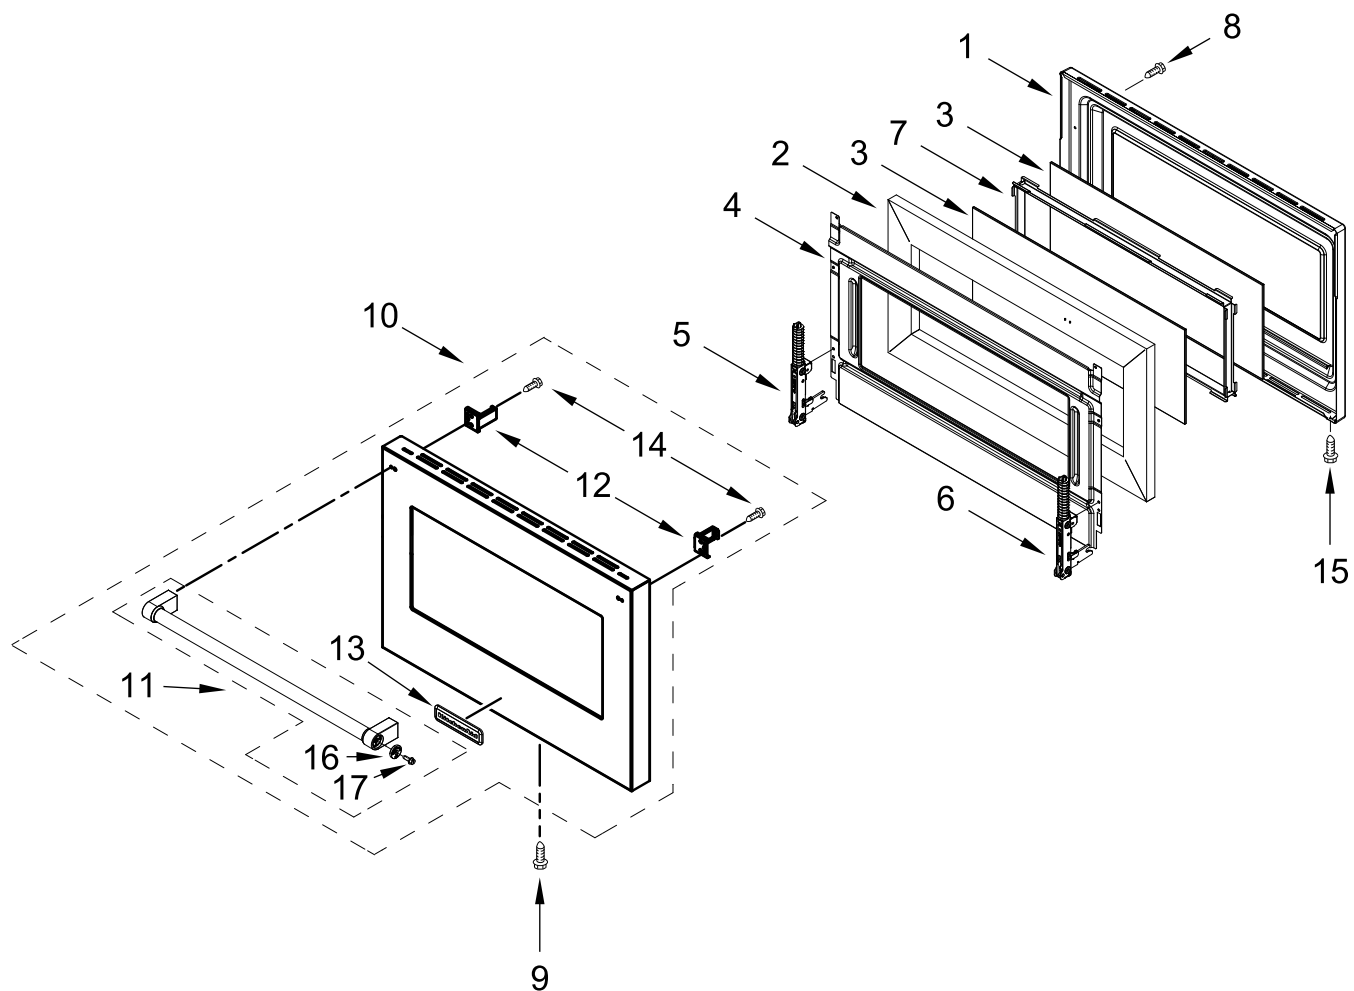

OVEN DOOR PARTS (30 In)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30 in)	8	W10898280	Screw	13	W10518672	Badge
3	W11184409	Glass, Inner	9	W10162096	Screw	14	W10276043	Screw
4	W11194821	Retainer, Glass	10	W11389301	Assembly, Outer Door (Includes Handle)	15	W10607120	Screw
5	W11390105	Hinge, Door (Left)	11	W11362706	Handle Assembly	16	W11361074	Medallion, Handle
6	W11390124	Hinge, Dual (Right)				17	W10656499	Screw


OVEN DOOR PARTS (18 In)

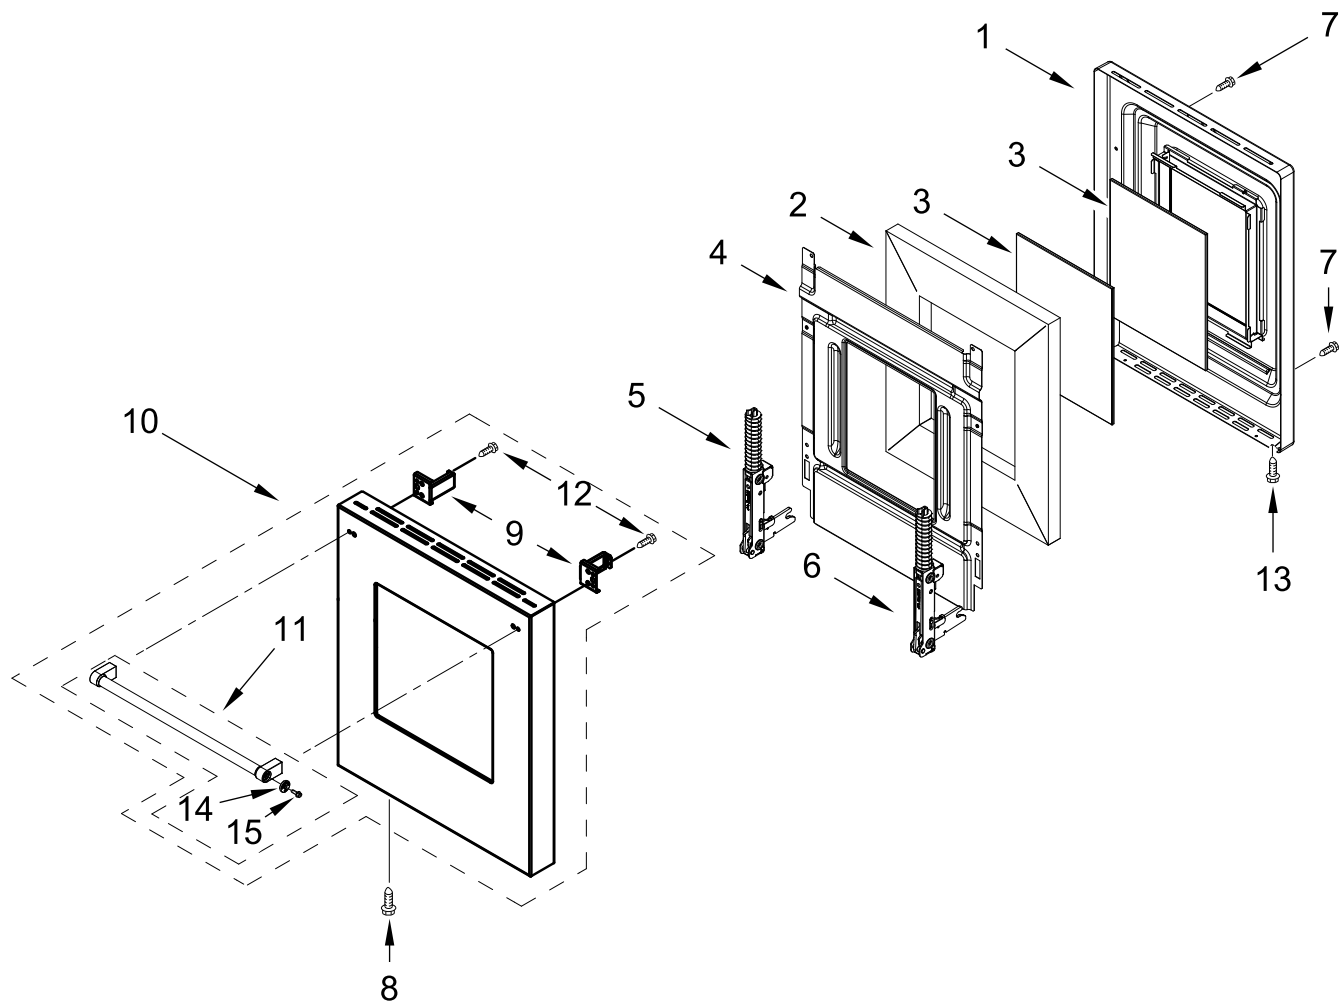

OVEN DOOR PARTS (18 In)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	12	W10276043	Screw
2	W10884821	Insulation, Door	8	W10162096	Screw	13	W10607120	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	14	W11361074	Medallion, Handle
4	W11194818	Retainer, Glass	10	W11389276	Assembly, Outer Door (Includes Handle)	15	W10656499	Screw
5	W11390106	Hinge, Door (Left)						
6	W11390125	Hinge, Door (Right)	11	W11362703	Handle Assembly			


INTERNAL OVEN PARTS (30 In)

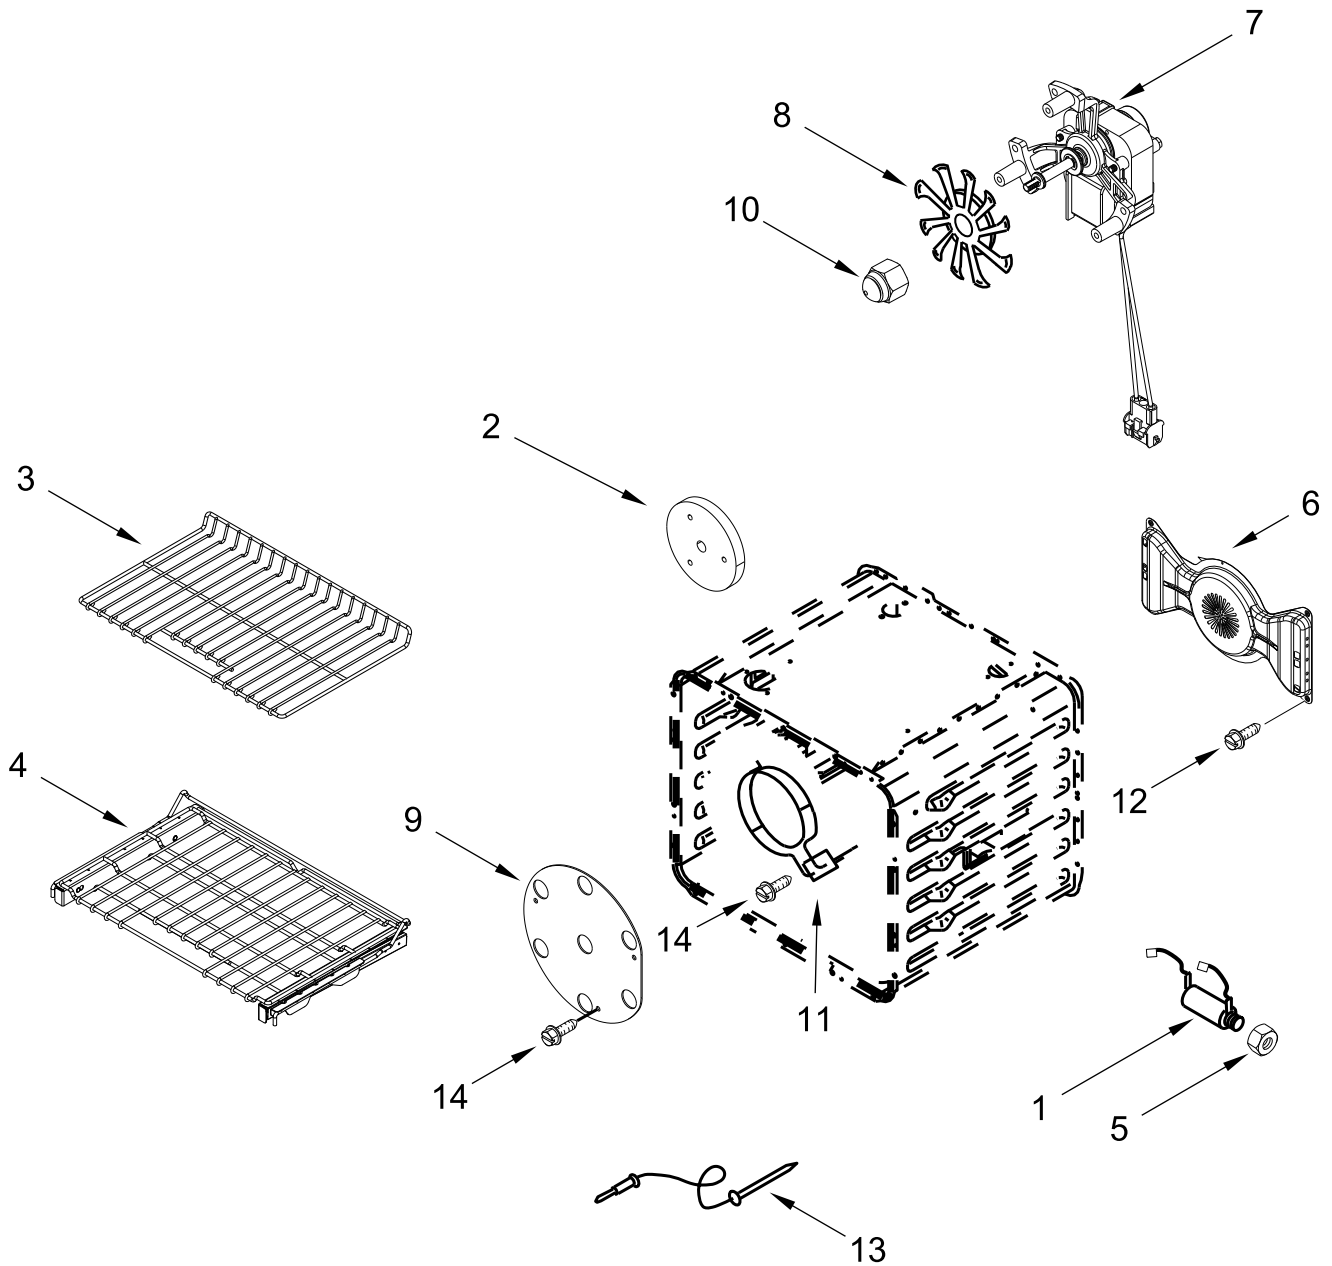

INTERNAL OVEN PARTS (30 In)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	9755543	Jack, Meat Probe	7	W10631506	Motor, Convection	13	9755542	Probe, Temperature
2	W10282821	Insulation, Convection Cover	8	W10631503	Blade, Fan	14	4449154	Screw
3	W10570887	Rack, Oven	9	W10261523	Plate, Fan			
4	W11496977	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)			
5	W11033111	Nut, Locking	11	W11098505	Element, Convection Heat			
6	W11212180	Baffle, Convection	12	W10739592	Screw			

INTERNAL OVEN PARTS (18 In)

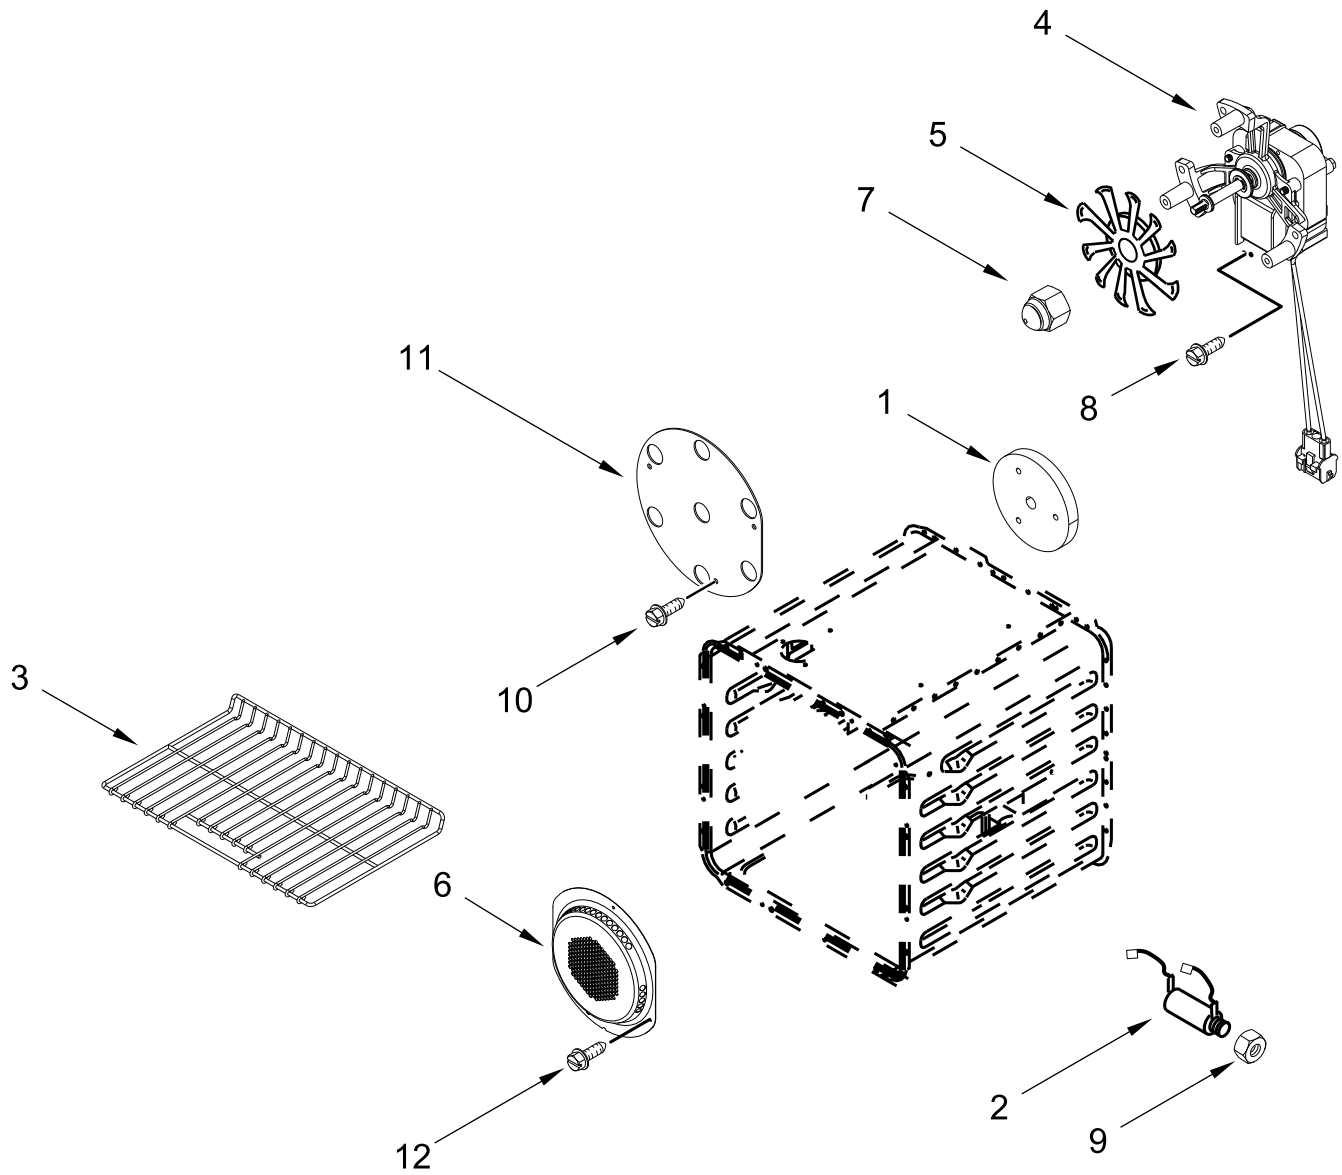

INTERNAL OVEN PARTS (18 In)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	5	W10631503	Blade, Fan	10	W10720084	Screw
2	9755543	Jack, Meat Probe	6	W11211948	Cover, Fan	11	W10261523	Plate, Fan
3	W10570879	Rack, Oven (18 in)	7	W10631504	Nut, Acorn (LH)	12	W10739592	Screw
4	W10631506	Motor, Convection	8	4449154	Screw			
			9	W11033111	Nut, Locking			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	30-48KITRC	Gas Range Connector Kit
	4396923	Broiler Pan and Grid
	4396096RB	Griddle Backsplash
	W10285449	48-In With Shelf
	W10355051	Cleaner, Cooktop
	W11042467	Spray, Stainless Steel Cleaning