




GAS RANGE

MODELS:

WEG515S0LW4 (White)


COOKTOP PARTS

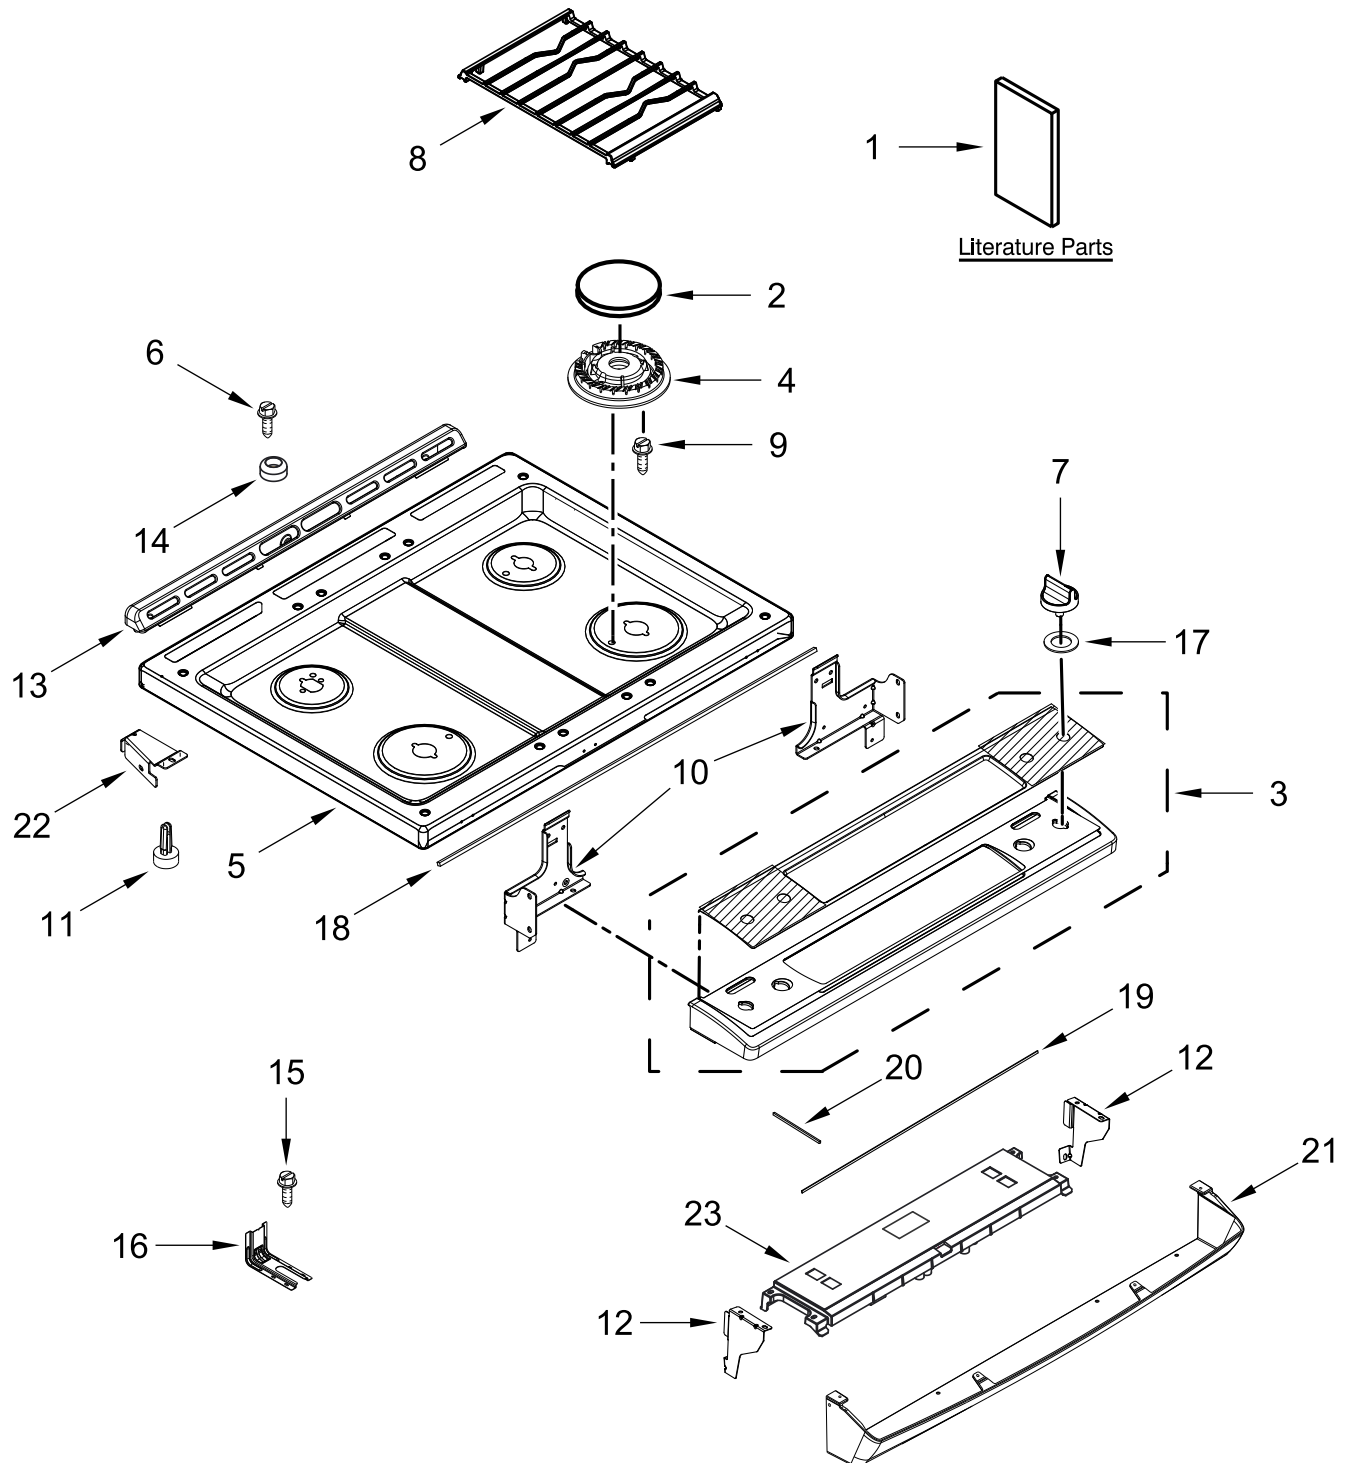

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8		Kit, Grate (Set of 2)	18	W10612719	Gasket, Console and Cooktop
	W11426595	Owners Manual		W11241651	Black	19	W10689101	Gasket, Console
	W10842031	Sheet, Tech	9	3196173	Screw	20	W10689102	Gasket, Console Short
	W11508880	Diagram, Wiring	10	W10814303	Support, Cooktop (Left)	21		Console, Lower Panel
	W11428054	Quick Start Guide		W10814304	Support, Cooktop (Right)		W10816942	White
2		Burner Cap Kit (Set of 4)		W10814305	Bracket, Console (Center)	22	W10162253	Brace, Corner (Left)
	W10825883	Black					W10162252	Brace, Corner (Right)
3		Console	11	8016P022-60	Glide, Main Top	23	W11520693	Electronic, Control (LCX)
	W11512202	White	12	W10547960	Bracket, Console (Left)			FOLLOWING PARTS NOT ILLUSTRATED
4	W10732322	Spreader, Flame (Left Front and Right Front)		W10547961	Bracket, Console (Right)		W11458865	Harness, Main
	W10732319	Spreader, Flame (Left Rear)	13		Trim, Vent		W11450462	Harness, Bake and Broil
	W10732320	Spreader, Flame (Right Rear)		W10577780	White		W11466697	Harness, Console
5		Cooktop	14	W10854253	Bumper		313438	Clip, Harness
	W11341040	White	15	7101P485-60	Screw, Anti-Tip Kit		3196520	Clip, Wire
6	3196169	Screw	16	W11379947	Bracket, Anti-Tip		W10580229	Wire, Ground
7		Knob	17		Bushing		7111P017-60	Clamp, Wire
	W11513756	White		W10739036	Black			


MANIFOLD PARTS

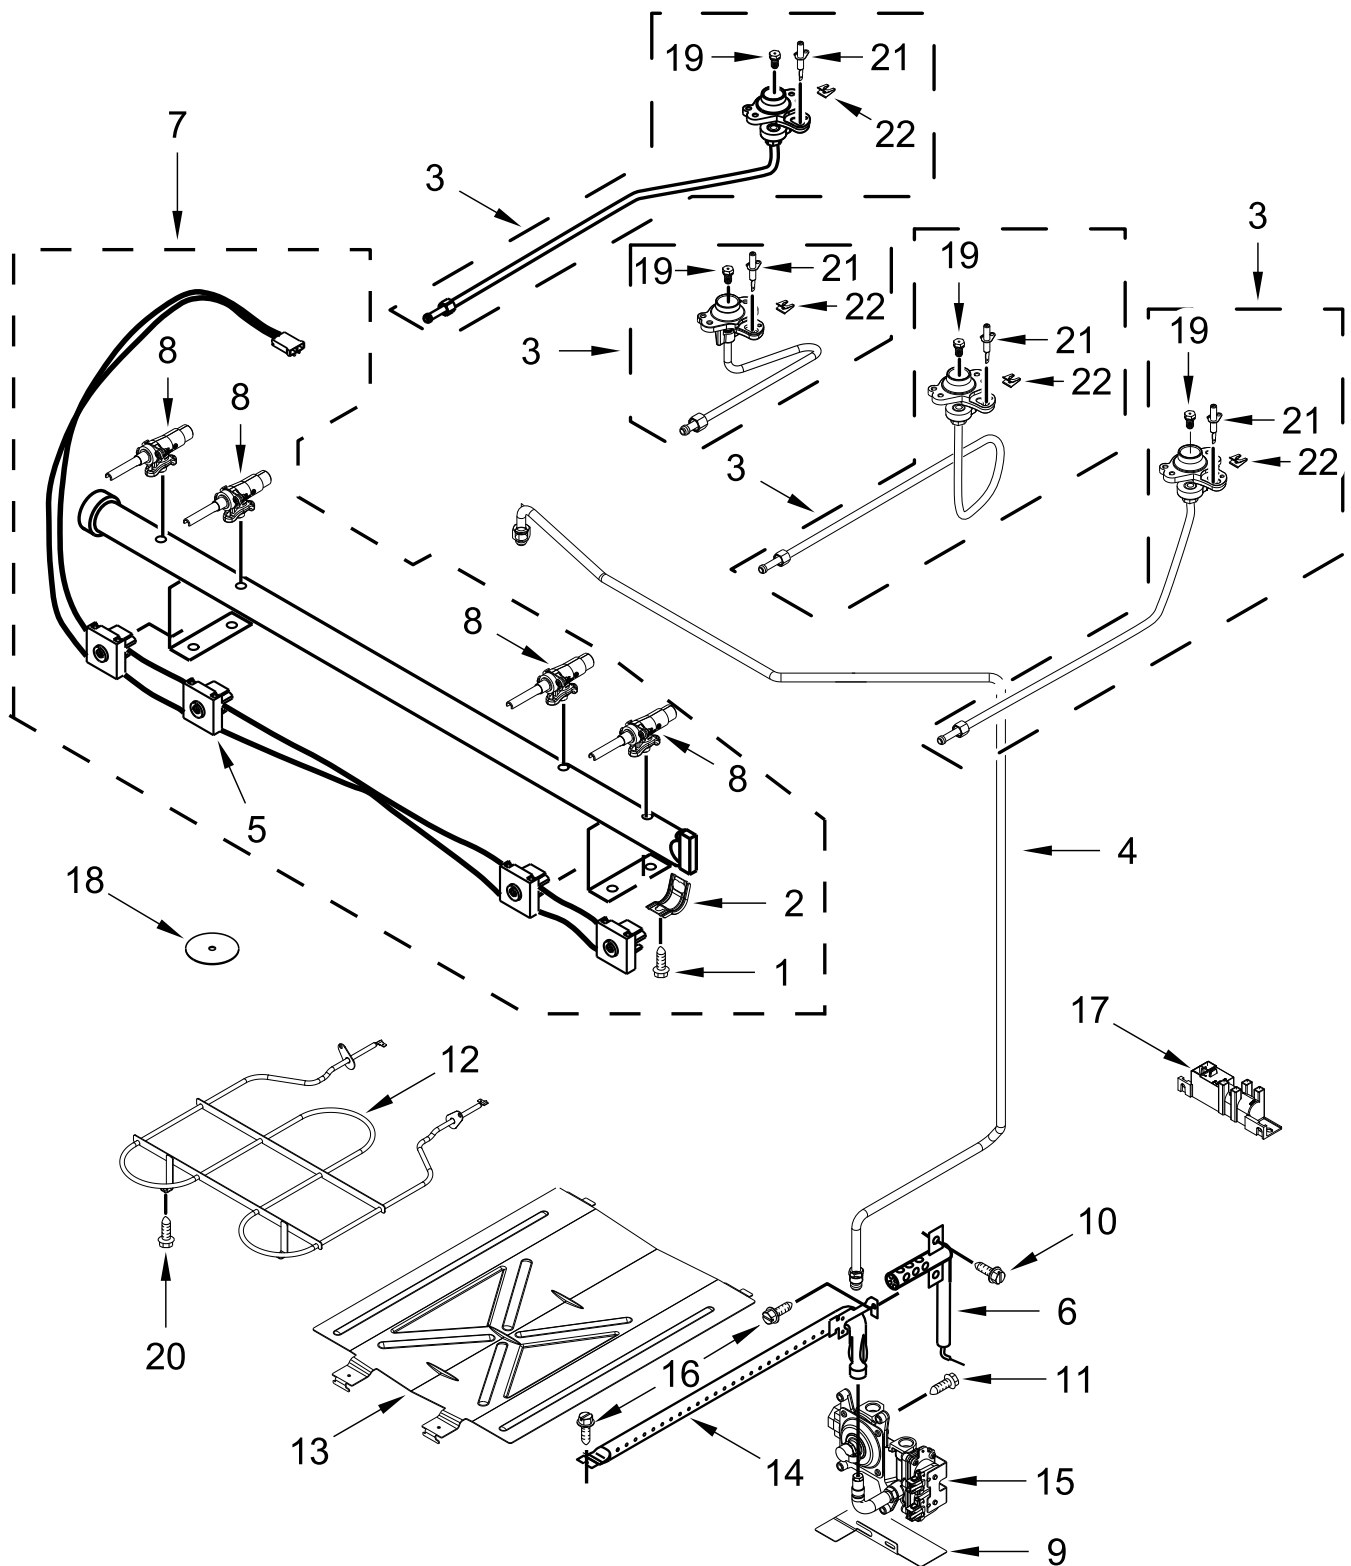

MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10246216	Screw	9	W10224921	Bracket, Aegis	21	W10669526	Electrode, Burner
2	W10949105	Bracket, Saddle Valve	10	3196385	Screw			(Left Front)
3	W10827780	Assembly, Orifice Holder (9.5K)	11	3400080	Screw		W10669525	Electrode
		(Left Rear)	12	W10714060	Element, Broiler			(Left Rear)
	W10827775	Assembly, Orifice Holder (15K)	13	W10184491	Spreader, Flame (Oven)		W10669524	Electrode, Burner
		(Left Front)	14	9758078	Burner, Bake			(Right Front)
	W10827777	Assembly, Orifice Holder (15K)	15	W10818355	Regulator		W10669523	Electrode, Burner
		(Right Front)	16	3196169	Screw			(Right Rear)
	W10827779	Assembly, Orifice Holder (5K)	17	W11349967	Module, Spark	22	W10827923	Electrode, Spring
		(Right Rear)	18	W11507167	Seal, Switch Shaft			FOLLOWING PARTS NOT ILLUSTRATED
			19	W10849717	Orifice (15K)		W10838118	Spuds, LP Gas
					(Left Front, Right Front)		W10838304	Orifice, LP Bake
4	W10804030	Tubing (Manifold to Regulator)		W10849714	Orifice (9.5K)		W10182767	Tie, Manifold Wire
					(Right Rear)			
5	W11537738	Harness, Switch		W10849719	Orifice (5K)			
6	W11450459	Electrode, Bake			(Left Rear)			
7	W11512354	Assembly, Manifold	20	W10362924	Screw			
8	W11511835	Valve, Gas						
		(Left Rear)						
	W11511834	Valve, Gas						
		(Left Front and Right Front)						
	W11511833	Valve, Gas						
		(Right Rear)						


CHASSIS PARTS

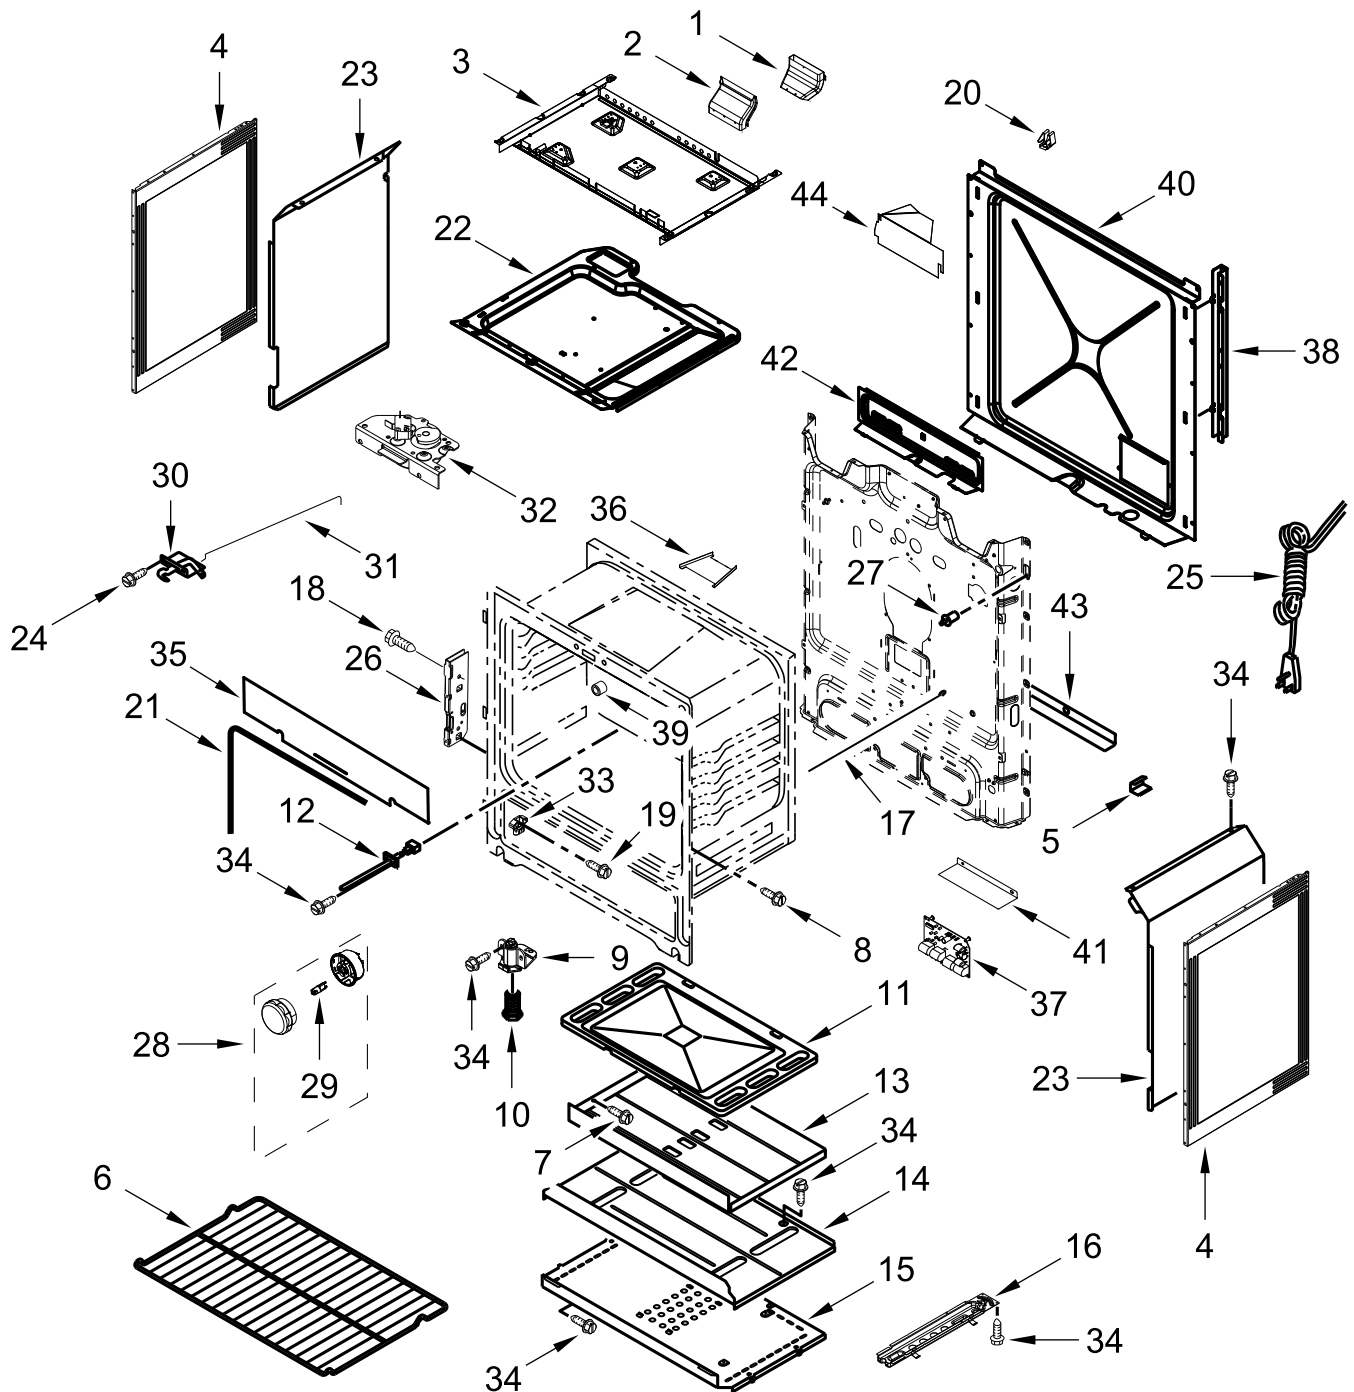

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10814257	Adapter, Flue Assembly	17	9757239	Rod, Door Switch	32	W10107820	Rear Door Latch Assembly
2	W10614920	Assembly, Flue	18	W10031780	Screw	33	W10674705	Glide, Drawer Front
3	W10558276	Burner, Box Gas	19	W10379120	Screw	34	3196178	Screw
4		Panel, Side	20	W10866583	Clip-Panel, Ratcheting	35	W10848443	Chassis, Upper Insulation
	W10575396	White	21	W11491751	Seal, Door	36	W10853400	Baffle, Upper Chassis
5	W10137382	Clip, Panel	22	W10814301	Chassis, Support Upper	37	W10818365	Module, Spark
6	W11173792	Rack, Oven	23	W11379353	Retainer, Insulation (Left)	38	W10162241	Channel, Rear
7	3196169	Screw		W11379943	Retainer, Insulation (Right)	39	9758701	Spacer, Door
8	W10067840	Screw	24	3196560	Screw	40	W11379354	Cover, Back
9	W10341186	Front Foot Assembly	25	W10910642	Cord, Power	41	W11206138	Guard, Splash
10	W10058460	Foot, Leveling	26	W10289077	Receiver, Hinge	42	W10818356	Wire, Cover
11	3195097	Bottom, Oven	27	W11511828	Switch, Door	43	W10435470	Brace, Main Back
12	W10586204	Sensor	28	W11634772	Light Assembly	44	W10818358	Shield, Wire
13	8053967	Baffle, Burner Oven	29	7407P103-60	Bulb, Light			FOLLOWING PARTS NOT ILLUSTRATED
14	8053969	Shield, Heat	30	9761013	Front Door Latch Assembly		W10818362	Insulation, Wrap
15	8053968	Shield, Lower					W10815344	Insulation, Back
16	W10390008	Base Rail Assembly (Left)	31	W10078370	Rod, Push Latch		3196896	Clip, Wire
	W10390007	Base Rail Assembly (Right)						

DOOR PARTS

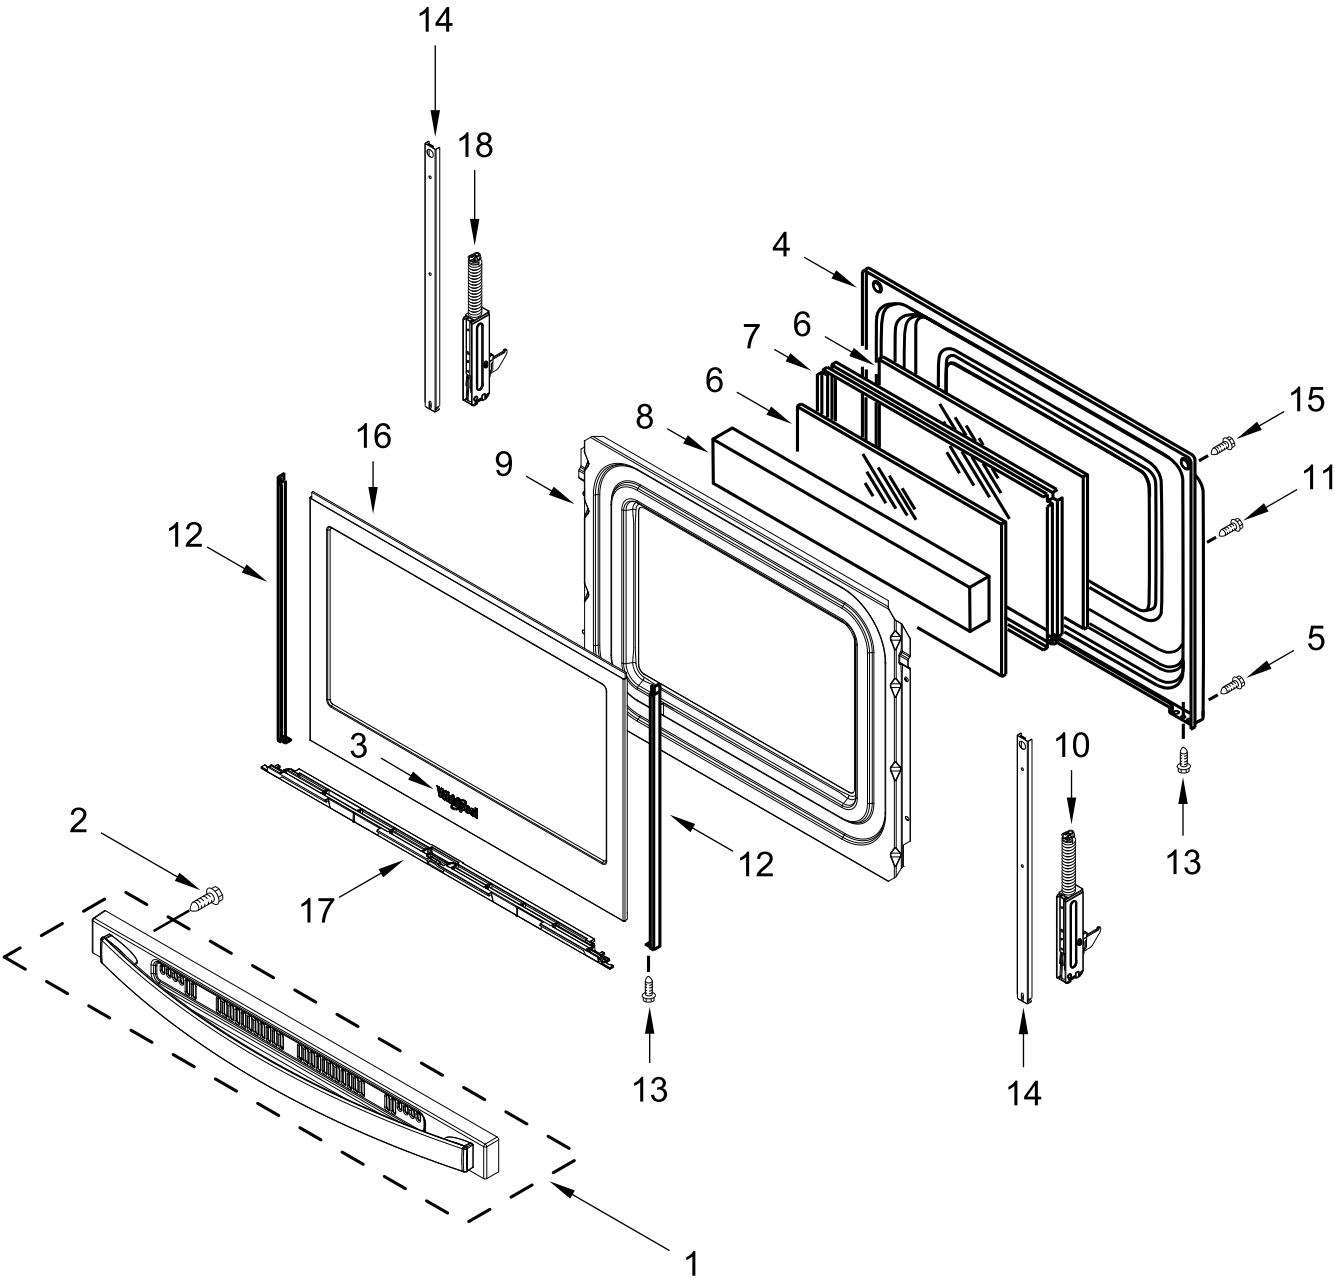


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly
	W11242947	White
2	W10480830	Screw
3	W10884775	Badge
4	9761344	Liner, Door
5	W10031780	Screw
6	9758162	Glass, Inner
7	W10316950	Frame, Glass

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10278991	Insulation, Door Strip
9	W11380222	Retainer, Insulation
10	W10388635	Hinge, Door (Active)
11	W10031790	Screw
12		Trim, Door
	8523172	White (Left)
	8523166	White (Right)
13	W10327235	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
14	W11379944	Strap, Door
15	W10200660	Screw
16		Glass, Outer Door
	W10409945	White
17		Trim, Lower Door
	W11444042	White
18	W10440013	Hinge, Door (Active)

DRAWER PARTS

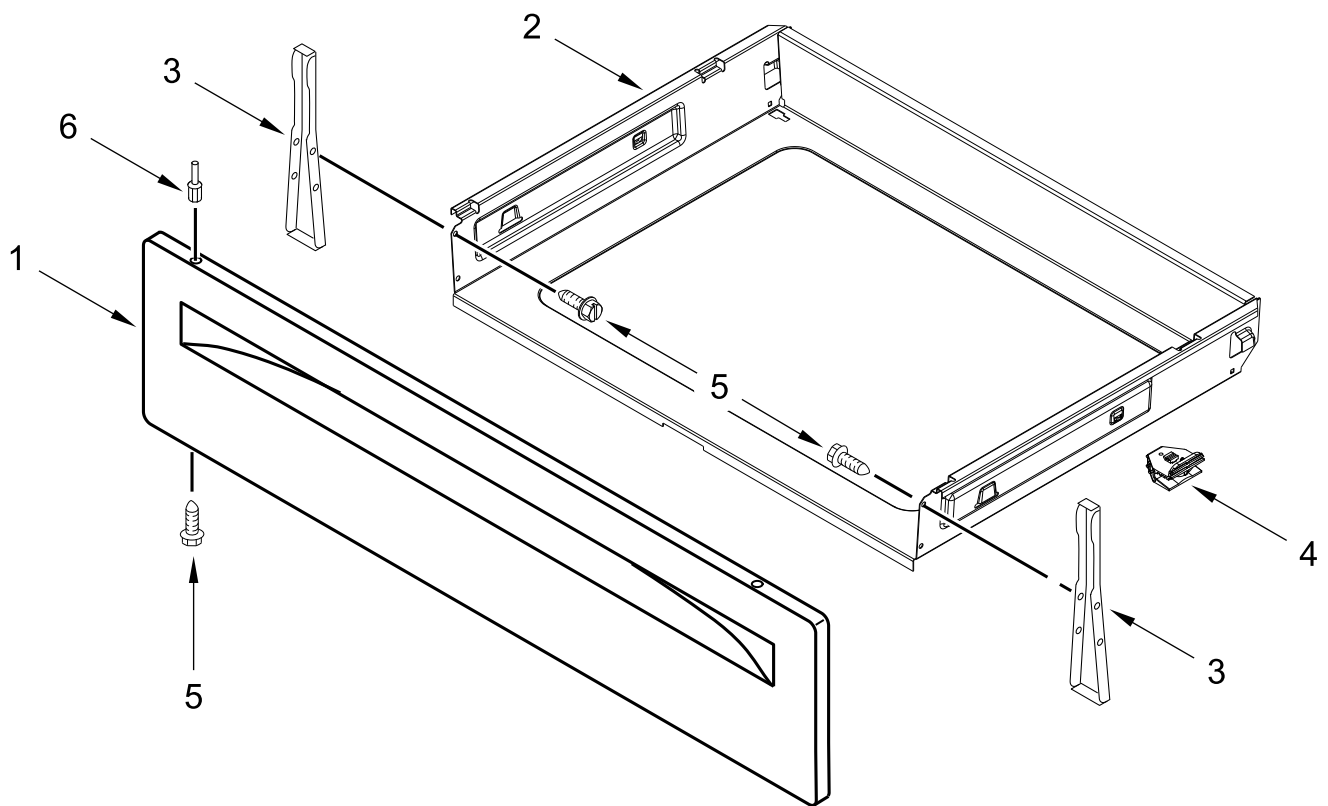

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462911	Bracket, Mounting	6		Rivet, Push
	W11123977	White	4	W10674708	Glide, Drawer Rear		3196814	White
2	W10688022	Drawer, Storage	5	3196178	Screw			

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit and Bisque
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)
	4392900	Biscuit/Bisque

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10268578	Rack, Oven
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting