




GAS RANGE

MODELS:

WFG525S0JT6 (Biscuit)

COOKTOP PARTS

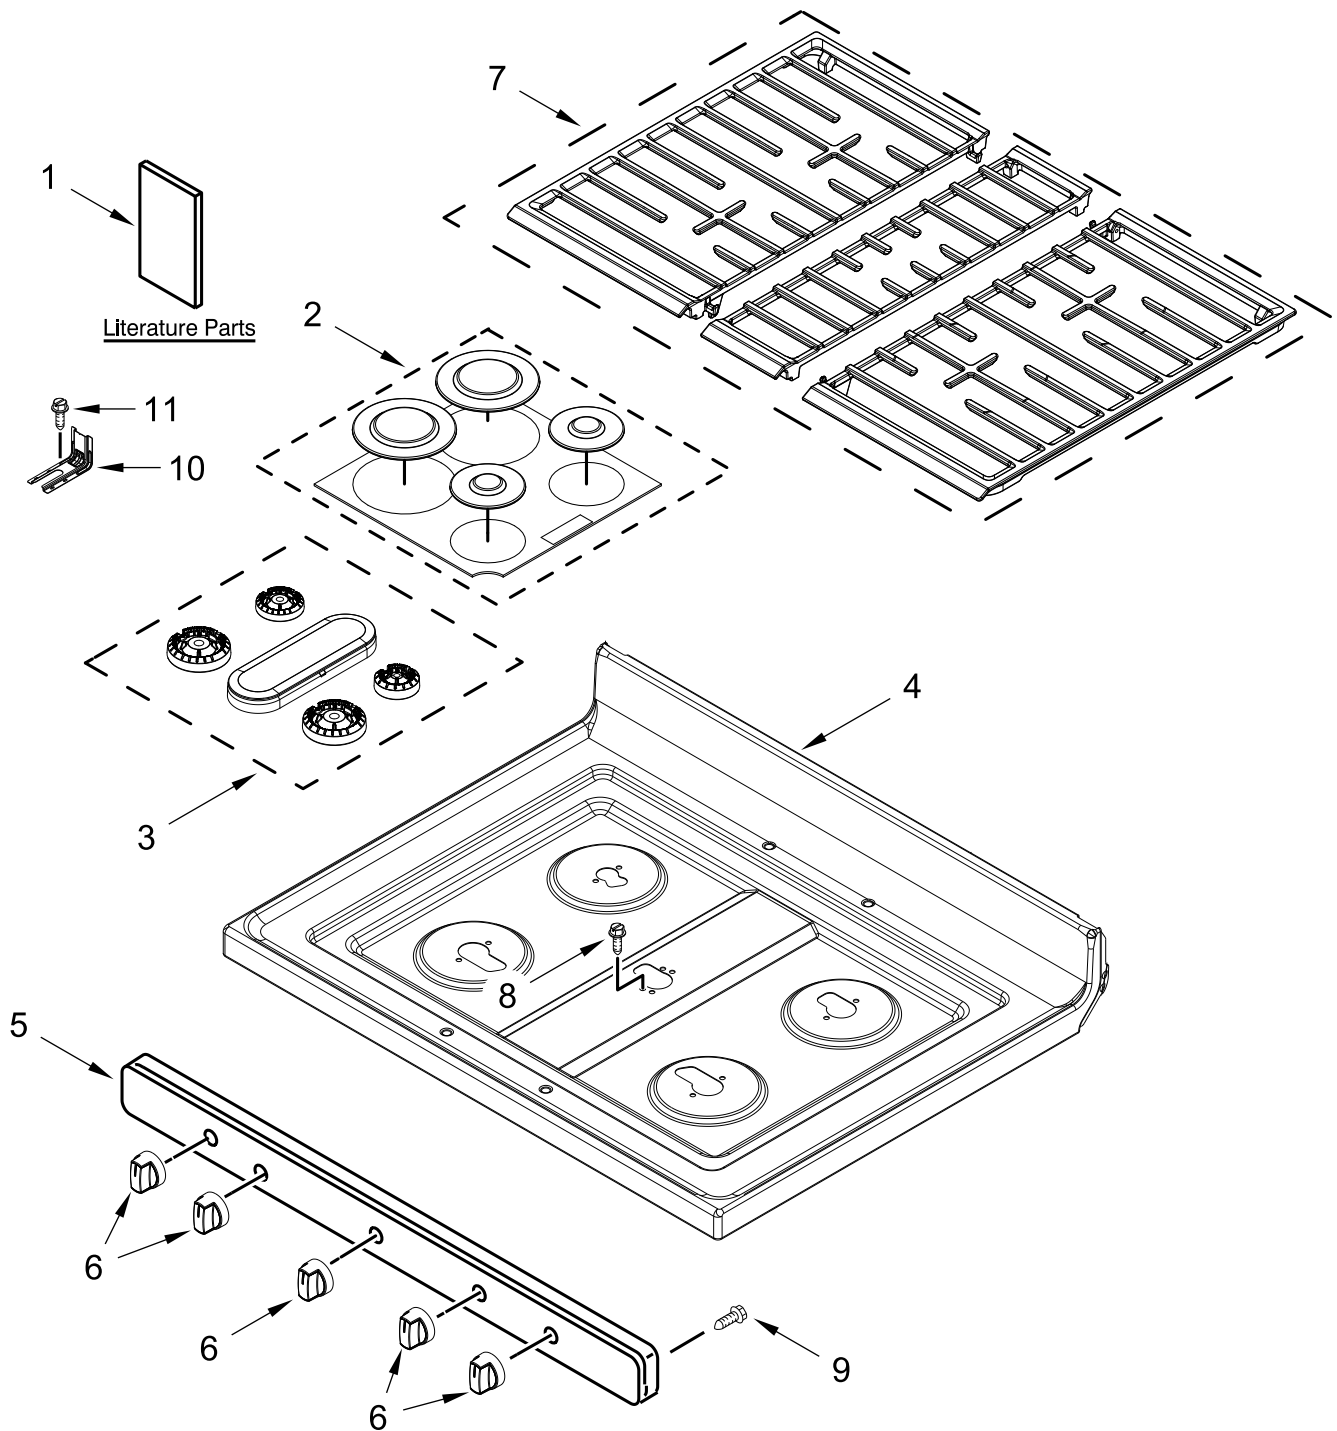


COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W11428051	Quick Start Guide
	W11426600	Owner's Manual
	W11508882	Wiring Diagram
2		Burner Cap Kit
	W11395131	Black (Set of 4)
3	W11367107	Burner Kit
4		Cooktop
	W11418085	Biscuit
5		Panel, Manifold
	W11089576	Biscuit

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6		Knob, Control
	W11510459	Biscuit
7		Grate Kit
	W11090908	Black (Set of 3)
8	W10673618	Screw
9	3196557	Screw
10	W11379945	Bracket, Anti-Tip

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11	7101P485-60	Screw, Anti-Tip Kit
		FOLLOWING PARTS NOT ILLUSTRATED
	W11457167	Harness, Main
	W11450461	Harness, Bake and Broil
	3196520	Clip, Wire
	W10334923	Clip, Gas Wiring
	313438	Clip, Harness
	3196896	Clip, Wire
	3196173	Screw (Grounding)


CONTROL PANEL PARTS

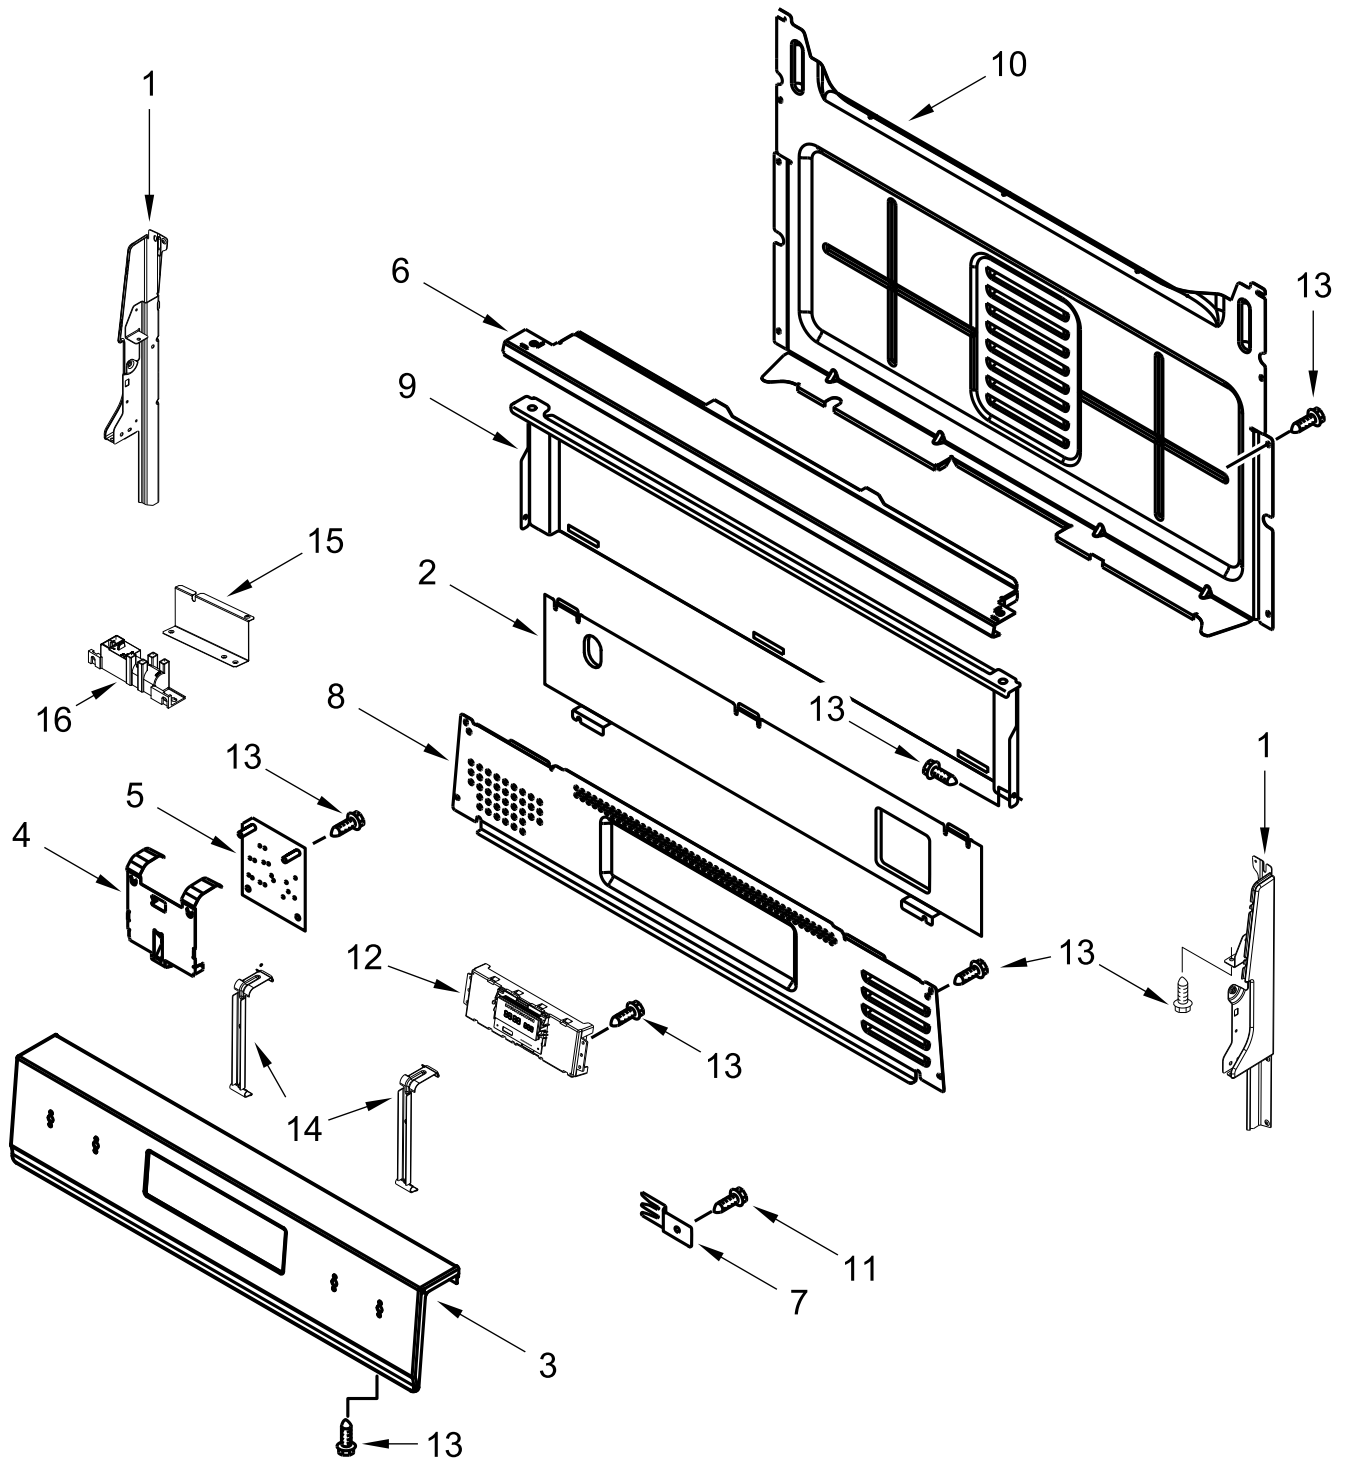

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	W10920631	Module, Spark DSI	11	3196169	Screw
	W11130373	Biscuit (Left)	6	W10516123	Bracket, Console Mounting	12		Control, Electronic (LCX)
	W11130380	Biscuit (Right)					W11520698	Biscuit
2	8053505	Shield, Heat	7	8523412	Bracket, Rear Cooktop	13	3196178	Screw
3		Panel, Control	8	W10198745	Cover, Upper	14	W10695491	Bracket, Control
	W11027383	Biscuit	9	W10192841	Shield, Heat	15	W10797001	Bracket, Ignitor
4	W10762981	Bracket, Mounting	10	W10184370	Cover, Back	16	W11350452	Spark Module


MANIFOLD PARTS

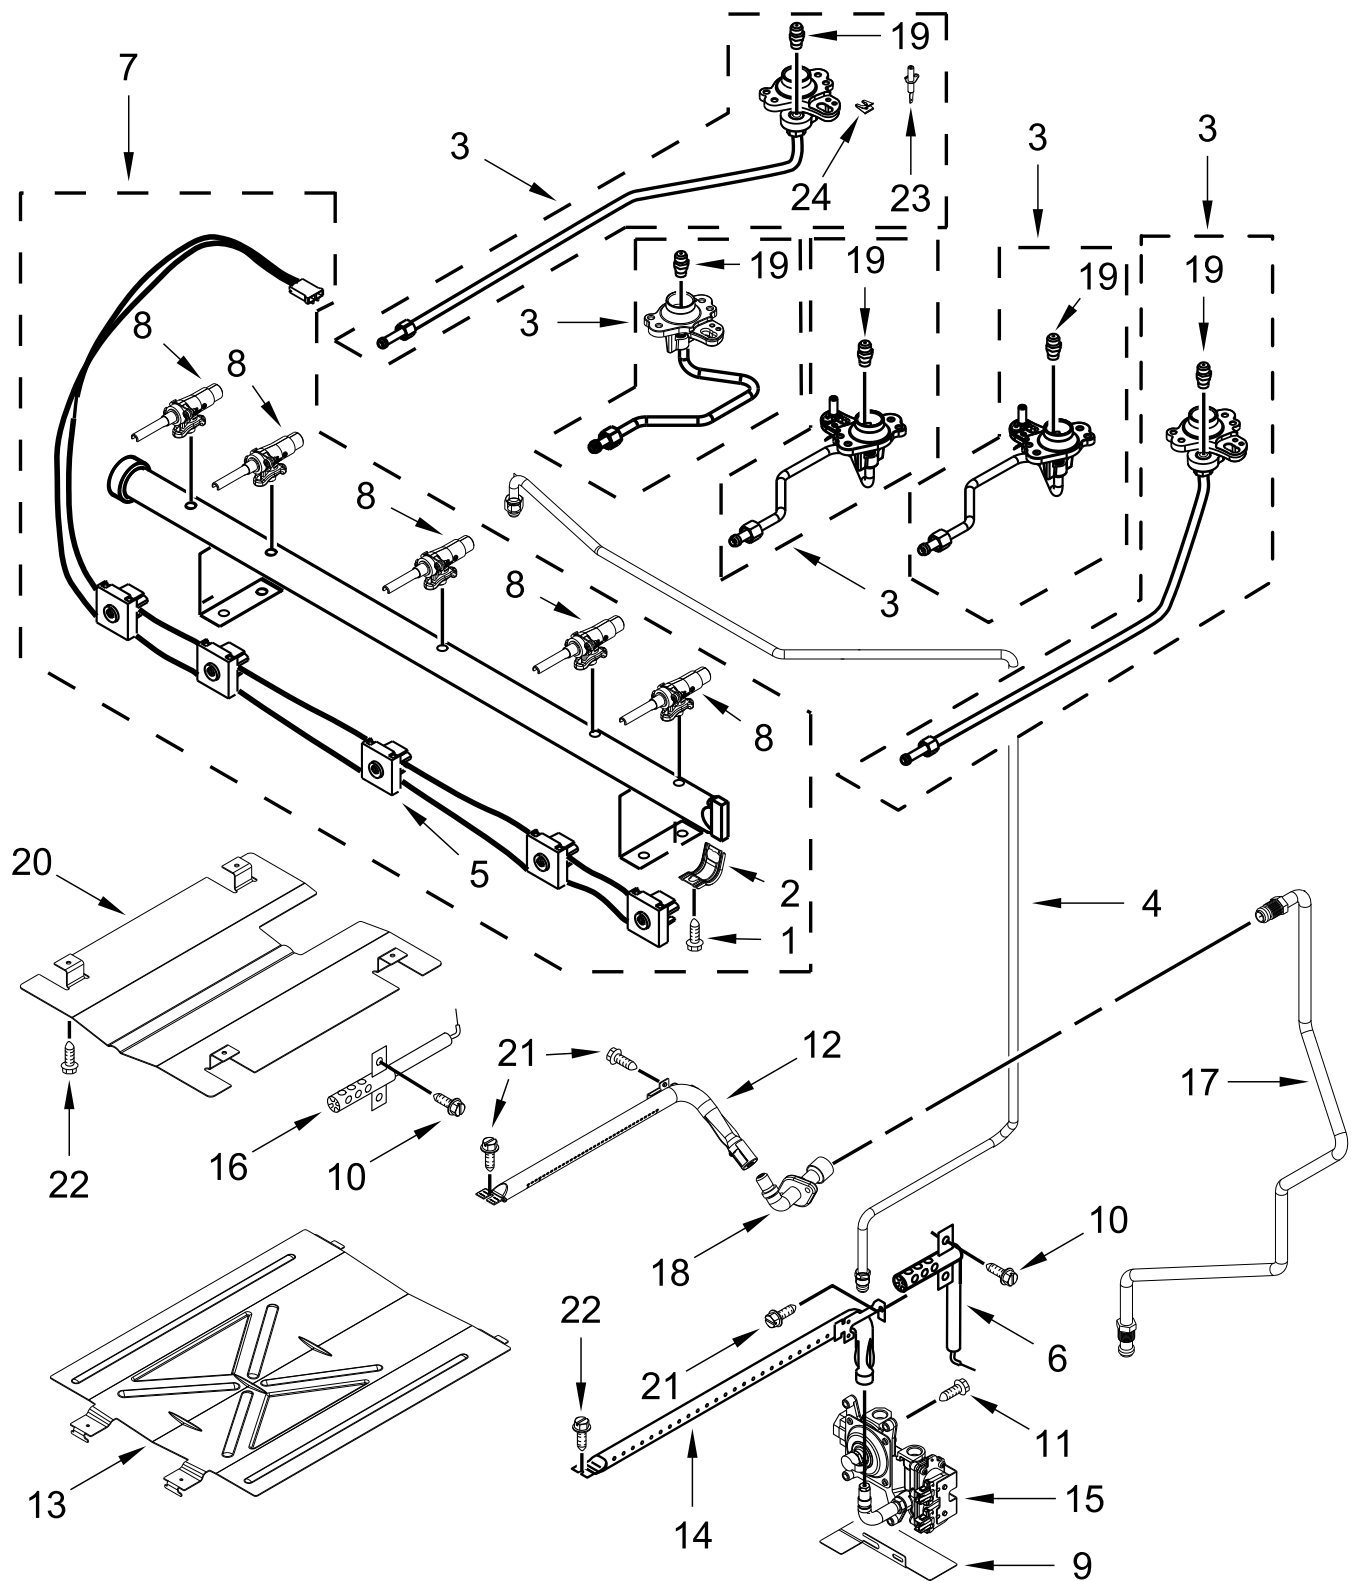

MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11577792	Screw, Valve	8	W11509685	Valve, Gas (Left Front and Right Front)	20	W10137062	Spreader, Flame (Broiler)
2	W10949105	Bracket, Saddle Valve				21	3196265	Screw
3	W11459257	Orifice Holder Assembly (15K) (Left Front)		W11509686	Valve, Gas (Left Rear and Center)	22	W10362924	Screw
	W11459258	Orifice Holder Assembly (9.5K) (Left Rear)		W11509687	Valve, Gas (Right Rear)	23	W11428831	Electrode (Left Front, Left Rear)
	W11459260	Orifice Holder Assembly (15K) (Right Front)	9	W10224921	Bracket, Aegis		W11428858	Electrode (Right Front, Right Rear, Center)
	W11459259	Orifice Holder Assembly (5K) (Right Rear)	10	3196385	Screw	24	W10827923	Electrode, Spring
	W11459261	Orifice Holder Assembly (8K) (Center)	11	3400016	Screw			FOLLOWING PARTS NOT ILLUSTRATED
4	W10215439	Tubing (Manifold to Regulator)	12	8054078	Burner, Broiler		W11489399	LP 5 Orifice Conversion Kit
5	W11537754	Harness, Igniter (Includes Switches)	13	W10184491	Spreader, Flame (Oven)		W10566537	LP Bake and Broil Kit
6	W11450459	Electrode, Bake	14	9758078	Burner, Bake		W10400495	Orifice, LP Bake
7	W11510000	Manifold Assembly	15	W11370883	Regulator		W10465080	Orifice, LP Broil
			16	W10333842	Electrode, Broil			
			17	W10420040	Tube, Broiler Supply			
			18	W11435700	Fitting, Broiler			
			19	W11485872	Orifice (15K) (Left Front and Right Front)			
				W11485873	Orifice (9.5K) (Left Rear)			
				W11485871	Orifice (5K) (Right Rear)			
				W11485874	Orifice (8K) (Center)			


CHASSIS PARTS

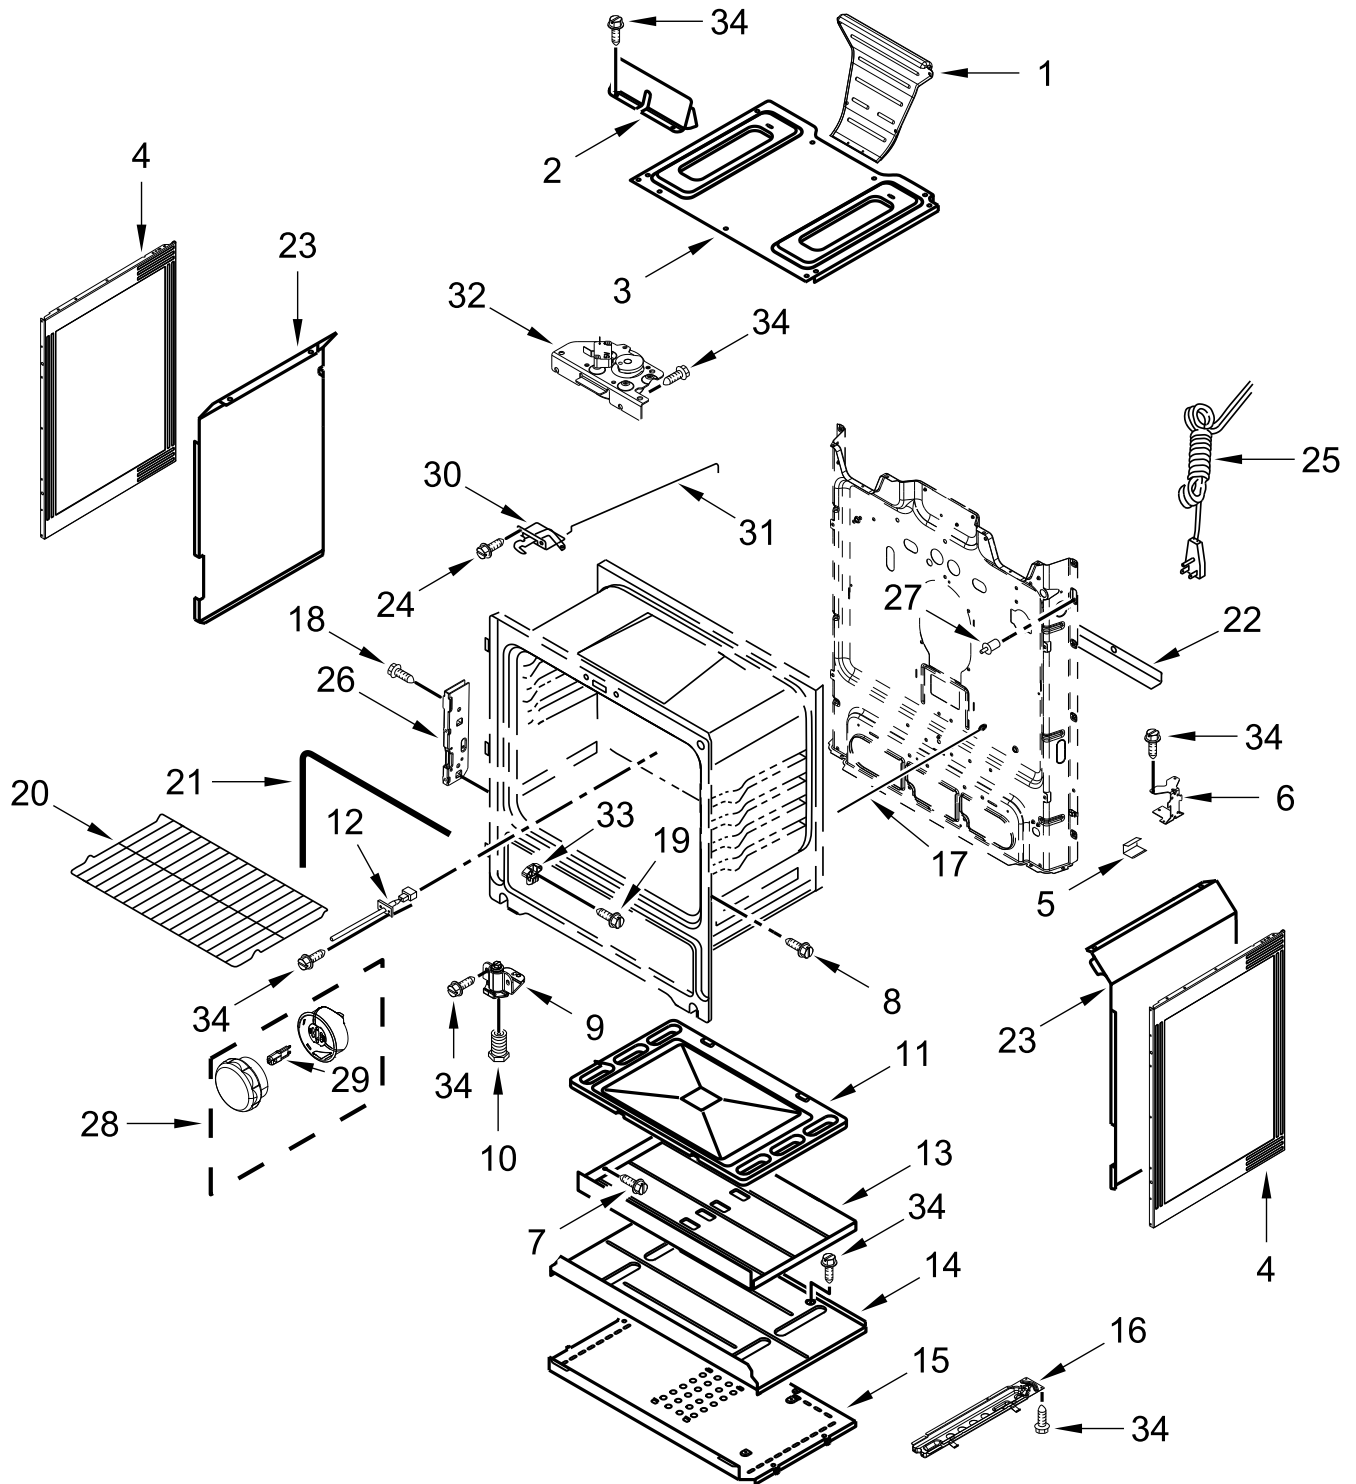

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11457094	Box, Flue	15	8053968	Shield, Lower	26	W10289077	Receiver, Hinge
2	8272747	Shield, Flue	16	W10390008	Base Rail Assembly (Left)	27	W11511828	Switch, Door
3	W11379351	Box-Burner, Gas Sealed		W10390007	Base Rail Assembly (Right)	28	W11634772	Light Assembly
4		Panel, Side				29	W10571723	Bulb, Halogen 40 Watts
	W10162246	Biscuit	17	9757239	Rod, Door Switch	30	9761013	Front Door Latch Assembly
5	W10137382	Clip, Panel	18	W10031780	Screw			
6	8523249	Bracket, Manifold	19	3400080	Screw	31	W10078370	Rod, Push Latch
7	W10362924	Screw	20	W11173792	Rack, Oven	32	W10107820	Rear Door Latch Assembly
8	3196560	Screw	21	W11491751	Seal, Door			
9	W10341186	Front Foot Assembly	22	W10435470	Brace, Main Back	33	W10674705	Glide, Drawer Front
10	W10058460	Foot, Leveling	23	W11379353	Retainer, Insulation (Left)	34	3196178	Screw
11	3195097	Bottom, Oven		W11379943	Retainer, Insulation (Right)			FOLLOWING PARTS NOT ILLUSTRATED
12	W10586204	Sensor					8524099	Insulation, Wrap
13	8053967	Baffle, Burner Oven	24	3196560	Screw		W10180437	Insulation, Back
14	8053969	Shield, Heat	25	W10910642	Cord, Power			


DOOR PARTS

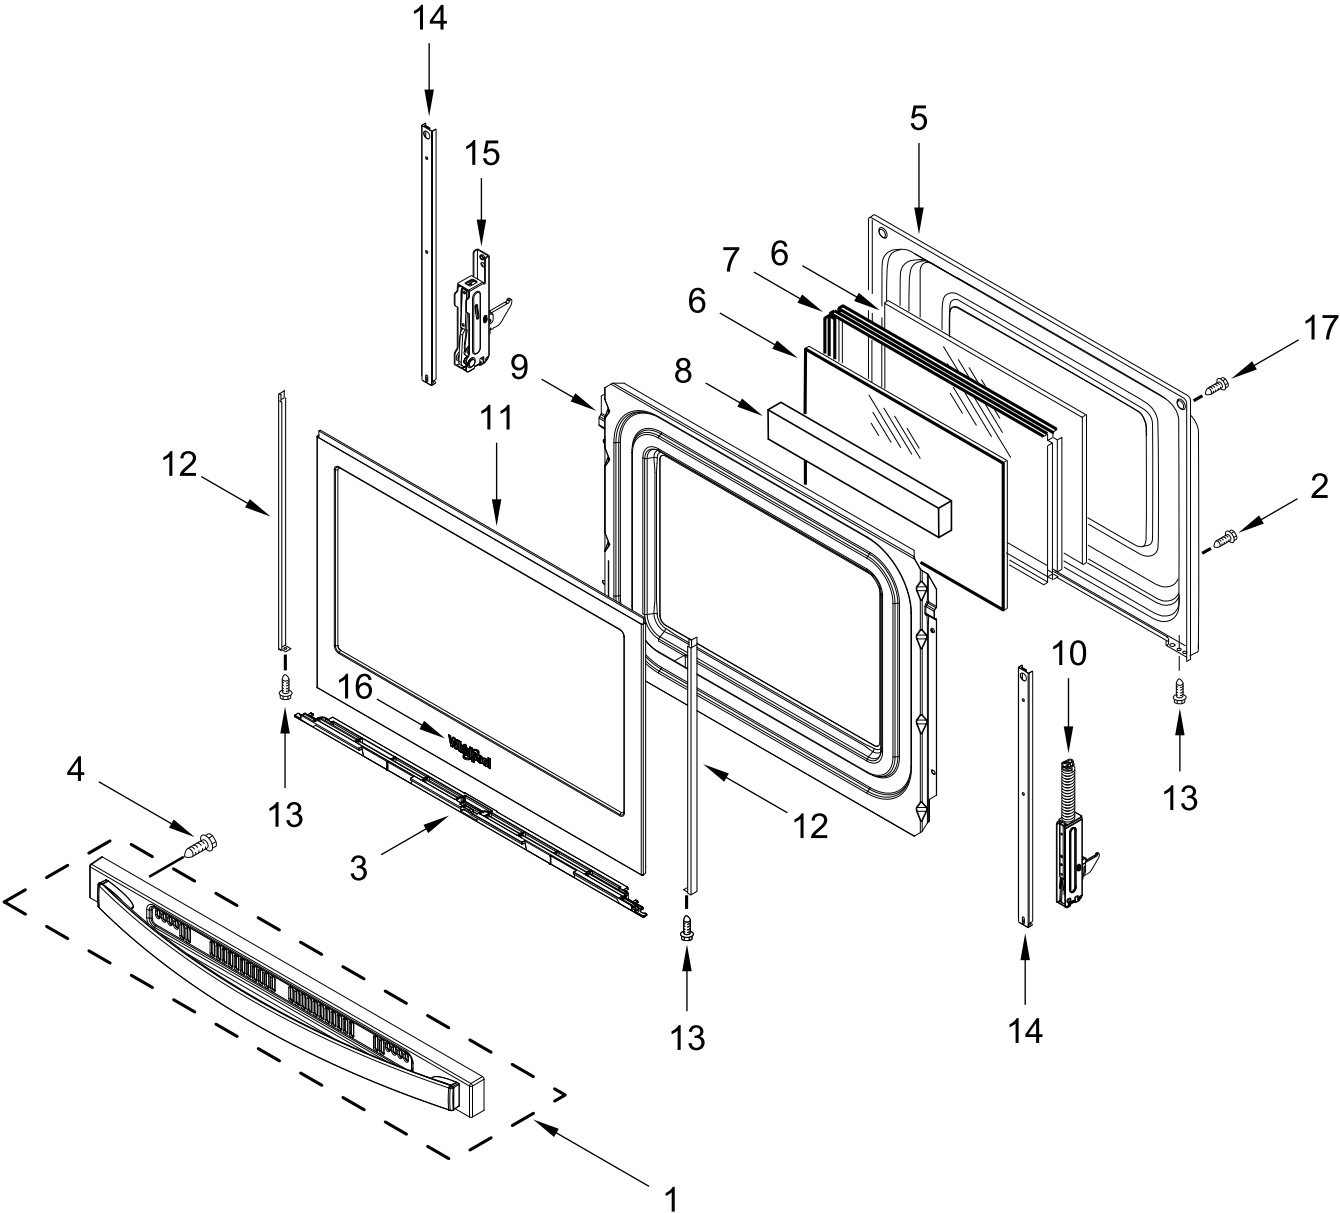

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11242946	Handle and Vent Assembly (Biscuit) (Includes Standoff)	8	W10278991	Insulation, Door Strip	14	W11379944	Strap, Door
2	W10031790	Screw	9	W11380222	Retainer, Insulation	15	W10299227	Hinge, Door (Passive)
3		Trim, Lower Door	10	W10299226	Hinge, Active	16	W10884775	Badge
	W11444044	Biscuit	11		Glass, Outer Door	17	W10200660	Screw
4	W10480830	Screw		W10409947	Biscuit			
5	9761344	Liner, Door	12		Trim, Door			
6	W11044424	Glass, Inner		8523173	Biscuit (Left)			
7	W10316950	Frame, Glass		8523167	Biscuit (Right)			
			13	W10327235	Screw			

DRAWER PARTS

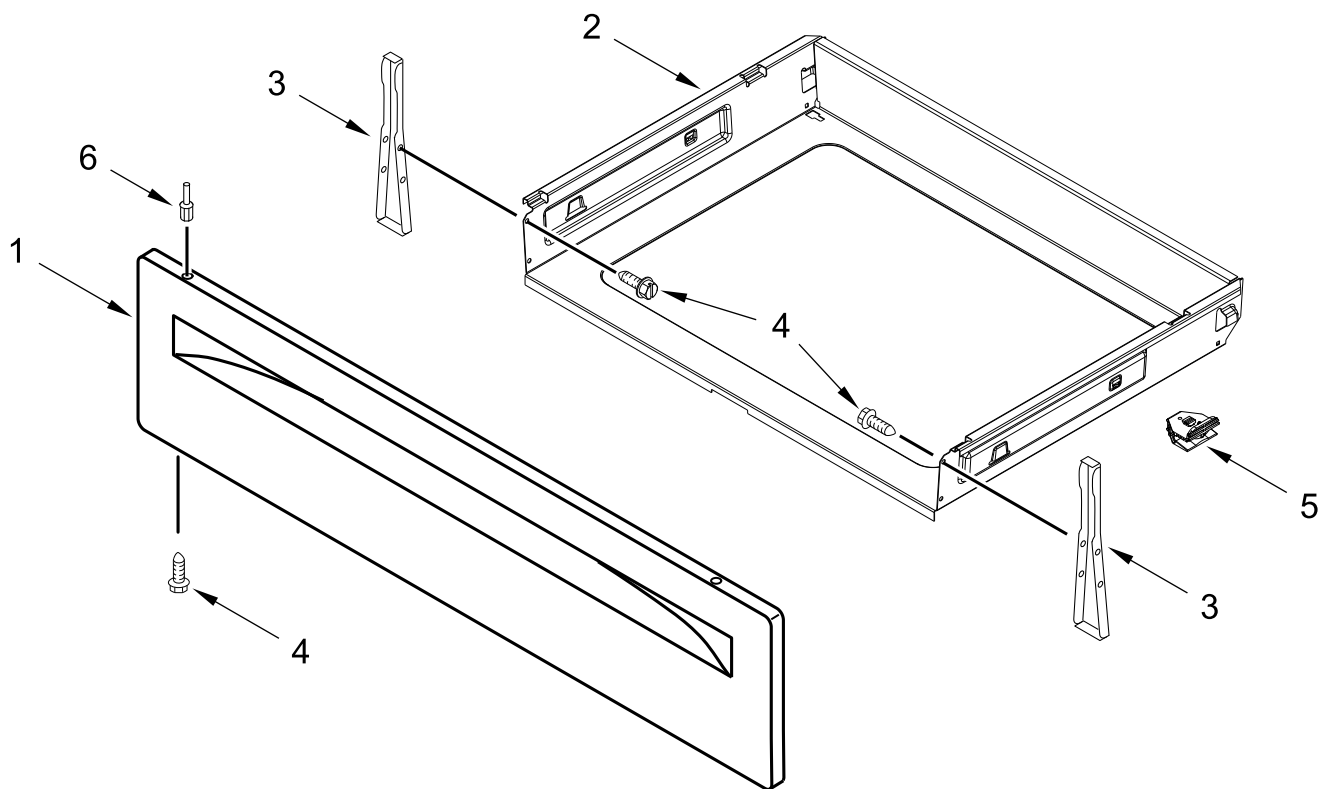

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	4	3196169	Screw	6		Rivet, Push
	W11123978	Biscuit	5	W10674708	Glide, Drawer Rear		3196814	White
2	W10688022	Drawer, Storage						
3	W10462911	Bracket, Mounting						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4392899	Biscuit and Bisque
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	285006	Black
	350930	White

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting