




ELECTRIC WALL OVEN

MODELS:

KOED530PPS00 (Stainless)


CONTROL PANEL PARTS

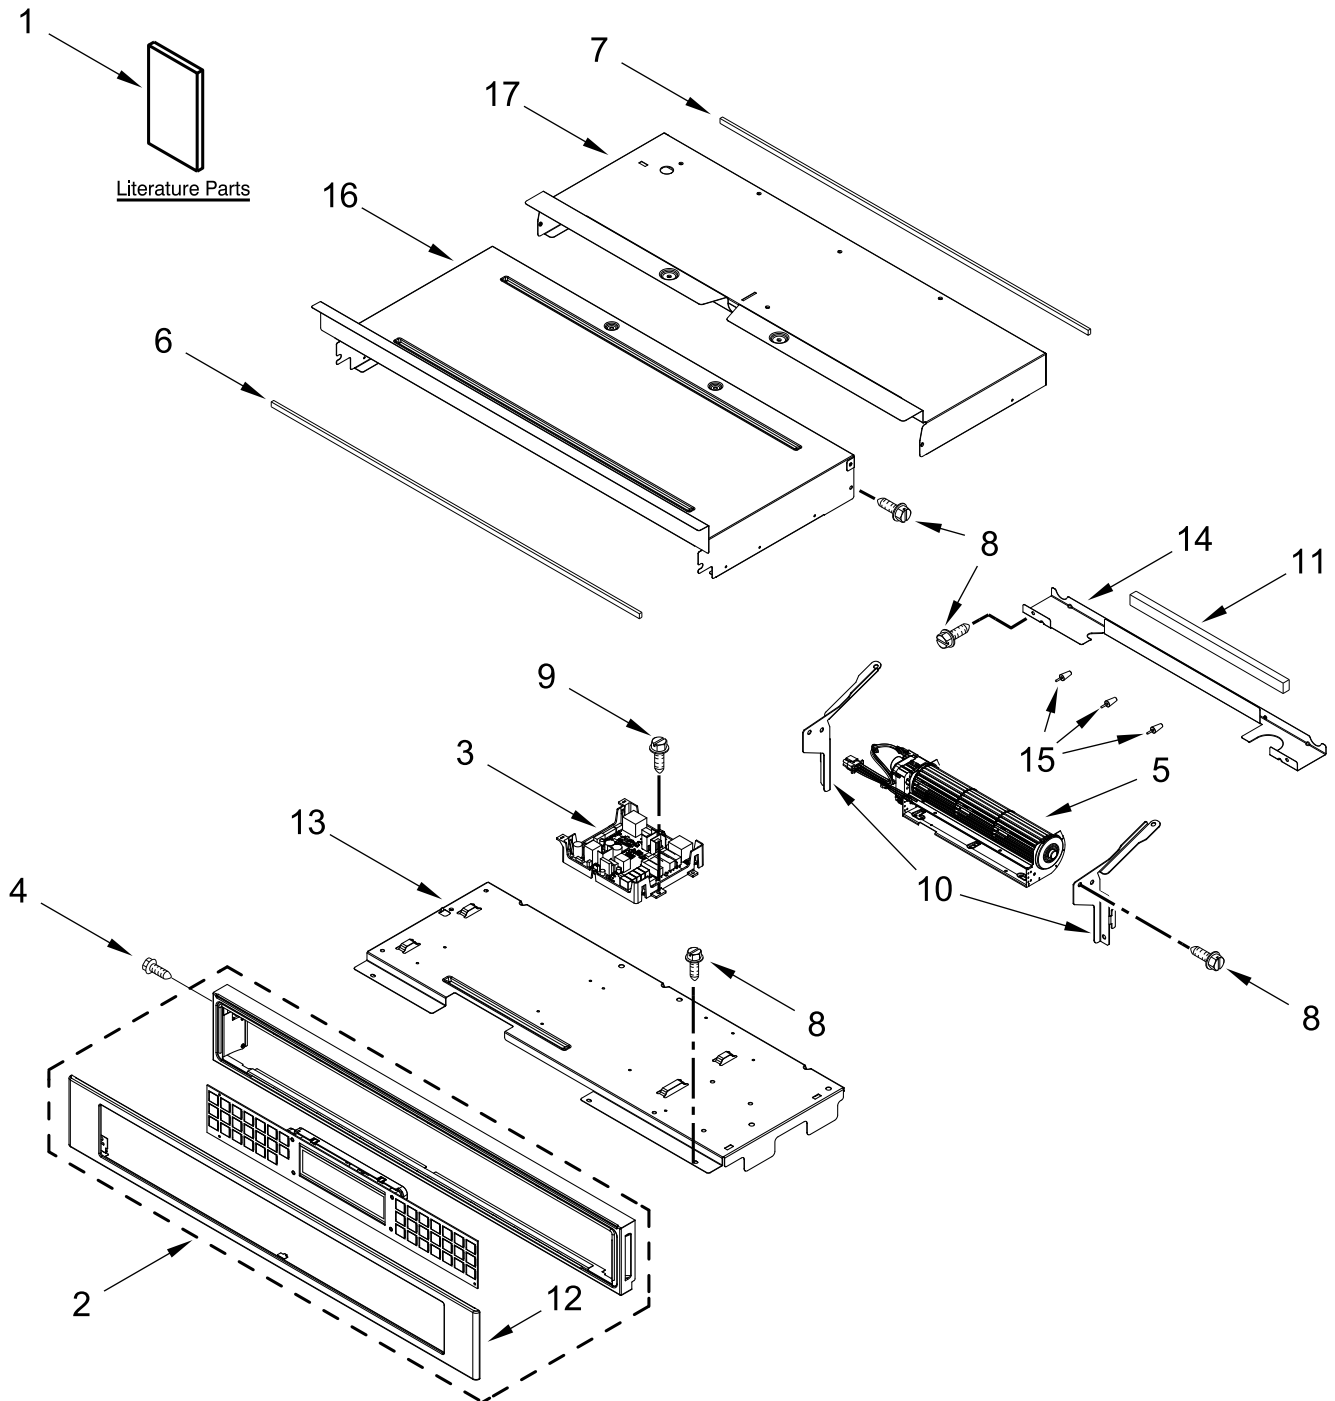

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W11339492	Screw (Black)	16	W11244445	Cover, 30 IN Chassis Top Front
	W11656312	Owner's Manual	5	W11397930	Blower			
	W11618058	Quick Start Guide	6	W11162063	Gasket, Rubber	17	W11223325	Cover, 30 IN Chassis Top Back
	W11479717	Wiring Diagram	7	W10728475	Gasket, Rubber			
	W11340883	Tech Manual	8	7101P426-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
2		Assembly, Control Panel (Includes Overlay)	9	7101P434-60	Screw			
	W11690515	Stainless	10	W10655463	Bracket, Blower (Left)	W11245674		Harness, Main
3	W11249218	Appliance Manager, Copernicus		W10655462	Bracket, Blower (Right)	W11256625		Harness, Signal
		(Upper)	11	4451758	Block, Foam	W11264646		Harness, Door Latch
	W11249217	Appliance Manager, Copernicus (Without Power Supply)	12		Skin, Control Panel	W10562910		Harness, EOL
		(Lower)		W11689165	Stainless	4450800		Screw, Grounding
			13	W11179509	Tray, Electronic	313438		Clip, Harness
			14	W11166802	Divider, Chassis Back	W11132988		Strap, Lead Ground
			15	W10351295	Bumper	4448664		Clamp, Conduit
						W10655464		Bracket, Harness
						W11394923		Bag, Hardware


OVEN PARTS

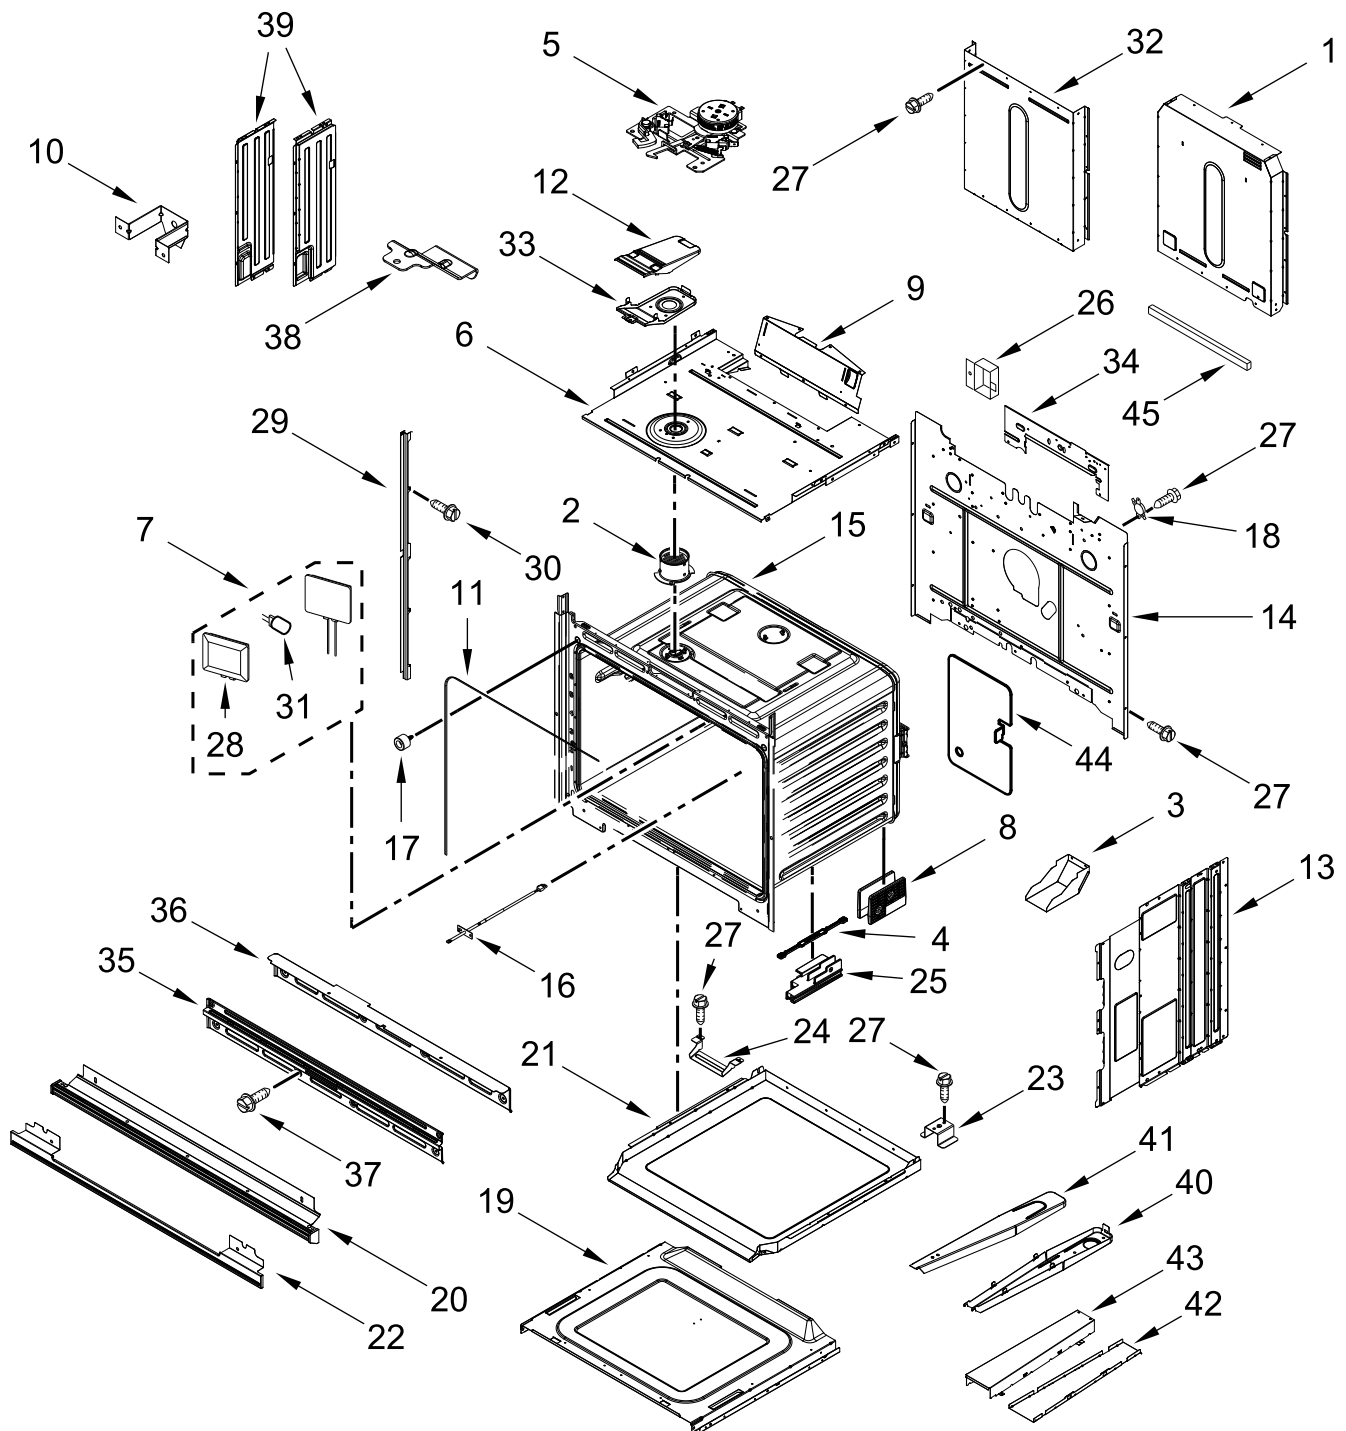

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11165250	Duct, Chassis Back (Upper)	20		Assembly, Bottom Vent	34	W11186652	Bracket, U-Shape
2	W11085298	Tube, Vent		W11467754	Stainless	35	W11235482	Vent, Center 30"
3	W11256432	Deflector, Lower Back Exhaust	21	W11244446	Duct, Bottom Chassis	36	W11334857	Vent, Top 30 IN
4	W11558603	Spacer, Base	22		Trim, Bottom Vent	37	W11249635	Screw
5	W11655005	Latch, Motorized		W11560859	Black	38	W11342780	Bracket, Top Front
6	W11168071	Top, Chassis	23	W11135135	Support, Air Channel	39	W11167419	Cover, Suction (Left)
7	W11205574	Assembly, Oven Light	24	W11390667	Spacer, Chassis Bottom Duct		W11186675	Cover, Suction (Right)
8	W11245118	Foot, Base	25	W11245114	Foot, Chassis (Left)	40	W11256420	Base, Top Back Exhaust
9	W10904163	Deflector, Blower		W11245116	Foot, Chassis (Right)	41	W11256421	Cover, Top Back Exhaust
10	W11344645	Hat Bracket, Vent	26	8285593	Cover, Connector	42	W11256430	Base, Lower Back Exhaust
11	W11608108	Gasket	27	7101P426-60	Screw	43	W11256431	Cover, Lower Back Exhaust
12	W11256424	Cover, Vent Exhaust	28	W10472386	Lens, Light	44	W11533682	Cover, WIFI
13	W11165274	Side, Chassis	29	W11235460	Cover, Side Trim (Left)	45	W11211345	Foam, U-Bracket
14	W11223327	Back, Chassis		W11235461	Cover, Side Trim (Right)	FOLLOWING PARTS NOT ILLUSTRATED		
15		Liner, Oven (Not Serviceable)	30	W11404000	Screw			
16	W11346074	Probe, Sensor	31	W10472384	Bulb, Light	W11188284		Insulation, Wrap
17	W11166315	Bumper and Screw	32	W11134657	Duct, Lower Chassis Back	W11234758		Insulation, Cavity
18	4449751	Thermostat (TOD)						
19	W11135103	Base, Chassis	33	W11256423	Base, Vent Exhaust			


UPPER OVEN DOOR PARTS

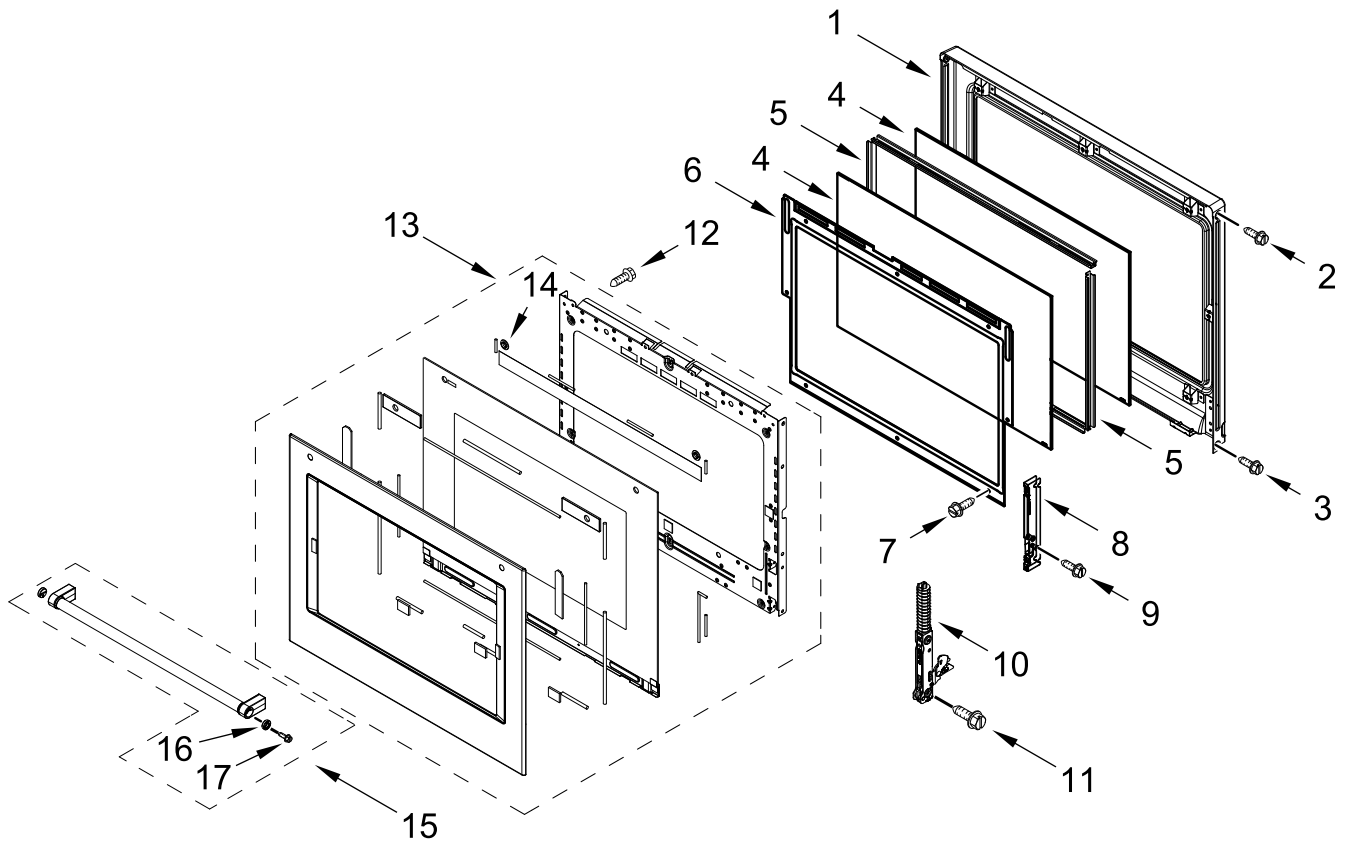

UPPER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	8	W11100732	Receiver, Hinge	14	W10319024	Washer, Door
2	7101P375-60	Screw	9	W10254050	Screw	15		Handle Assembly
3	W11290045	Screw	10	W11633413	Hinge, Door (Left)		W11241572	Stainless
4	W10618107	Glass, Inner		W11633414	Hinge, Door (Right)	16	W10551026	Medallion, Handle
5	W11302730	Spacer, Air Divider	11	3196183	Screw	17	W10656499	Screw
6	W11174095	Retainer, Air Divider Glass	12	W11317731	Screw (Black)			
7	7101P426-60	Screw	13		Door Assembly			
				W11689098	Stainless			


LOWER OVEN DOOR PARTS

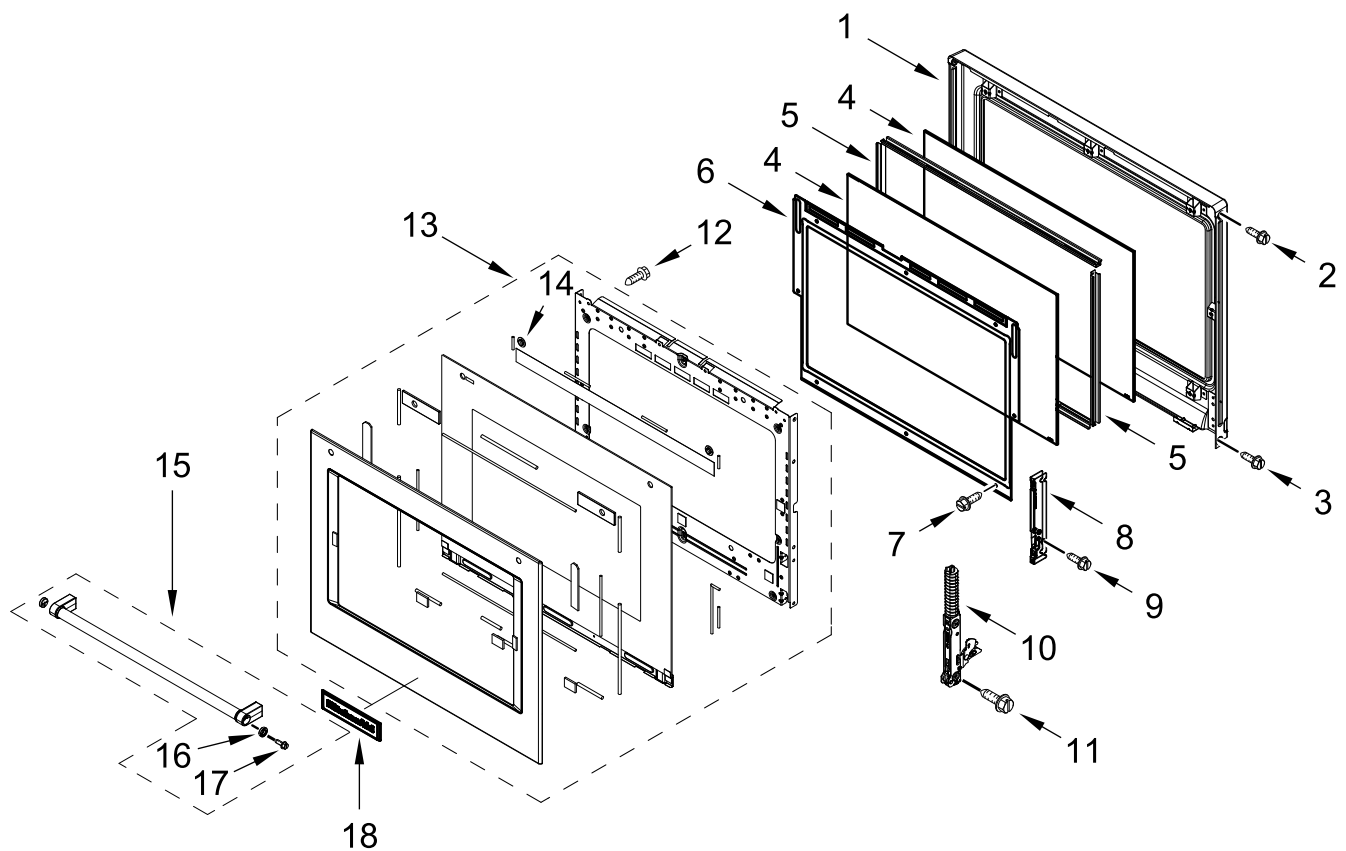

LOWER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	8	W11239070	Receiver, Hinge (Left)	13		Door Assembly
2	7101P375-60	Screw		W11239072	Receiver, Hinge (Right)		W11689098	Stainless
3	W11290045	Screw				14	W10319024	Washer, Door
4	W10618107	Glass, Inner	9	W10254050	Screw	15		Handle Assembly
5	W11302730	Spacer, Air Divider	10	W11633413	Hinge, Door (Left)		W11241572	Stainless
6	W11174095	Retainer, Air Divider Glass		W11633414	Hinge, Door (Right)	16	W10551026	Medallion, Handle
7	7101P426-60	Screw	11	3196183	Screw	17	W10656499	Screw
			12	W11317731	Screw (Black)	18	W10518672	Badge

INTERNAL OVEN PARTS

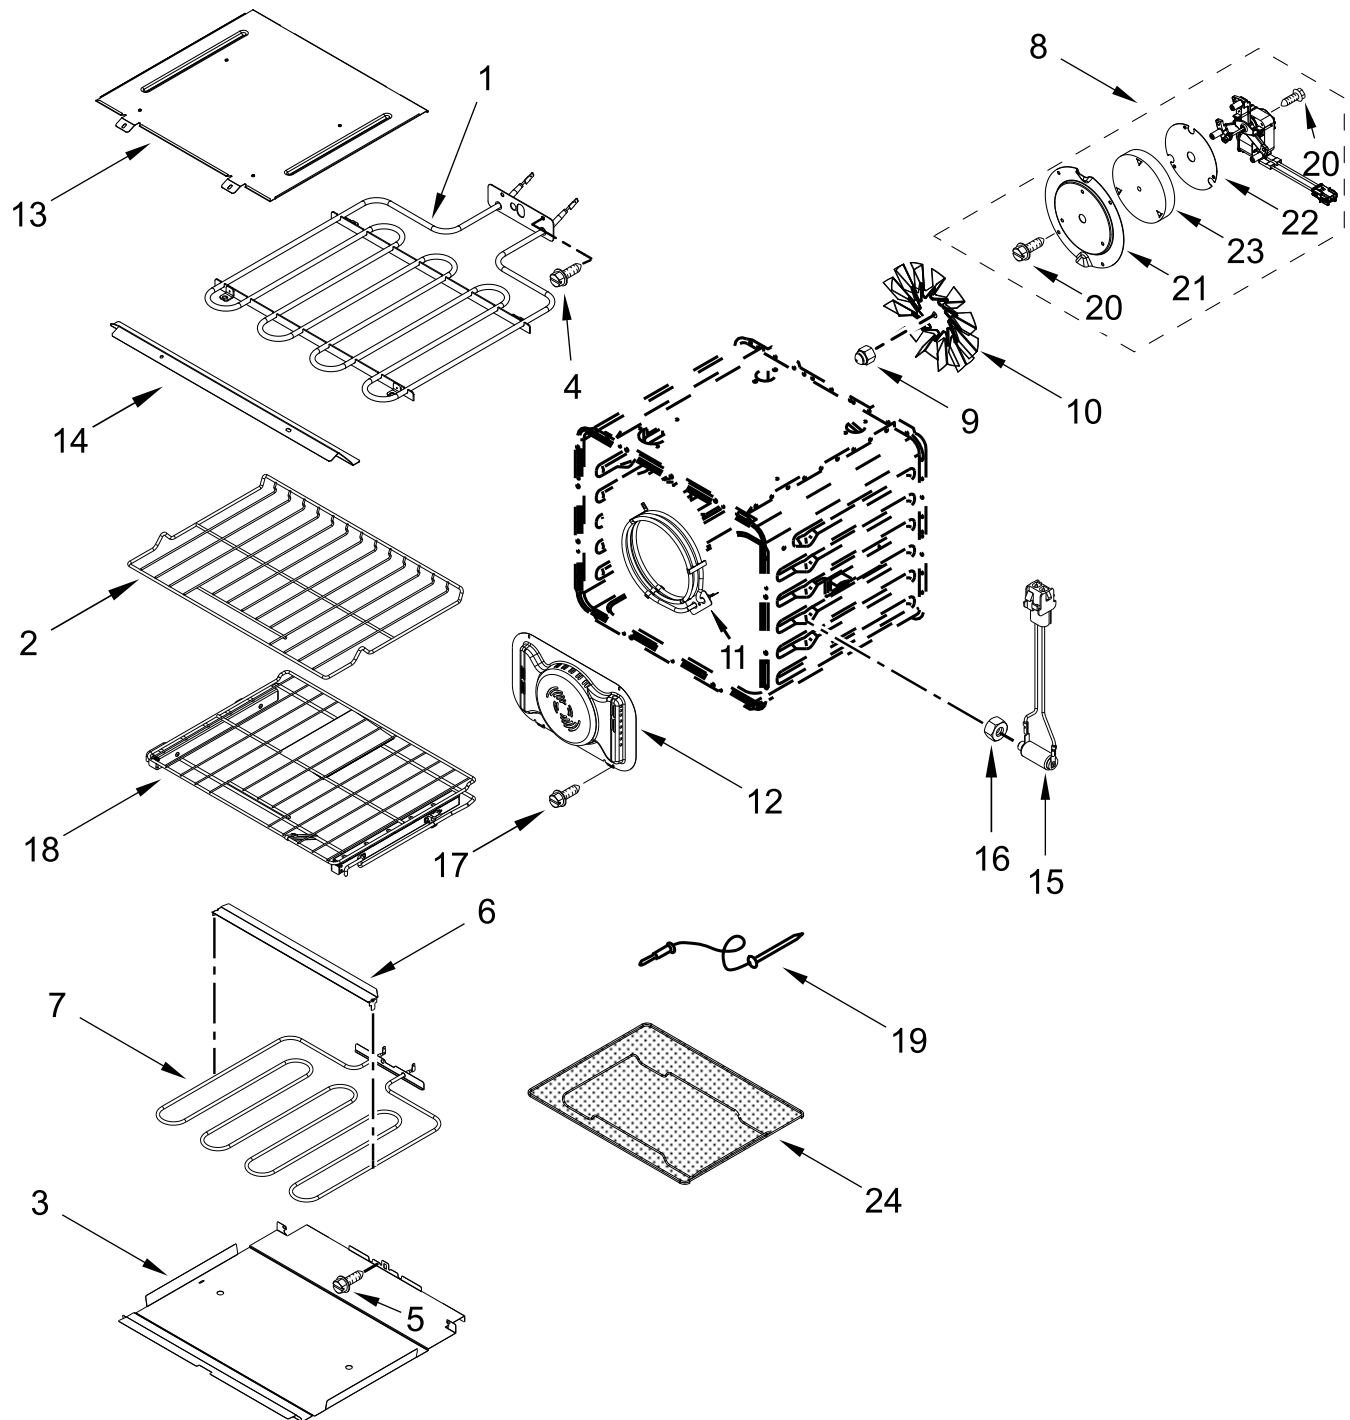

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238159	Element, Broil	10	W11425715	Blade, Fan	20	W10720084	Screw
2	W10554526	Rack, Oven	11	W10546519	Element, Convection	21	W11398057	Cover, Convect Plate
3	W10318198	Tray, Hidden Bake	12	W10819989	Baffle, Bow Tie	22	W11251715	Plate, Convect Motor
4	7101P434-60	Screw	13	W11235537	Reflector, Broil	23	W11251716	Insulation, Convect Motor
5	7101P426-60	Screw	14	W10588737	Shield, Broil Front	24	W11661815	Basket, Airfry
6	W10282957	Crossbar, Hidden Bake Tray	15	W11252826	Jack, Meat Probe			
7	W11292248	Element, Bake	16	W11033111	Nut, Locking			
8	W11398058	Convect Motor Assembly	17	W10906658	Screw			
9	W11433702	Nut, Acorn (LH)	18	W10554531	Rack, Sliding			
			19	9755542	Probe, Temperature			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	285006	Black
	350938	Gray Primer
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
		Trim, Tall Vent
	W11570325	Black
		Vent, Deflector
	W11594553	Black