




GAS RANGE

MODELS:

KFGC500JAV05 (Avocado Cream)


BURNER BOX PARTS

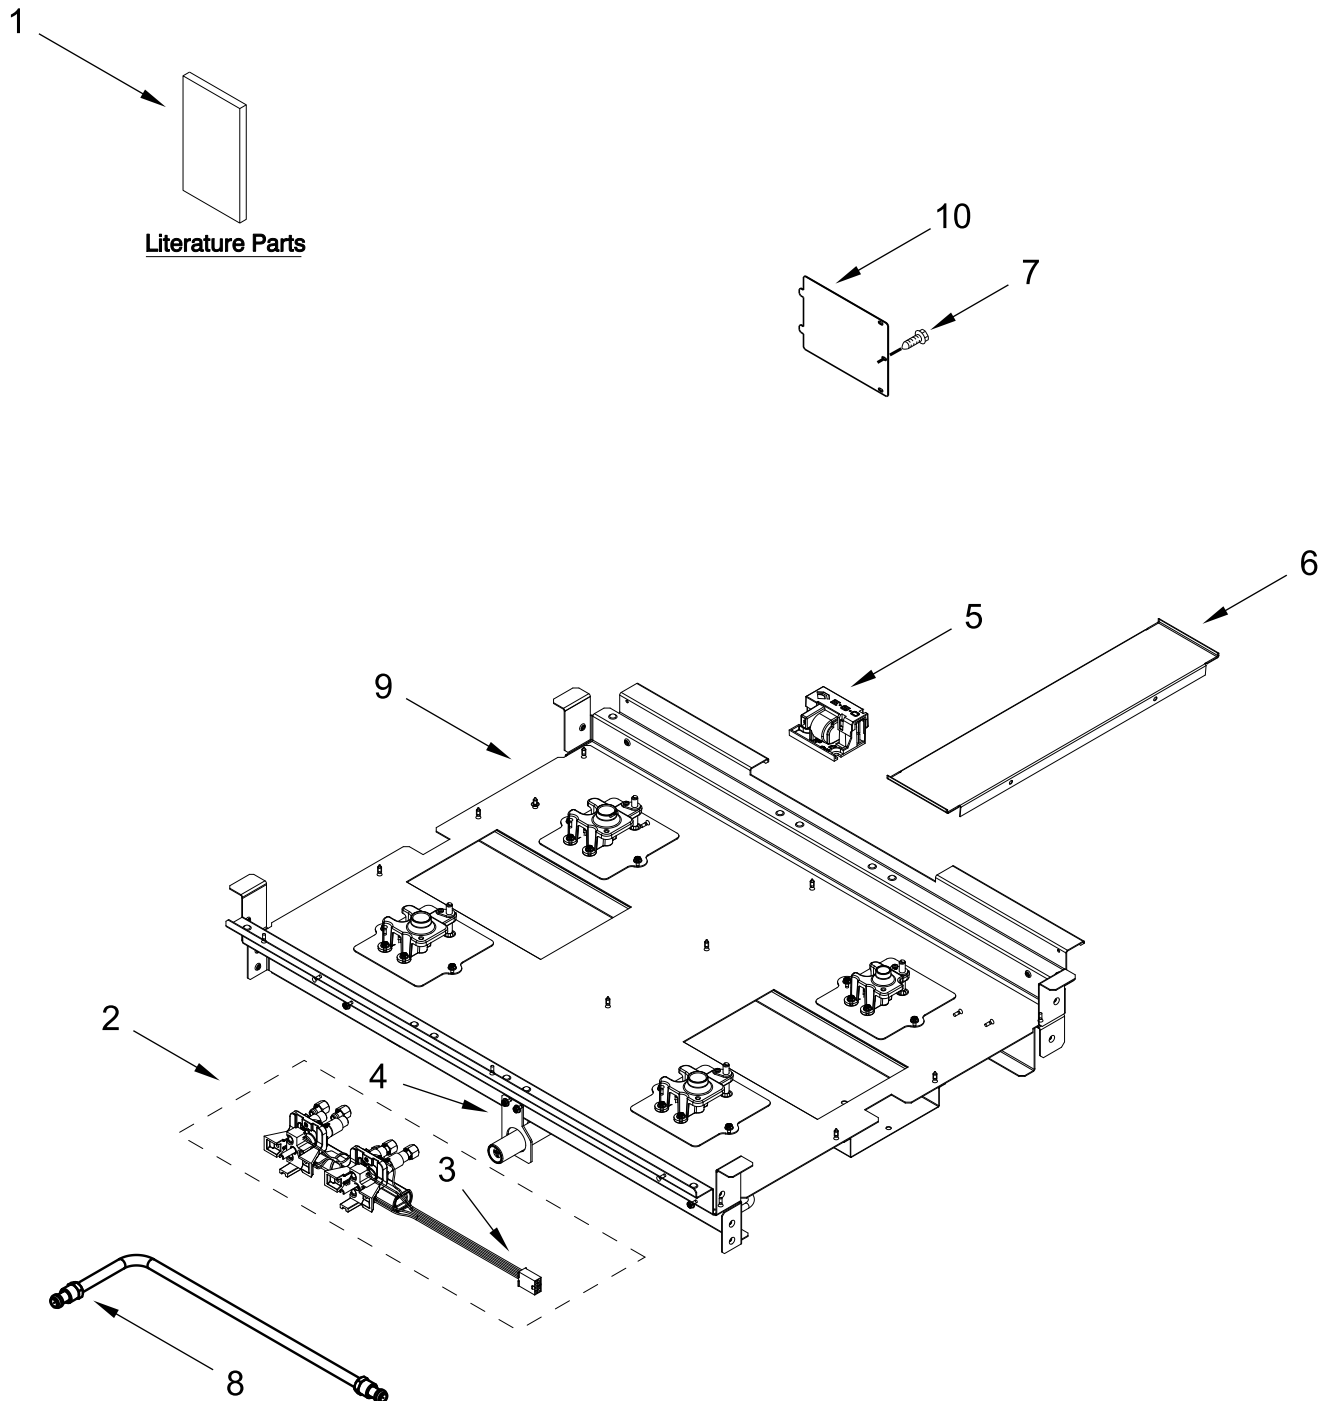

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10903728	Switch, Harness	10	W10115843	Cover, Ignition
	W11508863	Use and Care Guide	4	W11121194	Bracket, Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11508887	Installation Instructions	5	W11121317	Module, Spark		W11448062	Harness, Main (30 in)
	W11184759	Guide, Internet Connectivity	6	W11121361	Filler, Cooktop		W11200328	Harness, Cooktop
	W11575703	Diagram, Wiring (Cooktop)	7	7101P426-60	Screw		W10780278	Harness, Door Lock
	W11565467	Tech Sheet	8	W10892281	Tube, Manifold Supply (Left)		W11200325	Harness, Communication
	W11364680	Guide, Quick Start		W10892292	Tube, Manifold Supply (Right)		W11242785	Harness, WIFI
2	W10892994	Assembly, Valve Manifold (Left Front, Left Rear)	9		Box, Burner (Not Serviced)		313438	Clip, Harness
	W10892997	Assembly, Valve Manifold (Right Front, Right Rear)					W10624584	Cord, Power
							4450800	Screw, Grounding
							W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11238042	Kit, LP Conversion
							W11311196	Ignitor Wire, Wire-Electrode Bake


COOKTOP, BURNER AND GRATE PARTS

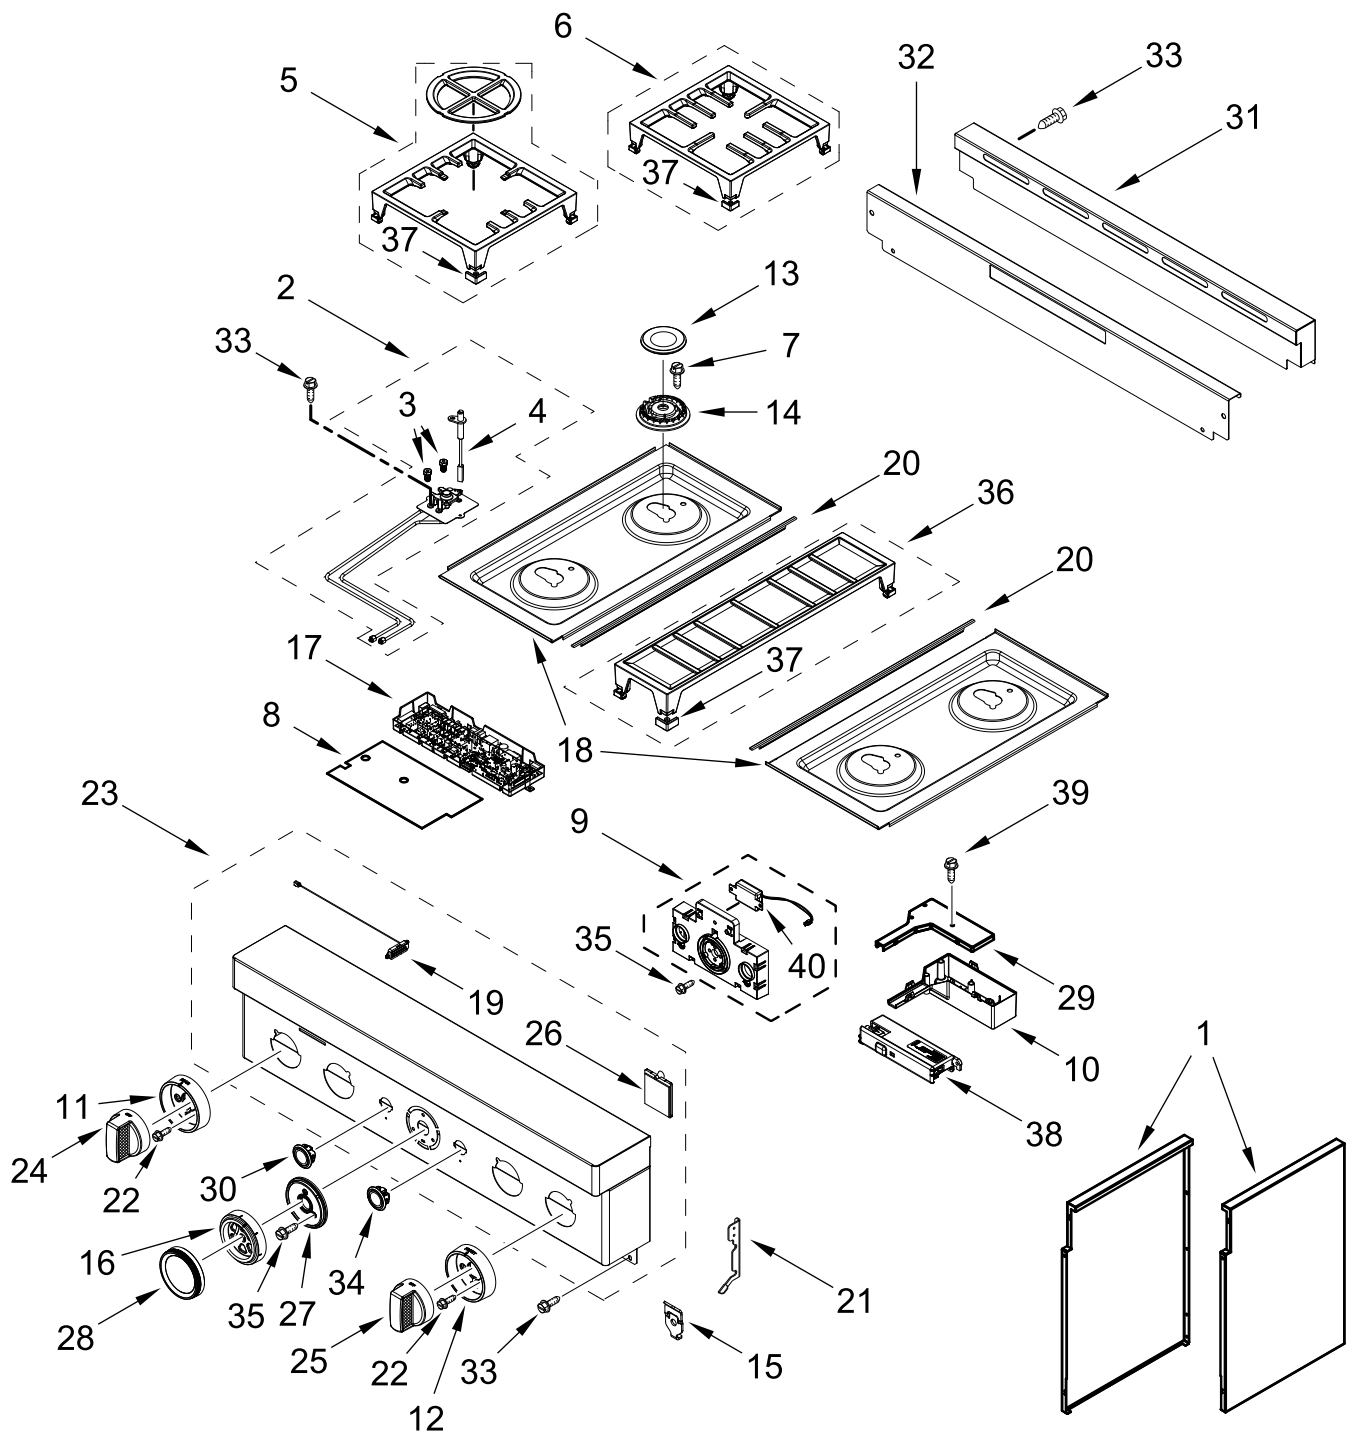

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	6	W11291179	Burner, Grate	21	W10130760	Bracket, Moving Console (Left)
	W11106880	Panel, Cabinet Side (Right)	7	W11323261	Screw (8-18 X 1 in)		W10130759	Bracket, Moving Console (Right)
				W11323309	Screw (8-18 X 1/2 in)			
2	W10892774	Assembly, Orifice Holder	8	W11281269	Barrier, Appliance Manager	22	W11328357	Screw
		(Left Front)	9	W11436338	User Interface	23	W10877949	Panel, Console
	W10892484	Assembly, Orifice Holder	10	W11205795	Cover, WIFI Outer	24		Knob, Single
		(Left Rear)	11	W10883433	Bezel (Rear Burners)		W10912166	Stainless Knob, Dual
	W10892479	Assembly, Orifice Holder	12	W10881642	Bezel (Front Burners)	25	W10883172	Stainless
		(Right Front)	13		Cap, Burner	26	W10896366	Assembly, Light Pipe
	W10892735	Assembly, Orifice Holder		W11121389	Black (Set Of 4)	27		Bezel, Oven
		(Right Rear)	14	W10891746	Spreader, Flame (High)		W11500871	Stainless Knob, Oven Temperature
					(Left Front, Right Front)	28		
3	W10892422	Orifice, Main (17.4K)		W10891974	Spreader, Flame (Low)		W11500868	Stainless
		(Left Front, Right Front)			(Left Rear)	29	W11205794	Cover, WIFI Inner
	W10892419	Orifice, Main (15K)		W10891978	Spreader, Flame (AUX)	30	W11241511	Button Assembly, Oven Light
		(Left Rear)			(Right Rear)	31	W11477029	Trim, Island
	W10892435	Orifice, Simmer (2.6K)	15	W11036559	Spring Clip, Range	32	W10323248	Insert, Island Trim
		(Left Front, Right Front)	16		Knob, Oven Mode	33	7101P426-60	Screw
				W11500865	Stainless	34	W11241510	Button Assembly, Oven Start
	W10892438	Orifice, Simmer (5K)	17	W11543344	Manager, Appliance (Powermax)	35	3400814	Screw
		(Right Rear)				36	W11291178	Kit, Grate Filler
4	W11238757	Igniter	18		Panel, Cooktop	37	W11042504	Bumper, Grate
		(Left Front, Right Front)		W11038235	Black (Left)	38	W11110768	Assembly, WIFI Module
	W10892340	Igniter		W11038245	Black (Right)	39	7101P624-60	Screw
		(Left Rear)				40	W10568405	Assembly, Speaker
	W11114379	Igniter	19	W11130078	Antenna, WIFI			
		(Right Rear)	20		Trim, T-Strip			
5	W11291183	Burner, Grate (With Wok Ring)		W10271524	Black			


CHASSIS PARTS

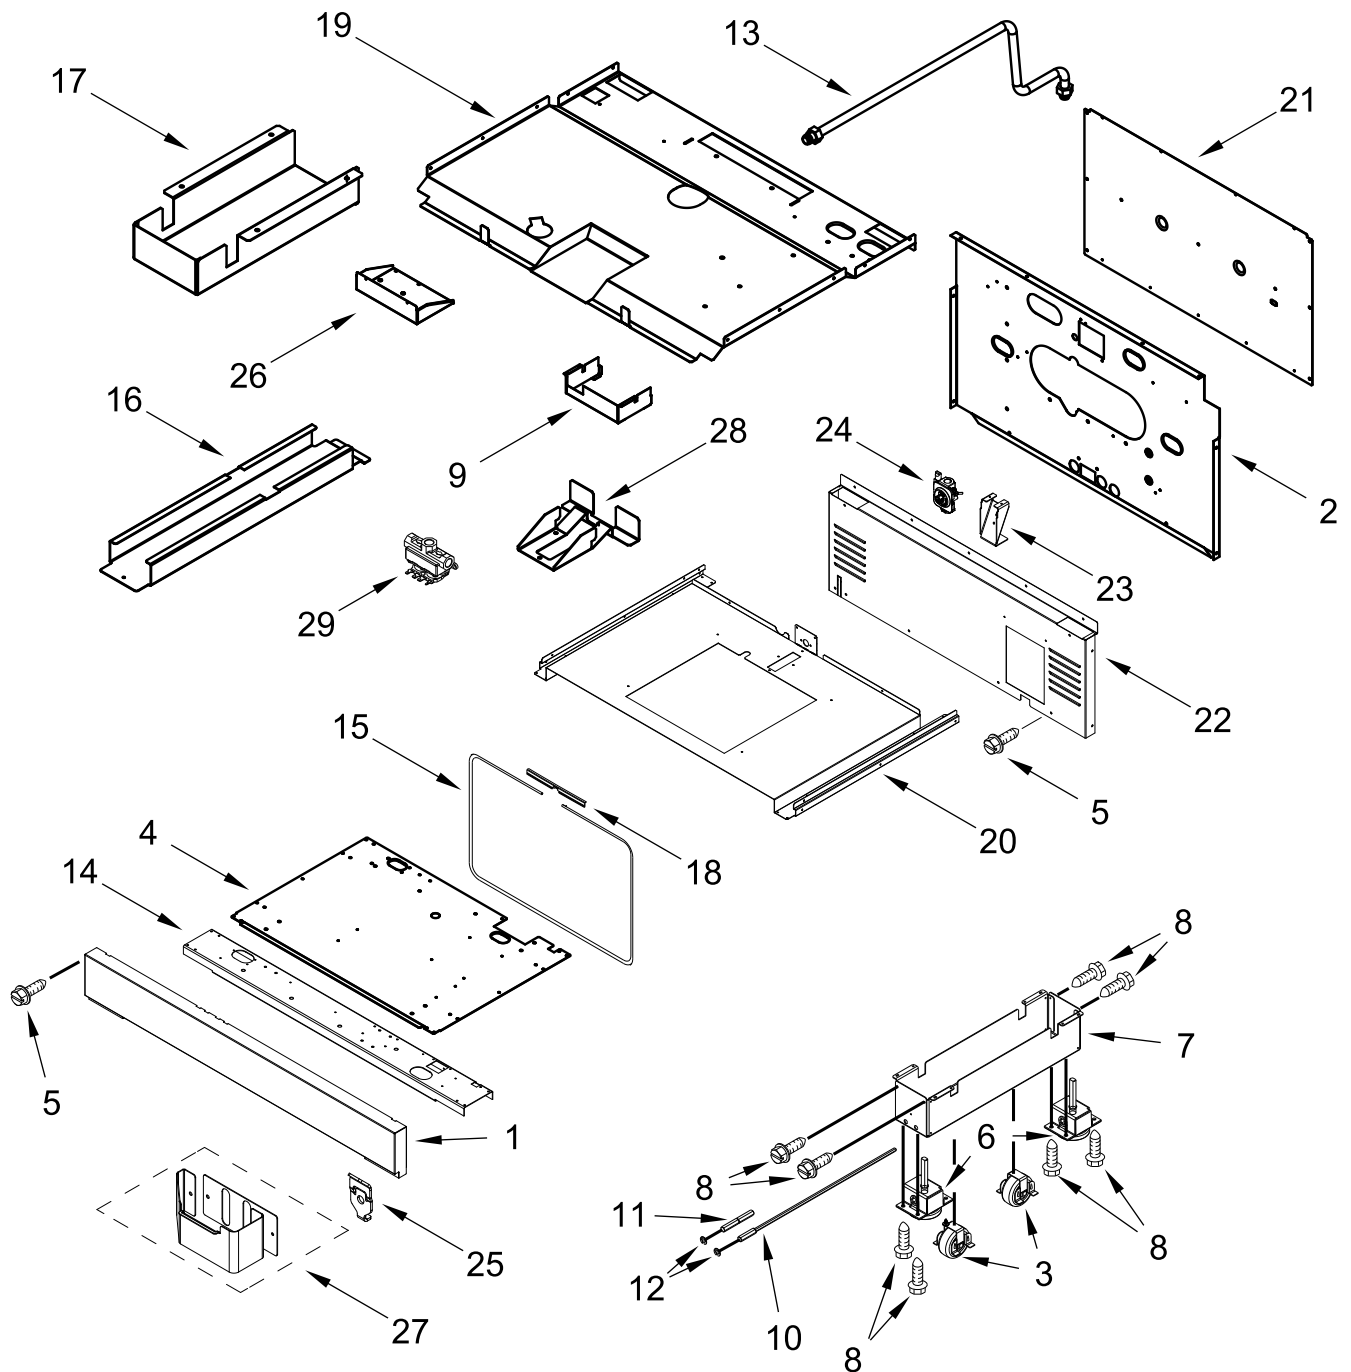

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394781	Kickplate	13	W11181648	Tube, Pressure Regulator	23	W11096823	Bracket, Pressure Regulator
2	W11324989	Back, Chassis	14	W11087491	Support, Channel	24	W10896959	Regulator, Pressure
3	W10138054	Assembly, Roller	15	W11115328	Gasket, Oven (30 in)	25	W11036559	Spring Clip, Range
4	W11109583	Duct, Bottom (30 in)	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
5	7101P426-60	Screw	17	W11368831	Channel, Wire	27	W11199181	Cover, Foot (Left)
6	9760860	Leveler	18	W11362015	Retainer, Gasket (9 in Long)		W11199178	Cover, Foot (Right)
7	W10908710	Base, Leveling Leg	19	W11324986	Top, Chassis	28	W11190223	Bracket, Bake Alignment
8	4449743	Screw	20	W11040802	Chassis, Bottom	29	W10145680	Valve, Dual
9	W11369237	Cabinet, Appliance Manager	21	W11103334	Panel, Back Top			
10	W10115869	Shaft, Long	22	W11034134	Panel, Back Bottom			
11	W10115793	Shaft, Short						
12	489504	E-Ring						


OVEN PARTS

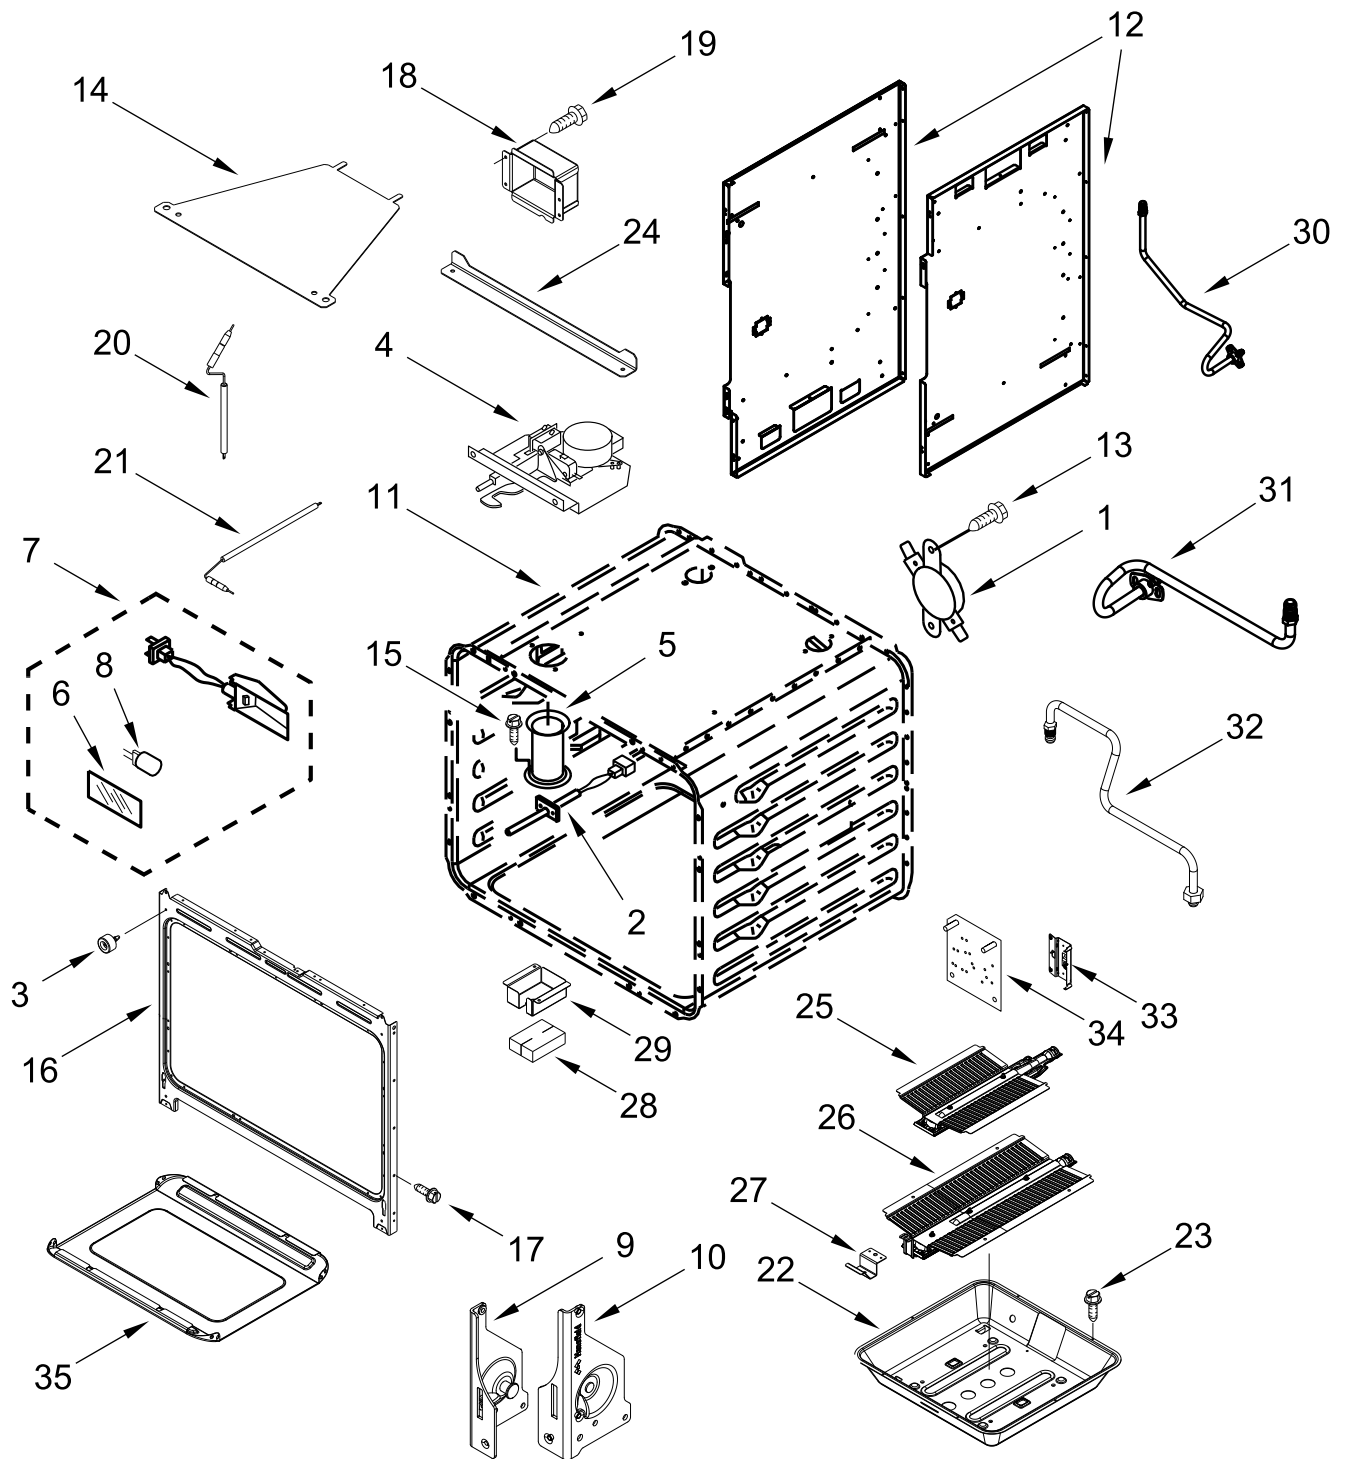

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	14	W10160858	Cover, Latch	30	W11109238	Tube, Broil
2	W10622170	Probe, Sensor	15	3196176	Screw	31	W11106980	Tube, Bake
3	W10351278	Bumper and Screw	16	W11192755	Frame, Front	32	W11109167	Tube, Gas
4	W10830016	Latch, Motorized	17	3196560	Screw	33	W10145362	Bracket-Board, DSI
5	W10145743	Tube, Vent	18	W10308051	Box, Broil	34	W10511278	Module, Spark DSI
6	W10169756	Lens, Light	19	7101P434-60	Screw	35	W10496809	Pan, Oven Bottom
7	W11223932	Assembly, Oven Light	20	W11182863	Electrode, Broil			FOLLOWING PARTS NOT ILLUSTRATED
8	W10169757	Bulb, Light	21	W11205400	Electrode, Bake			
9	W11096294	Receiver, Hinge (Left)	22	W10145744	Support, Bake Pan	W10282810		Insulation, Wrap (30 in)
10	W11096293	Receiver, Hinge (Right)	23	12992902	Screw	W11109145		Insulation, Back (30 in)
11		Liner, Oven (Not Serviced)	24	W10317437	Bracket, Broil Standoff	W10299354		Insulation, Bottom
12	W11102297	Chassis, Side (Left)	25	W10878504	Burner, Bake	3400968		Nut
	W11102296	Chassis, Side (Right)	26	W10311335	Burner, Broil			
13	7101P426-60	Screw	27	W10308040	Bracket, Bake Burner			
			28	W10311009	Insulation, Broil Cover			
			29	W10310985	Cover, Broil			


VENTING PARTS

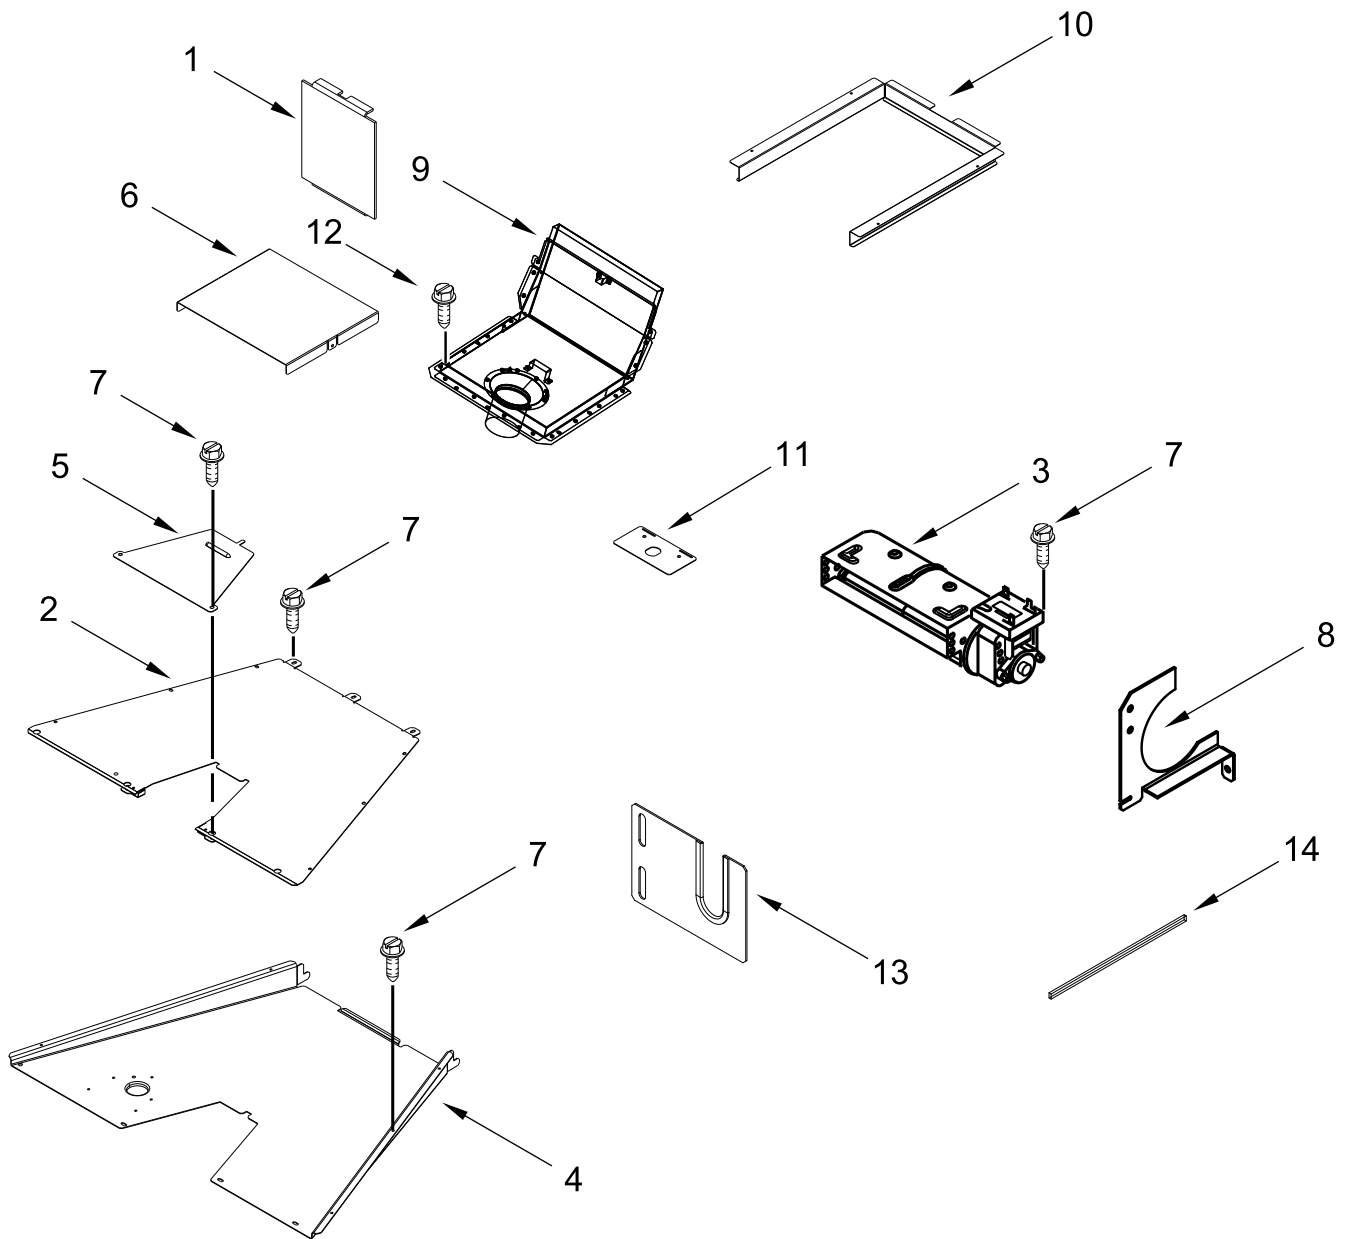

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10246087	Insulation, Chimney	6	W10246086	Retainer, Insulation	11	W10115855	Holder, Strain Relief
2	W11105221	Vent, Cooling Top (30 in)	7	7101P426-60	Screw	12	3400805	Screw (Zinc)
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel
4	W11091676	Vent, Cooling Bottom (30 in)	9	W10340579	Vent, Chimney Box (30 in / 36 in)	14	W10919715	Gasket
5	W11109518	Plate, Cooling Latch	10	W10145363	Duct, Primary Air (30 in)			


OVEN DOOR PARTS

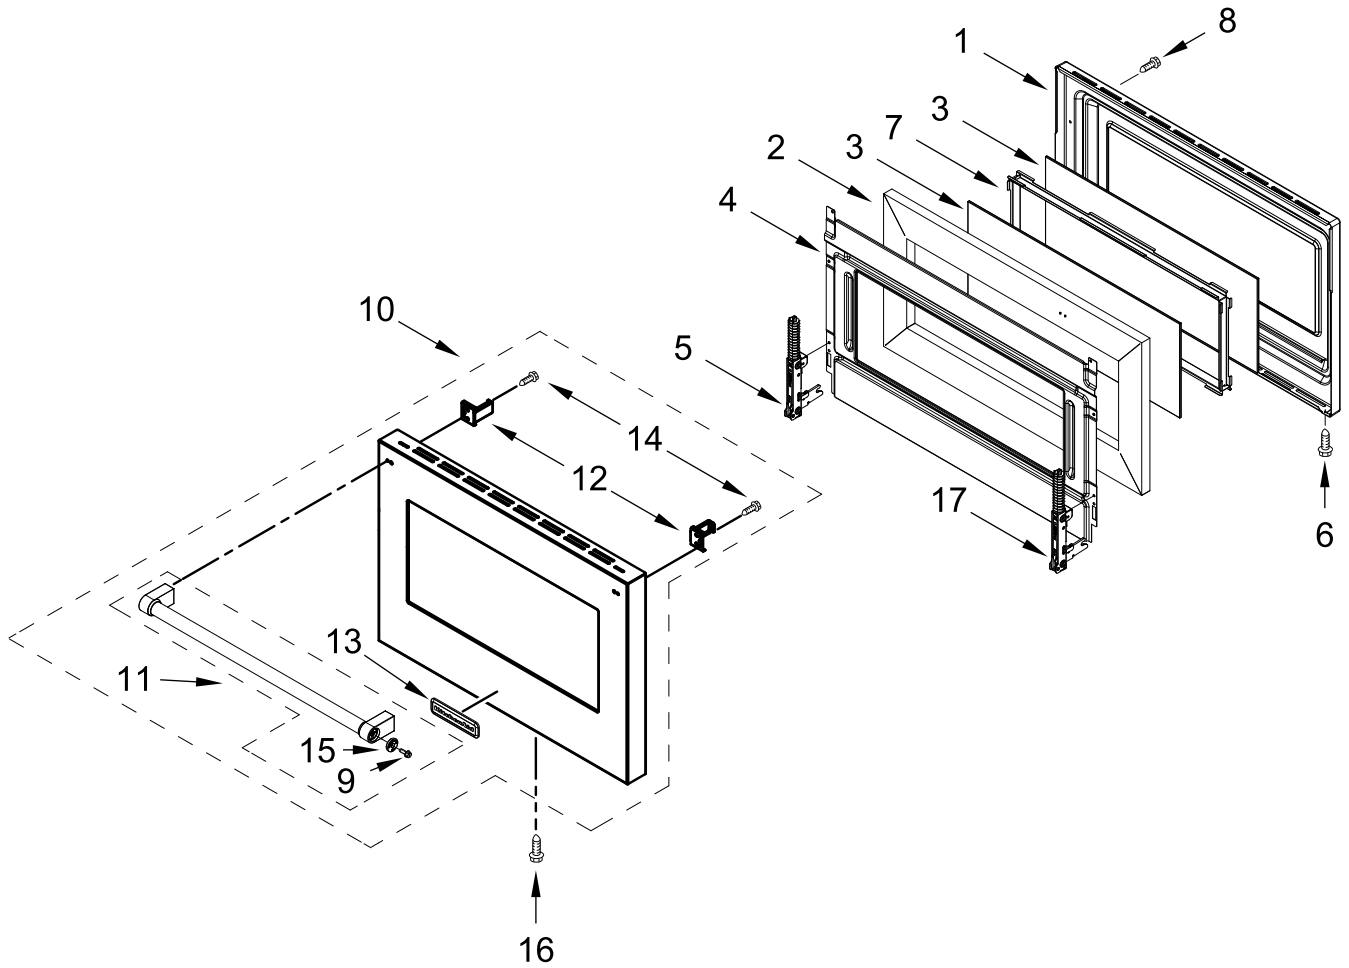

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	13	W10518672	Badge
2	W11413190	Insulation, Door (30 in)	8	W10898280	Screw	14	W10276043	Screw
3	W11184409	Glass, Inner	9	W10656499	Screw	15	W11361074	Medallion, Handle
4	W11194821	Retainer, Glass	10	W11389289	Assembly, Outer Door (Includes Handle)	16	W10162096	Screw
5	W11390105	Hinge, Door (Left)	11	W11362706	Handle Assembly	17	W11390124	Hinge, Dual (Right)
6	W10607120	Screw	12	W11197830	Bracket, Handle			

INTERNAL OVEN PARTS

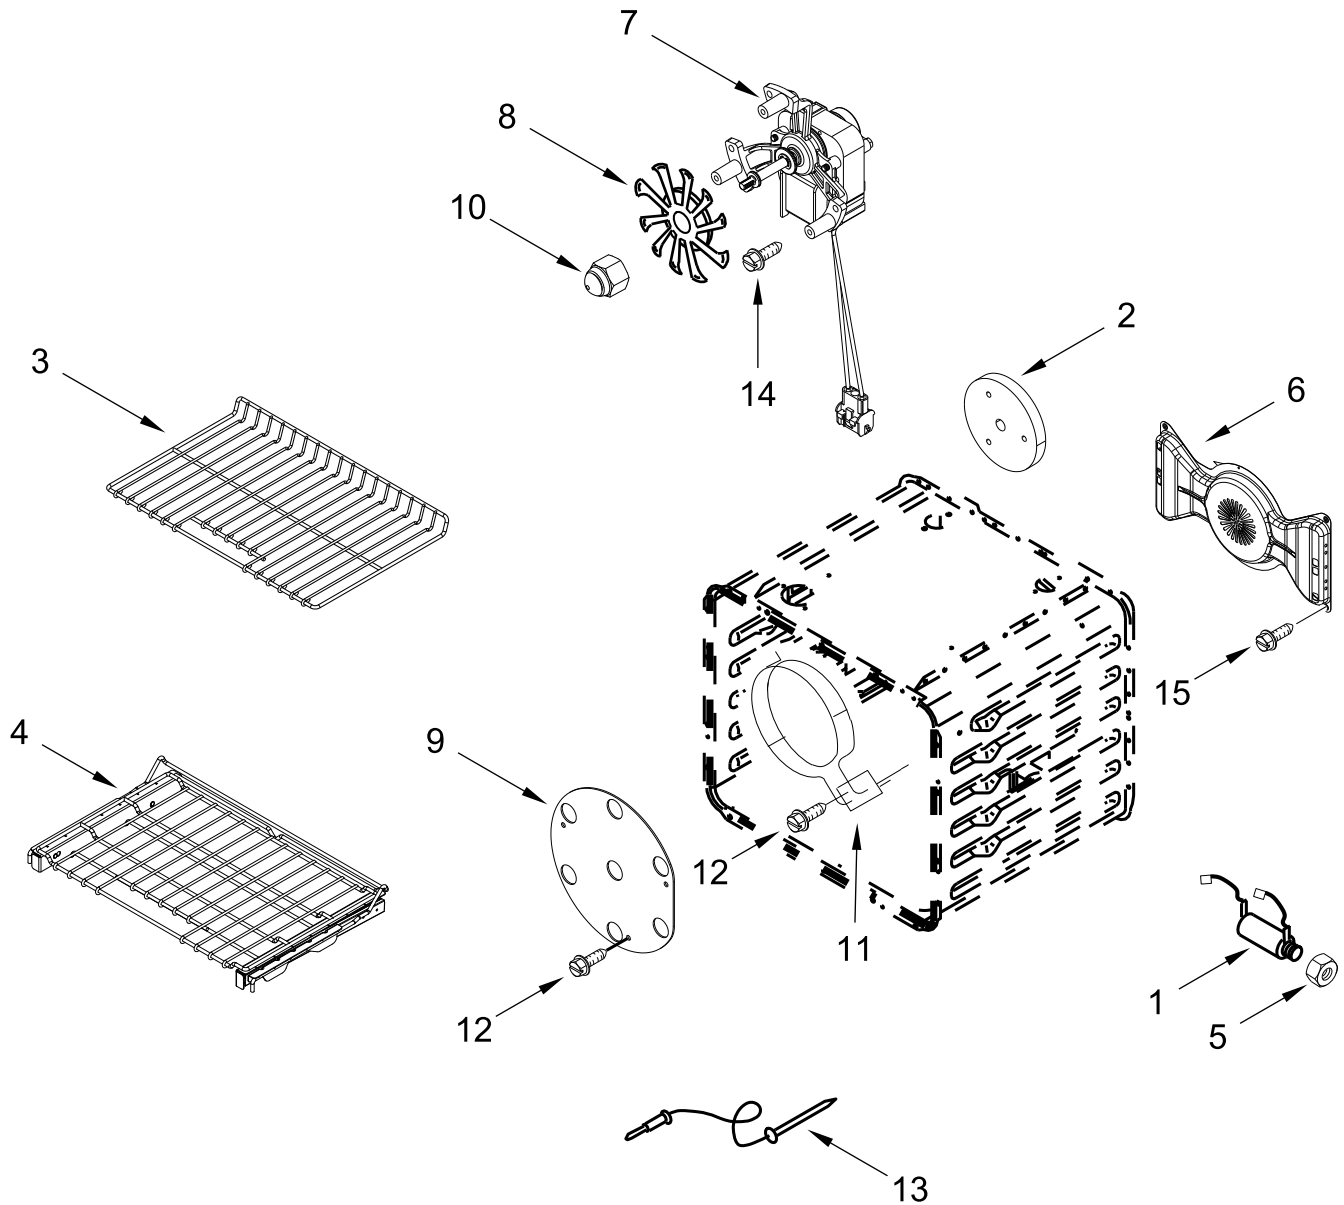

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	9755543	Jack, Meat Probe	7	W10631506	Motor, Convection	13	9755542	Probe, Temperature
2	W10282821	Insulation, Convection Cover	8	W10631503	Blade, Fan	14	W10720084	Screw
3	W10570887	Rack, Oven	9	W10261523	Plate, Fan	15	W10739592	Screw
4	W11496977	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)			
5	W11033111	Nut, Locking	11	W11098505	Element, Convection Heat			
6	W11212180	Baffle, Convection	12	4449154	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	30-48KITRC	Gas Range Connector Kit
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10355051	Cleaner, Cooktop
	W11042467	Spray, Stainless Steel Cleaning
	W10123240	Rack, Broiler Pan and Roasting
		Backsplash
	W10285447	30-in With Shelves
		Medallion, Handle
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841CF	Copper
	W11368841BN	Bronze
	W11368841DD	Dark Blue