




ELECTRIC RANGE

MODELS:

WFE320M0JB4 (Black)
WFE320M0JW4 (White)


COOKTOP PARTS

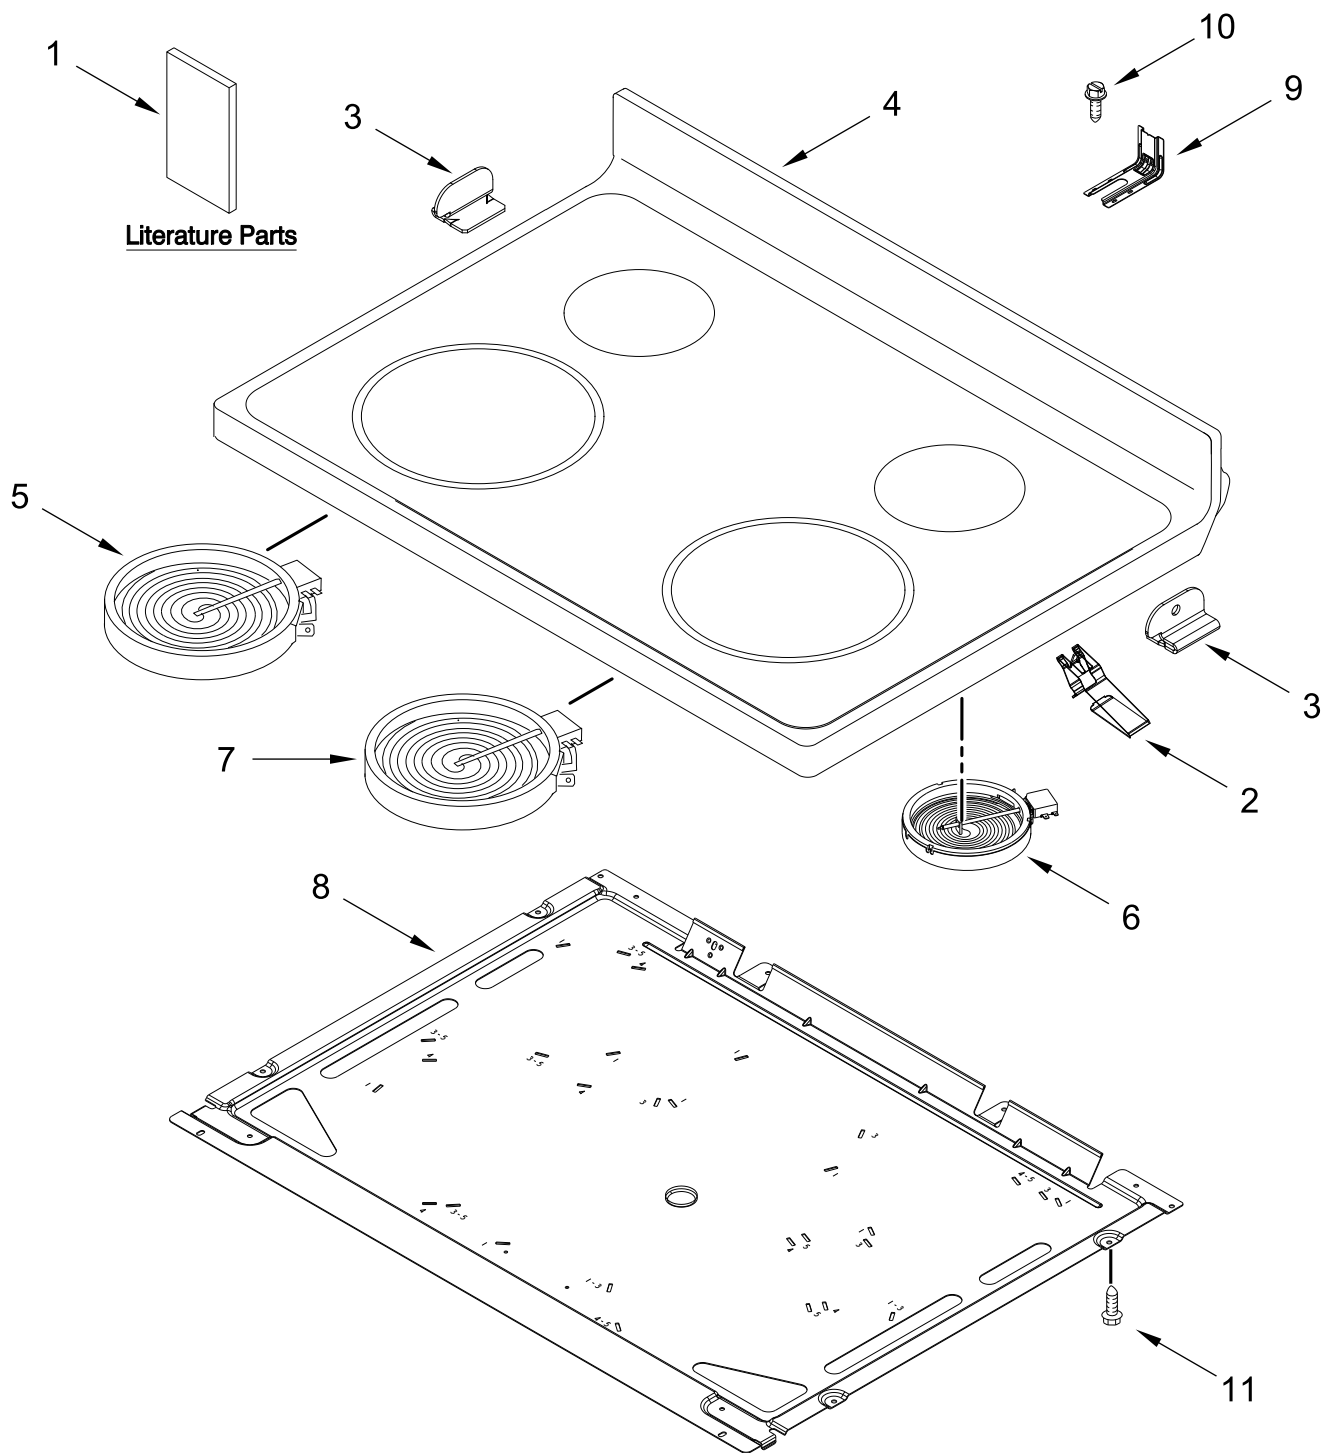

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000 and 1400W)	11	3196169	Screw
	W11509595	Owners Manual			(Left Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11435582	Quick Start Guide	6	W10248261	Element (1200W)		W11452620	Harness, Main
	W11393931	Tech Sheet			(Left Rear and Right Rear)		W11134603	Harness, Cooktop (Left)
2	W11600012	Spring, Element	7	8273992	Element (2500W)		W11134551	Harness, Cooktop (Right)
3	W10607641	Bracket, Cooktop (Left)			(Right Front)			
	W10607642	Bracket, Cooktop (Right)	8	W10691223	Pan, Radiant Element			
4		Cooktop	9	W11379945	Bracket, Anti-Tip			
	W11034830	Black	10	7101P485-60	Screw, Anti-Tip Kit			
	W11034829	Assembly, Outer Door Glass (Includes Handle)						


CONTROL PANEL PARTS

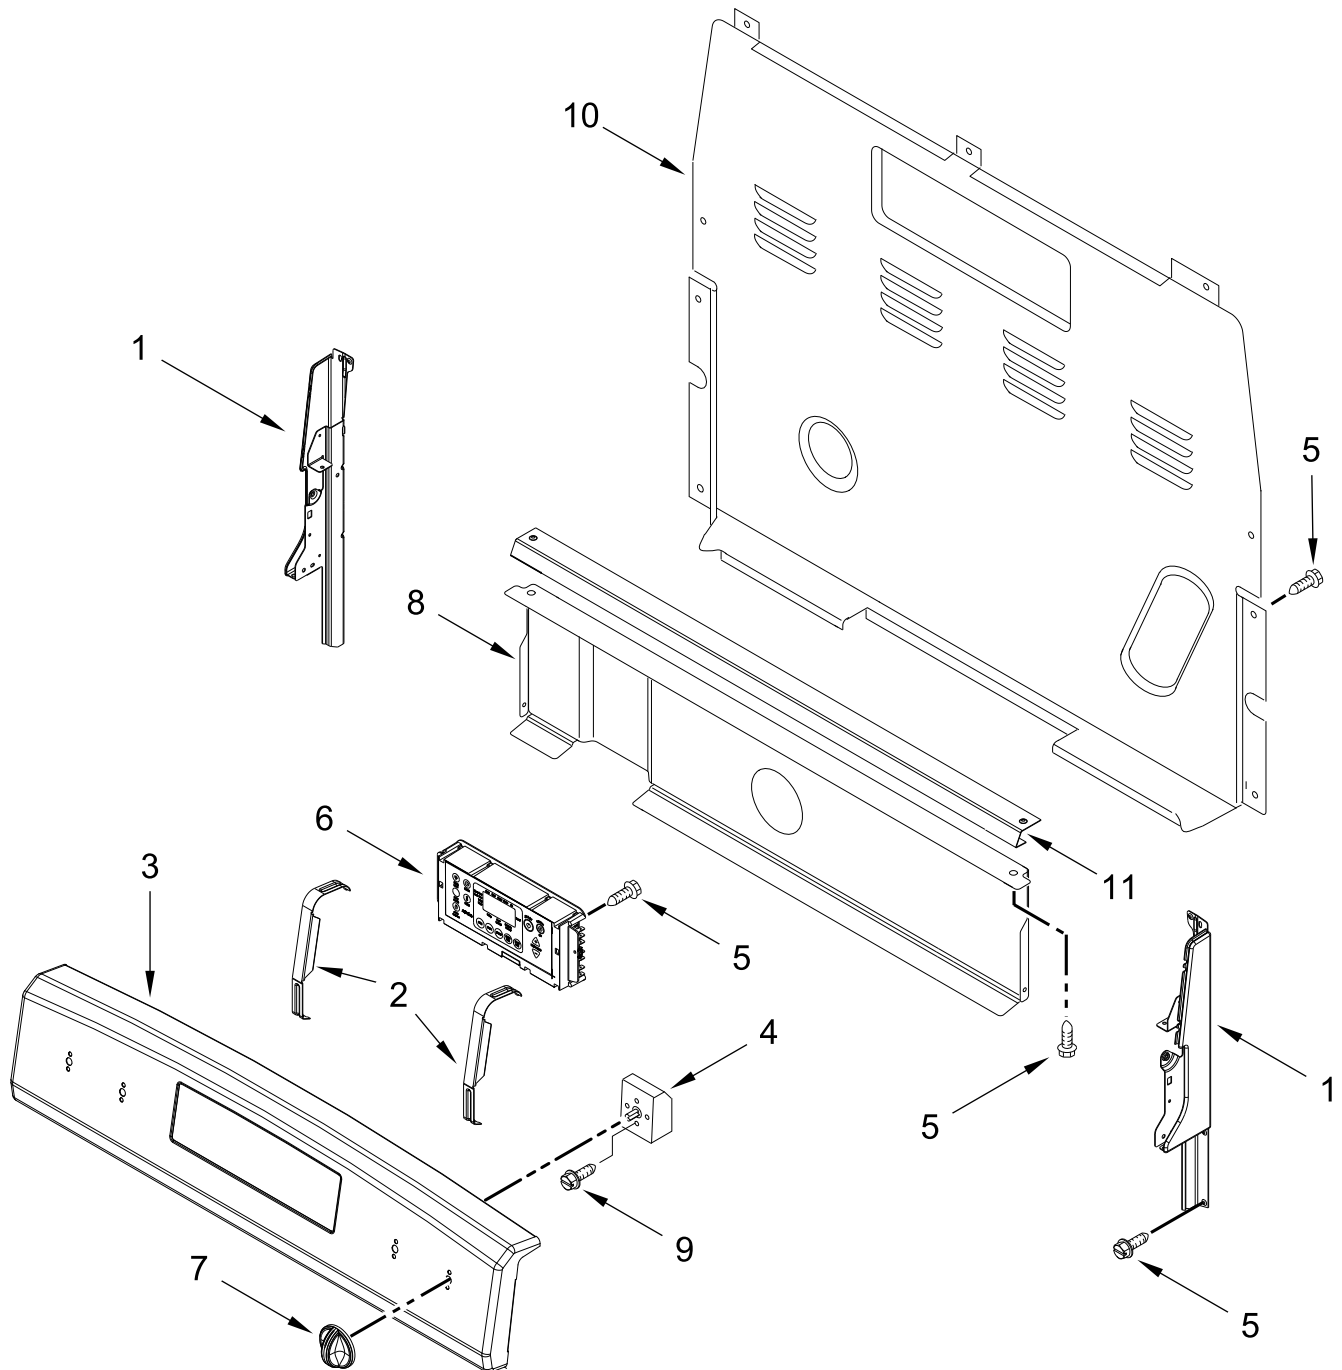

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	6		Control, Electronic (LCX)
	W11130372	Black (Left)			(Left Front)		W11536412	Black
	W11130371	White (Left)		3148951	Switch, Infinite		W11536413	White
	W11130379	Black (Right)			(Left Rear and Right Rear)	7		Knob
	W11130378	White (Right)					W11022718	Black
2	W10695491	Bracket, Control		3148954	Switch, Infinite (Orange)		W11022720	White
3		Console, Assembly			(Right Front)	8	W10134247	Shield, Heat
	W11027385	Black				9	3400882	Screw
	W11027386	White	5	3196178	Screw	10	8272473	Cover, Upper Rear
						11	W10525121	Bracket, Console Mounting


CHASSIS PARTS

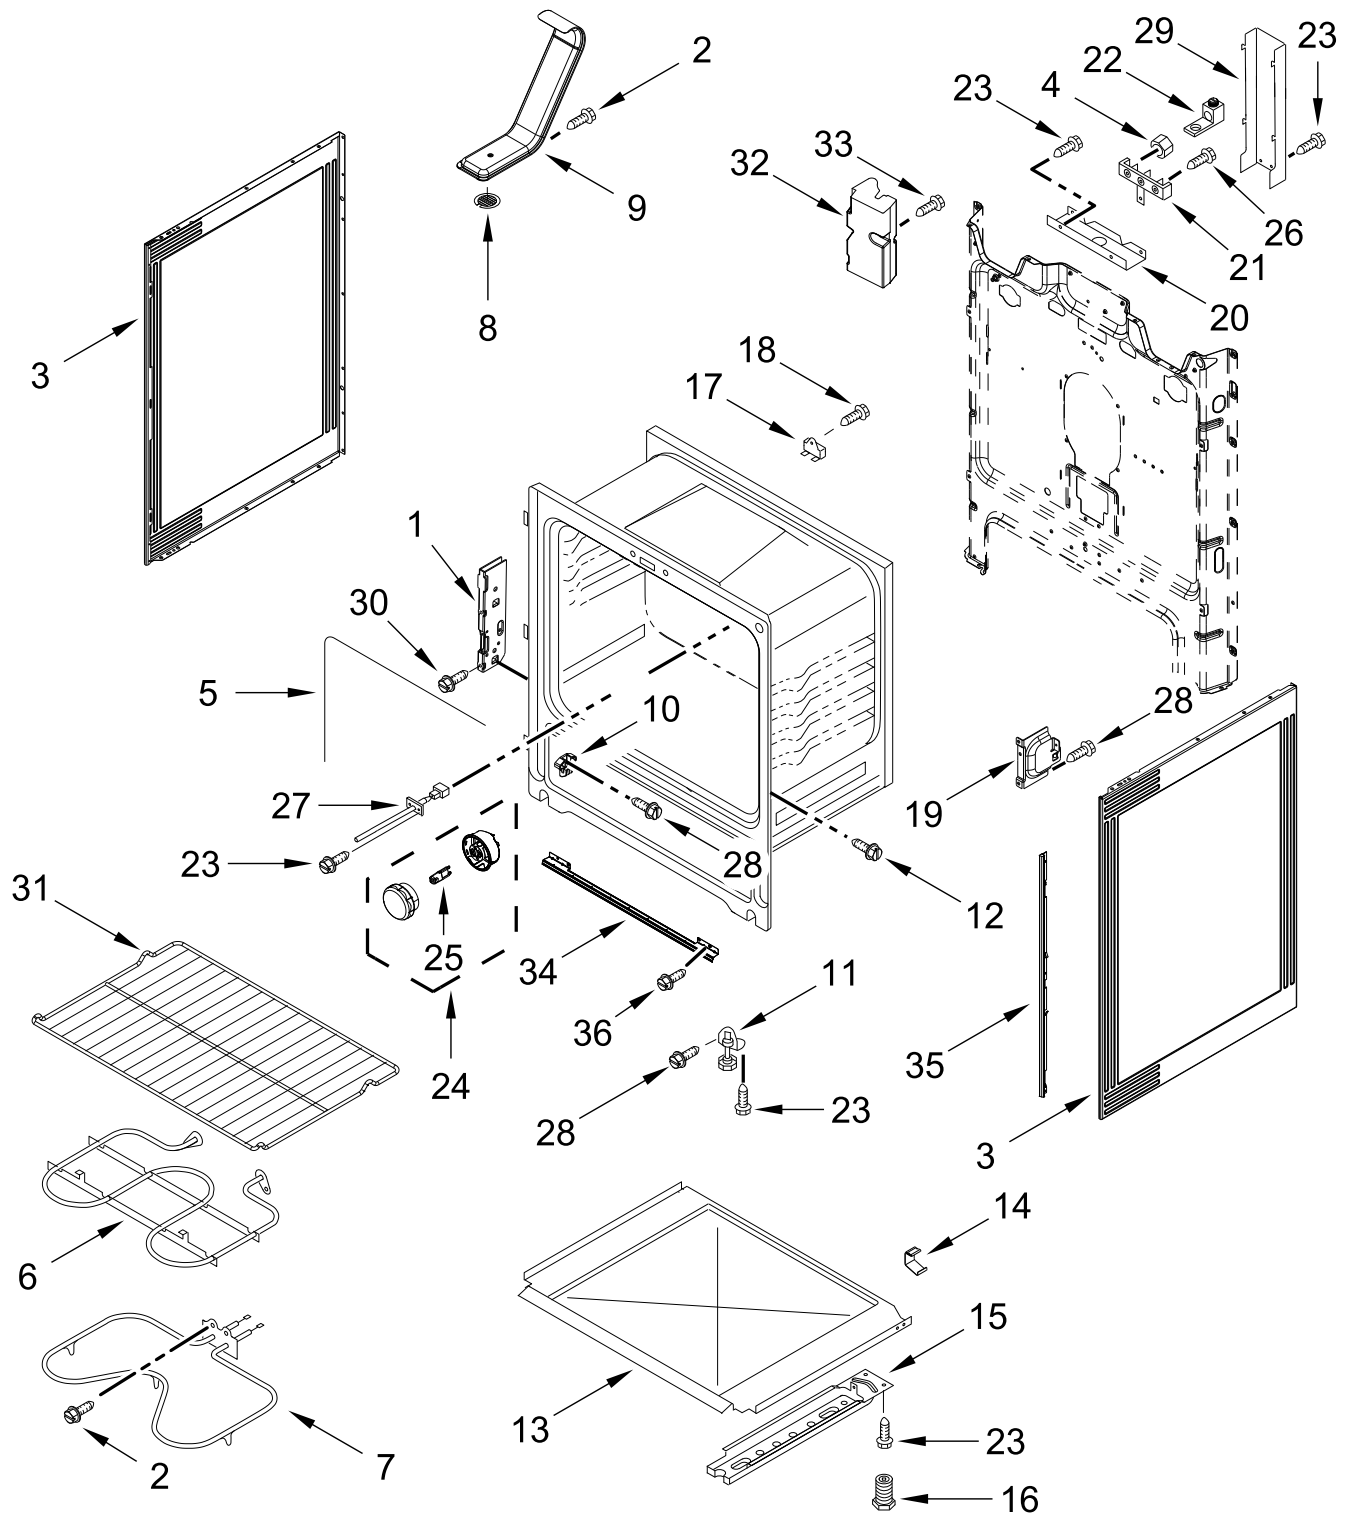

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	15	W10390008	Base Rail Assembly (Left)	27	W10181986	Sensor, Oven
2	3196154	Screw				28	3196169	Screw
3		Panel, Side		W10390007	Base Rail Assembly (Right)	29	W10326122	Cover, Terminal Block
	W10162245	Black				30	W10031780	Screw
	W10575396	White	16	W10058460	Foot, Leveling	31	W11173792	Rack, Oven
4	3400029	Nut	17	3196548	Fuse, Thermal	32	W10910404	Counterweight
5	W10129032	Seal, Door	18	3196172	Screw	33	W11034869	Screw
6	W10308476	Element, Broil	19	W10404688	Clip, Oven Support	34	W11464547	Bracket, Front Frame
7	W11022836	Element, Bake	20	3186034	Bracket, Service	35	W11510560	Barrier Rail, Rubber (Left and Right)
8	9761301	Screen, Vent	21	W10245259	Block, Terminal			
9	W10134285	Tube, Vent	22	W10281322	Kit, Bare Wire Adapter Block	36	3196560	Screw
10	W10674705	Glide, Drawer Front						FOLLOWING PARTS NOT ILLUSTRATED
11	W10341186	Front Foot Assembly	23	3196178	Screw			
12	W10067840	Screw	24	W11634772	Light Assembly		8273263	Insulation, Wrap
13	8054068	Retainer, Insulation	25	W10571723	Bulb, Halogen 40 Watts		8272611	Insulation, Back
14	W10137382	Clip, Panel	26	3400016	Screw		W10333344	Insulation, Flue


DOOR PARTS

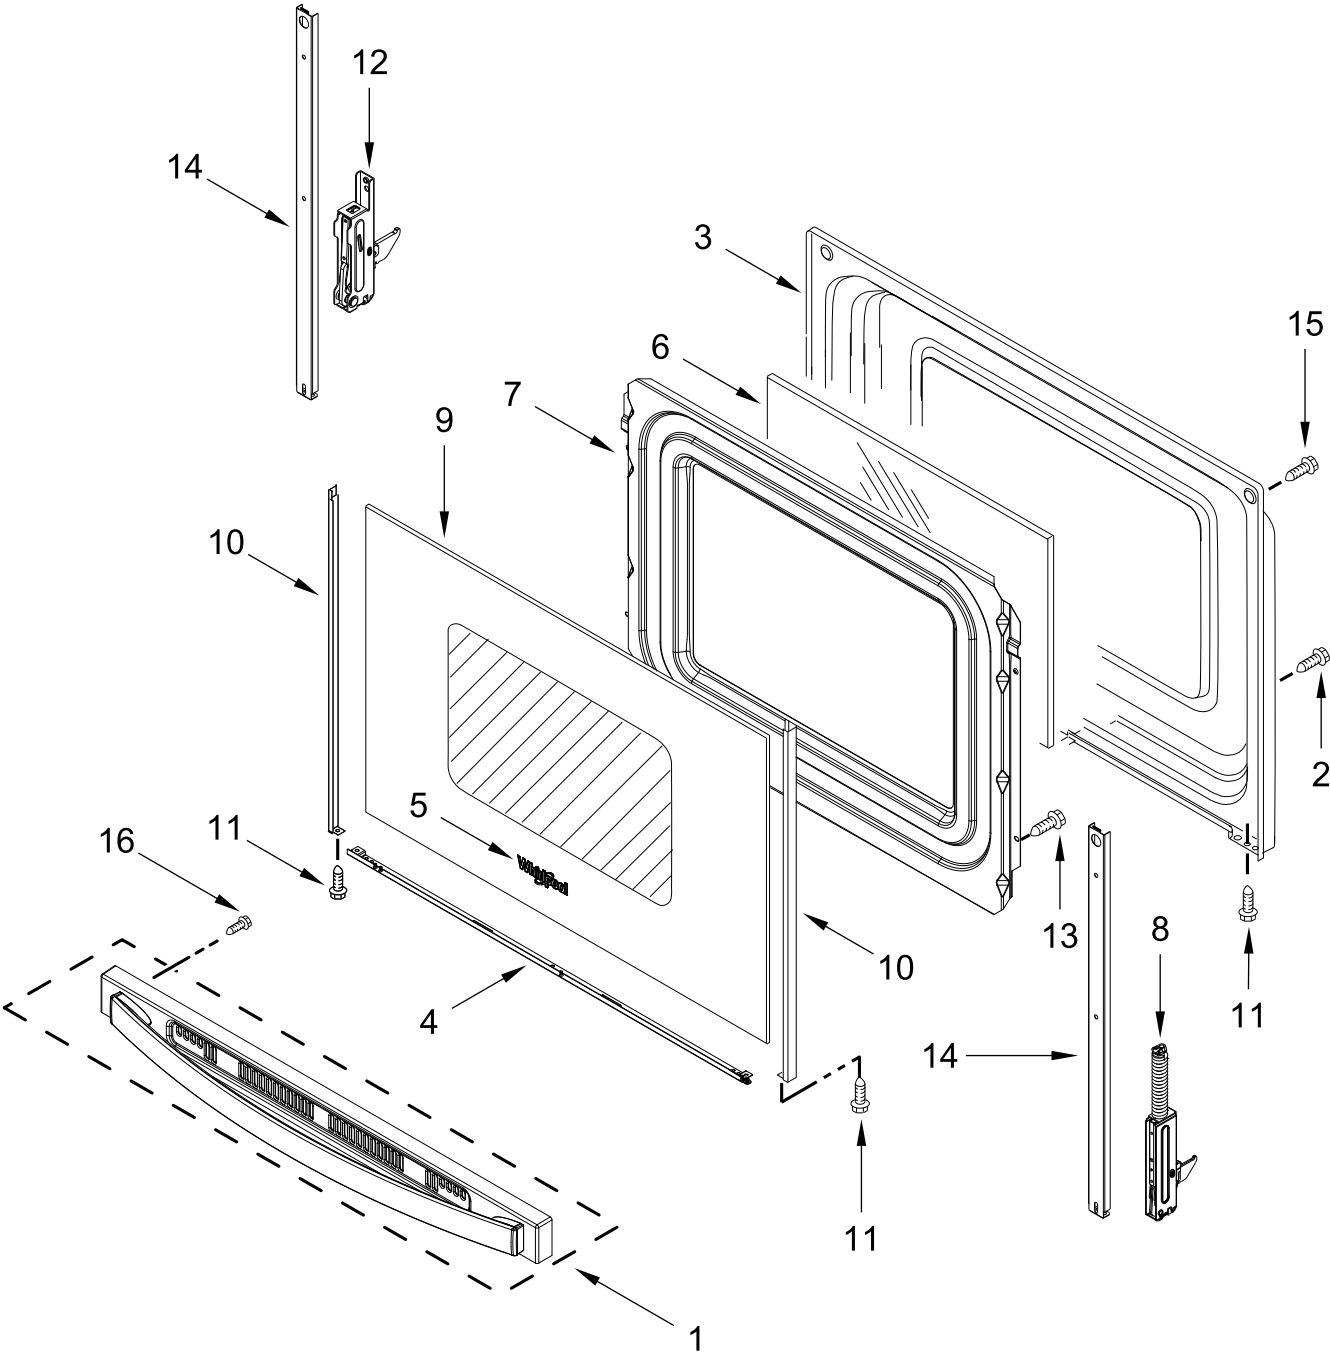

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	8	W10299225	Hinge, Active	13	W10031780	Screw
	W11242949	Black	9		Glass Assembly, Outer Door	14	W11379944	Strap, Door
	W11242947	White		W10409946	Black	15	W10200660	Screw
2	W10031790	Screw		W10409945	White	16	W10480830	Screw
3	9761344	Liner, Door	10		Trim, Side			
4		Trim, Lower Door		W10746436	Black (Left)			
	W11444043	Black		8523172	White (Left)			
	W11444042	White		W10746435	Black (Right)			
5	W10884775	Badge		8523166	White (Right)			
6	W11367326	Glass, Inner	11	W10327235	Screw			
7	W11380221	Retainer, Insulation	12	W10299227	Hinge, Door (Passive)			

DRAWER PARTS

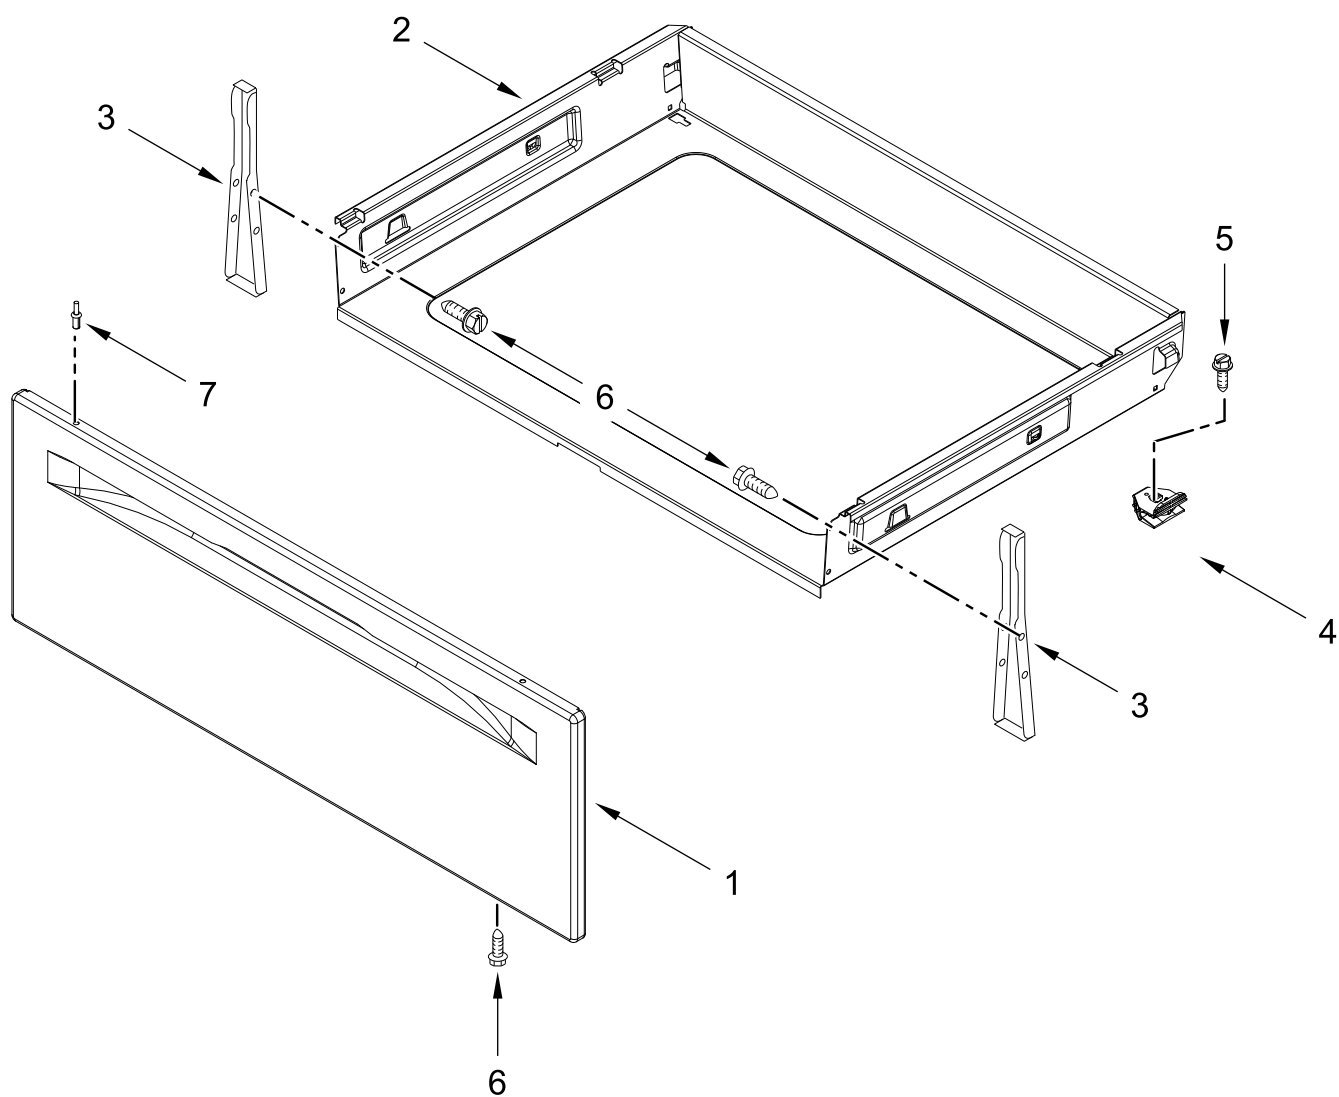

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462912	Bracket, Mounting Drawer	6	3196169	Screw
	W11123900	Black				7		Rivet, Push
	W11123901	White	4	W10674708	Glide, Drawer Rear		3196813	Black
2	W10688022	Drawer, Storage	5	3196165	Screw		3196814	White

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting