


KitchenAid®

Dishwasher

MODELS:

KDTM704KPS3 (Stainless)


DOOR AND PANEL PARTS

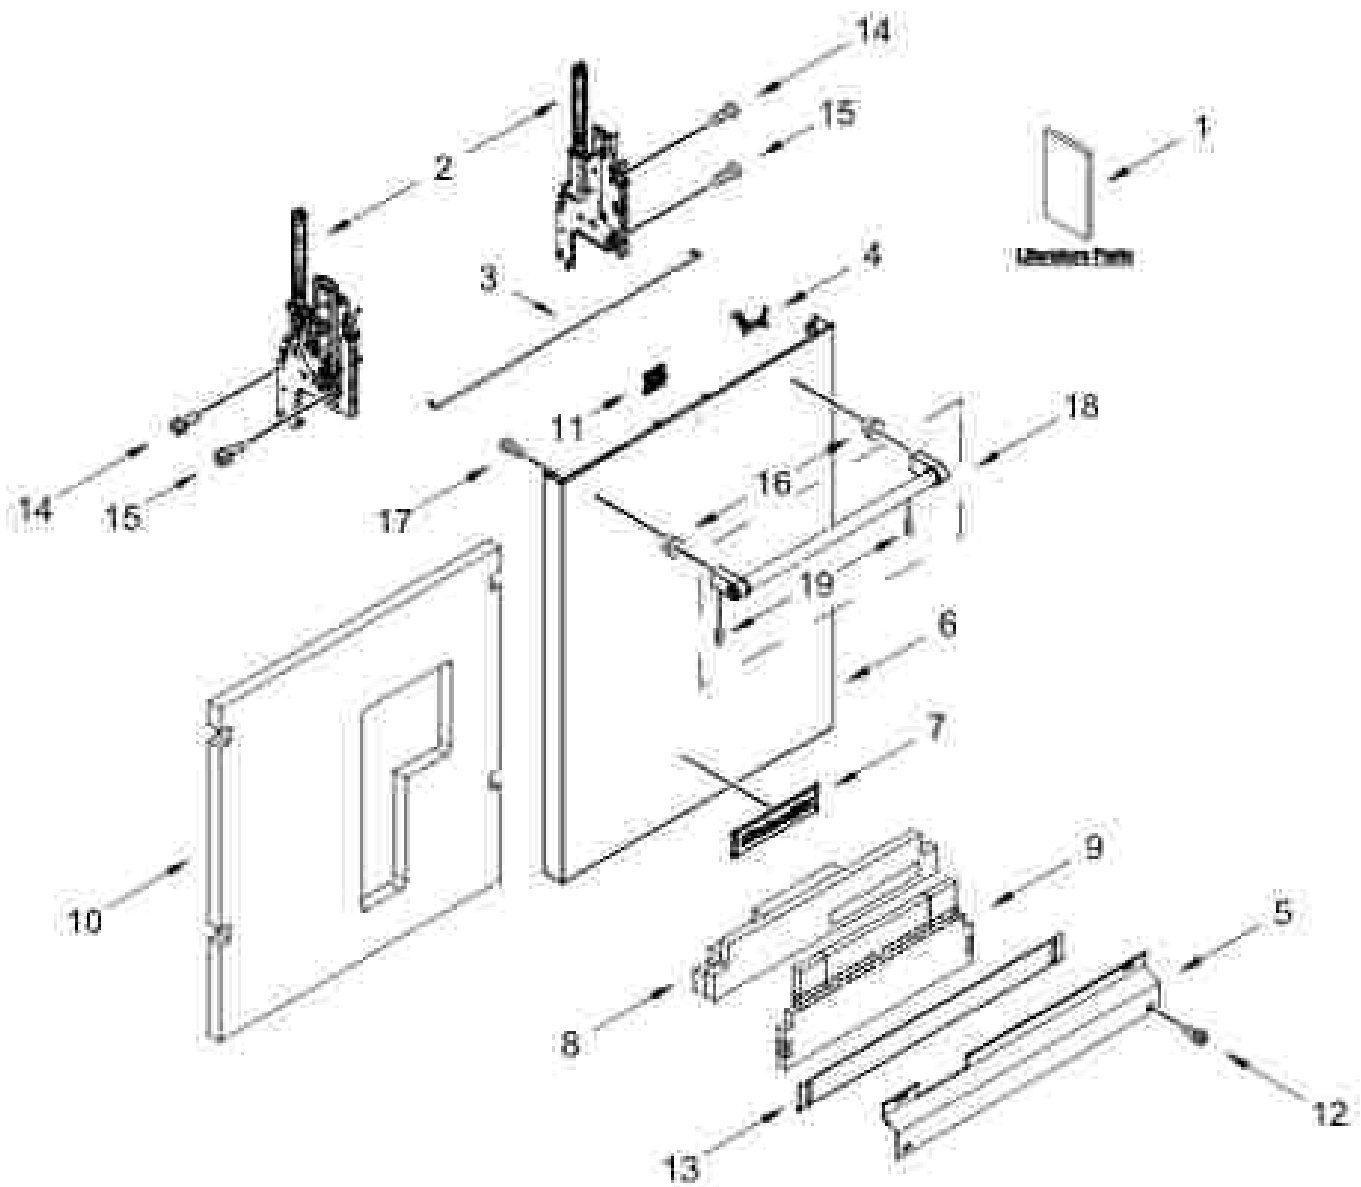

DOOR AND PANEL PARTS

<u>Qty.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Qty.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts:	5		Front Panel (includes	13		Toe Panel
	W11323334	Owners Manual		W11524346	Stainless		W11457713	Black
	W11333312	Energy Guide	7	W112313573	Handleplate	14	W11354553	Screw
	W11356140	Tech Sheet	8	W112313553	Insulation, Multi-Layer	15	3400000	Screw
2		Arm, Hinge	9	W112313554	Insulation, Single	16	W11345553	Stud Mounting
	W11523332	Left Hand		Layer		17	W112313572	Screw
	W11523330	Right Hand				18		Handle Assembly
3	W11377165	Cross Brace, Door	10	W112313553	Insulation, Front Panel		W11417431	Stainless
4	W11102920	Light Pipe	11	W110632757	Barrel Nut, Front Panel	19	W110637133	Self-Scribe
5		Access Panel	12	W11433378	Screw, Black			
	W11106378	Black						


CONTROL PANEL AND INNER DOOR PARTS

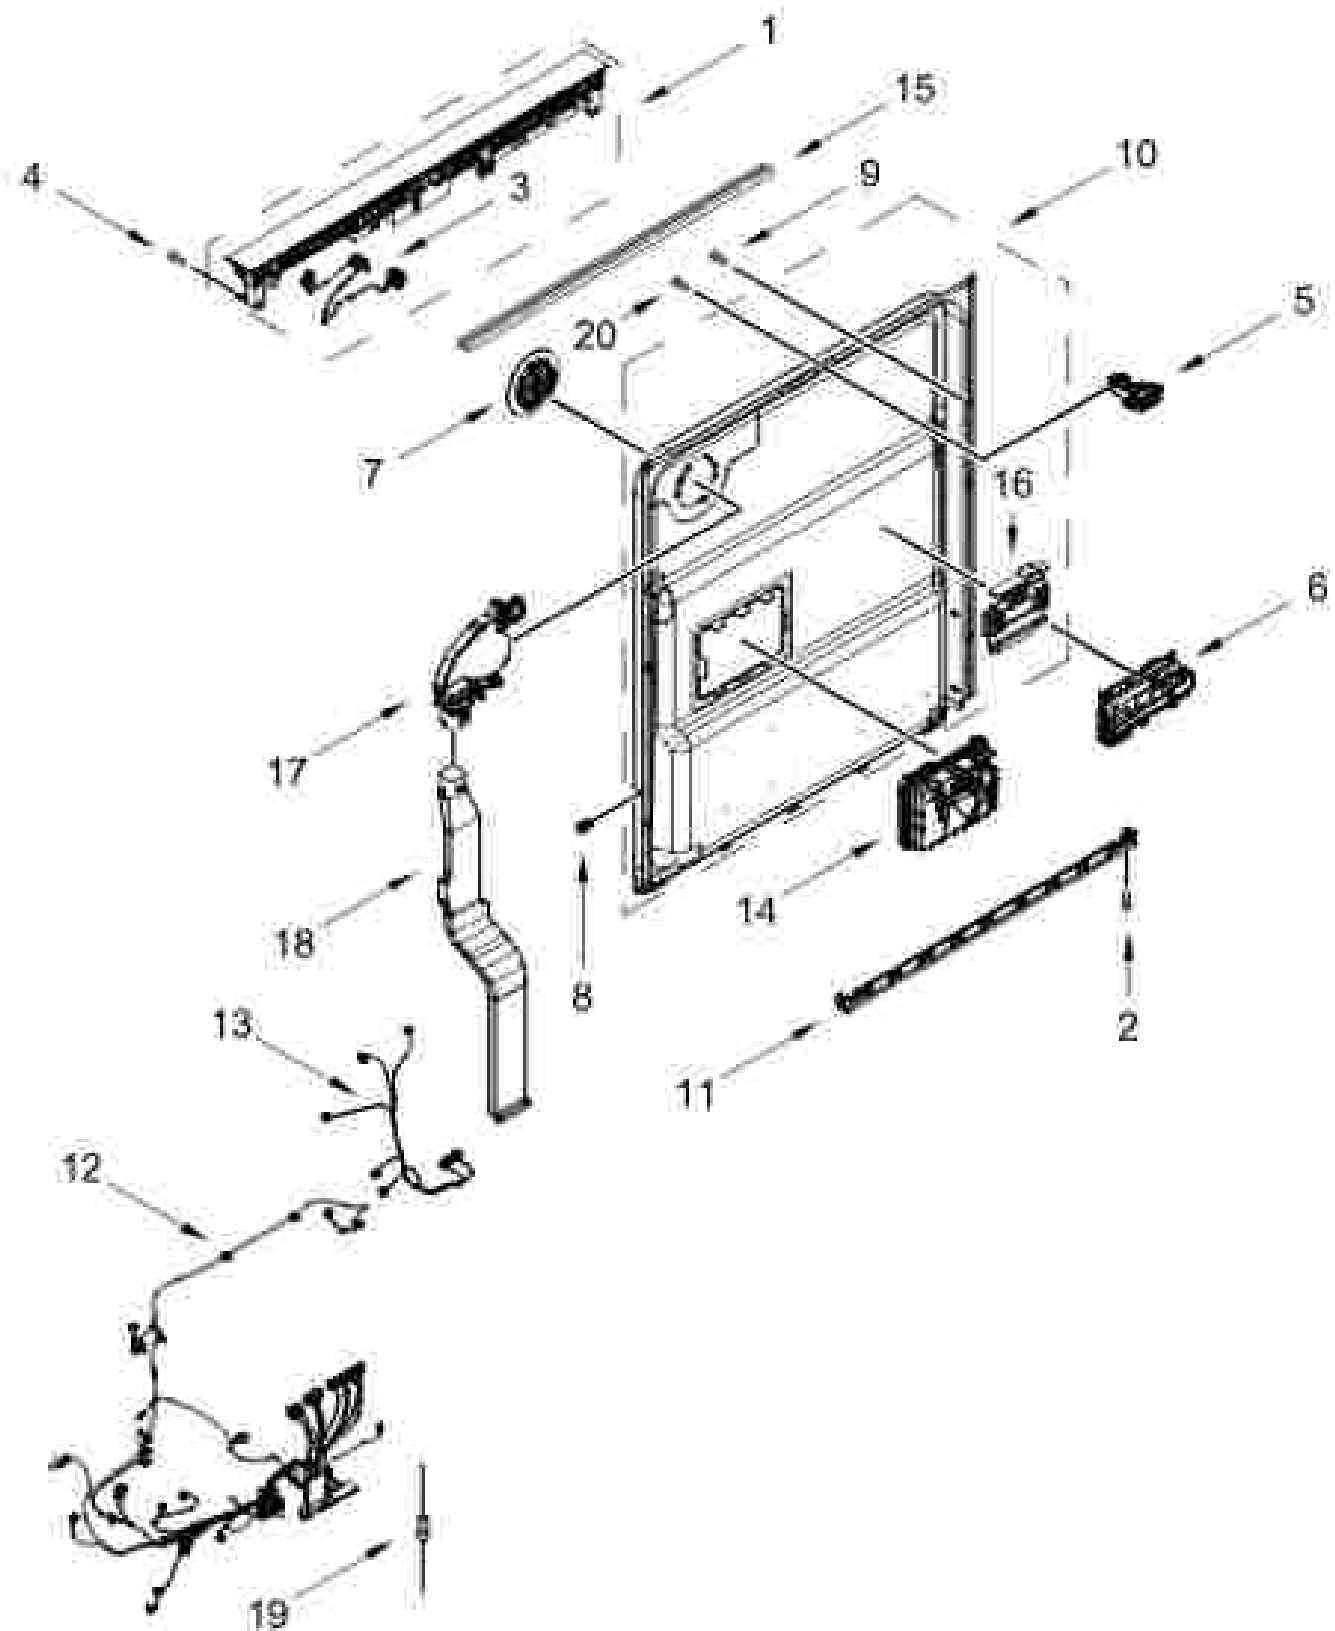

CONTROL PANEL AND INNER DOOR PARTS

Item No.	Part No.	Description	Item No.	Part No.	Description	Item No.	Part No.	Description
1		Console Assembly (Includes Insert)	10	W11080822	Inner Door Assembly	18	W11022734	Door Vent
	W11496609	Block	11	W11080823	Seat Door Bottom	19	W11031508	Fuse, In-Line
2	W110256418	Screw	12	W110543440	Wiring Harness, Main (Includes Thermostat & Fuse)	20	W10342408	Screw
3	W11030843	Jumped Door						
4	W10711284	Screw	13	W11084087	Wiring Harness, Inner Door			
5	W11081534	Latch Assembly (Includes Switch)	14	W11080849	Dispenser Assembly			
6	W11040206	Control Electronic	15	W11090827	Seat Console/Door			
7	W11025634	Seat Vent (Also Order Gasket)	16	W11080885	Hanger Control			
8	3400071	Screw	17	W11036720	Vent Assembly (Includes Fan) (Also Order Gasket)			
9	W10348408	Screw						


TUB AND FRAME PARTS

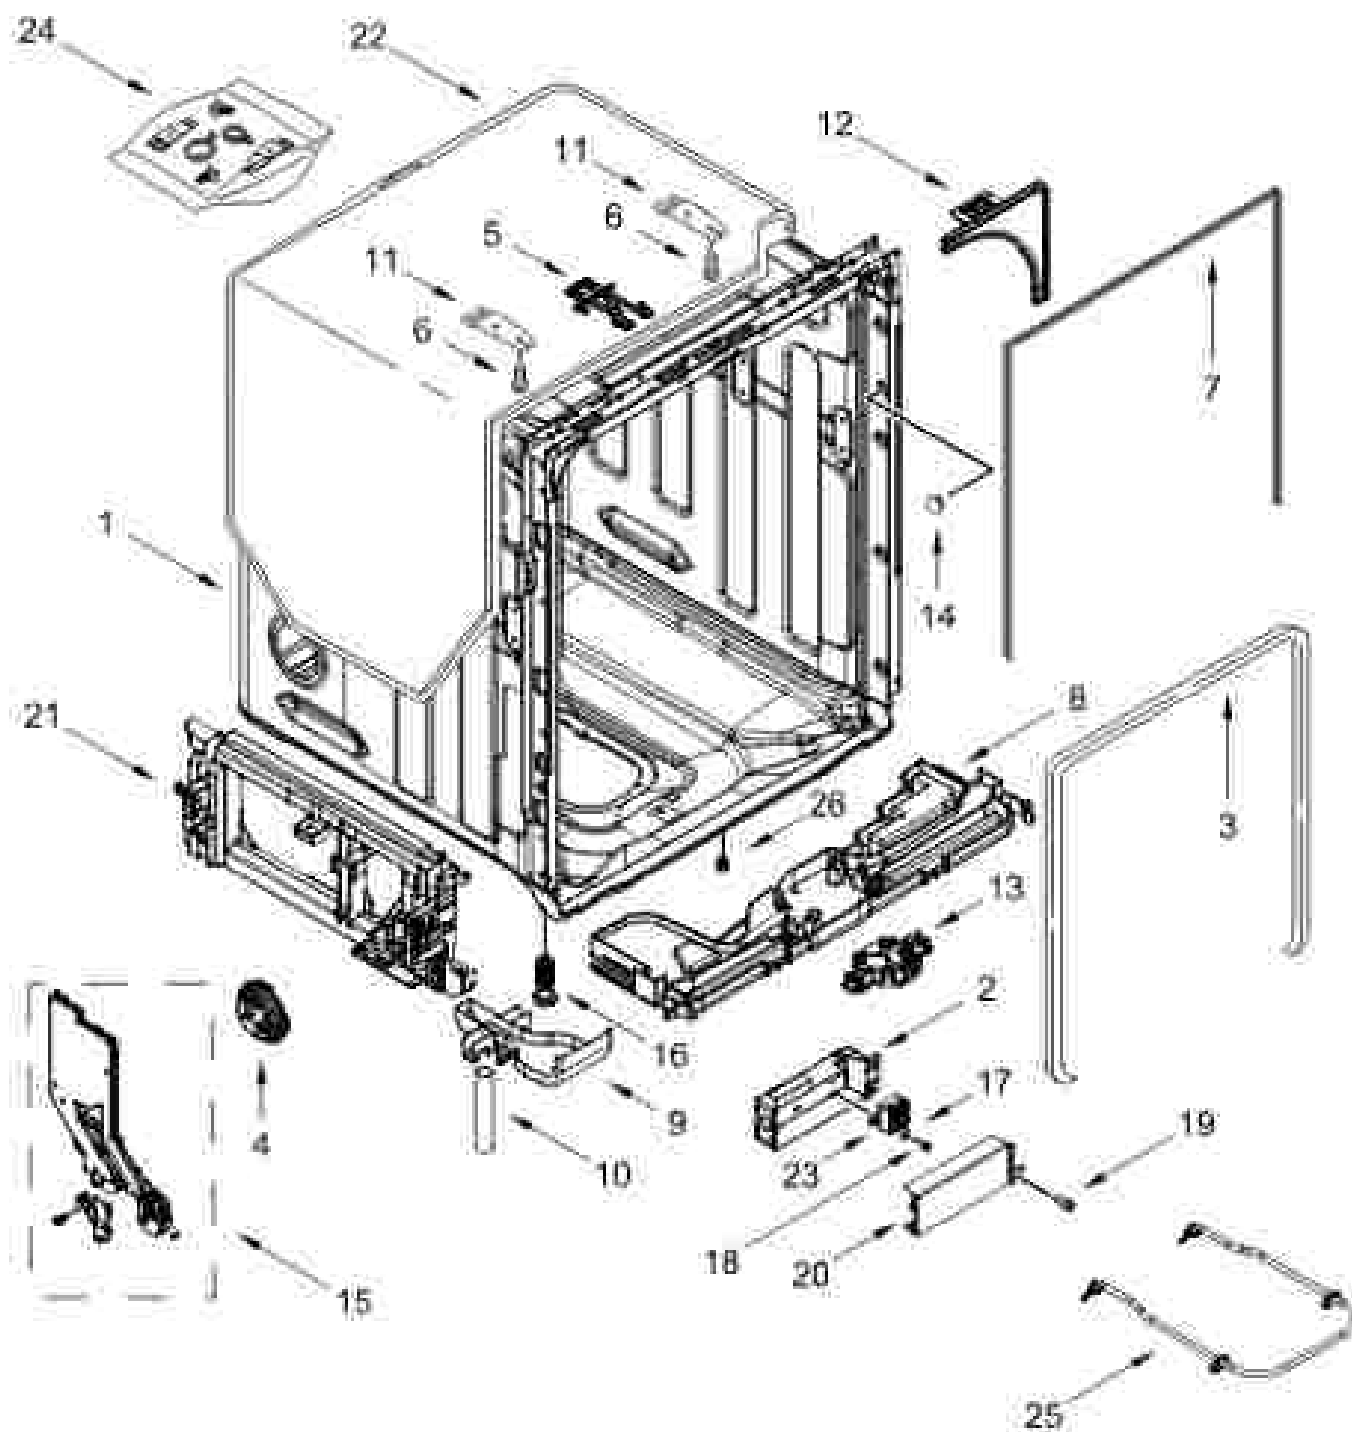

TUB AND FRAME PARTS

Item No.	Part No.	Description	Item No.	Part No.	Description	Item No.	Part No.	Description
1	W11122458	Tub Assembly (includes gasket)	13	W11036176	Float Switch	24	W11362500	Miscellaneous Parts Bag (Contains 2 Screws, 2 Clamps, & 2 Brackets)
2	W11226744	Base, Terminal Box	14	W11184382	Plug, Tub	25	W11522143	Heater Element Assembly
3	W11035386	Gasket, Tub	15	W11429970	Water Inlet Assembly	26	3400032	Screw
4	W11429974	NUL Water Inlet	16	W11433388	Leg, Leveling			
5	W11050487	Strike, Latch	17	3373126	Wasket, Fringed Cup			
6	W11258374	Screw	18	3400014	Screw, Grounding			
7	W11166081	Seal, Cabinet	19	W11277003	Screw			
8	W11025382	Drip Tray	20	W11226745	Cover, Terminal Box			
9	W11025383	Funnel, Overfill Protection	21		Side Support, Tub			
10	W11025388	Funnel Extension		W11520522	Left Hand			
11	3268145	Bracket, Undercounter		W11520520	Right Hand			
12	W11166063	Cover, Tub Corner	22	W11221821	Shield, Top Sound			
			23	W11132441	Terminal Block			


PUMP, WASHARM AND MOTOR PARTS

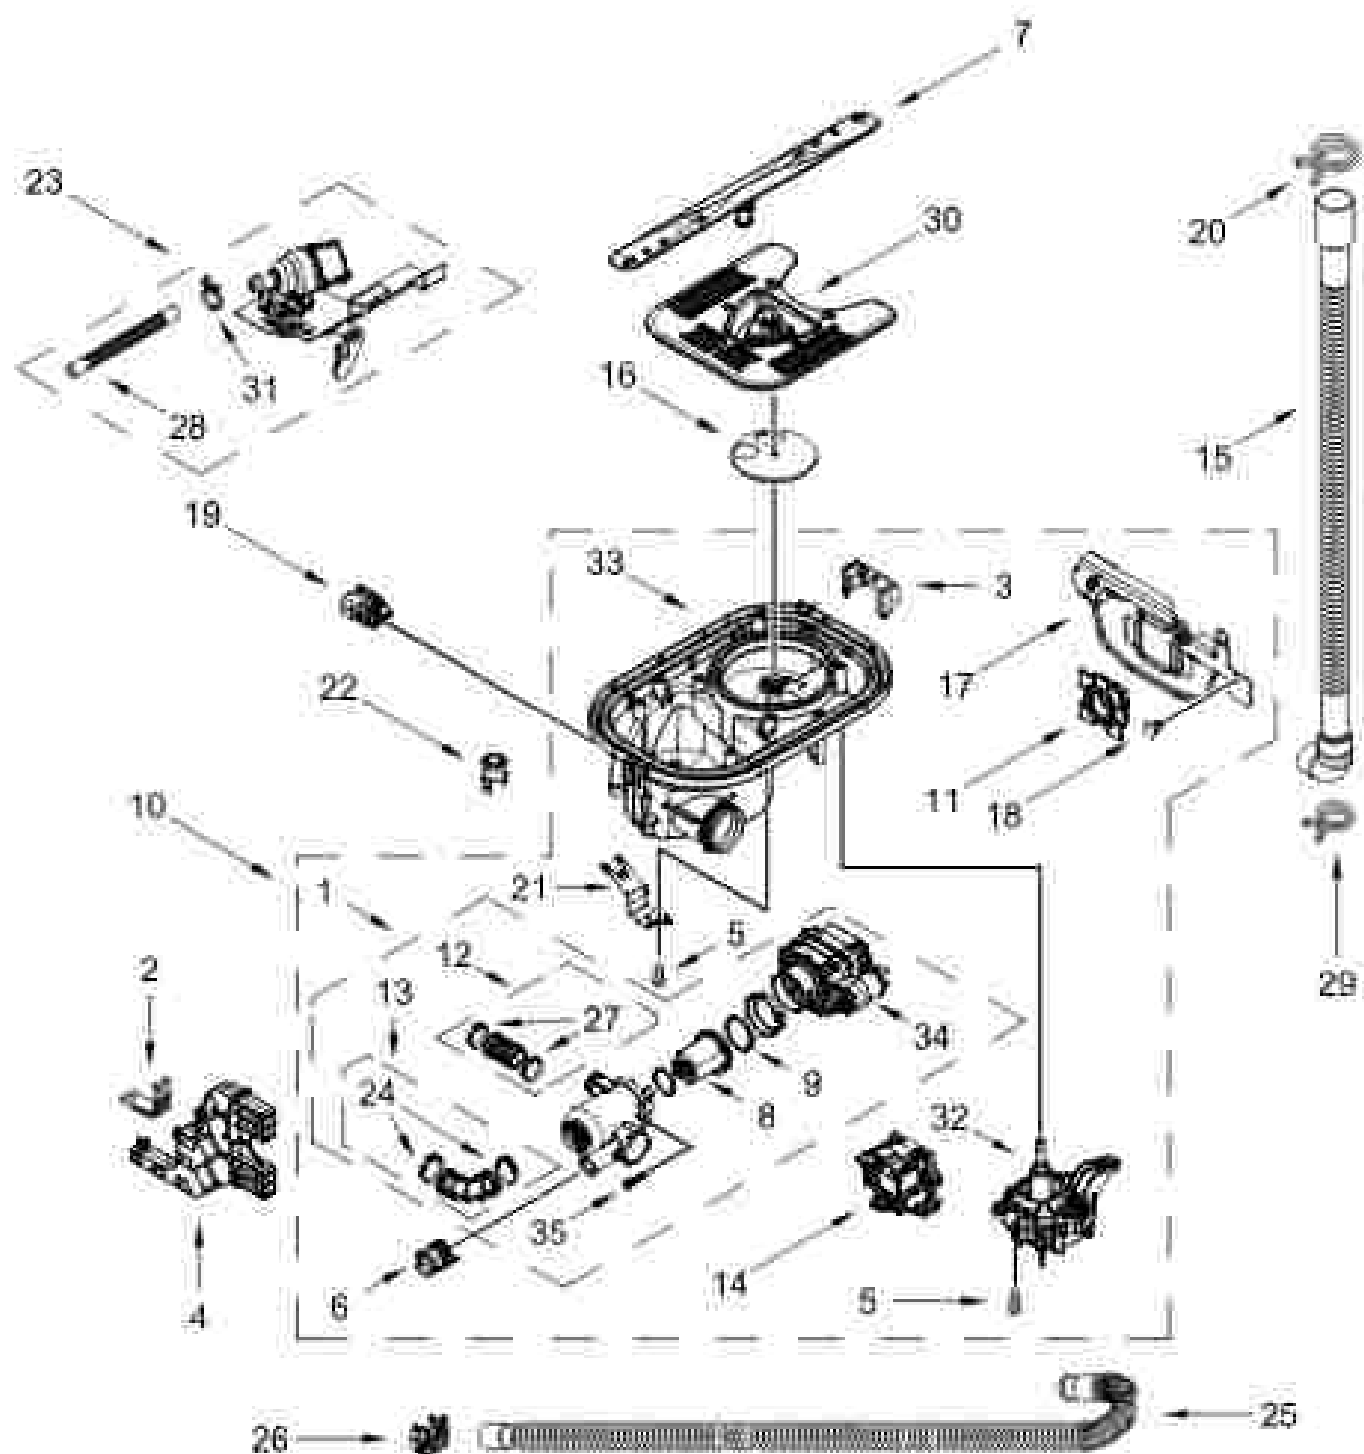

PUMP, WASHARM AND MOTOR PARTS

Item No.	Part No.	Description	Item No.	Part No.	Description	Item No.	Part No.	Description
1	W11122133	Pump Assembly	13	W10900337	Hose, Bottom	24	W11122351	Camp. Hose
2	W11254332	Isolator, Front Motor	14	W110335723	Motor, Drain	25	W110335151	Hose
3	W10331545	Diffuser, Inlet	15	W11121134	Hose, Drain	26	W110335143	Clp. Hose
4	W11254335	Hanger, Front Motor	16	W10333433	Disc, Diverter	27	W13455555	Camp. Hose
5	5T41232	Screw	17	W11025553	Bracket, Rear Motor	28	W110335237	Hose, Inlet
6	W10331547	Check Valve, Drain	18	W11413271	Fastener	29	W11235575	Camp. Hose
7	W11043455	Wash Arm Assembly	19	W11125174	Indicator, Optical/Wash	30	W11033554	Grate
8	W11103555	Filter Assembly	20	370445	Camp. Hose	31	371305	Camp. Hose
9	W10330333	Reg. Valve	21	W11153475	Bracket, Thermostat	32		Diverter Valve Motor (Not Serviced)
10	W11345225	Motor & Pump Assembly	22	W11153055	Thermostat (Included with Main Wiring Harness)	33	W11034555	Burns (Includes Seal and Diverter)
11	W11035553	Isolator, Rear Motor	23	W11033570	Fill Valve Assembly	34	W15753575	Capacitor
12	W11250335	Hose, Pressure				35	W10457002	Screw


UPPER WASH AND RINSE PARTS

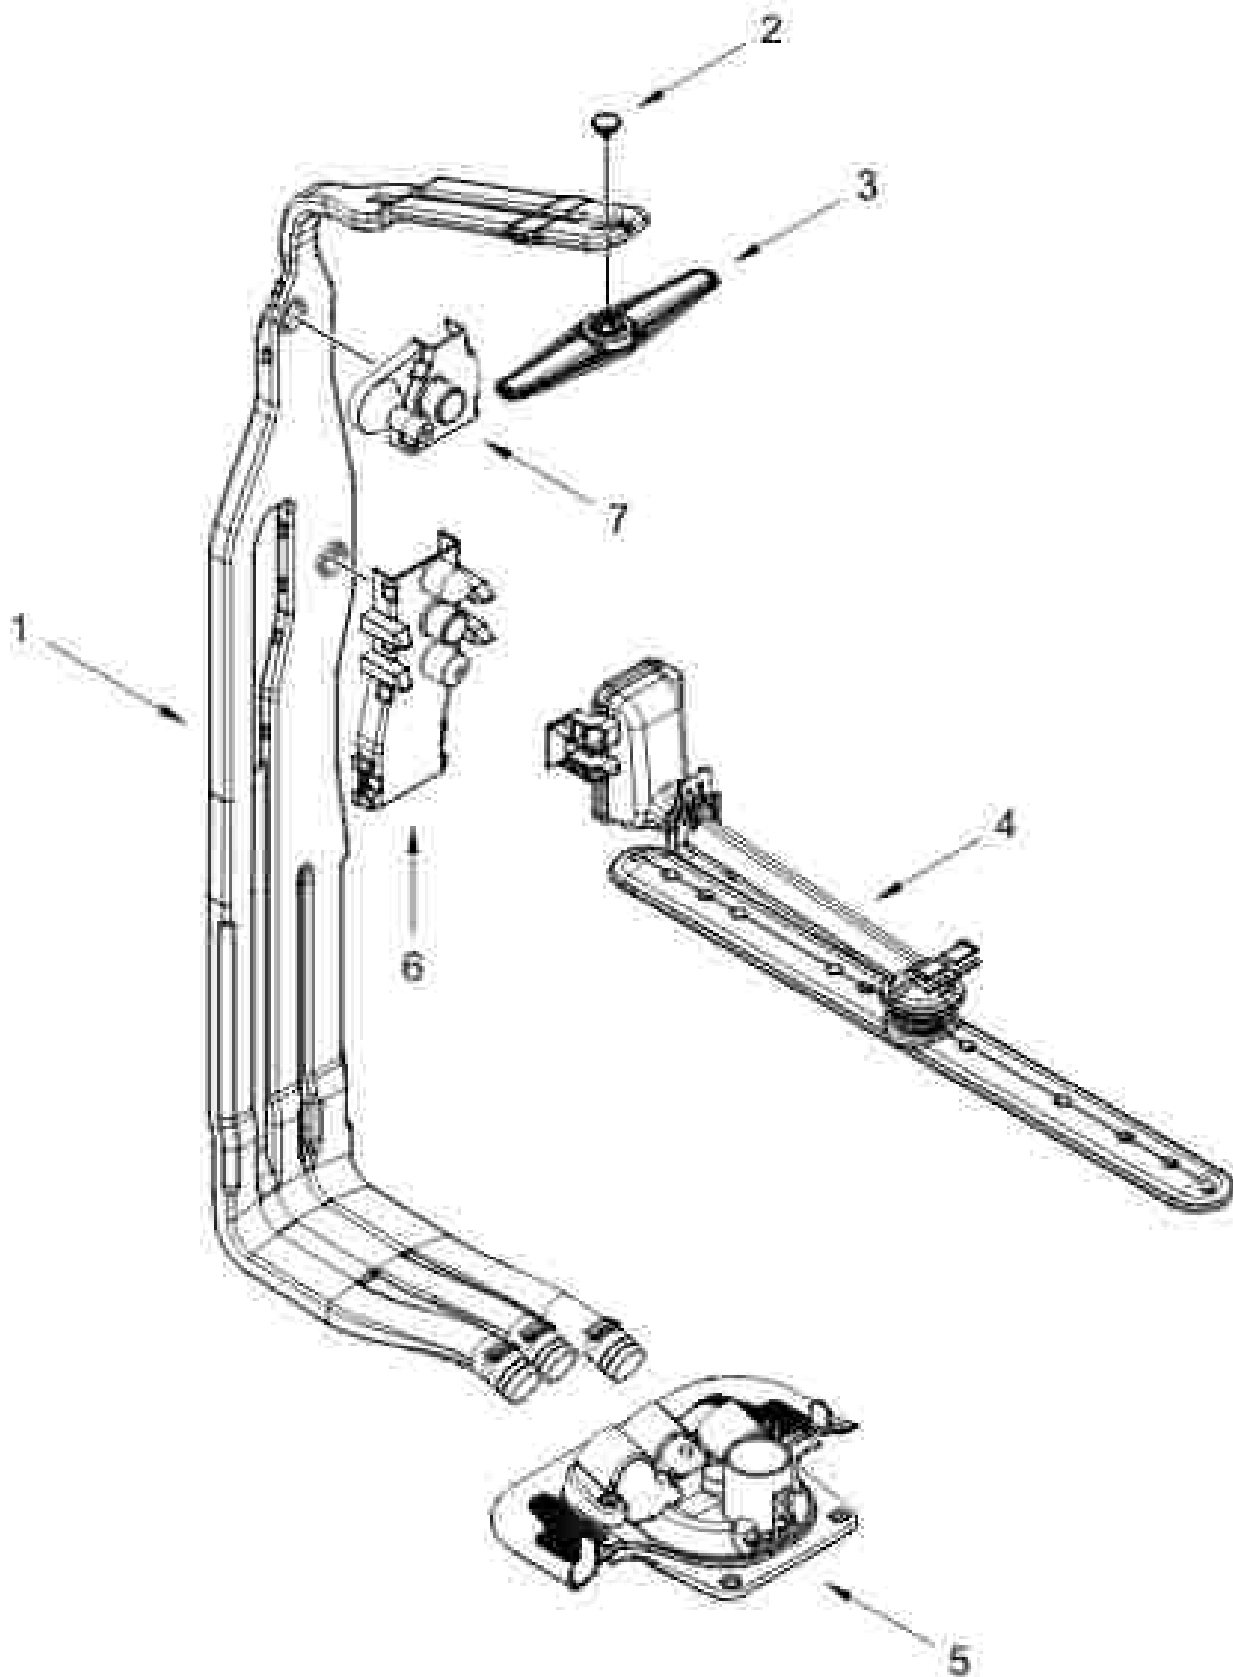

UPPER WASH AND RINSE PARTS

<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10374330	Feed Tube Assembly	4	W1174340	Upper Sprayer Assembly	6	W10852638	Retainer, Docking (2nd Level)
2	W11036638	Retainer	5	W10303455	Cover, Diverter	7	W10852639	Retainer, Docking (3rd Level)
3	W11036652	Sprayer, Third Level						


UPPER RACK AND TRACK PARTS

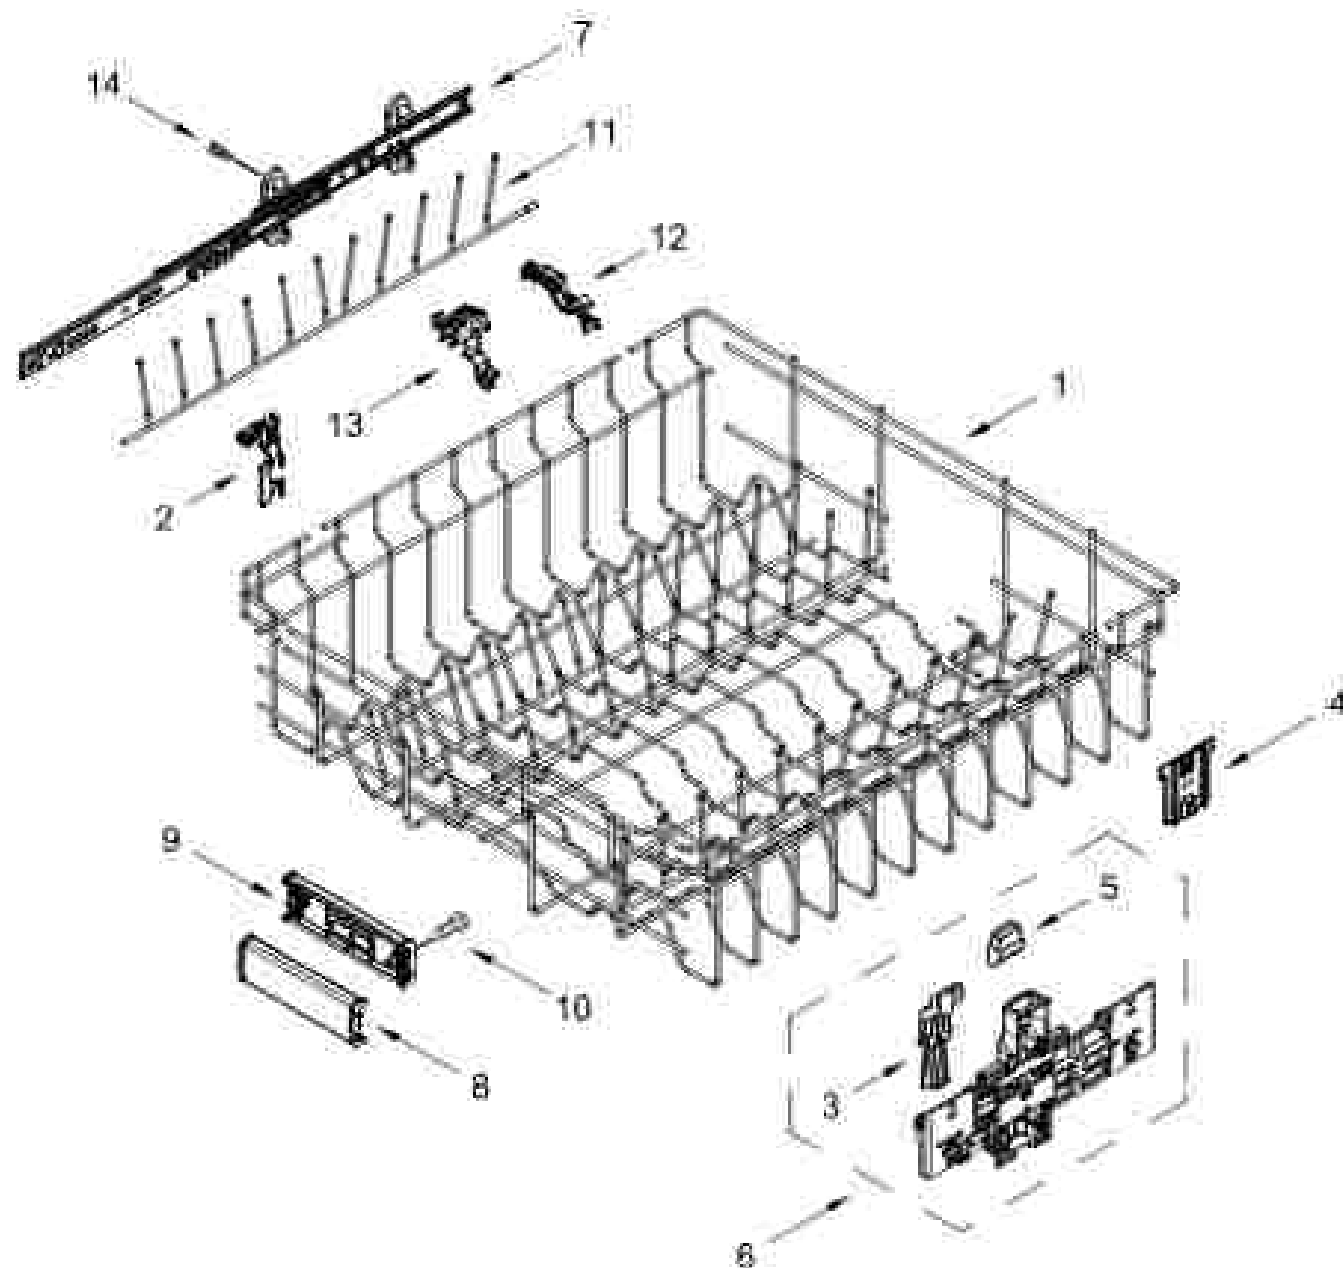

UPPER RACK AND TRACK PARTS

Item No.	Part No.	Description	Item No.	Part No.	Description	Item No.	Part No.	Description
1	W12347875	Distrack, Upper	7		Track, Assembly	13	W11179755	Postholder
2	W11312237	Clp, Stemware		W11212732	Left Hand	14	W11172270	Scow
3	W11100172	Leveler, Adjuster Arm		W11212734	Right Hand			
4	W11180603	Clp, Adjuster Arm	8	W11265552	Handle, Distrack Front			
5	W11357533	Button, Adjuster Arm	9	W11265551	Handle, Distrack Rear			
6		Adjustment Assembly	10	3741232	Scow			
	W11265552	Left Hand	11	W11185535	Tire Rack Fold Down			
	W11265551	Right Hand	12	W11179753	Clp, Pinch			


LOWER RACK PARTS

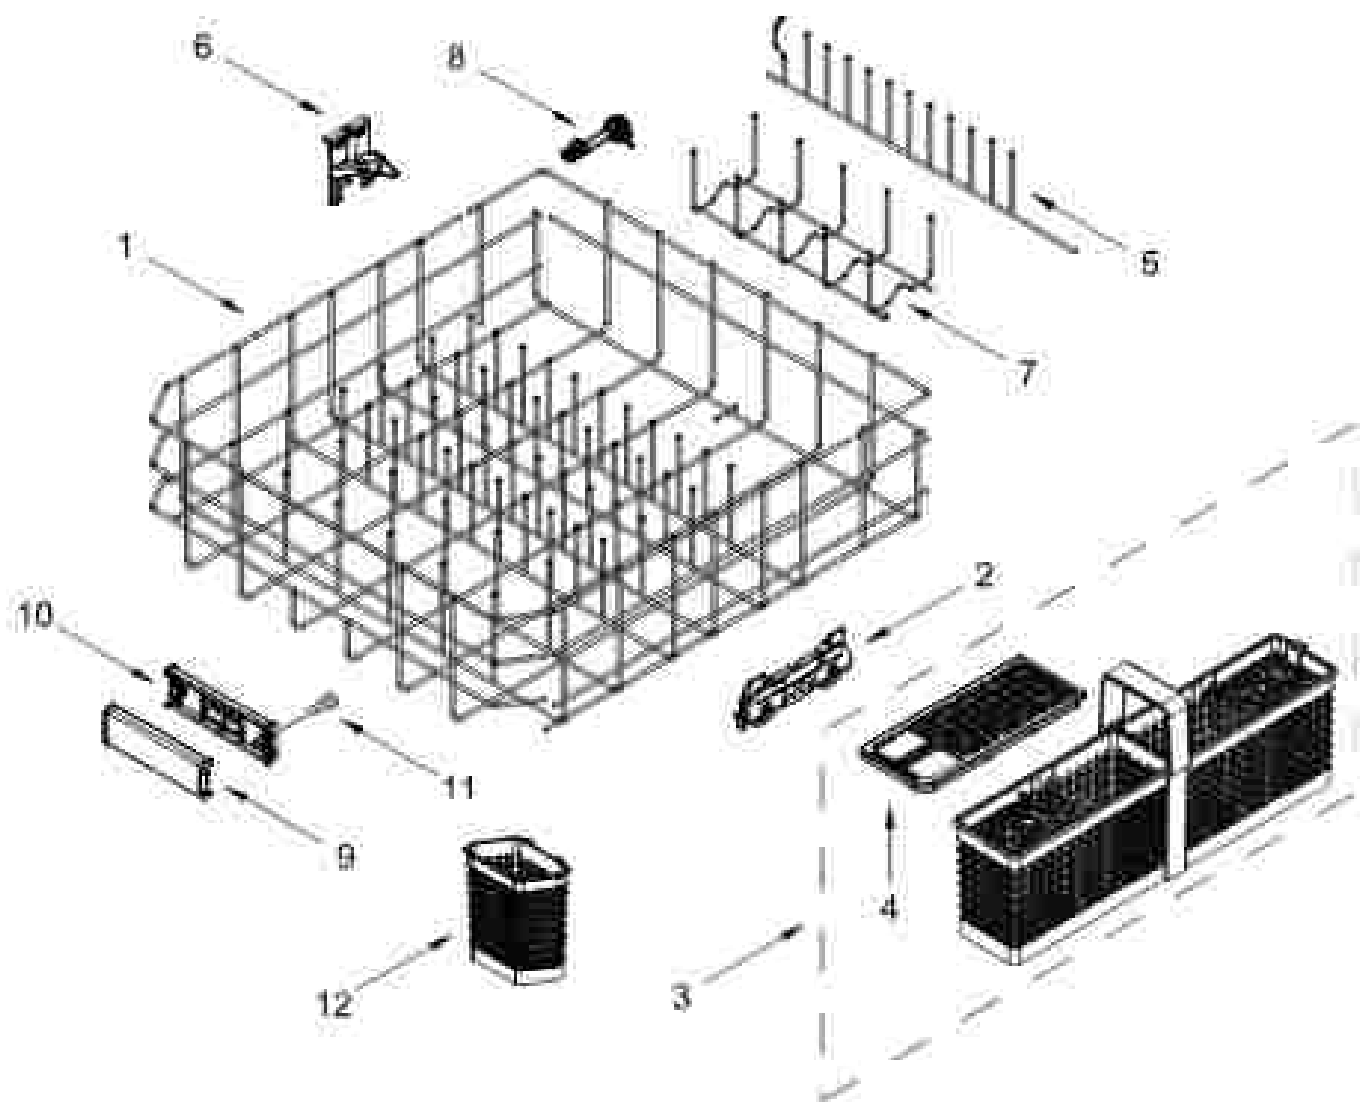

LOWER RACK PARTS

<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11234524	Dishtack, Lower	5	W12666272	Tine Row, Fold Down	9	W11262825	Handle, Dishtack Front
2	W11123746	Wheel & Transport Assembly	6	W11266658	Retainer, Flex Row	10	W11266659	Handle, Dishtack Rear
3	W11251759	Structure Support Assembly	7	W11606883	Tine Row, Sliding	11	ST41032	Screw
4	W11257718	Lid, Silverware Basket	8	W11406375	Retainer, Sliding Tine Row	12	W11257721	Utensil Basket

THIRD LEVEL RACK AND TRACK PARTS

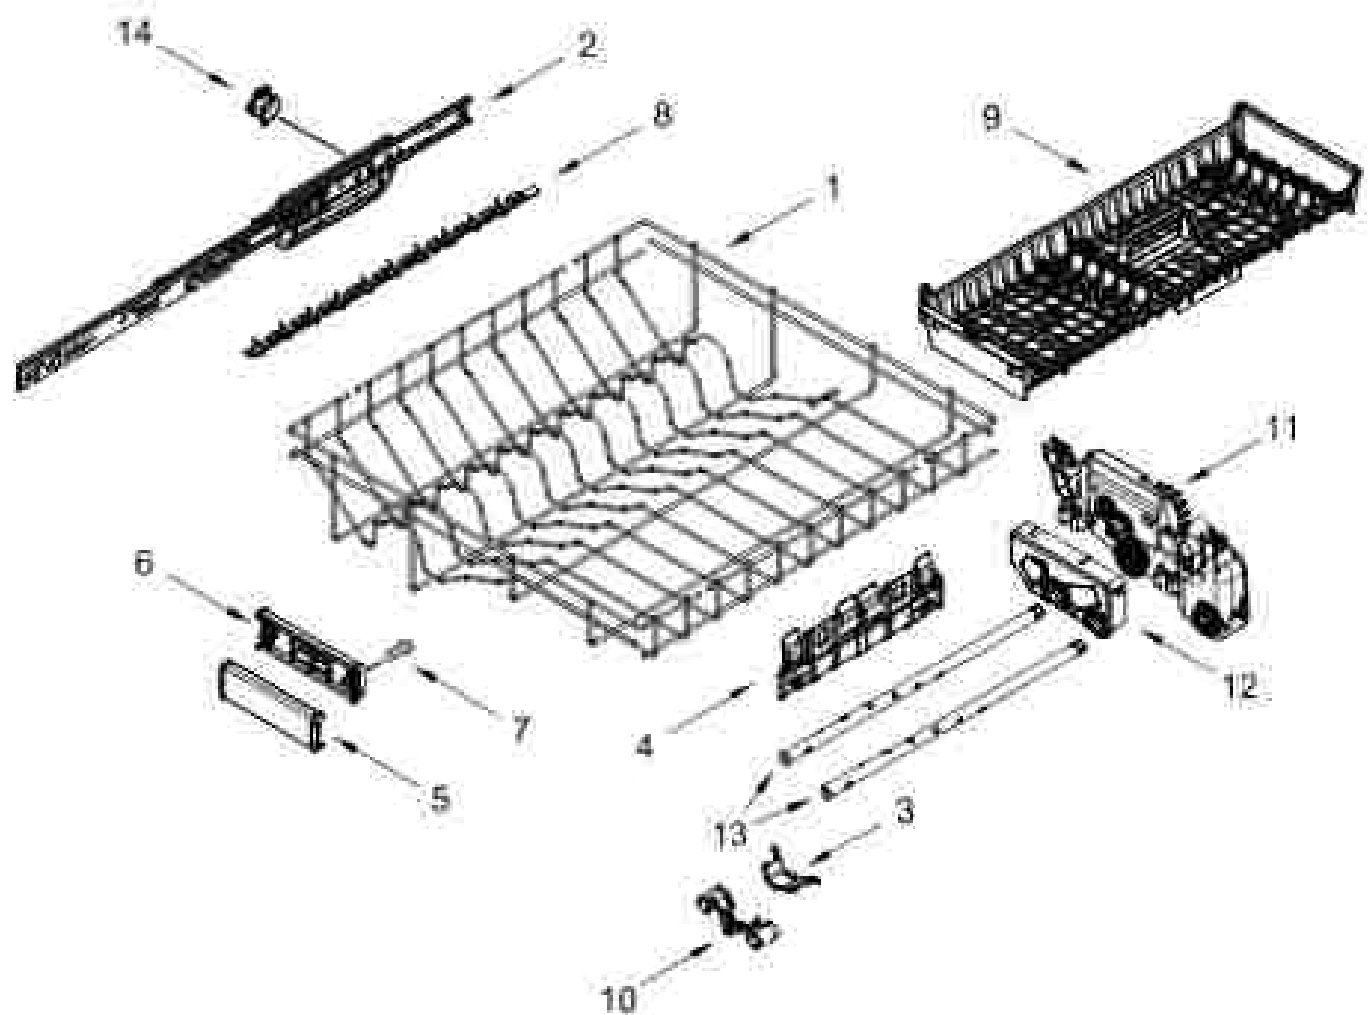

THIRD LEVEL RACK AND TRACK PARTS

<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11127727	Rack, Third Level
2		LED Lt. Track Assembly
	W11047613	Left Hand
	W11047615	Right Hand
3	W11154071	Hanger, Tube
4	W11130705	Mount, Dishack

<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5	W11362620	Handle, Dishack Front
6	W11365661	Handle, Dishack Rear
7	5741232	Screw
8	W11200101	Cop Guard
9	W11067623	Blowware Tray
10	W12830577	Bracket, Front Hanger

<u>Item</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10830823	Drive Box Assembly Manifold
12	W11101880	Cover, Wash Tube
13	W10821884	Tube, Wash
14	W10900244	Nut, Top

OPTIONAL PARTS (NOT INCLUDED)

<u>Item No.</u>	<u>Part No.</u>	<u>Description</u>
	4355277	Sensor Kit
	W11381554	External Drain Hose, 12 FT.
	W1135511	Power Cord Kit (Straight)
	W1135514	Power Cord Kit (Right Angle)
	4355573	Steam Relief, Power Cord (Metallic)
	W1355155	Compression Hose Fitting, (Water Line)
	W10278335RE	Fill Hose Kit