




ELECTRIC COOKTOP

MODELS:

MEC8836HS01 (Stainless)

COOKTOP PARTS

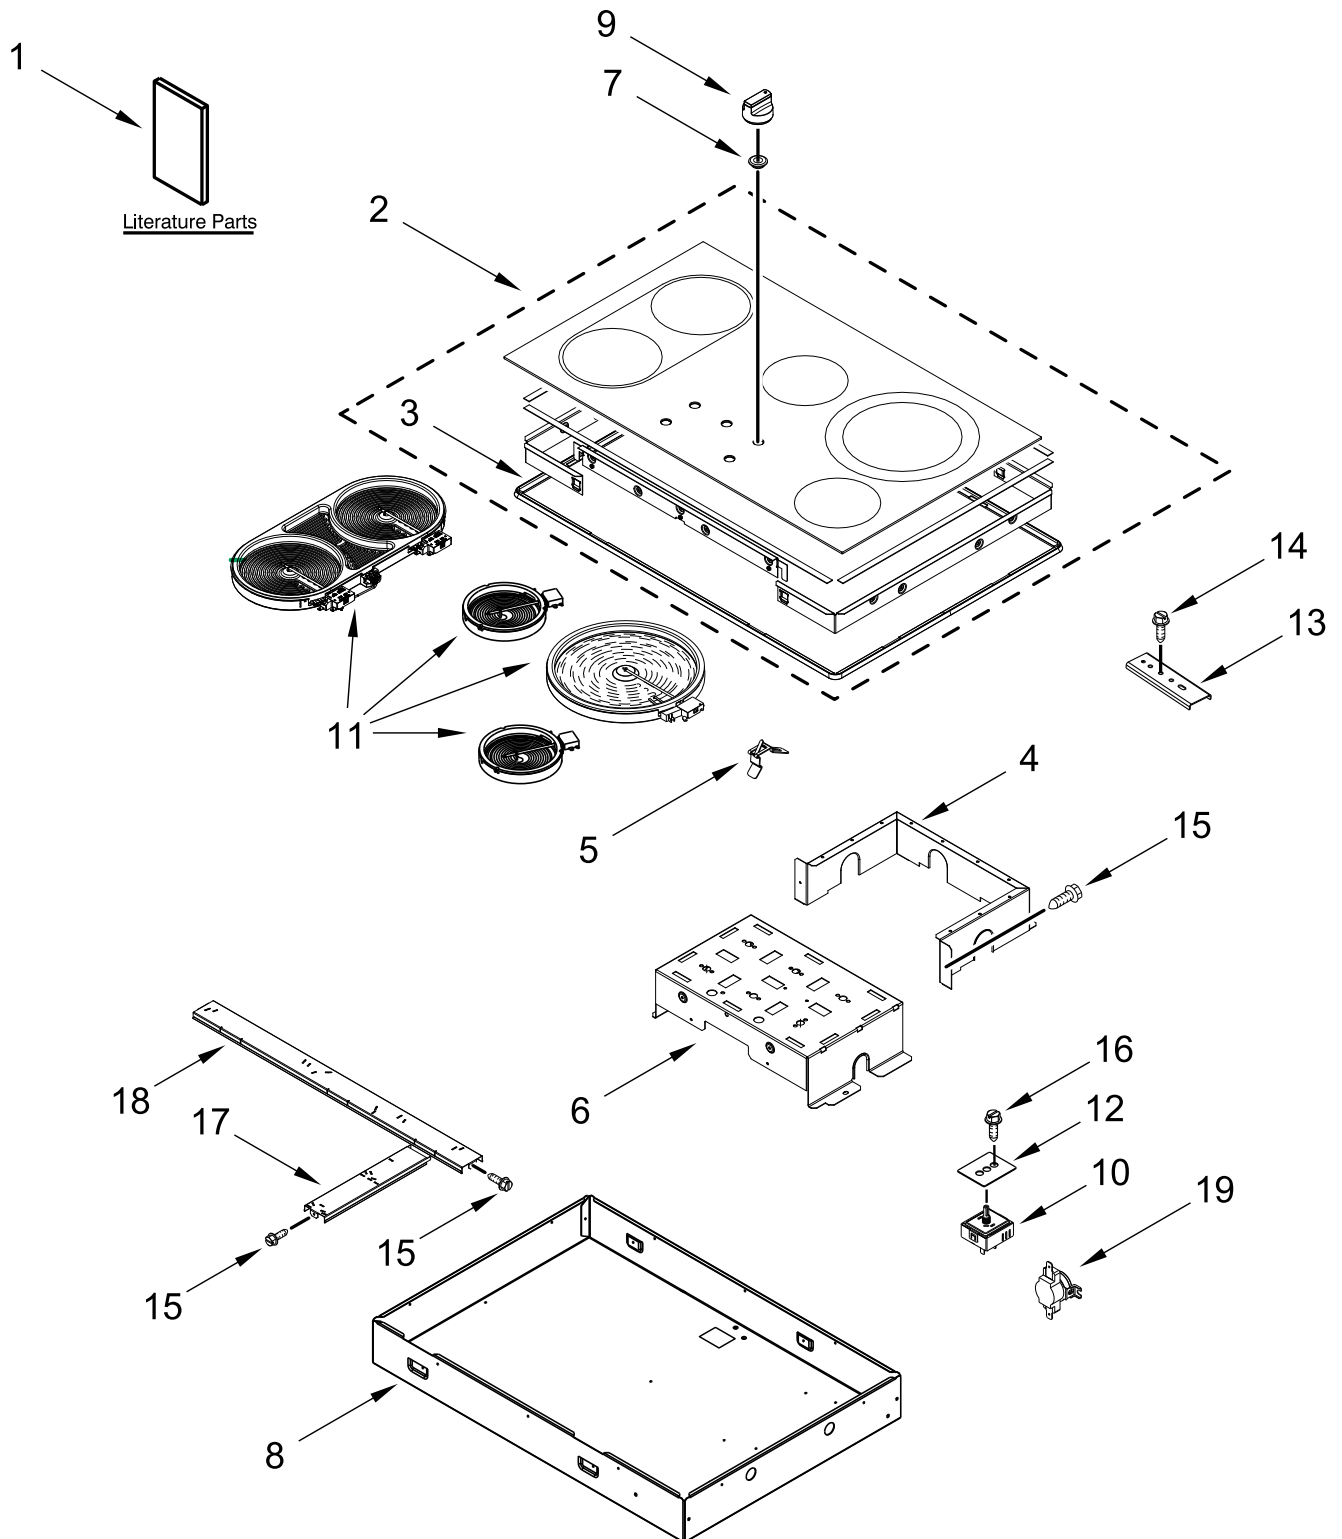

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	10	W10437092	Switch, Infinite (Left Front and Right Rear)	14	3400093	Screw
	W11439185	Installation Instructions				15	7101P426-60	Screw
	W11245478	Instructions, Undercounter Installation		W10843843	Switch, Infinite (Left Rear)	16	7101P309-60	Screw
	W11255747	Use & Care Guide		W10578768	Switch, Infinite (Center Rear)	17	W11110712	Rail, Short
	W11238364	Diagram, Wiring		W10437094	Switch, Infinite (Right Front)	18	W11175343	Rail, Horizontal
2		Cooktop				19	W10471482	Switch, TOD High Limit
	W11269300	Stainless	11	W10248259	Element, Bridge (Left Front & Left Rear)			FOLLOWING PARTS NOT ILLUSTRATED
3		Trim, Stainless (Not Serviced)				W11110559		Harness, Main
4	W10311897	Sheild, Outer		8273994	Element (1200W) (Center Rear)	3192439		Seal, Limiter
5	W10225448	Spring, Element		W10342780	Element (1300W) (Right Front)	7101P426-60		Screw (For Main Harness)
6	W11215839	Plate, Switch		W10711900	Element (3000W) (Right Rear)	8286642		Tape, Foam
7		Grommet				W11183280		Insulation, Cooktop (Knob)
	W10293874	Black						
8		Box, Burner (Not Serviced)	12	3183956	Seal, Switch Cover			
9		Knob, Control	13	4455917	Bracket, Cooktop Mounting			
	W10859808	Stainless						

OPTIONAL PARTS (NOT INCLUDED)

Illus.
No.

Part No.

Description

FOLLOWING PARTS
NOT ILLUSTRATED

ACCESSORIES

W10355051 Cleaner, Cooktop

W11042470 Cooktop Cleaning Kit