




**ELECTRIC RANGE
(Fingerprint Resistant)**

MODELS:

WFE535S0LZ3 (Stainless)


COOKTOP PARTS

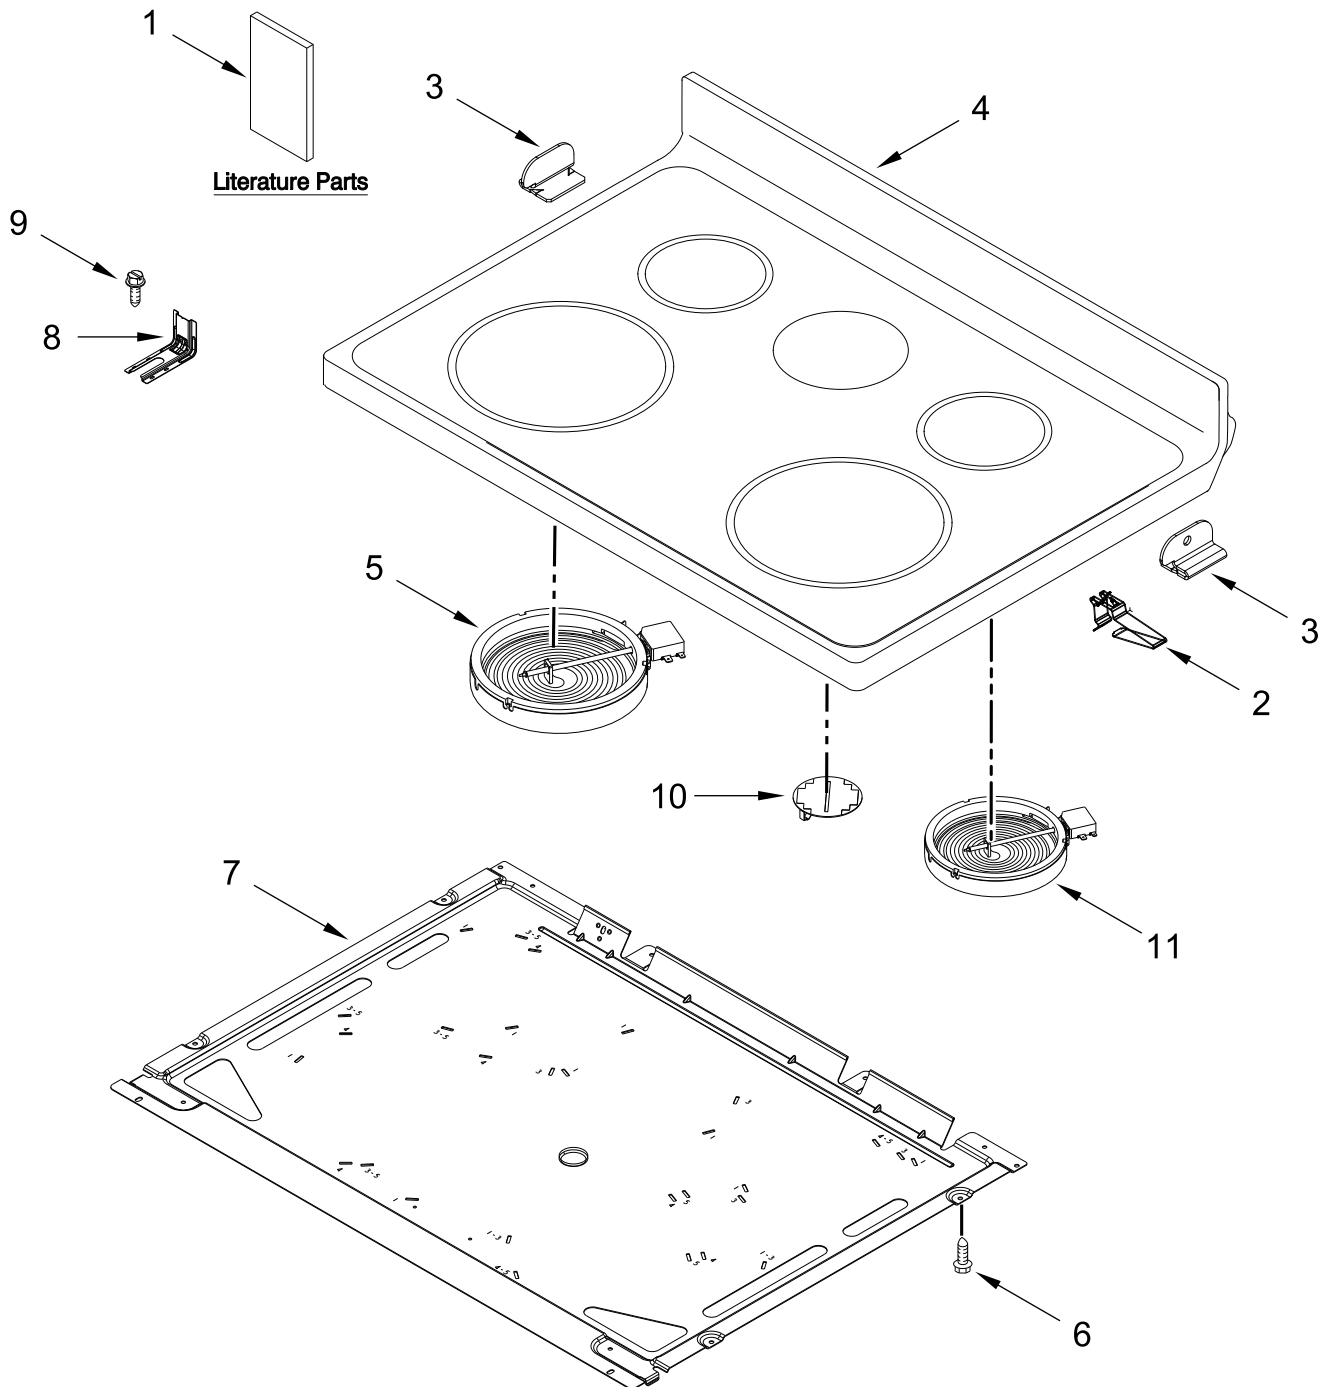

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	3196169	Screw	11	8273994	Element (1200W)
	W11443024	Owners Manual	7	W10691223	Pan, Radiant Element			(Left Rear, Right Rear)
	W11530281	Quick Start Guide	8	W11379945	Bracket, Anti-Tip			FOLLOWING PARTS NOT ILLUSTRATED
	W11401734	Tech Sheet	9	7101P485-60	Screw, Anti-Tip Kit	W11452630		Harness, Main
2	W11600012	Spring, Element	10	W11668631	Element, Warm Zone	W11134845		Harness, Cooktop
3	W10607641	Bracket, Cooktop (Left)			(Center)			(Right)
	W10607642	Bracket, Cooktop (Right)				W11134603		Harness, Cooktop (Left)
4		Cooktop				W11598759		Harness, Warm Zone
	W11034833	Black				W11172528		Harness, Hidden Bake
5	W10275048	Element (3000 and 1400W)				W10183541		Clip, Spring Steel
		(Left Front and Right Front)				3196520		Clip, Wire


CONTROL PANEL PARTS

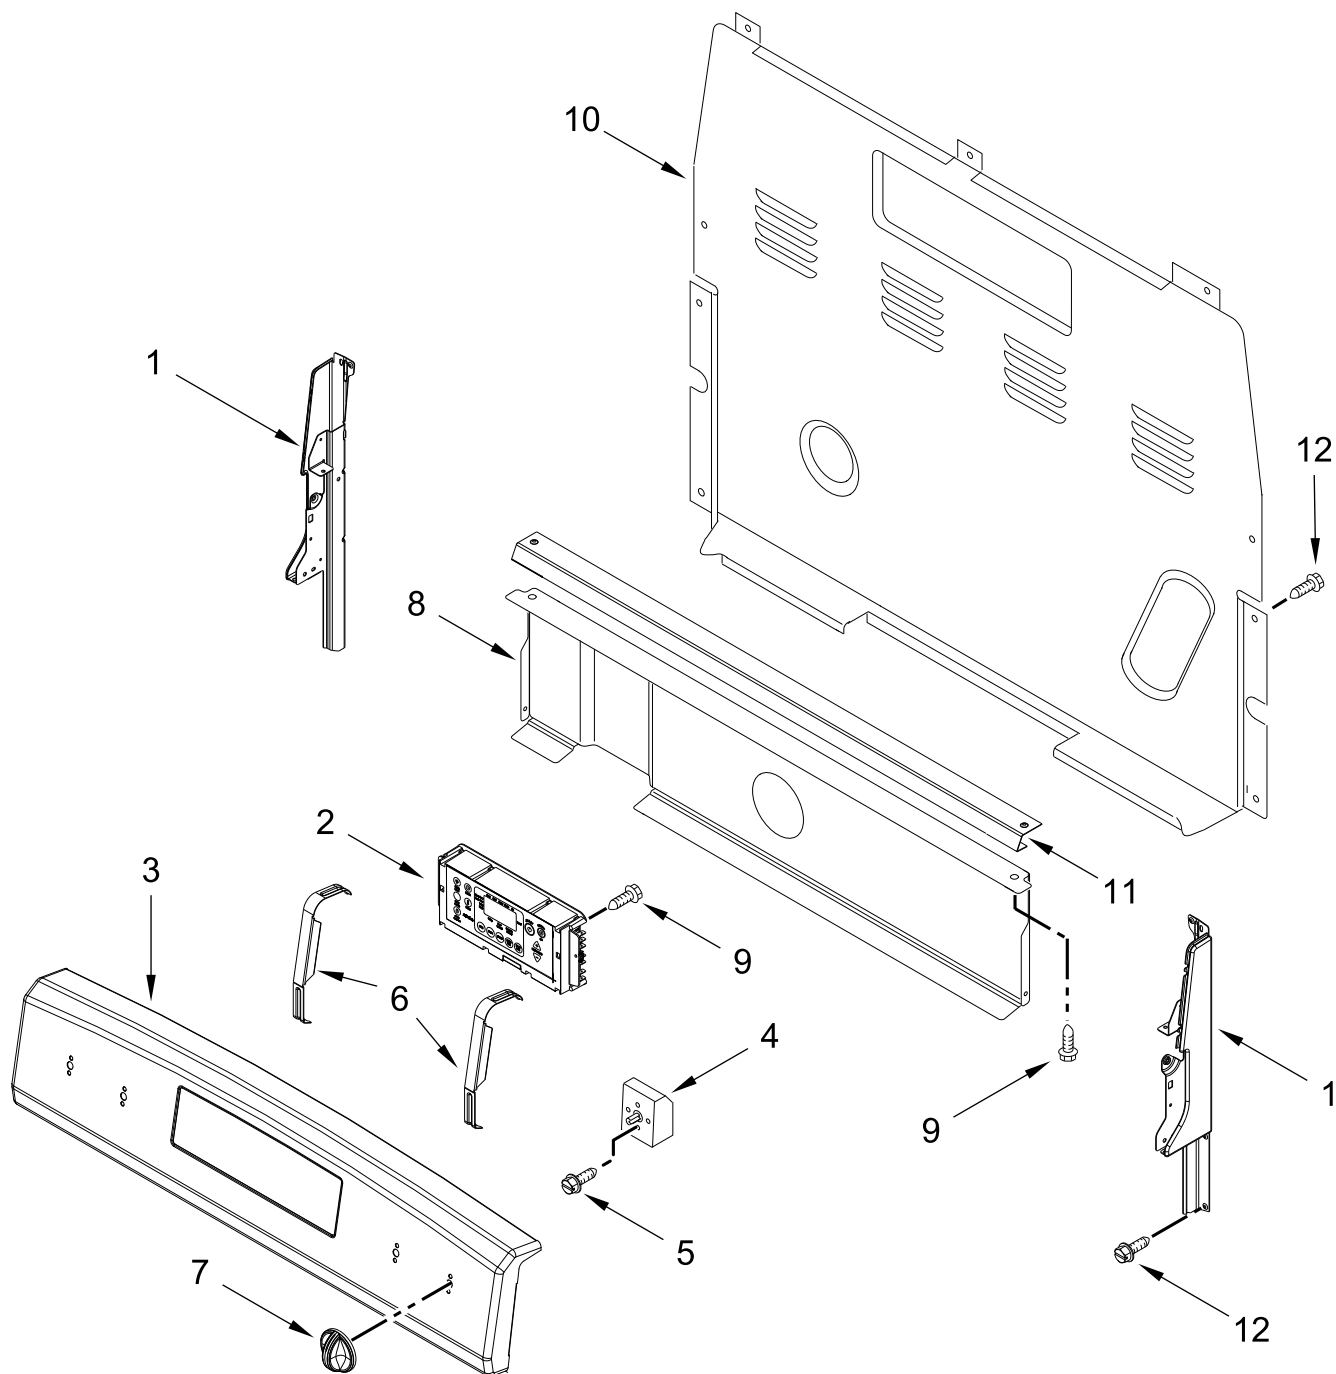

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	7		Knob
	W11130372	Black (Left)			(Left Front and Right Front)		W11022717	Stainless
	W11130379	Black (Right)				8	W10134247	Shield, Heat
2		Control, Electronic (LCX)		3148951	Switch, Infinite	9	3400882	Screw
	W11527158	Black			(Right Rear and Left Rear)	10	8272473	Cover, Upper Rear
3		Panel, Console	5	3196178	Screw	11	W10525121	Bracket, Console Mounting
	W11027376	Stainless	6	W10695491	Bracket, Control	12	3196169	Screw


CHASSIS PARTS

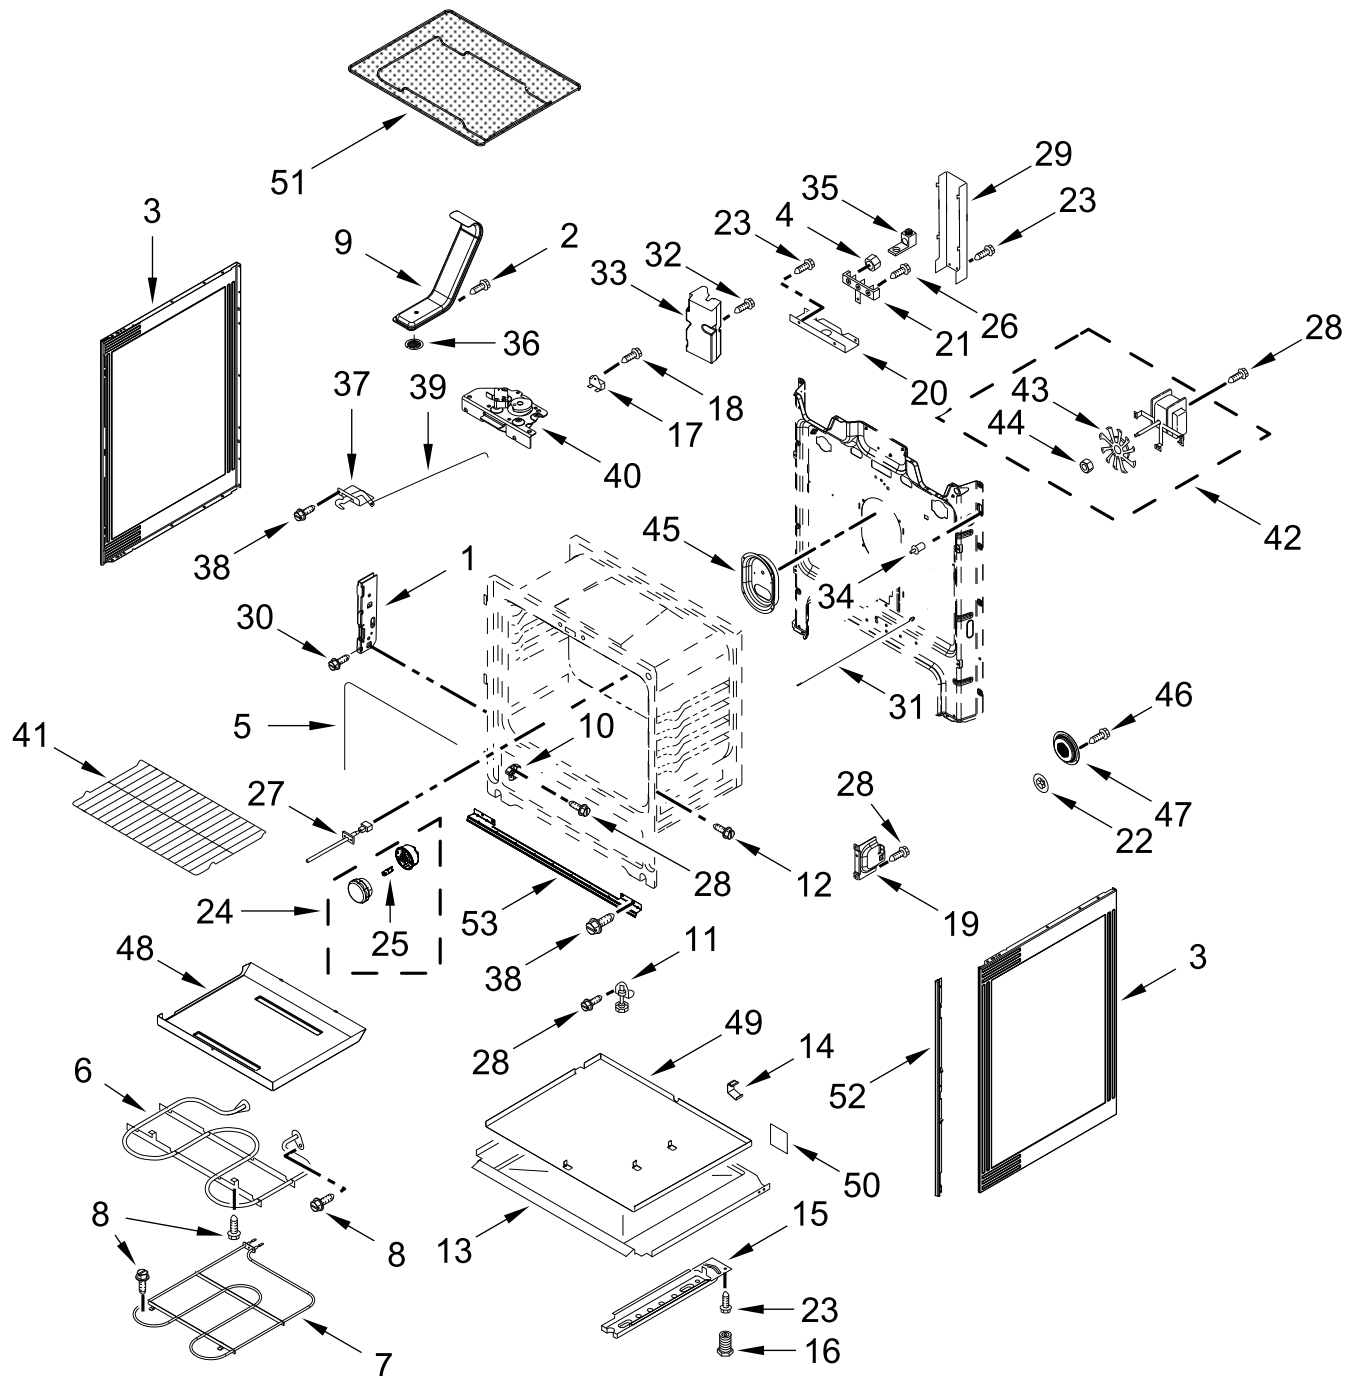

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	21	W10245259	Block, Terminal	42	W11403617	Fan, Convection
2	3196154	Screw	22	3400968	Nut	43	W11425715	Blade, Fan
3		Panel, Side	23	3196178	Screw	44	W11433702	Nut, Acorn (LH)
	W10162245	Black	24	W11634772	Light Assembly	45	W10134126	Bracket, Fan
4	3400029	Nut	25	W10571723	Bulb, Halogen 40 Watts	46	4449809	Screw
5	W11491751	Seal, Door	26	3400016	Screw	47	W10134124	Cover, Conv Fan
6	9757340	Element, Broil	27	W10181986	Sensor, Oven	48	W10183712	Tray, Hidden Bake
7	9755770	Element, Bake	28	3196169	Screw	49	W10134125	Shield, Heat
8	3196174	Screw	29	W10326122	Cover, Terminal Block	50	W10646923	Card, Insulator
9	W10134285	Tube, Vent	30	W10031780	Screw	51	W11661815	Basket, Airfry
10	W10674705	Glide, Drawer Front	31	9757239	Rod, Door Switch	52	W11510560	Barrier Rail, Rubber (Left and Right)
11	W10341186	Front Foot Assembly	32	W11034869	Screw	53	W11464547	Bracket, Front Frame
12	W10067840	Screw	33	W10910404	Counterweight			FOLLOWING PARTS NOT ILLUSTRATED
13	W10134121	Tray, Insulation	34	W11511828	Switch, Door			
14	W10137382	Clip, Panel	35	W10281322	Kit, Bare Wire Adapter Block	W10774939		Insulation, Wrap
15	W10390007	Base Rail Assembly (Right)	36	W11092984	Screen, Vent	W11127324		Insulation, Back
	W10390008	Base Rail Assembly (Left)	37	9761013	Front Door Latch Assembly	W10333344		Insulation, Flue
16	W10058460	Foot, Leveling	38	3196560	Screw			
17	3196548	Fuse, Thermal	39	W10078380	Rod, Latch			
18	3196172	Screw	40	W10107820	Rear Door Latch Assembly			
19	W10404688	Clip, Oven Support	41	W11173792	Rack, Oven			
20	3186034	Bracket, Service						

DOOR PARTS

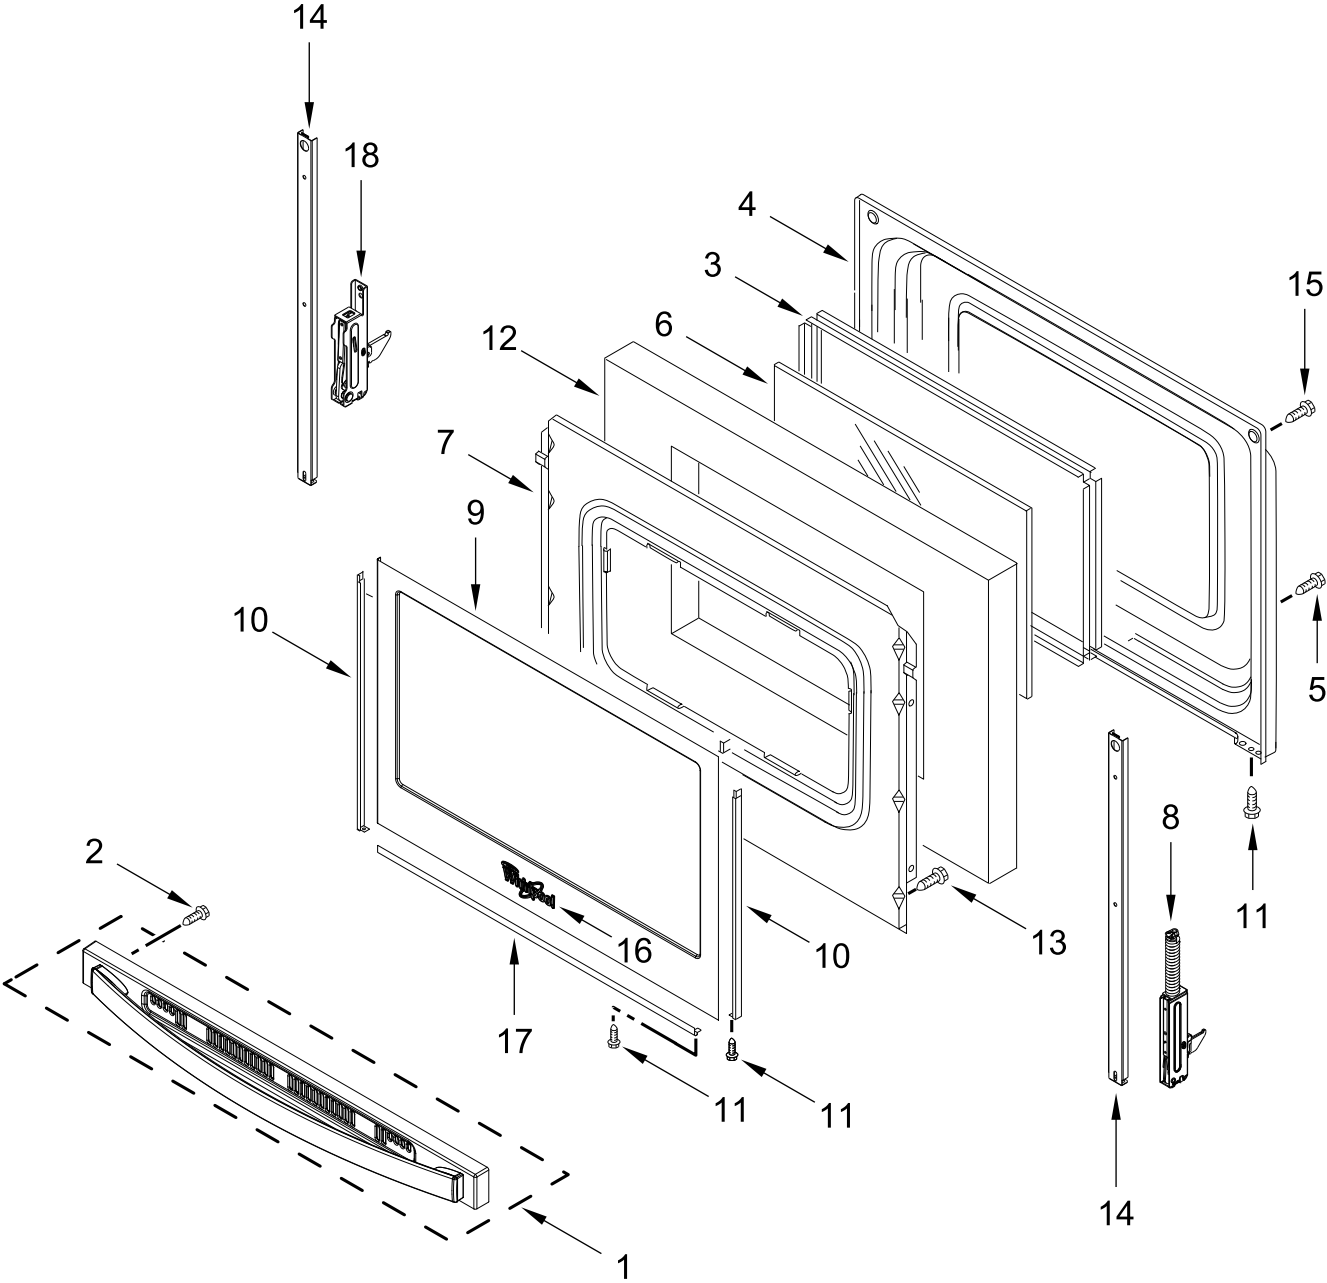


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly
	W11242950	Stainless
2	W10480830	Screw
3	W10316950	Frame, Glass
4	9761344	Liner, Door
5	W10031790	Screw
6	9758162	Glass, Inner
7	W11380222	Retainer, Insulation

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10299224	Hinge, Active (With Spring)
9		Glass Assembly, Outer Door
	W10884159	Black
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
11	W10327235	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10278991	Insulation, Door Strip
13	W10031780	Screw
14	W11379944	Strap, Door
15	W10200660	Screw
16	W10884775	Badge
17		Trim, Bottom
	W11444043	Black
18	W10299227	Hinge, Door (Passive)

DRAWER PARTS

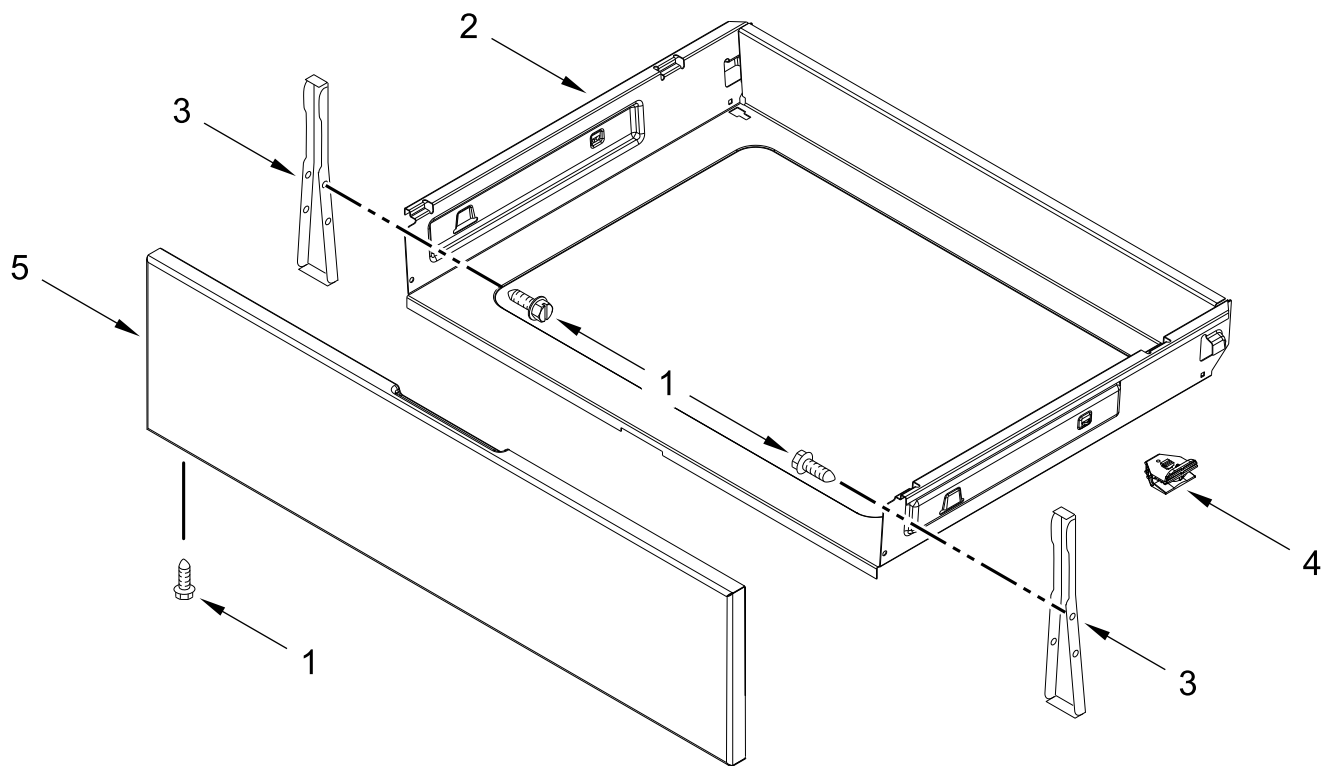

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw
2	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10462910	Bracket, Mounting Drawer
4	W10674708	Glide, Drawer Rear

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W11449698	Stainless

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting