




GAS RANGE

MODELS:

WEG750H0HZ0 (Stainless)

WEG750H0HV0 (Black Stainless)


COOKTOP PARTS

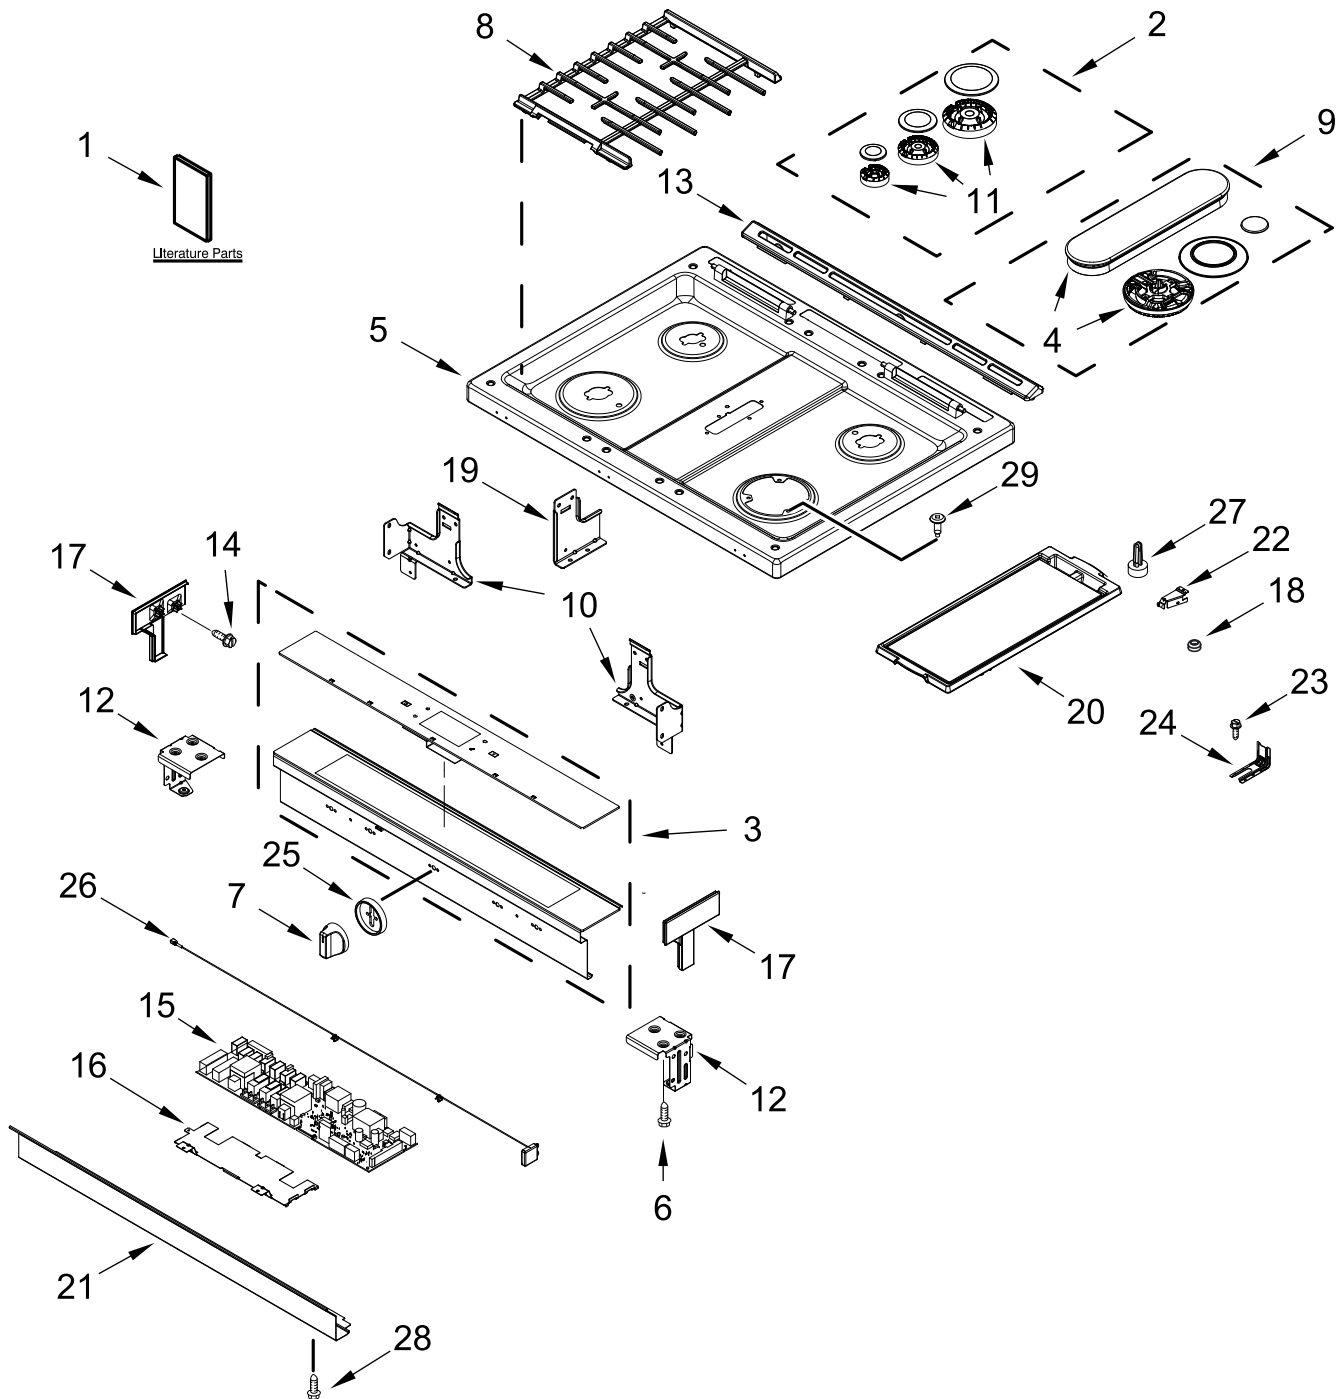

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9	W10875937	Spreader, Flame Kit	20	W11043399	Griddle
	W11085333	Instructions, Installation			(Includes Burner Caps)	21		Console, Lower Panel
	W11085353	Guide, Use & Care			(Right Front and Center)		W10899346	Stainless
	W11095707	Sheet, Tech					W10899348	Black Stainless
	W11096113	Wiring Diagram	10	W10867593	Support, Cooktop (Left)	22	W10162253	Brace, Corner (Left)
	W11097305	Internet Connectivity Guide		W10867592	Support, Cooktop (Right)		W10162252	Brace, Corner (Right)
	9762761	Tips, Safe Cooking (English)				23	7101P485-60	Screw, Anti-Tip Kit
2	W10867890	Spreader, Flame Kit	11	W10732971	Flame Spreader (Left Front)	24	W10606241	Bracket, Anti-Tip
		(Includes Burner Caps)		W10732969	Flame Spreader (Left Rear)	25		Bezel
		(Left Front, Left Rear, Right Rear)		W10732968	Flame Spreader (Right Rear)		W10906020	Stainless
3		Console	12	W10828159	Base, Console (Left)		W10906021	Black Stainless
	W10869383	Stainless		W10828160	Base, Console (Right)	26	W11097891	Antenna
	W10909023	Black Stainless	13		Trim, Vent	27	8016P022-60	Glide, Main Top
4	W10867781	Spreader, Flame (Right Front)		W10577781	Black	28	3196178	Screw
	W10863722	Spreader, Flame (Fish)	14	9780274	Screw	29	W11103318	Screw
		(Center)	15	W10868154	Control, Electronic (Powermax)			FOLLOWING PARTS NOT ILLUSTRATED
5		Cooktop	16	W10908536	Bracket, Control		W10887379	Harness, Main
	W10864663	Black	17		Endcap		W10754419	Harness, Bake and Broil
6	3196160	Screw		W10854356	Stainless (Left)		313438	Clip, Harness
7		Knob		W10913756	Black Stainless (Left)		3196520	Clip, Wire
	W10906401	Stainless		W10854360	Stainless (Right)		7111P017-60	Clamp, Wire
	W10906402	Black Stainless		W10913757	Black Stainless (Right)		W10580229	Wire, Ground
8		Grate Kit (Includes 2 Grates)	18	W10664705	Bumper			
	W11047499	Black	19	W10867600	Bracket, Console (Center)			


CHASSIS PARTS

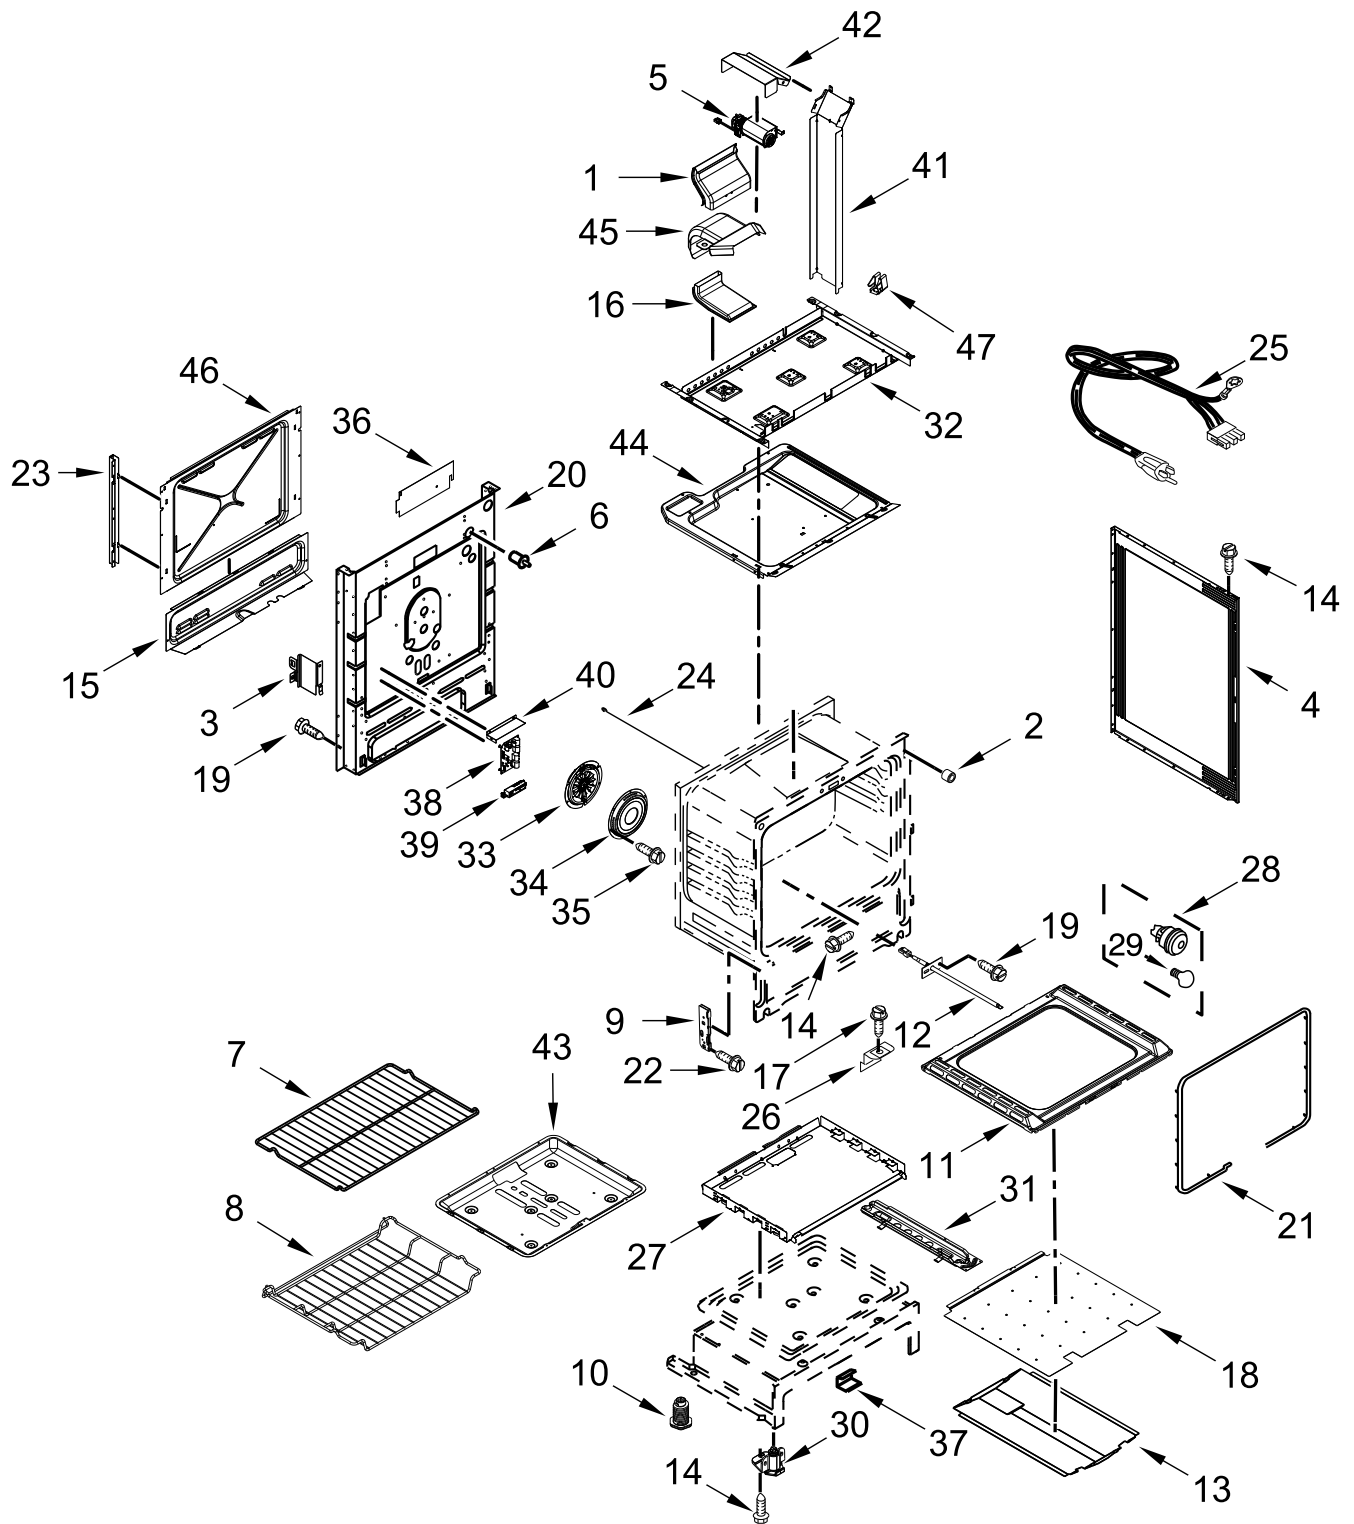

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10614920	Assembly, Flue	21	W10162385	Gasket, Door	41	W10162254	Duct, Cooling
2	9758701	Spacer, Door	22	W10031780	Screw	42	W10162255	Duct, Cover
3	W10273002	Bracket, Oven Support	23	W10162241	Channel, Rear	43	W10273204	Pan, Bake
4		Panel, Side	24	W10273192	Rod, Door Switch	44	W10289168	Box, Burner SI
	W10162245	Black	25	W10889764	Cord, Power	45	W10162257	Duct, Cooktop
5	W10877642	Assembly, Cooling Fan	26	W10035900	Support, Oven Bottom	46	W10849261	Cover, Back
6	W10627802	Switch, Door	27	W10541959	Shield, Bake	47	W10866583	Clip-Panel, Ratcheting
7	W10531060	Rack, Oven	28	W10454648	Assembly, Light			FOLLOWING PARTS NOT ILLUSTRATED
8	W10289145	Rack, Oven (Gull-Wing)	29	311255	Bulb, Oven Light			
9	W10289077	Receiver, Hinge	30	W10341186	Front Foot Assembly		4820F015-59	Insulation, Strap
10	W10058460	Foot, Leveling	31	W10390008	Base Rail Assembly (Left)		W10289173	Insulation, Wrap
11	W10211368	Bottom, Oven		W10390007	Base Rail Assembly (Right)		W10162240	Insulation, Back
12	W10181986	Sensor, Oven	32	W10885904	Box, Burner		W10916510	Insulation, Burner Box
13	3601P356-45	Baffle, Bake Burner	33	W10874477	Assembly, Convection		W10867892	Kit, LP 5 Orifice Conversion
14	3196178	Screw	34	W10346154	Cover, Convection		W10566535	LP Conversion Kit (Bake and Broil)
15	W10162249	Cover, Wire	35	W10362924	Screw			
16	W10311326	Assembly, Flue (Upper)	36	W10813366	Shield, Wire			
17	W10362924	Screw	37	W10137382	Clip, Panel			
18	W10323077	Diffuser, Flame	38	W10457998	Module, Spark (0 plus 2)			
19	3196178	Screw	39	W10475149	Module, Spark			
20		Back, Main (Not Serviced)	40	W10655451	Guard, Splash			


MANIFOLD PARTS

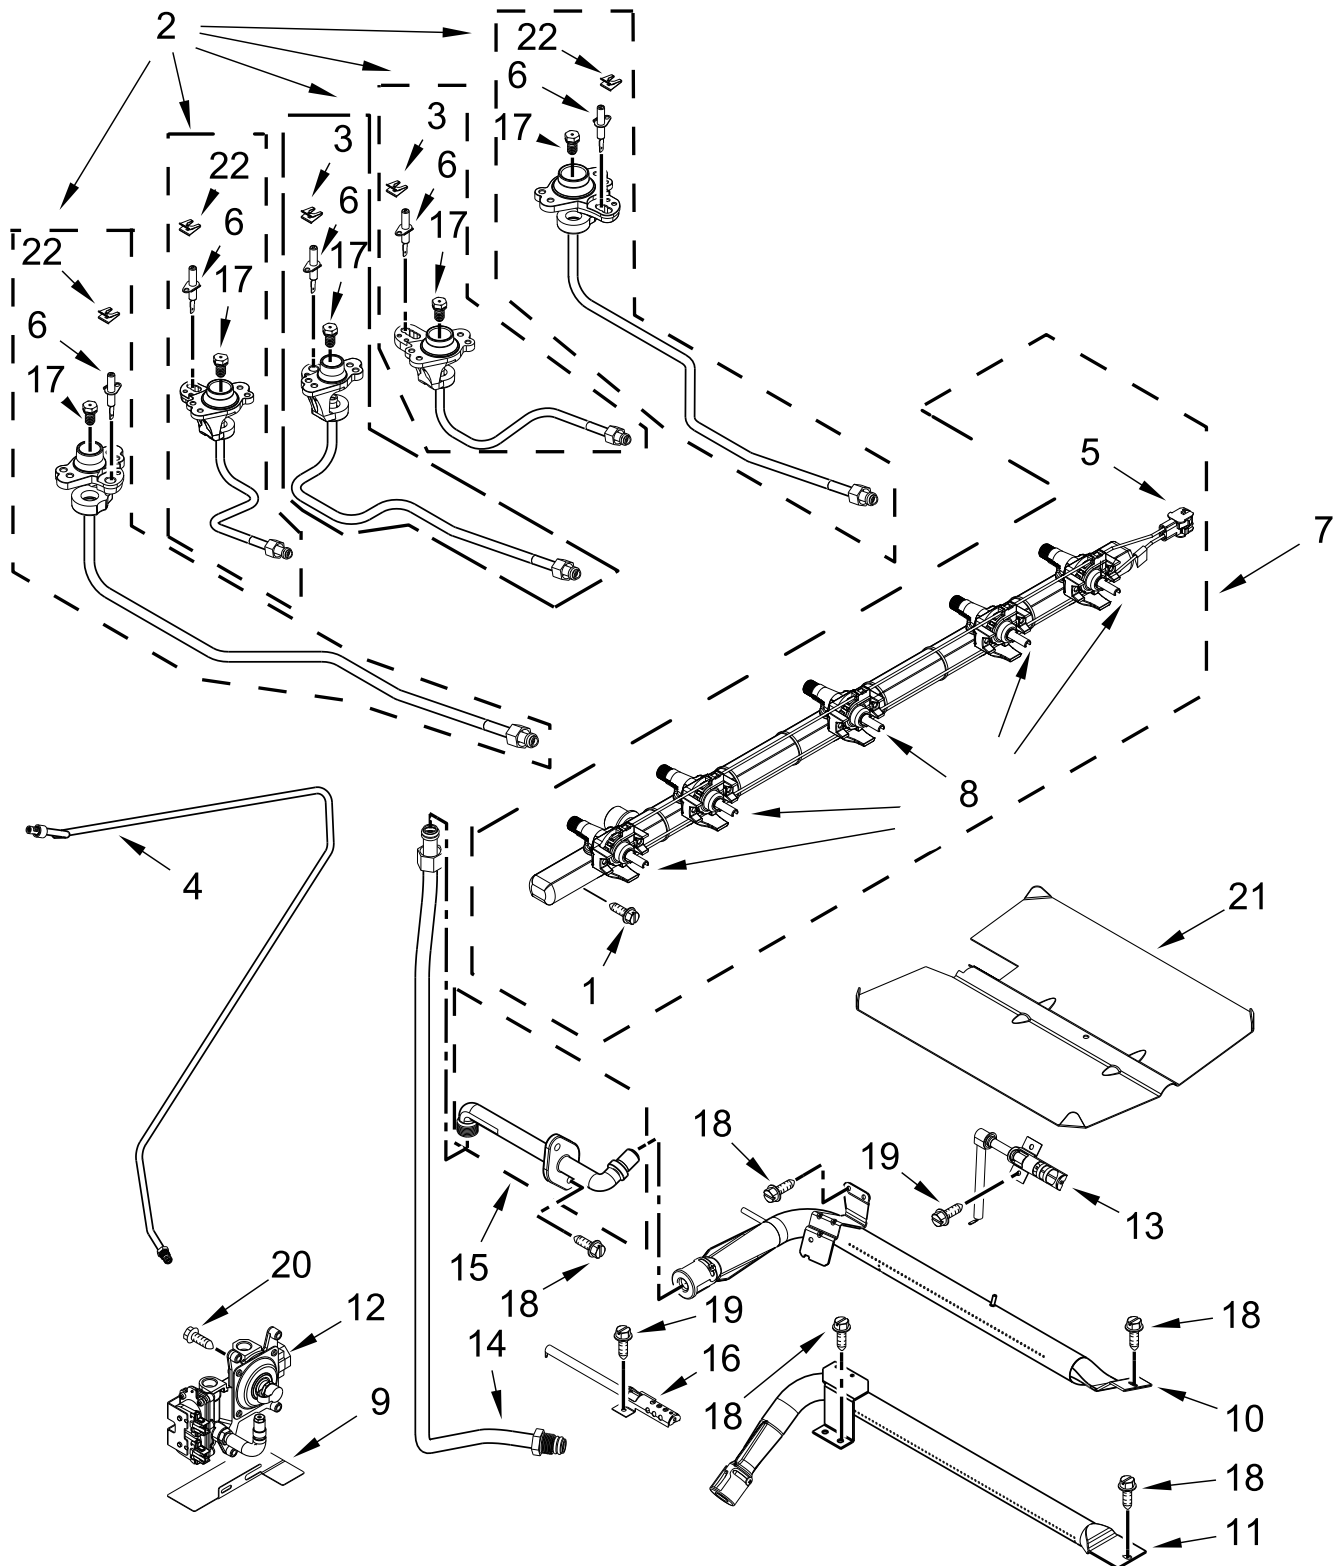

MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10246216	Screw	6	W10669526	Electrode, Burner	12	W10554066	Valve, Regulator
2	W10867777	Assembly, Orifice (Left Front)			(Left Front and Right Rear)	13	W10324262	Igniter, Bake
	W10867779	Assembly, Orifice (Left Rear)		W10669524	Electrode, Burner (Left Rear)	14	W10306050	Tube, Broil Supply (Broiler Fitting To Valve)
	W10867780	Assembly, Orifice (Right Front)		W11084034	Electrode, Burner (Right Front)	15	W10583216	Fitting, Broil Burner
	W10867778	Assembly, Orifice (Right Rear)		W11082199	Electrode, Burner (Center)	16	W10333842	Electrode, Broil
	W11047836	Assembly, Orifice (Center)	7	W10862591	Assembly, Manifold	17	W10907865	Orifice (Left Front)
3	W11084050	Clip, Electrode	8	W11033235	Valve, Gas (Right Rear and Center)		W10849719	Orifice (5K) (Left Rear)
4	W11107282	Tube, Supply		W11033237	Valve, Gas (Left Rear)		W10672111	Orifice (1.65MM) (Right Front)
5	W10885903	Harness, Spark Switch		W11033232	Valve, Gas (Left Front and Right Front)		W10849714	Orifice (9.5K) (Right Rear)
							W10674732	Orifice (10K) (Center)
			9	W10224921	Bracket, Aegis	18	3196178	Screw
			10	W10439242	Burner, Broiler	19	3196385	Screw
			11	W10680035	Burner, Bake	20	3400016	Screw
						21	3601P336-45	Baffle, Broil Burner
						22	W10827923	Electrode, Spring

DOOR PARTS

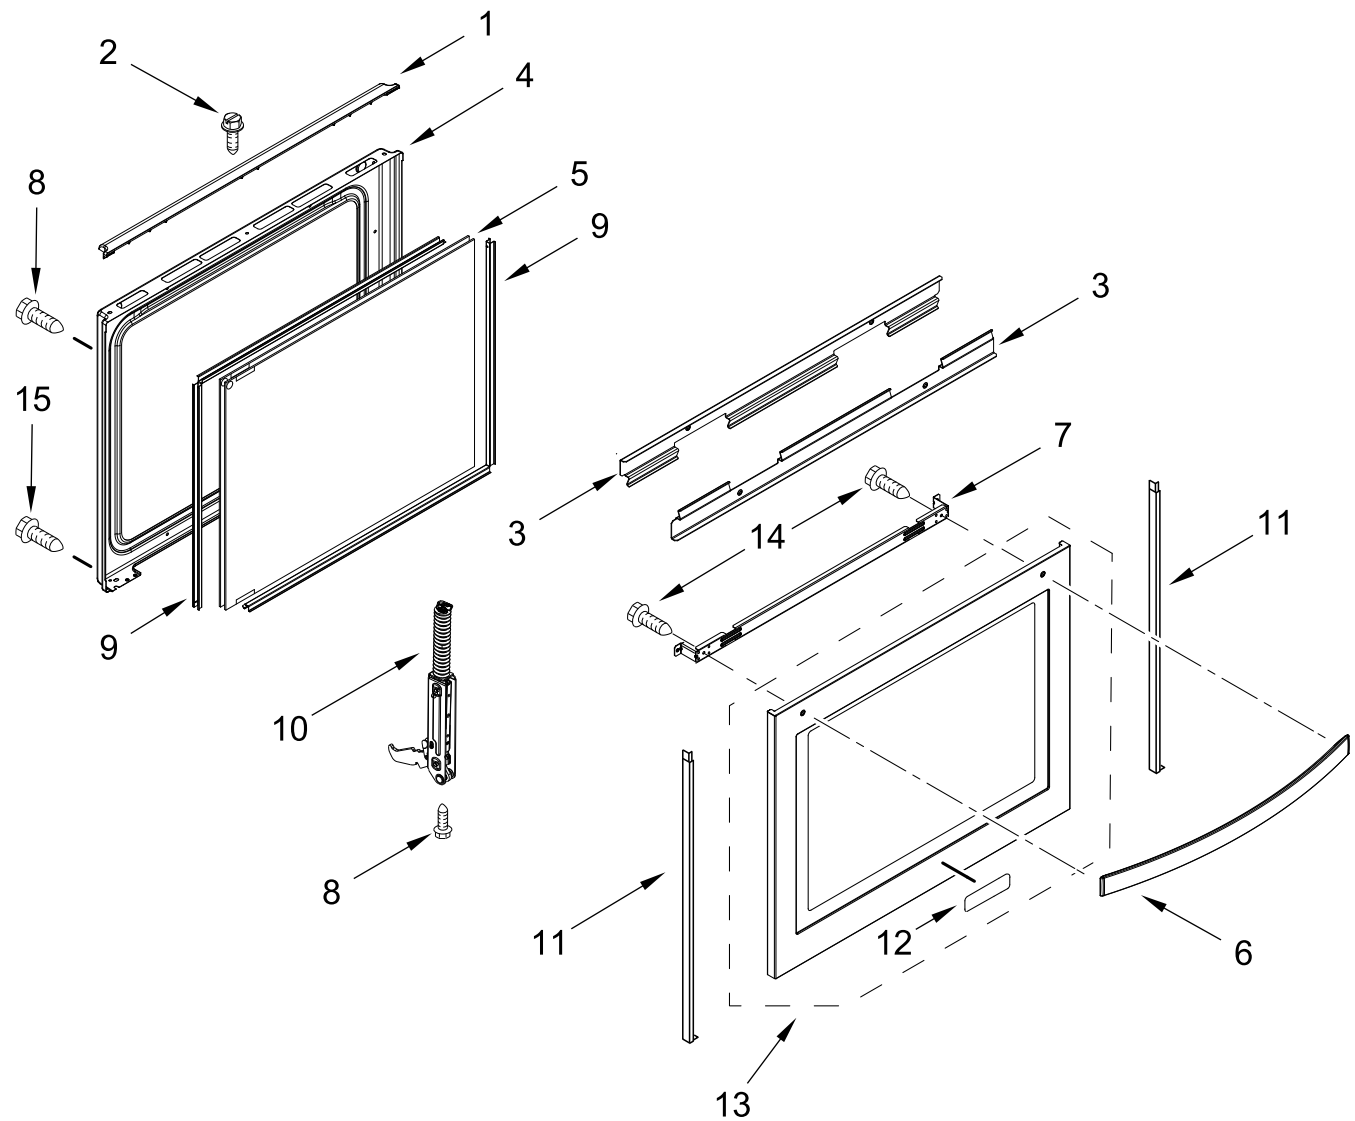


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W10887939	Black
2	3196184	Screw
3	W10813140	Rail, Horizontal Support
4	W10826568	Liner, Door
5	W11088591	Glass, Inner
6		Handle, Door
	W10918786	Stainless
	W10918791	Black Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10541911	Bracket, Glass Upper Handle
8	W10031790	Screw
9	W10813142	Spacer, Glass
10	W10885519	Hinge, Door (Active)
11	W10813139	Rail, Vertical Support
12	W10884775	Badge

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13		Glass, Outer
	W10864214	Stainless
	W10888239	Black Stainless
14	8533988	Screw
15	W10031780	Screw

DRAWER PARTS

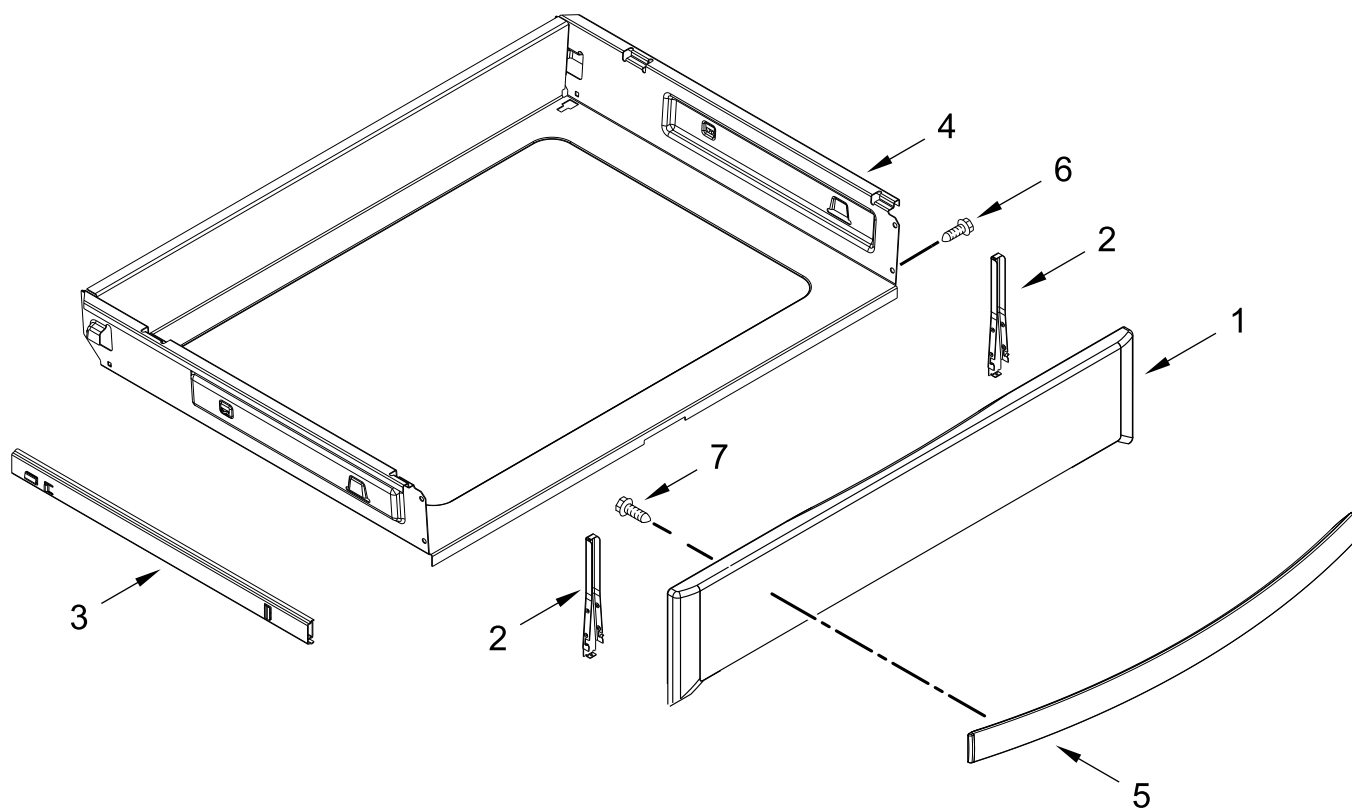

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	4	W10688022	Drawer, Storage	6	3196169	Screw
	W10864661	Stainless	5		Handle, Drawer	7	3400882	Screw
	W11042921	Black Stainless		W10918786	Stainless			
2	W10318026	Bracket, Mounting		W10918791	Black Stainless			
3	W10441804	Slide, Drawer (Left)						
	W10441805	Slide, Drawer (Right)						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350939	Enamel, Black
	285006	Black
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	W10391473	Pad, Cooktop Cleaning
	WA906B	Scraper, Cooktop
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432545	Kit, Grill
	W10432019	Alt Cleaning Kit Assembly, Trim (Includes Blind Threaded Insert)
		(5/8 in)
	W10675026	Black
	W10675027	White
	W10675028	Stainless (1 1/8 in)
	W10731886	Black
	W10731885	White
	W10731887	Stainless Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless