


KitchenAid®

GAS RANGE

MODELS:

KFDC500JBK03 (Imperial Black)


BURNER BOX PARTS

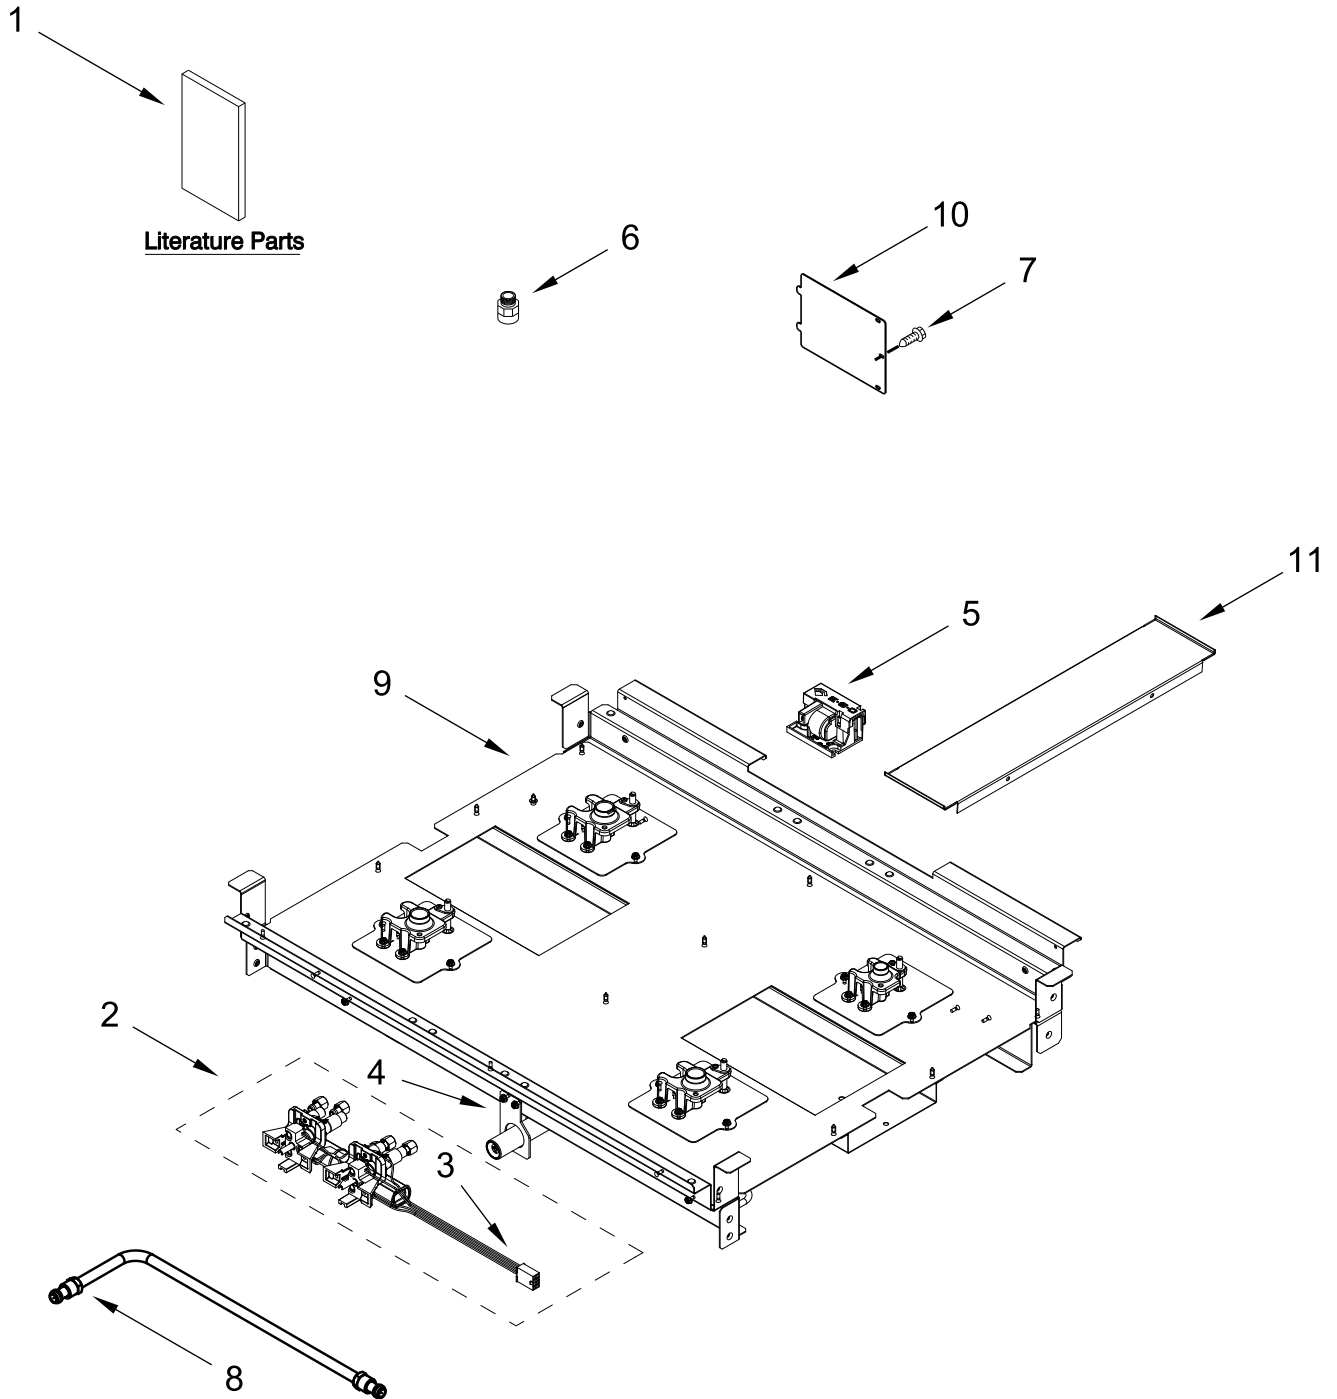

BURNER BOX PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10903728	Switch, Harness	11	W11121361	Filler, Cooktop
	W11508897	Owner's Manual	4	W11121194	Bracket, Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11508889	Installation Instructions	5	W11121317	Module, Spark		W11200301	Harness, Main (30 In)
	W11184759	Guide, Internet Connectivity	6	4453116	Adapter, Male		W11200328	Harness, Cooktop
	W11565471	Wiring Diagram (Cooktop)	7	7101P426-60	Screw		W10780278	Harness, Door Lock
	W11565460	Wiring Diagram (Oven)	8	W10892281	Tube, Manifold Supply (Left)		W11200325	Harness, Communication
	W11114332	Guide, Quick Start		W10892292	Tube, Manifold Supply (Right)		W11242785	Harness, WIFI
	W11114332	Guide, Quick Start	9		Box, Burner (Not Serviced)		313438	Clip, Harness
2	W10892994	Assembly, Valve Manifold (Left Front, Left Rear)	10	W10115843	Cover, Ignition		W11212216	Cord, Power
	W10892997	Assembly, Valve Manifold (Right Front, Right Rear)					9759877	Retainer, Strain Relief
							W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11238042	Kit, LP Conversion


COOKTOP, BURNER AND GRATE PARTS

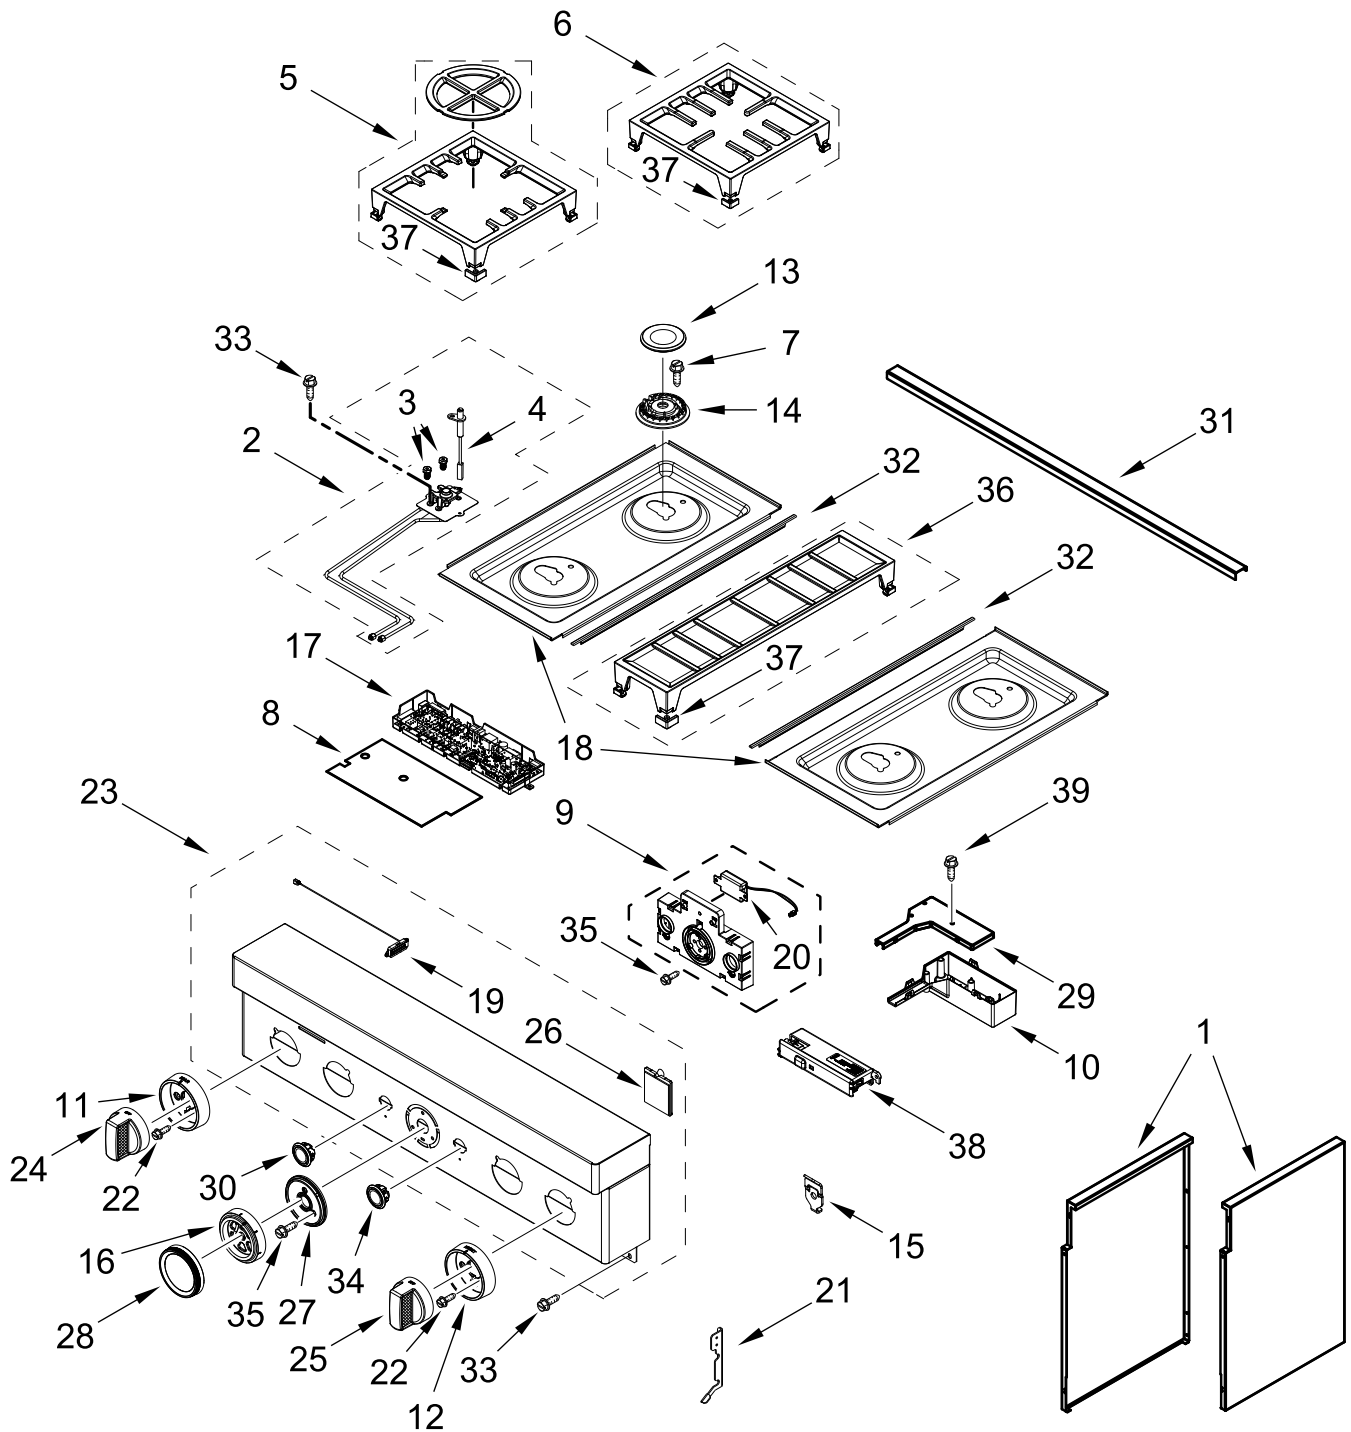

COOKTOP, BURNER AND GRATE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	5	W11291183	Burner, Grate (With Wok Ring)	19	W11130078	Antenna, WIFI
	W11106880	Panel, Cabinet Side (Right)	6	W11291179	Burner, Grate	20	W10568405	Assembly, Speaker
2	W10892774	Assembly, Orifice Holder (Left Front)	7	W11323261	Screw (8-18 X 1 in)	21	W10130760	Bracket, Moving Console (Left)
	W10892484	Assembly, Orifice Holder (Left Rear)		W11323309	Screw (8-18 X 1/2 in)		W10130759	Bracket, Moving Console (Right)
	W10892479	Assembly, Orifice Holder (Right Front)	8	W11281269	Barrier, Appliance Manager	22	W11328357	Screw
	W10892735	Assembly, Orifice Holder (Right Rear)	9	W11436334	Interface, User	23	W11700784	Console Panel
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	10	W11205795	Cover, WIFI Outer	24		Knob, Single
	W10892419	Orifice, Main (15K) (Left Rear)	11	W10883433	Bezel (Rear Burners)		W10912166	Stainless Knob, Dual
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Front)	12	W10881642	Bezel (Front Burners)	25	W10883172	Stainless
	W10892438	Orifice, Simmer (5K) (Right Rear)	13		Cap, Burner	26	W10896366	Assembly, Light Pipe
4	W11238757	Igniter (Left Front, Right Front)		W11121389	Black (Set Of 4)	27		Bezel, Oven
	W10892340	Igniter (Left Rear)	14	W10891746	Spreader, Flame (High) (Left Front, Right Front)		W11500871	Stainless Knob, Oven Temperature
	W11114379	Igniter (Right Rear)		W10891974	Spreader, Flame (Low) (Left Rear)	28		Stainless
				W10891978	Spreader, Flame (AUX) (Right Rear)	29	W11205794	Cover, WIFI Inner
			15	W11036559	Spring Clip, Range	30	W11241511	Button Assembly, Oven Light
			16		Knob, Oven Mode	31	W11156414	Trim, Island
				W11500863	Stainless	32		Trim, T-Strip
			17	W11100279	Manager, Appliance (Powermax)		W10271524	Black
			18		Panel, Cooktop	33	7101P426-60	Screw
				W11038235	Black (Left)	34	W11241510	Button Assembly, Oven Start
				W11038245	Black (Right)	35	3400814	Screw
						36	W11291178	Kit, Grate Filler
						37	W11042504	Bumper, Grate
						38	W11110768	Assembly, WIFI Module
						39	7101P624-60	Screw


CHASSIS PARTS

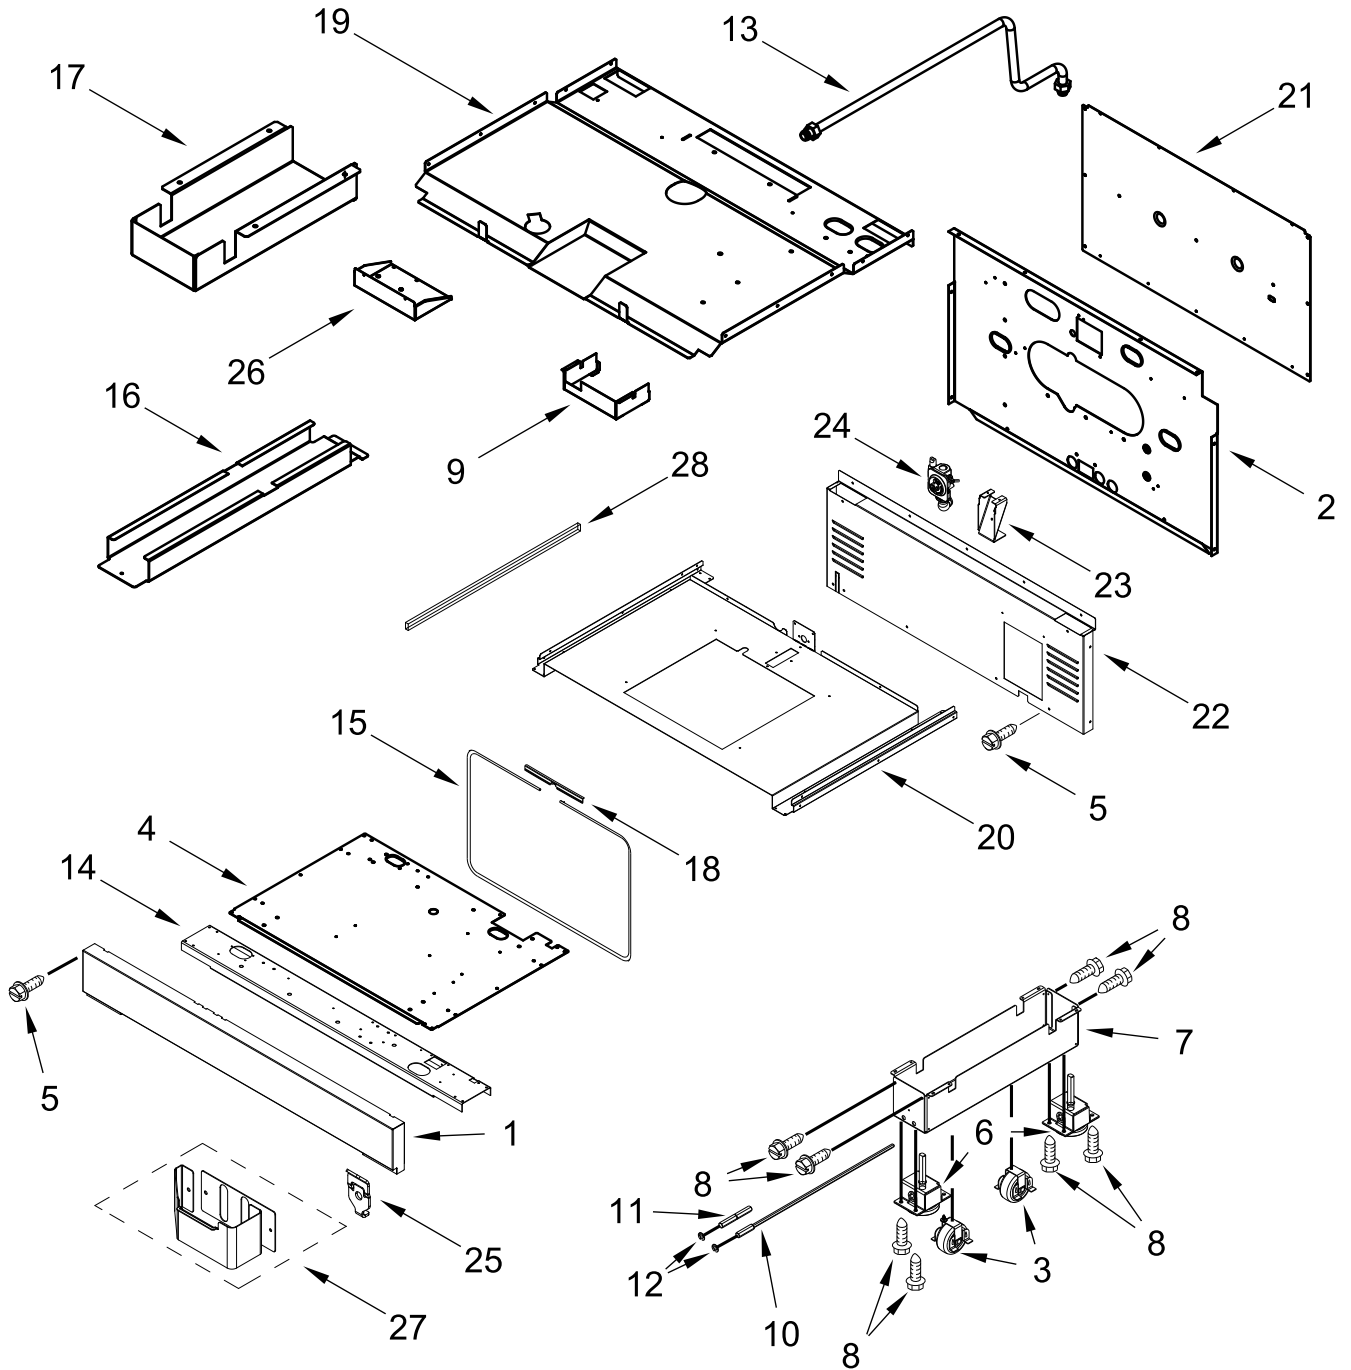

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11697026	Kickplate	11	W10115793	Shaft, Short	21	W11103334	Panel, Back Top
2	W11324989	Back, Chassis	12	489504	E-Ring	22	W11034134	Panel, Back Bottom
3	W10138054	Assembly, Roller	13	W11106963	Tube, Pressure Regulator	23	W11096823	Bracket, Pressure Regulator
4	W11109583	Duct, Bottom (30 in)	14	W11087491	Support, Channel	24	W10449140	Regulator, Pressure
5	7101P426-60	Screw	15	W11115328	Gasket, Cavity (30 In)	25	W11036559	Spring Clip, Range
6	9760860	Leveler	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
7	W10908710	Base, Leveling Leg	17	W11368831	Channel, Wire	27	W11199181	Cover, Foot (Left)
8	4449743	Screw	18	W11362015	Retainer, Gasket (9 in Long)		W11199178	Cover, Foot (Right)
9	W11369237	Cabinet, Appliance Manager	19	W11324986	Top, Chassis	28	W10919715	Gasket
10	W10115869	Shaft, Long	20	W11040802	Chassis, Bottom			


OVEN PARTS

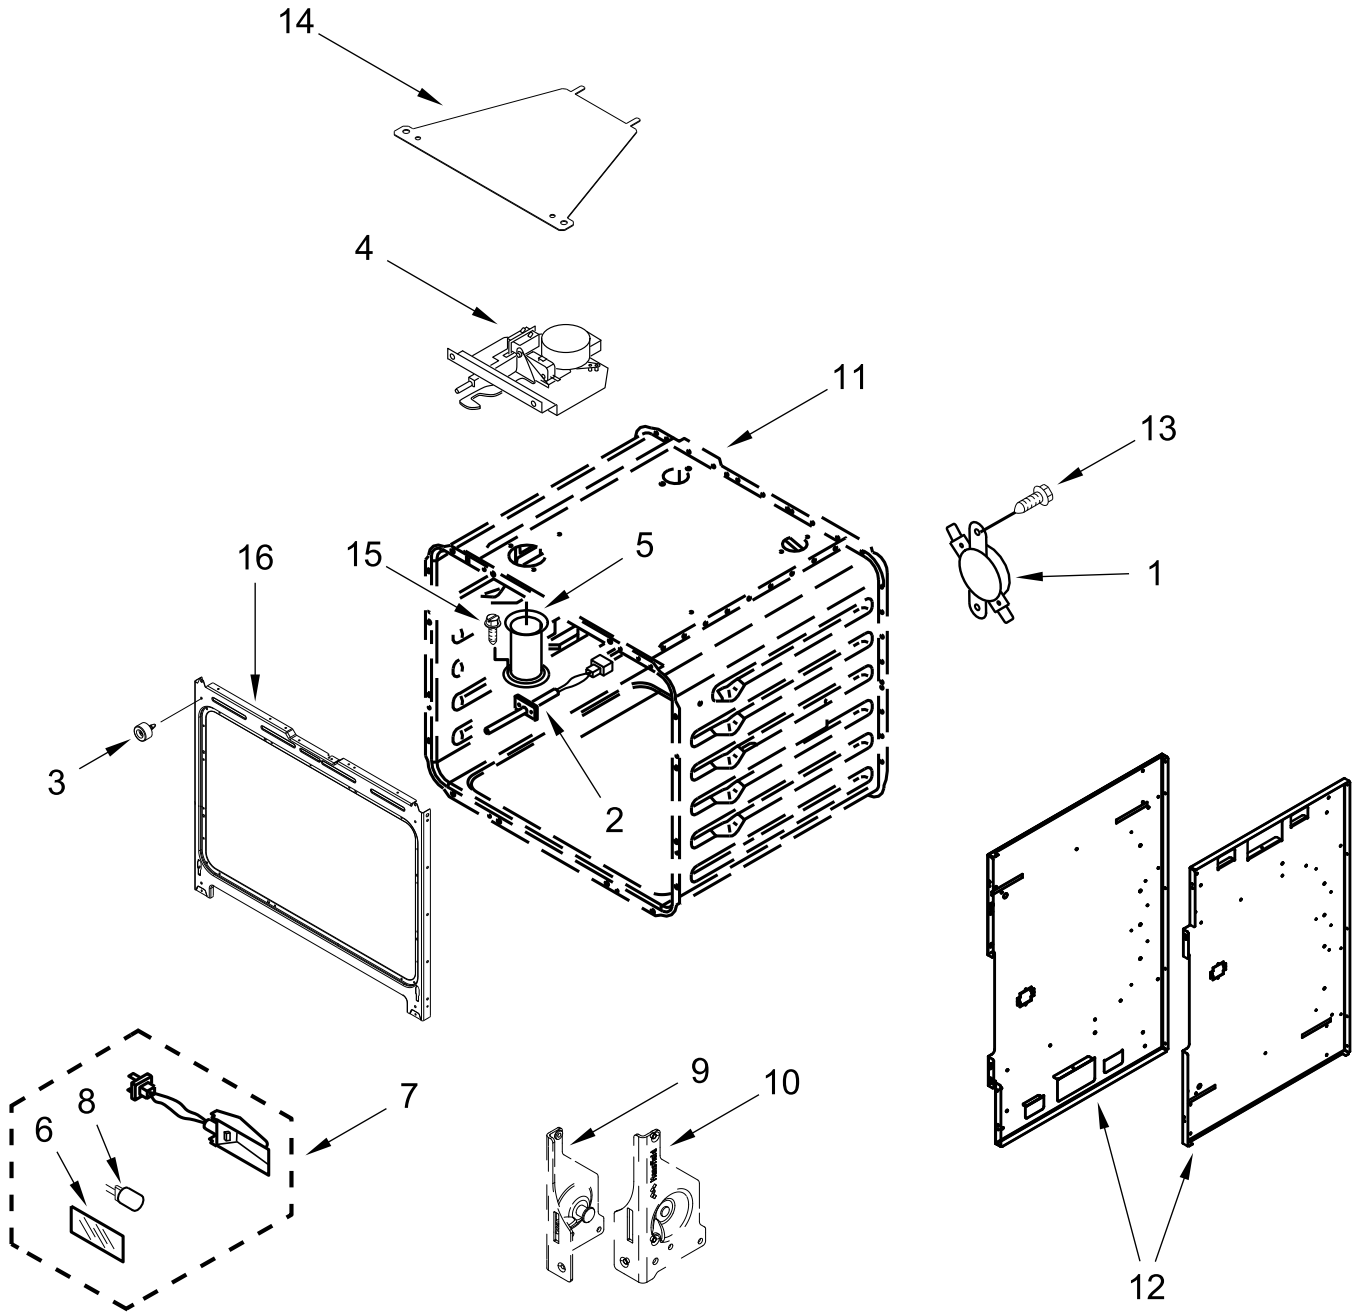

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	11		Liner, Oven (Not Serviced)	16	W11192755	Frame, Front
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw	12	W11102297	Chassis, Side (Left)			
4	W10830016	Latch, Motorized		W11102296	Chassis, Side (Right)		W10282810	Insulation, Wrap (30 In)
5	W11290663	Tube, Vent						
6	W10169756	Lens, Light	13	7101P426-60	Screw		W10282818	Insulation, Back, (30 In)
7	W11223932	Assembly, Oven Light	14	W10160858	Cover, Latch			
8	W10169757	Bulb, Light	15	3196176	Screw		3400968	Nut
9		Receiver, Hinge (Not Serviced)						
10		Receiver, Hinge (Not Serviced)						


VENTING PARTS

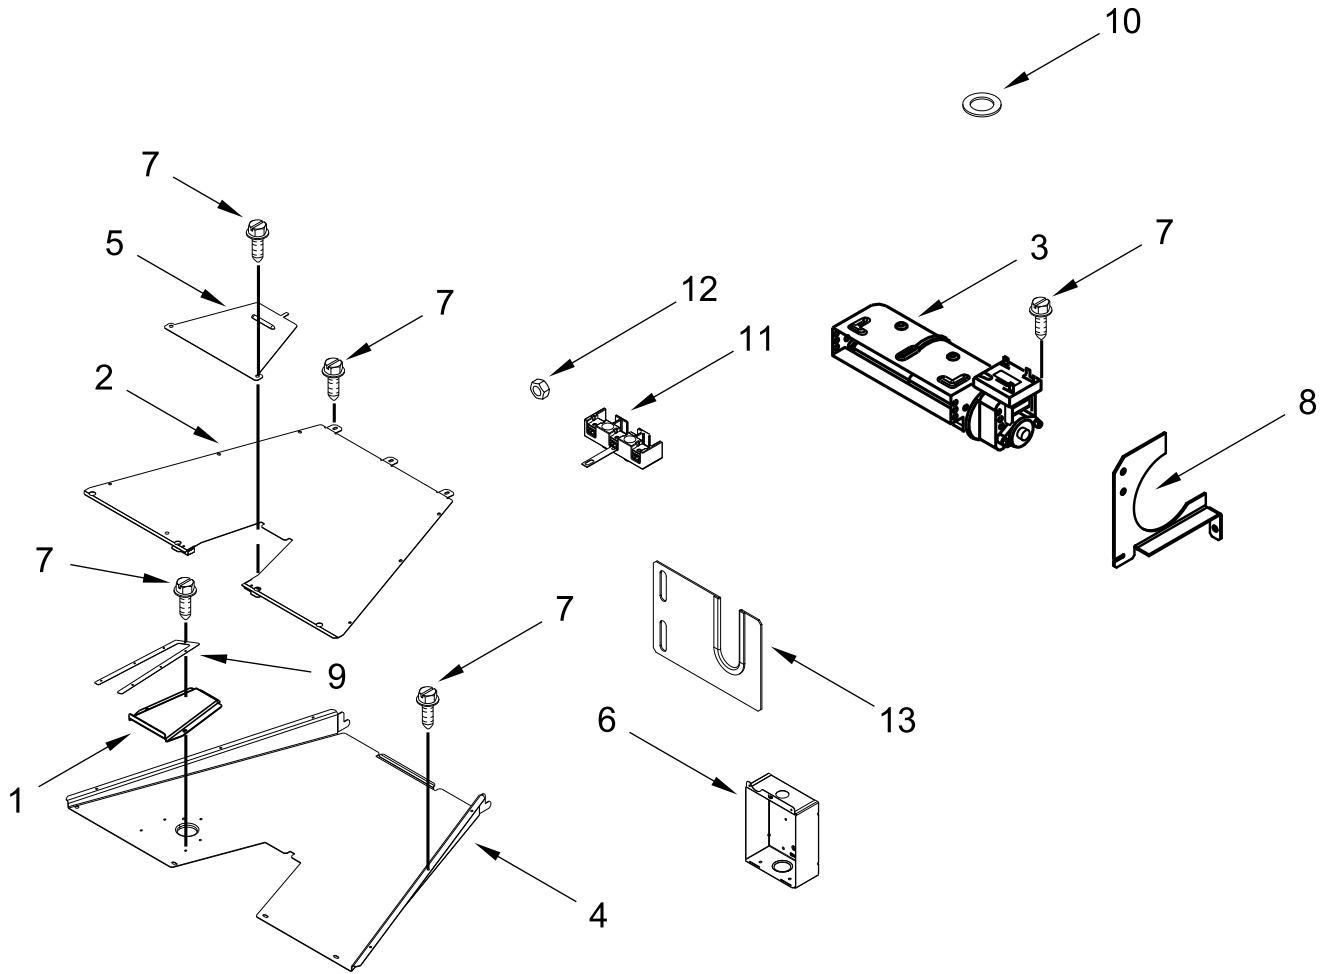

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30 In)	4	W11105222	Vent, Cooling Bottom (30 In)	9	W10270397	Seal, Vent Slope (30 In)
2	W11105223	Vent, Cooling Top (30 In)	5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney
3	W11200129	Blower	6	W11353392	Box, Terminal	11	9761958	Block, Terminal
			7	7101P426-60	Screw	12	112432	Nut, Hex
			8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel

OVEN DOOR PARTS

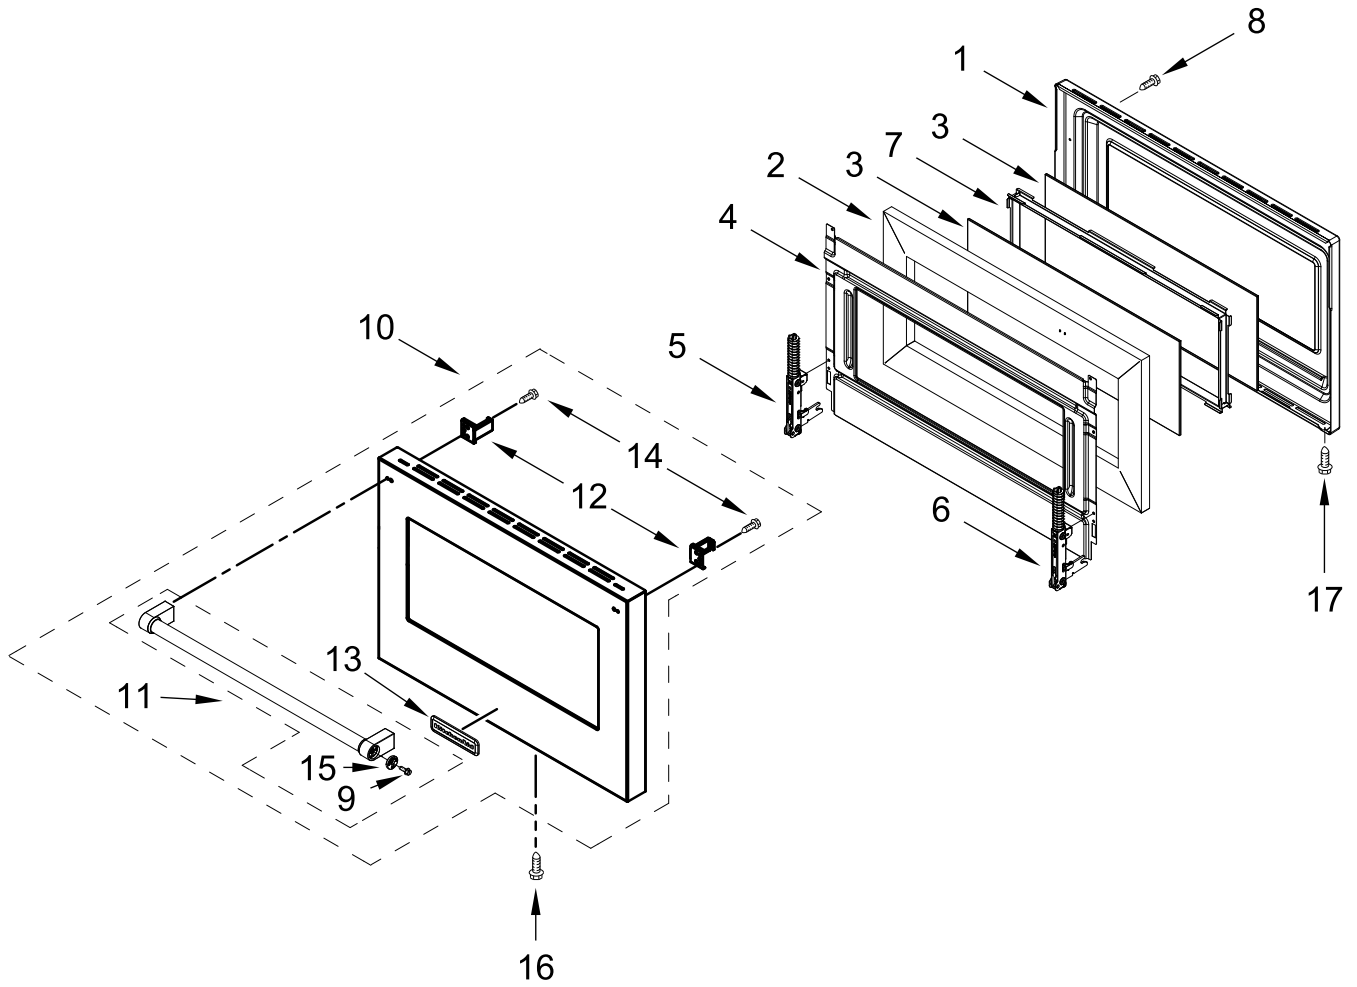

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30 in)	8	W10898280	Screw	13	W10518672	Badge
3	W11184409	Glass, Inner	9	W10656499	Screw	14	W10276043	Screw
4	W11194821	Retainer, Glass	10	W11712126	Outer Door Assembly (Includes Handle)	15	W11361074	Medallion, Handle
5	W11390105	Hinge, Door (Left)	11	W11362706	Handle Assembly	16	W10162096	Screw
6	W11390124	Hinge, Dual (Right)				17	W10607120	Screw

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10115994	Element, Broil	8	W10631503	Blade, Fan	15	9755543	Jack, Meat Probe
2	W10282821	Insulation, Convection Cover	9	W10261523	Plate, Fan	16	9755546	Nut, Hidden
3	W10570887	Rack, Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
4	W11496977	Rack, Sliding Oven	11	9762242	Element, Convection Steam	18		Element, Hidden Bake (Not Serviced)
5	W10160856	Shield, Element Broil	12	W11109421	Tray, Hidden Bake	19	W10720084	Screw
6	W11212180	Baffle, Convection	13	9755542	Probe, Temperature			
7	W10722667	Fan, Convection	14	4449154	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES NOT INCLUDED OR ILLUSTRATED
	W10160195	Cover, Grill/Griddle
	W10115773	Backguard 9in (22.9cm)
		Backsplash
	W10285447	30-in With Shelves
	W10355051	Cleaner, Cooktop Medallion, Handle
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841CF	Copper
	W11368841BN	Bronze
	W11368841DD	Dark Blue