




ELECTRIC RANGE

MODELS:

WEE750H0HV5 (Black Stainless)


COOKTOP PARTS

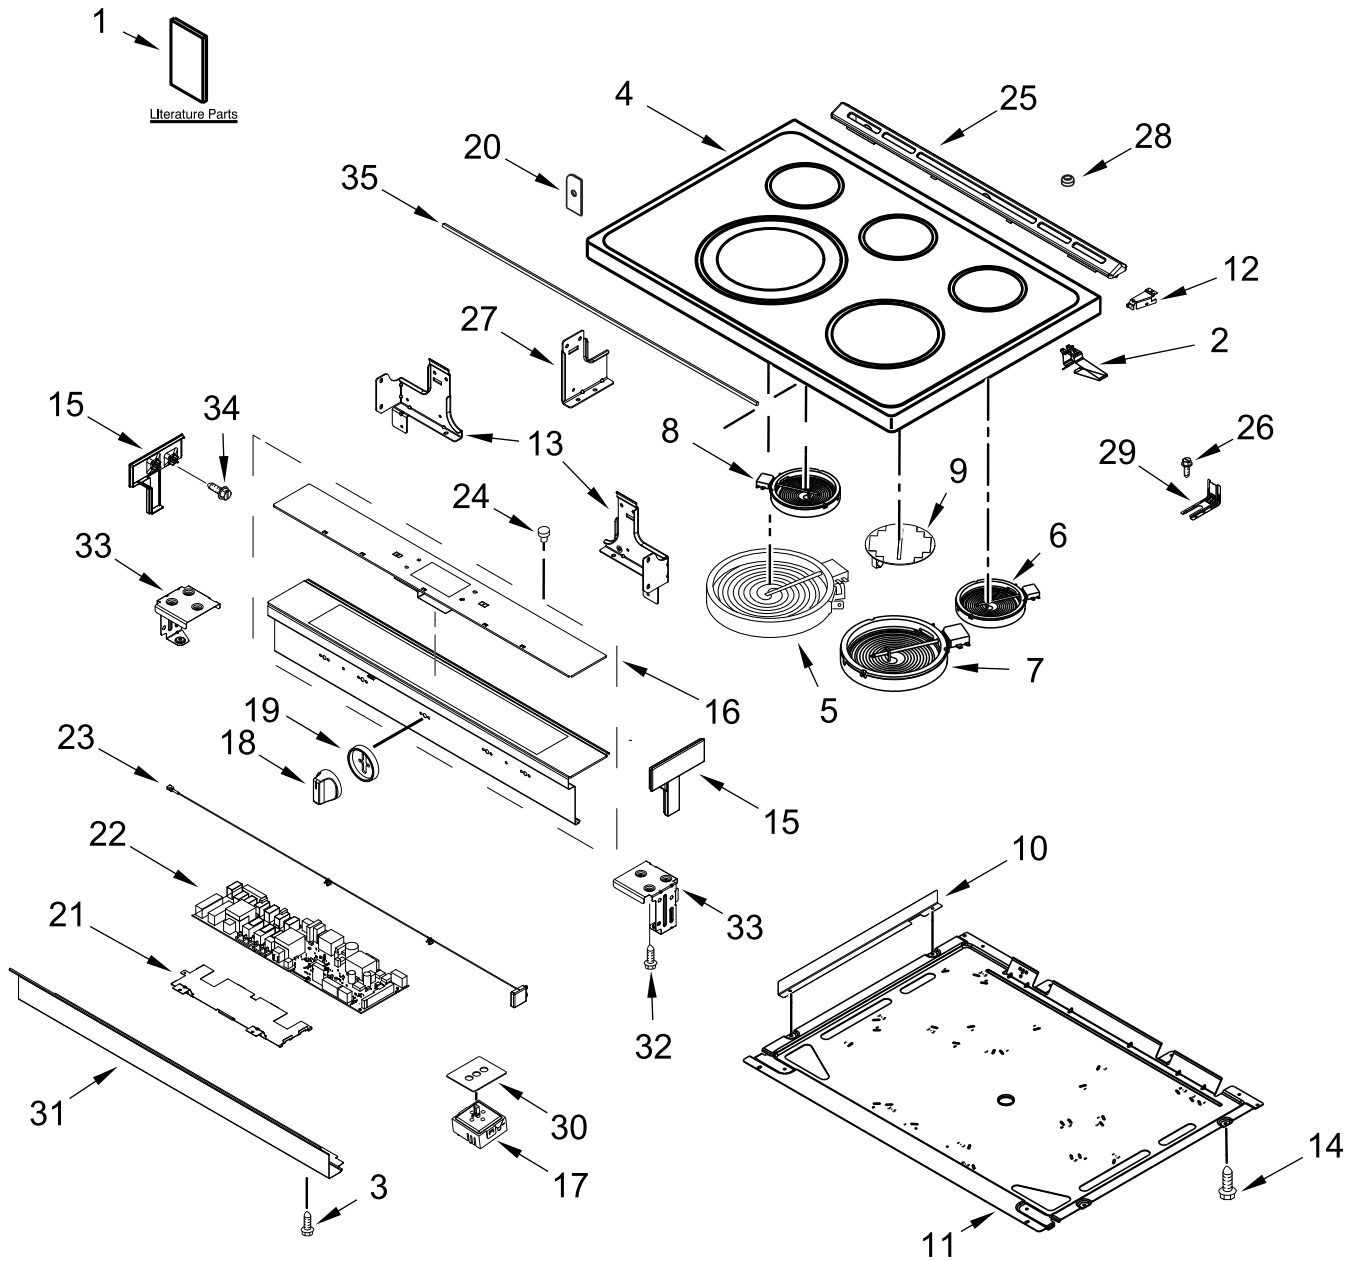

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	14	3196173	Screw	22	W10868153	Control, Electronic (Powermax)
	W11460325	Quick Start Guide	15		Endcap	23	W11516200	Antenna
	W11509615	Use and Care Guide		W10913756	Black Stainless (Left)	24	3196068	Lens, Indicator
	W11335900	Tech, Sheet		W10913757	Black Stainless (Right)	25		Vent, Trim Top
	W11327467	Internet Connectivity Guide	16		Console, Assembly		W10636528	Black
2	W11600012	Spring, Element		W11295844	Black Stainless	26	7101P485-60	Screw, Anti-Tip Kit
3	3196178	Screw	17	W10437092	Switch, Infinite (Right Front)	27	W10867600	Bracket, Console (Center)
4		Cooktop		W10578768	Switch, Infinite (Right Rear)	28	W10854253	Bumper
	W10865119	Black		W10437094	Switch, Infinite (Left Rear)	29	W11379947	Bracket, Anti-Tip
5	W11318371	Element (3000W) (Left Front)		W10437097	Switch, Infinite (Left Front)	30	7201P077-60	Gasket, Infinite Switch
6	W10248261	Element (1200W) (Right Rear)		W10888698	Switch, Warm Zone (Center)	31		Console, Lower Panel
7	W11282542	Element (3000W Dual) (Right Front)			Knob		W10854346	Black
8	W10342780	Element (1300W) (Left Rear)	18	W10919185	Black Stainless (Tripple)	32	3196160	Screw
9	W10799048	Element, Warm Zone (Center Rear)		W10919186	Black Stainless (Warming)	33	W10828159	Base, Console (Left)
10	W11175271	Bracket, Radiant		W10919187	Black Stainless (Dual)		W10828160	Base, Console (Right)
11	W10536275	Pan, Radiant		W10919188	Black Stainless (Single)	34	9780274	Screw
12	W10162253	Brace, Corner (Left)			Bezel	35	W10612719	Gasket, Console and Cooktop
	W10162252	Brace, Corner (Right)	19	W11156713	Black Stainless			FOLLOWING PARTS NOT ILLUSTRATED
13	W10867592	Support, Cooktop (Right)		W10882900	Gasket		W11451582	Harness, Main
	W10867593	Support, Cooktop (Left)	20	W10908536	Bracket, Control		W11134658	Harness, Cooktop
							W11174740	Harness, Console
							W10664316	Clip, Harness (Cooktop)
							313438	Clip, Harness


CHASSIS PARTS

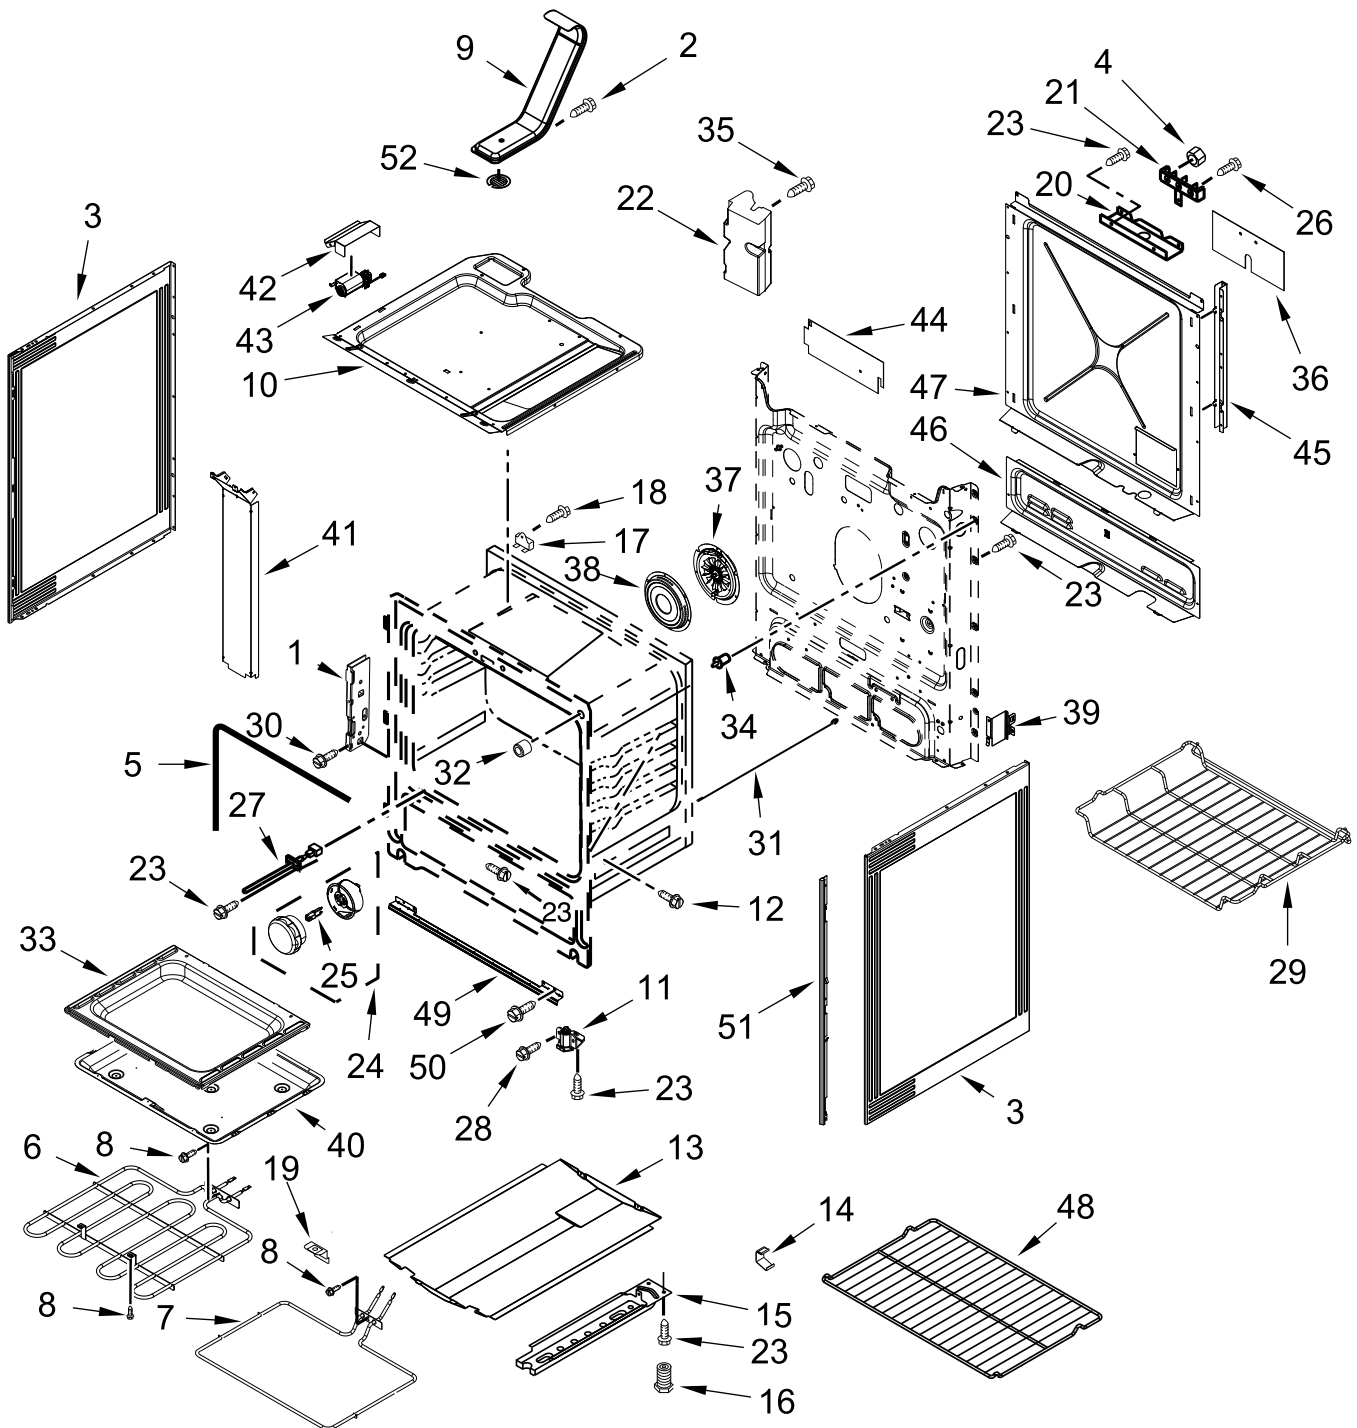

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	21	W10245259	Block, Terminal	42	W10162254	Duct, Cooling
2	W10362924	Screw	22	W10914589	Counterweight	43	W11467246	Cooling Fan
3		Panel, Side	23	3196178	Screw	44	W11117035	Shield, Wire
	W10162245	Black	24	W11634772	Light Assembly	45	W10162241	Channel, Rear
4	3400029	Nut	25	W10571723	Bulb, Halogen 40 Watts	46	W10162248	Cover, Wire
5	W11491752	Gasket, Door	26	3400016	Screw	47	W11379355	Cover, Back
6	W11095929	Element, Broil	27	W10586204	Sensor	48	W10531060	Rack, Oven
7	W10774342	Element, Bake	28	3196169	Screw	49	W11620269	Bracket, Front Frame
8	W10362924	Screw	29	W10289145	Rack, Oven (Gull-Wing)	50	3196560	Screw
9	W11122085	Assembly, Flue				51	W11510561	Barrier Rail, Rubber (Front Left)
10	W10289168	Box, Burner SI	30	W10031780	Screw		W11510562	Barrier Rail, Rubber (Front Right)
11	W10341186	Front Foot Assembly	31	W10273192	Rod, Door Switch			
12	W10067840	Screw	32	9758701	Spacer, Door	52	W11092984	Screen, Vent
13	W10541959	Shield, Bake	33	W10774446	Bottom, Oven			FOLLOWING PARTS NOT ILLUSTRATED
14	W10137382	Clip, Panel	34	W11511828	Switch, Door			
15	W10390008	Base Rail Assembly (Left)	35	W11034869	Screw		W10289173	Insulation, Wrap
	W10390007	Base Rail Assembly (Right)	36	W10655441	Shield, Power Cord		W10575374	Insulation, Bottom
16	W10058460	Foot, Leveling	37	W10756304	Assembly, Convection		4820F015-59	Insulation, Strap
17	3196548	Fuse, Thermal	38	W10346154	Cover, Convection		W10162240	Insulation, Back
18	3196172	Screw	39	W10273002	Bracket, Oven Support		7111P017-60	Clamp, Wire
19	W10035900	Support, Oven Bottom	40	W11379357	Bake Pan			
20	3186034	Bracket, Service	41	W10162255	Duct, Cover			

DOOR PARTS

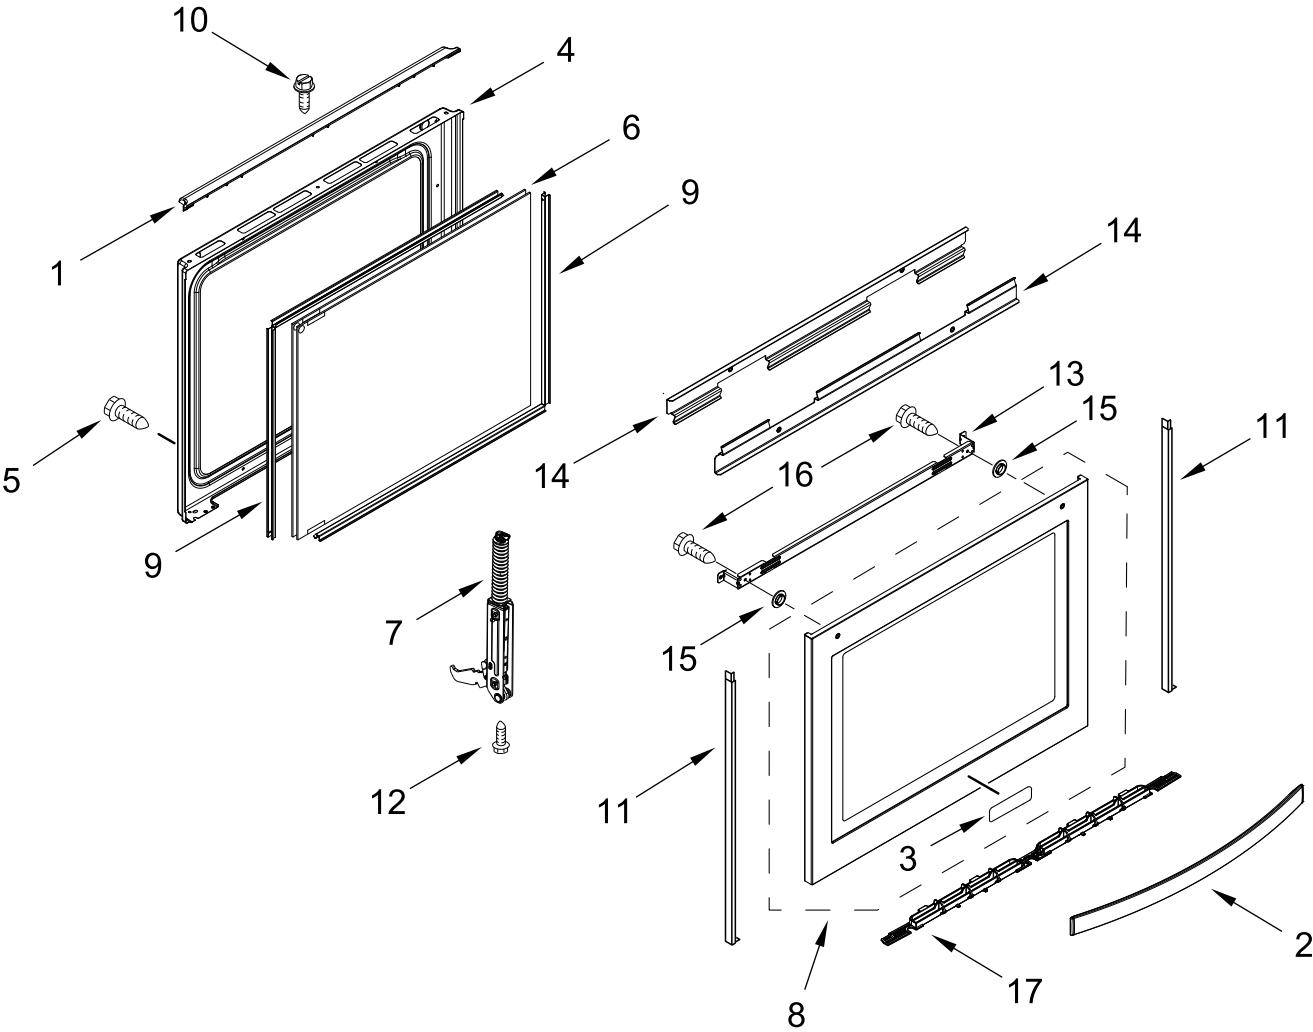

DOOR PARTS

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W10887939	Black
2		Assembly, Door Handle
	W10903342	Black Stainless
3	W10884775	Badge
4	W10826568	Liner, Door
5	W10031790	Screw
6	W11223202	Glass, Inner


Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10885519	Hinge, Door (Active)
8		Assembly, Outer Door
		Black Stainless
9	W11379948	Glass Spacer
10	W10327235	Screw
11	W10813139	Rail, Vertical Support
12	W10031780	Screw

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10541911	Bracket, Glass Upper Handle
14	W10813140	Rail, Horizontal Support
15	W10319024	Washer, Door
16	W11091878	Screw
17	W11440161	Bottom, Door Cover

DRAWER PARTS

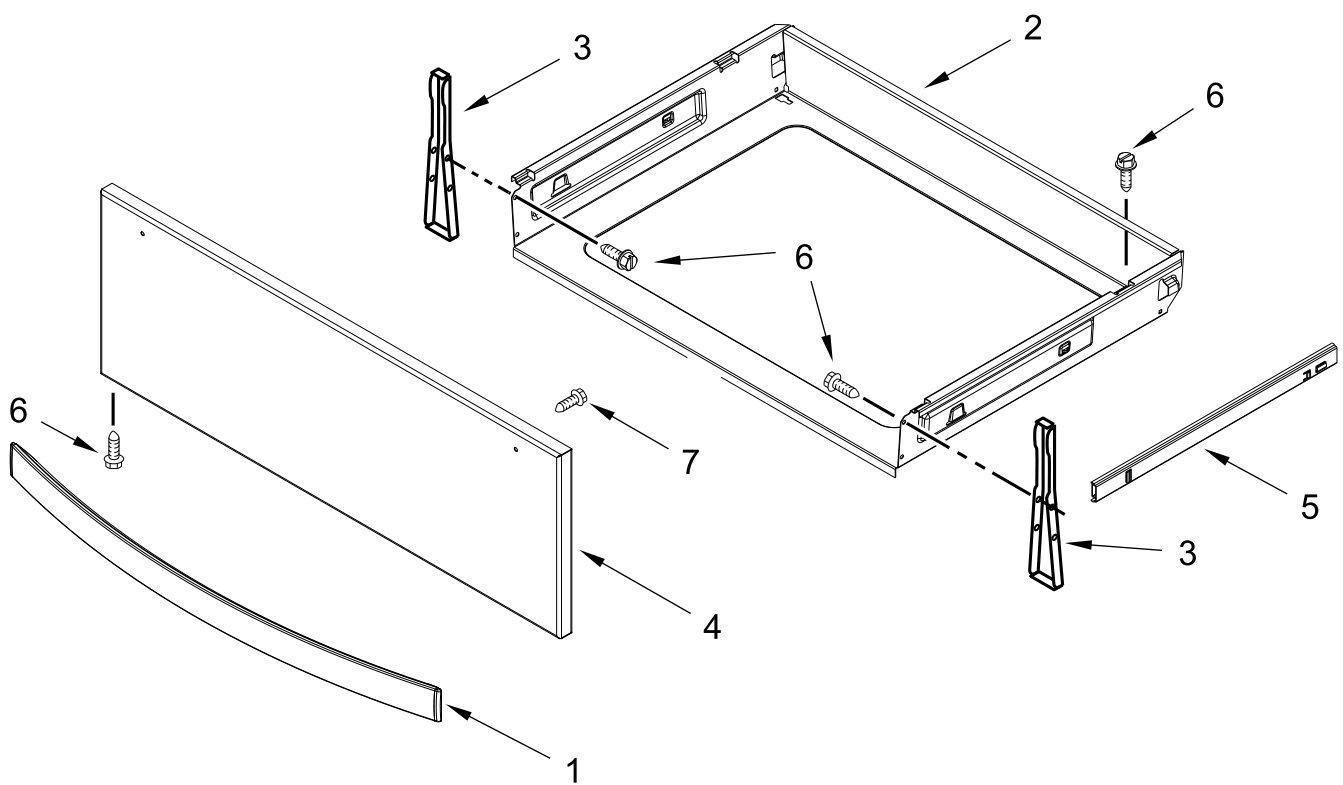

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	5	W10441804	Slide, Drawer (Left)	6	3196169	Screw
	W10903342	Black Stainless		W10441805	Slide, Drawer (Right)	7	W10498399	Screw
2	W10688022	Drawer, Storage						
3	W10318026	Bracket, Mounting						
4		Panel, Drawer Front						
	W11449756	Black Stainless						

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit and Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10391473	Pad, Cooktop Cleaning
	W10432019	Alt Cleaning Kit
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	W10432539	Griddle
	4396927	Rack, Oven (Split)
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432545	Kit, Grill Assembly, Trim (Includes Blind Threaded Insert)
	W10675026	Black
	W10675027	White
	W10675028	Stainless Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)