




## **GAS RANGE**

### **MODELS:**

KFGC500JSS07 (Stainless)


# BURNER BOX PARTS

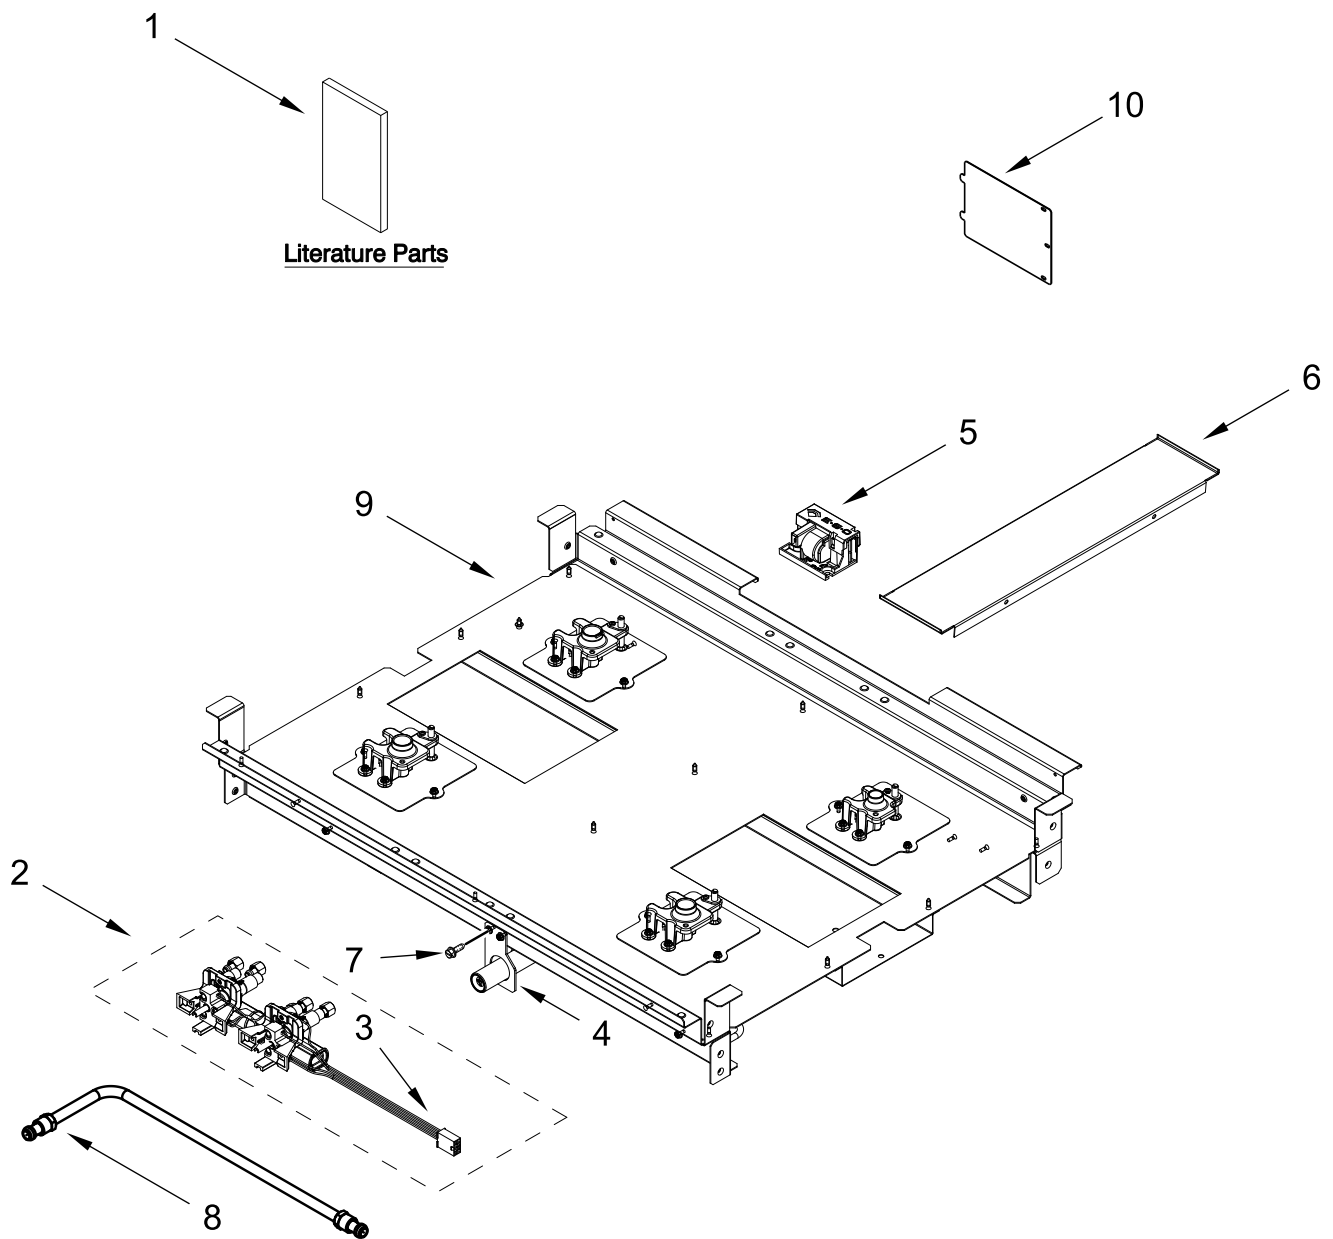

# BURNER BOX PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                                          | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>               | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                   |
|-----------------------------|-----------------|-------------------------------------------------------------|-----------------------------|-----------------|----------------------------------|-----------------------------|-----------------|--------------------------------------|
| 1                           |                 | Literature Parts                                            | 3                           | W10903728       | Switch, Harness                  | 10                          | W10115843       | Cover, Ignition                      |
|                             | W11508863       | Use and Care Guide                                          | 4                           | W11121194       | Bracket, Manifold                |                             |                 | FOLLOWING PARTS<br>NOT ILLUSTRATED   |
|                             | W11508887       | Installation<br>Instructions                                | 5                           | W11121317       | Module, Spark                    |                             | W11448062       | Harness, Main (30 in)                |
|                             | W11184759       | Guide, Internet<br>Connectivity                             | 6                           | W11121361       | Filler, Cooktop                  |                             | W11200328       | Harness, Cooktop                     |
|                             | W11575703       | Diagram, Wiring<br>(Cooktop)                                | 7                           | 7101P426-60     | Screw                            |                             | W10780278       | Harness, Door Lock                   |
|                             | W11565467       | Tech Sheet                                                  | 8                           | W10892281       | Tube, Manifold Supply<br>(Left)  |                             | W11200325       | Harness,<br>Communication            |
|                             | W11364680       | Guide, Quick Start                                          |                             | W10892292       | Tube, Manifold Supply<br>(Right) |                             | W11242785       | Harness, WIFI                        |
| 2                           | W10892994       | Assembly, Valve<br>Manifold<br>(Left Front, Left Rear)      | 9                           |                 | Box, Burner (Not<br>Serviced)    |                             | 313438          | Clip, Harness                        |
|                             | W10892997       | Assembly, Valve<br>Manifold<br>(Right Front, Right<br>Rear) |                             |                 |                                  |                             | W10624584       | Cord, Power                          |
|                             |                 |                                                             |                             |                 |                                  |                             | 4450800         | Screw, Grounding                     |
|                             |                 |                                                             |                             |                 |                                  |                             | W10253333       | Bracket, Anti-Tip                    |
|                             |                 |                                                             |                             |                 |                                  |                             | 7101P485-60     | Screw, Anti-Tip Kit                  |
|                             |                 |                                                             |                             |                 |                                  |                             | W11238042       | Kit, LP Conversion                   |
|                             |                 |                                                             |                             |                 |                                  |                             | W11311196       | Ignitor Wire,<br>Wire-Electrode Bake |


# COOKTOP, BURNER AND GRATE PARTS

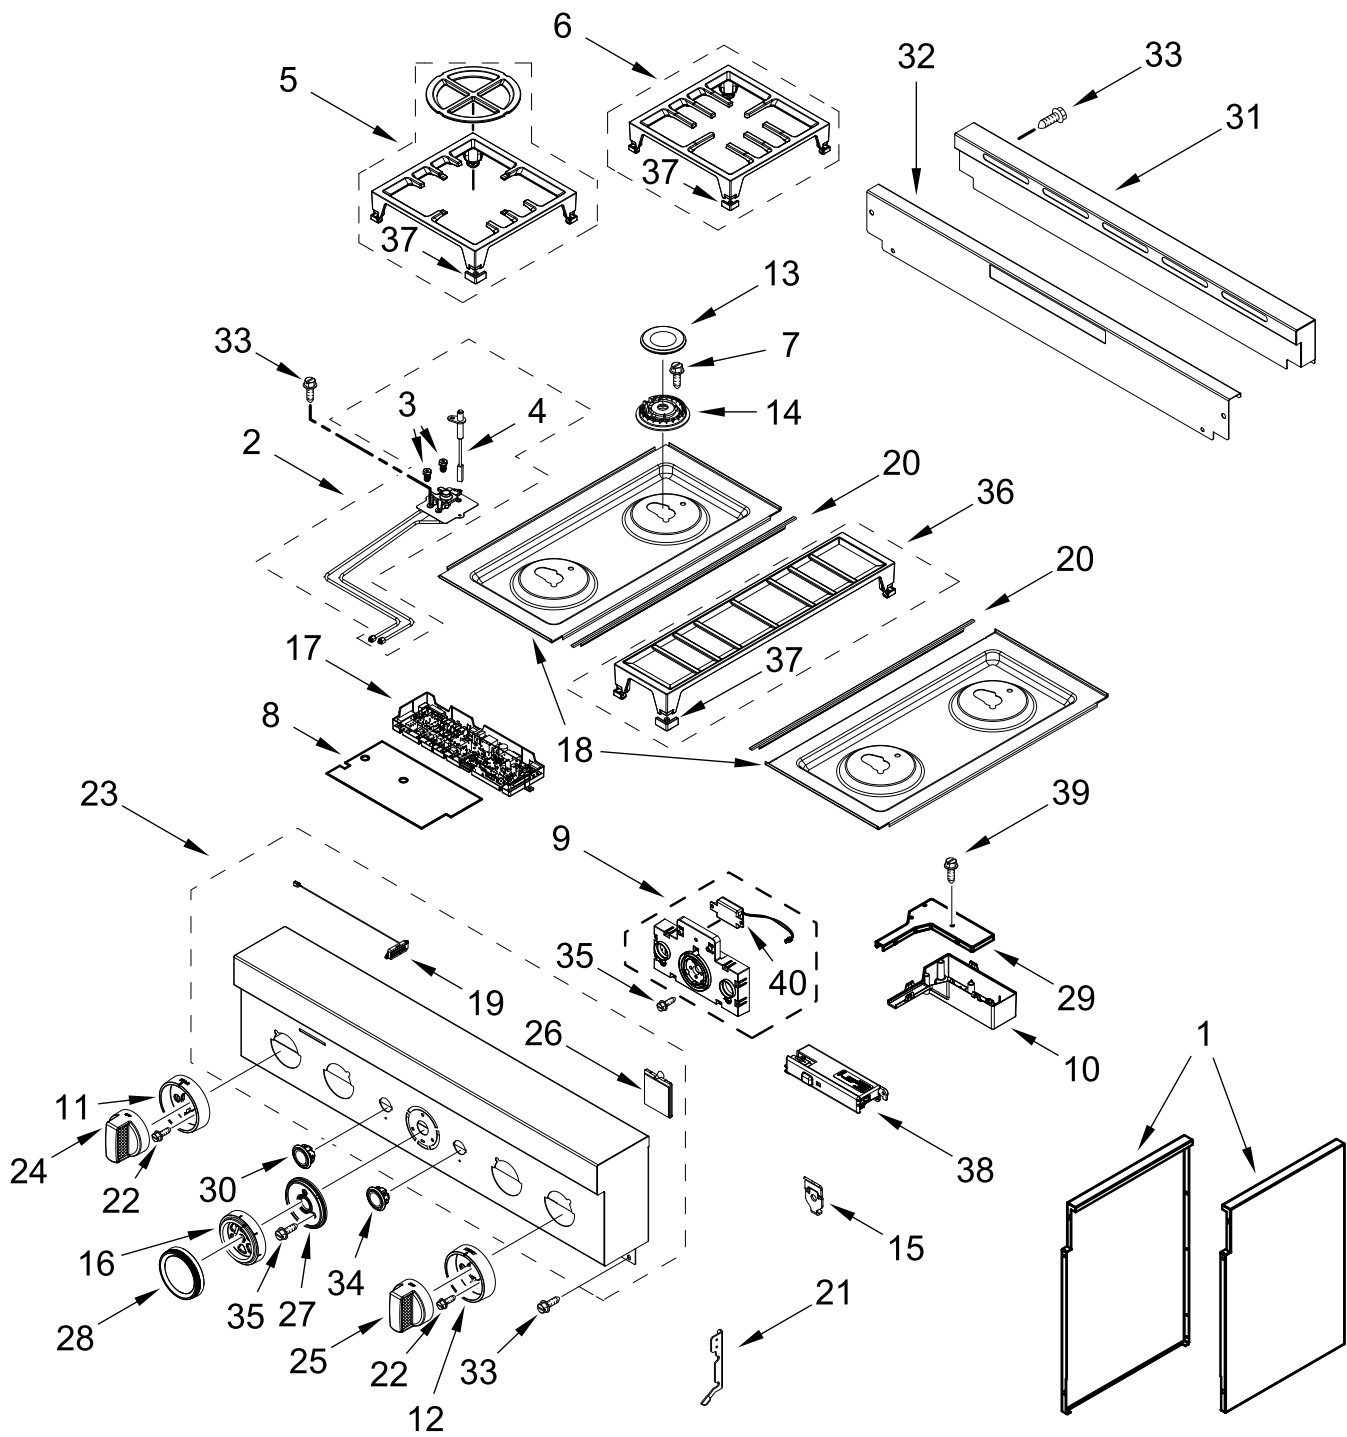

# COOKTOP, BURNER AND GRATE PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>            | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>            | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>               |
|-----------------------------|-----------------|-------------------------------|-----------------------------|-----------------|-------------------------------|-----------------------------|-----------------|----------------------------------|
| 1                           | W11106881       | Panel, Cabinet Side (Left)    | 6                           | W11291179       | Burner, Grate                 | 21                          | W10130760       | Bracket, Moving Console (Left)   |
|                             | W11106880       | Panel, Cabinet Side (Right)   | 7                           | W11323261       | Screw (8-18 X 1 in)           |                             | W10130759       | Bracket, Moving Console (Right)  |
|                             |                 |                               |                             | W11323309       | Screw (8-18 X 1/2 in)         |                             |                 |                                  |
| 2                           | W10892774       | Assembly, Orifice Holder      | 8                           | W11281269       | Barrier, Appliance Manager    | 22                          | W11328357       | Screw                            |
|                             |                 | (Left Front)                  | 9                           | W11436338       | User Interface                | 23                          | W11700784       | Console Panel                    |
|                             | W10892484       | Assembly, Orifice Holder      | 10                          | W11205795       | Cover, WIFI Outer             | 24                          |                 | Knob, Single                     |
|                             |                 | (Left Rear)                   | 11                          | W10883433       | Bezel (Rear Burners)          |                             | W10912166       | Stainless Knob, Dual             |
|                             | W10892479       | Assembly, Orifice Holder      | 12                          | W10881642       | Bezel (Front Burners)         | 25                          | W10883172       | Stainless                        |
|                             |                 | (Right Front)                 | 13                          |                 | Cap, Burner                   | 26                          | W10896366       | Assembly, Light Pipe             |
|                             | W10892735       | Assembly, Orifice Holder      |                             | W11121389       | Black (Set Of 4)              | 27                          |                 | Bezel, Oven                      |
|                             |                 | (Right Rear)                  | 14                          | W10891746       | Spreader, Flame (High)        |                             | W11500871       | Stainless Knob, Oven Temperature |
|                             |                 |                               |                             |                 | (Left Front, Right Front)     | 28                          |                 |                                  |
| 3                           | W10892422       | Orifice, Main (17.4K)         |                             | W10891974       | Spreader, Flame (Low)         | 29                          | W11205794       | Cover, WIFI Inner                |
|                             |                 | (Left Front, Right Front)     |                             |                 | (Left Rear)                   | 30                          | W11241511       | Button Assembly, Oven Light      |
|                             | W10892419       | Orifice, Main (15K)           |                             | W10891978       | Spreader, Flame (AUX)         | 31                          | W11477029       | Trim, Island                     |
|                             |                 | (Left Rear)                   |                             |                 | (Right Rear)                  | 32                          | W10323248       | Insert, Island Trim              |
|                             | W10892435       | Orifice, Simmer (2.6K)        | 15                          | W11036559       | Spring Clip, Range            | 33                          | 7101P426-60     | Screw                            |
|                             |                 | (Left Front, Right Front)     | 16                          |                 | Knob, Oven Mode               | 34                          | W11241510       | Button Assembly, Oven Start      |
|                             |                 |                               |                             | W11500865       | Stainless                     | 35                          | 3400814         | Screw                            |
|                             | W10892438       | Orifice, Simmer (5K)          | 17                          | W11543344       | Manager, Appliance (Powermax) | 36                          | W11291178       | Kit, Grate Filler                |
|                             |                 | (Right Rear)                  | 18                          |                 | Panel, Cooktop                | 37                          | W11042504       | Bumper, Grate                    |
| 4                           | W11238757       | Igniter                       |                             | W11038235       | Black (Left)                  | 38                          | W11110768       | Assembly, WIFI Module            |
|                             |                 | (Left Front, Right Front)     |                             | W11038245       | Black (Right)                 | 39                          | 7101P624-60     | Screw                            |
|                             | W10892340       | Igniter                       |                             |                 |                               | 40                          | W10568405       | Assembly, Speaker                |
|                             |                 | (Left Rear)                   | 19                          | W11130078       | Antenna, WIFI                 |                             |                 |                                  |
|                             | W11114379       | Igniter                       | 20                          |                 | Trim, T-Strip                 |                             |                 |                                  |
|                             |                 | (Right Rear)                  |                             | W10271524       | Black                         |                             |                 |                                  |
| 5                           | W11291183       | Burner, Grate (With Wok Ring) |                             |                 |                               |                             |                 |                                  |


# CHASSIS PARTS

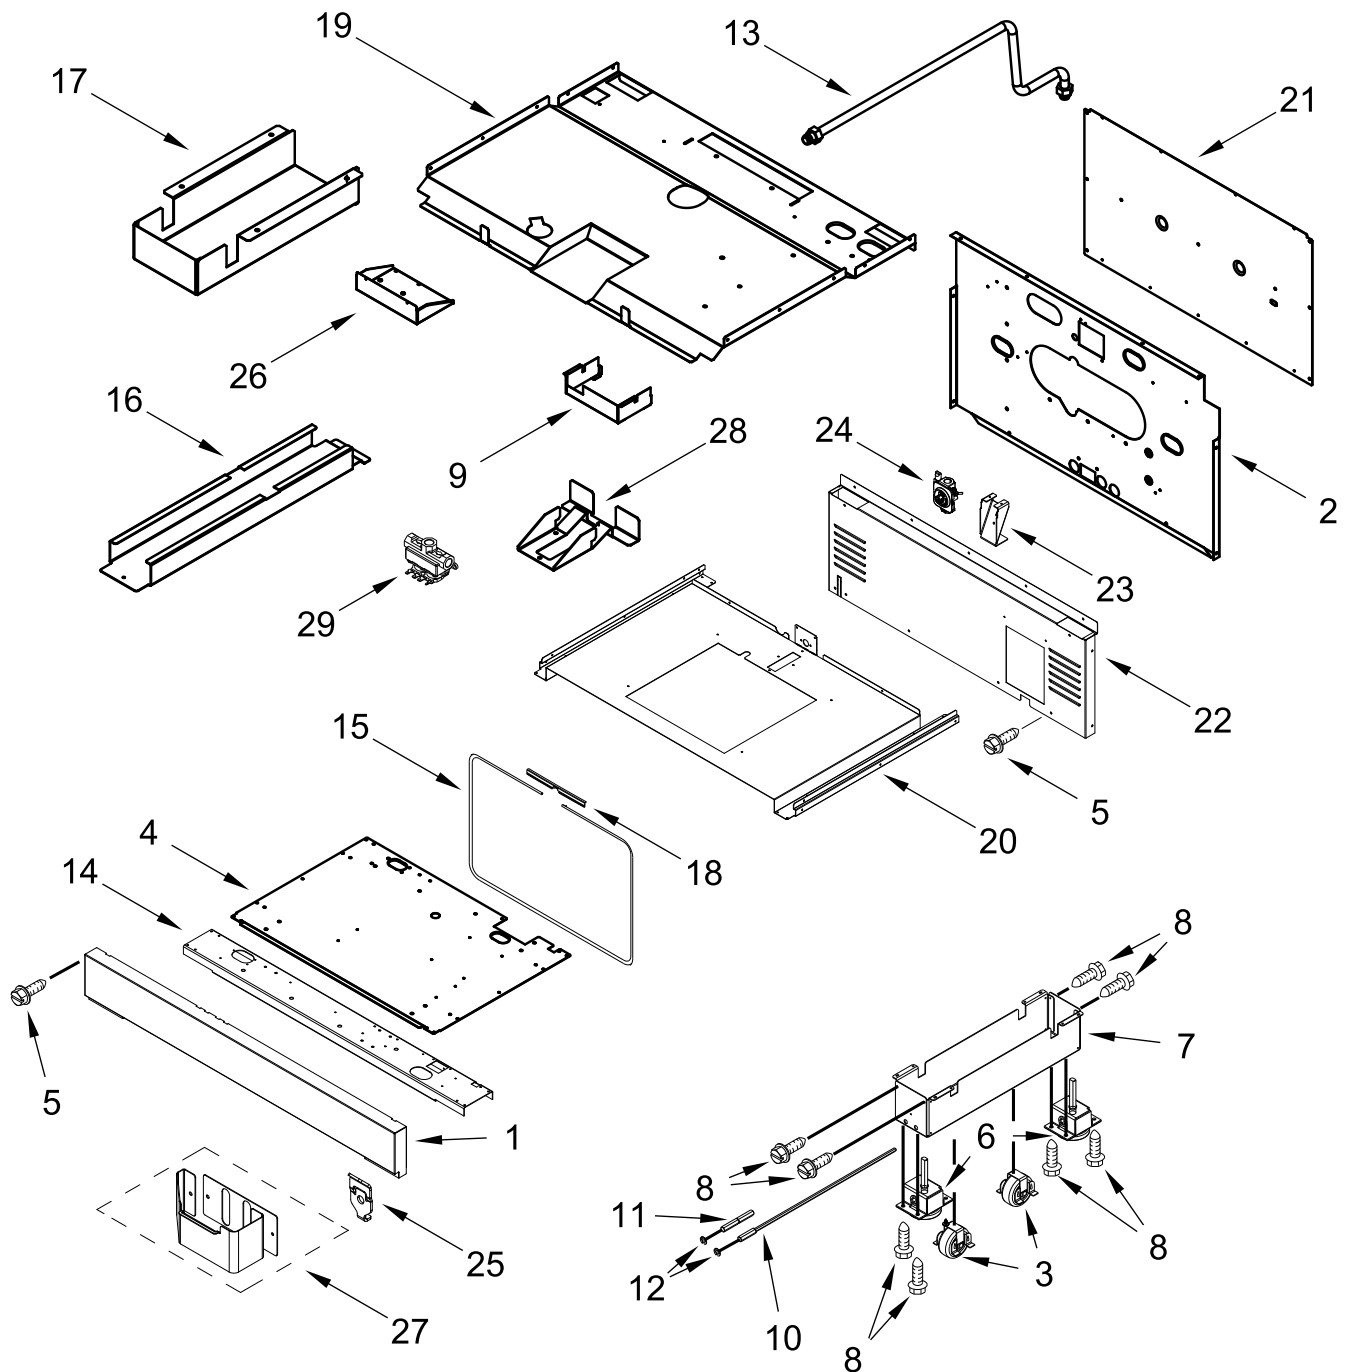

# CHASSIS PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>         | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>           | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>          |
|-----------------------------|-----------------|----------------------------|-----------------------------|-----------------|------------------------------|-----------------------------|-----------------|-----------------------------|
| 1                           | W11697024       | Kickplate                  | 13                          | W11181648       | Tube, Pressure Regulator     | 23                          | W11096823       | Bracket, Pressure Regulator |
| 2                           | W11324989       | Back, Chassis              | 14                          | W11087491       | Support, Channel             | 24                          | W10896959       | Regulator, Pressure         |
| 3                           | W10138054       | Assembly, Roller           | 15                          | W11115328       | Gasket, Cavity (30 In)       | 25                          | W11036559       | Spring Clip, Range          |
| 4                           | W11109583       | Duct, Bottom (30 in)       | 16                          | W11050145       | Duct-Chassis, Rear           | 26                          | W11106341       | Drawer, Appliance Manager   |
| 5                           | 7101P426-60     | Screw                      | 17                          | W11368831       | Channel, Wire                | 27                          | W11199181       | Cover, Foot (Left)          |
| 6                           | 9760860         | Leveler                    | 18                          | W11362015       | Retainer, Gasket (9 in Long) |                             | W11199178       | Cover, Foot (Right)         |
| 7                           | W10908710       | Base, Leveling Leg         | 19                          | W11324986       | Top, Chassis                 | 28                          | W11190223       | Bracket, Bake Alignment     |
| 8                           | 4449743         | Screw                      | 20                          | W11040802       | Chassis, Bottom              | 29                          | W10145680       | Valve, Dual                 |
| 9                           | W11369237       | Cabinet, Appliance Manager | 21                          | W11103334       | Panel, Back Top              |                             |                 |                             |
| 10                          | W10115869       | Shaft, Long                | 22                          | W11034134       | Panel, Back Bottom           |                             |                 |                             |
| 11                          | W10115793       | Shaft, Short               |                             |                 |                              |                             |                 |                             |
| 12                          | 489504          | E-Ring                     |                             |                 |                              |                             |                 |                             |

# OVEN PARTS

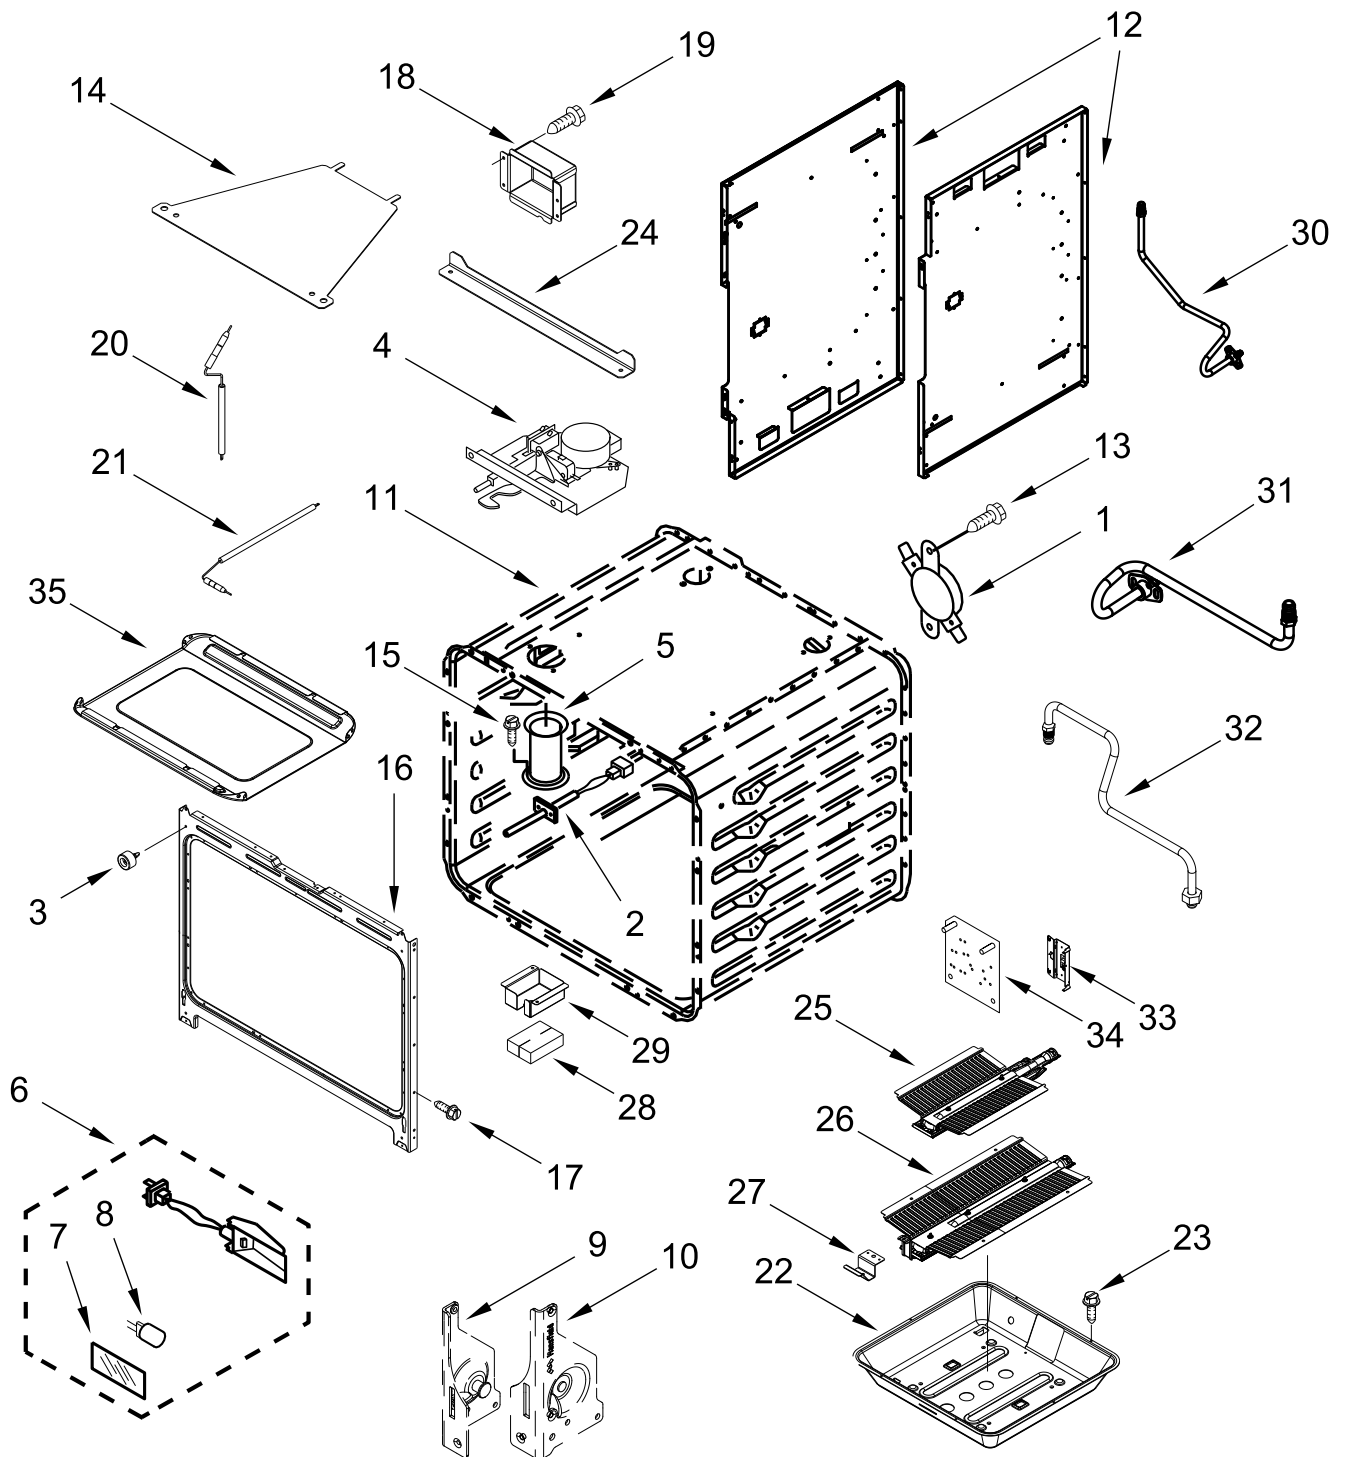



# OVEN PARTS

## Illus.

| <u>No.</u> | <u>Part No.</u> | <u>Description</u>             |
|------------|-----------------|--------------------------------|
| 1          | 4450249         | Thermostat (TOD)               |
| 2          | W10622170       | Probe, Sensor                  |
| 3          | W10351278       | Bumper and Screw               |
| 4          | W10830016       | Latch, Motorized               |
| 5          | W10145743       | Tube, Vent                     |
| 6          | W11223932       | Assembly, Oven Light           |
| 7          | W10169756       | Lens, Light                    |
| 8          | W10169757       | Bulb, Light                    |
| 9          |                 | Receiver, Hinge (Not Serviced) |
| 10         |                 | Receiver, Hinge (Not Serviced) |
| 11         |                 | Liner, Oven (Not Serviced)     |
| 12         | W11102297       | Chassis, Side (Left)           |
|            | W11102296       | Chassis, Side (Right)          |
| 13         | 7101P426-60     | Screw                          |


## Illus.

| <u>No.</u> | <u>Part No.</u> | <u>Description</u>      |
|------------|-----------------|-------------------------|
| 14         | W10160858       | Cover, Latch            |
| 15         | 3196176         | Screw                   |
| 16         | W11192755       | Frame, Front            |
| 17         | 3196560         | Screw                   |
| 18         | W10308051       | Box, Broil              |
| 19         | 7101P434-60     | Screw                   |
| 20         | W11182863       | Electrode, Broil        |
| 21         | W11205400       | Electrode, Bake         |
| 22         | W10145744       | Support, Bake Pan       |
| 23         | 12992902        | Screw                   |
| 24         | W10317437       | Bracket, Broil Standoff |
| 25         | W10878504       | Burner, Bake            |
| 26         | W10311335       | Burner, Broil           |
| 27         | W10308040       | Bracket, Bake Burner    |
| 28         | W10311009       | Insulation, Broil Cover |
| 29         | W10310985       | Cover, Broil            |
| 30         | W11109238       | Tube, Broil             |

## Illus.

| <u>No.</u> | <u>Part No.</u> | <u>Description</u>              |
|------------|-----------------|---------------------------------|
| 31         | W11106980       | Tube, Bake                      |
| 32         | W11109167       | Tube, Gas                       |
| 33         | W10145362       | Bracket-Board, DSI              |
| 34         | W10511278       | Module, Spark DSI               |
| 35         | W10496809       | Pan, Oven Bottom                |
|            |                 | FOLLOWING PARTS NOT ILLUSTRATED |
|            | W10282810       | Insulation, Wrap (30 In)        |
|            | W11109145       | Insulation, Back (30 in)        |
|            | W10299354       | Insulation, Bottom              |
|            | 3400968         | Nut                             |


# VENTING PARTS

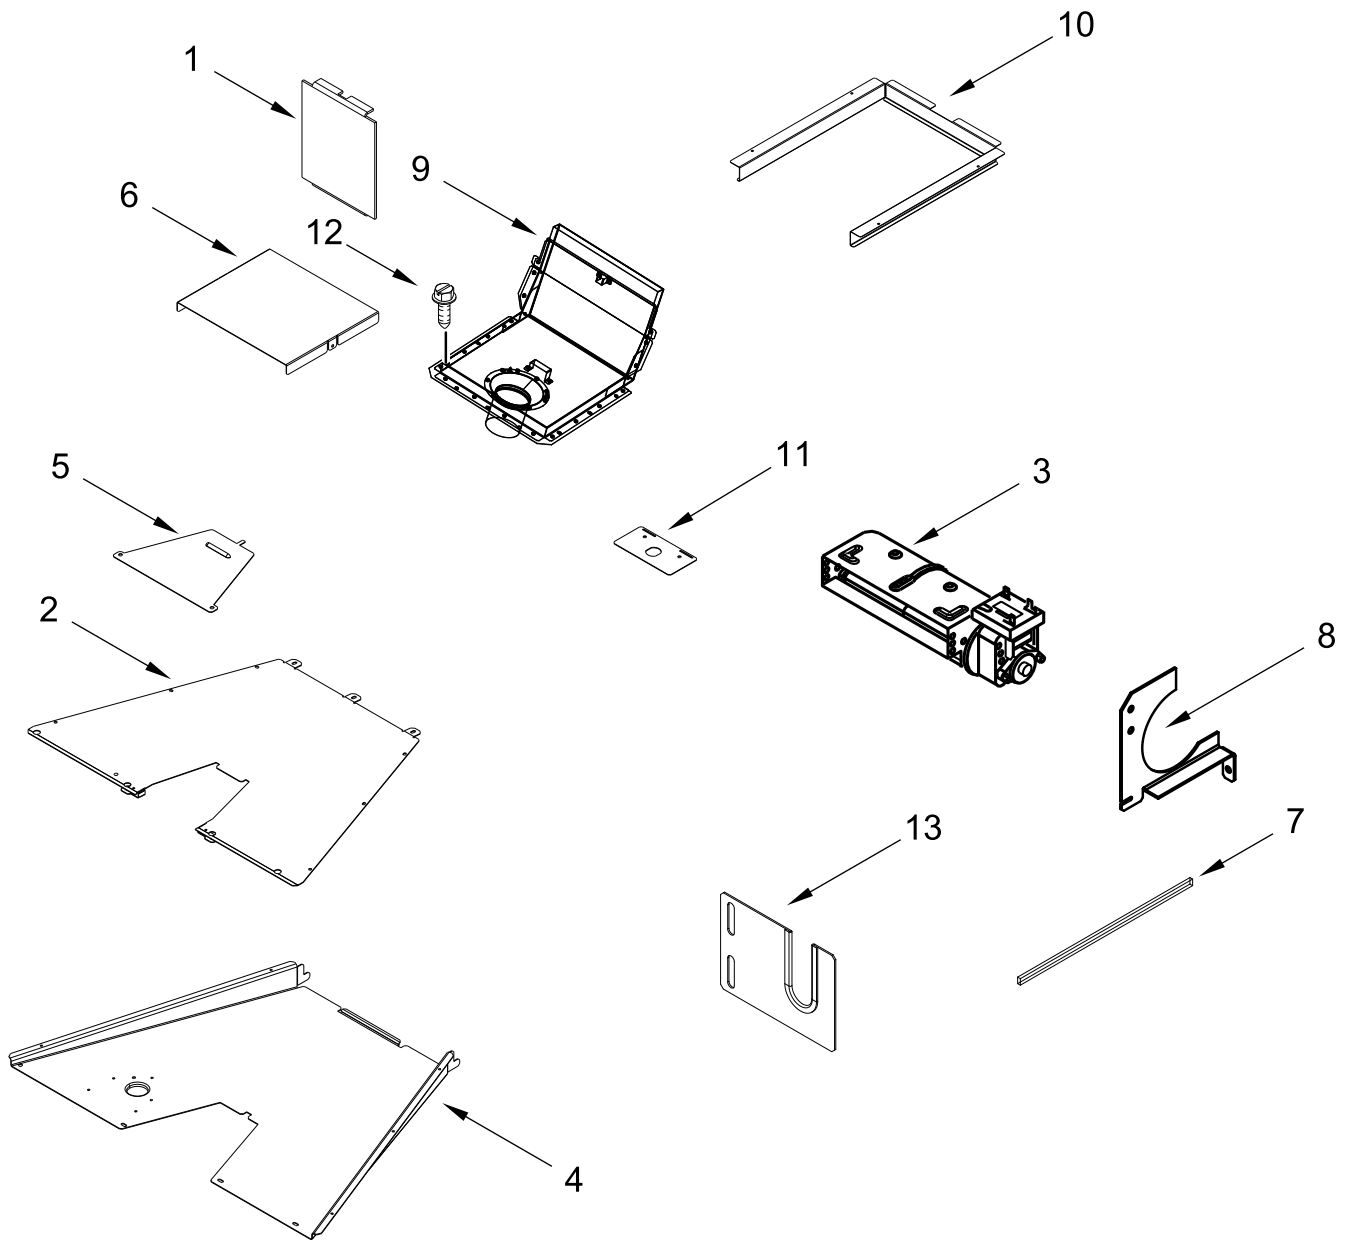

# VENTING PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>           | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>    |
|-----------------------------|-----------------|------------------------------|-----------------------------|-----------------|-----------------------------------|-----------------------------|-----------------|-----------------------|
| 1                           | W10246087       | Insulation, Chimney          | 6                           | W10246086       | Retainer, Insulation              | 11                          | W10115855       | Holder, Strain Relief |
| 2                           | W11105221       | Vent, Cooling Top (30 in)    | 7                           | W10919715       | Gasket                            | 12                          | 3400805         | Screw (Zinc)          |
| 3                           | W11200129       | Blower                       | 8                           | W11047754       | Bracket, Blower Mount             | 13                          | W11106956       | Cover, Channel        |
| 4                           | W11091676       | Vent, Cooling Bottom (30 in) | 9                           | W10340579       | Vent, Chimney Box (30 in / 36 in) |                             |                 |                       |
| 5                           | W11109518       | Plate, Cooling Latch         | 10                          | W10145363       | Duct, Primary Air (30 in)         |                             |                 |                       |


# OVEN DOOR PARTS

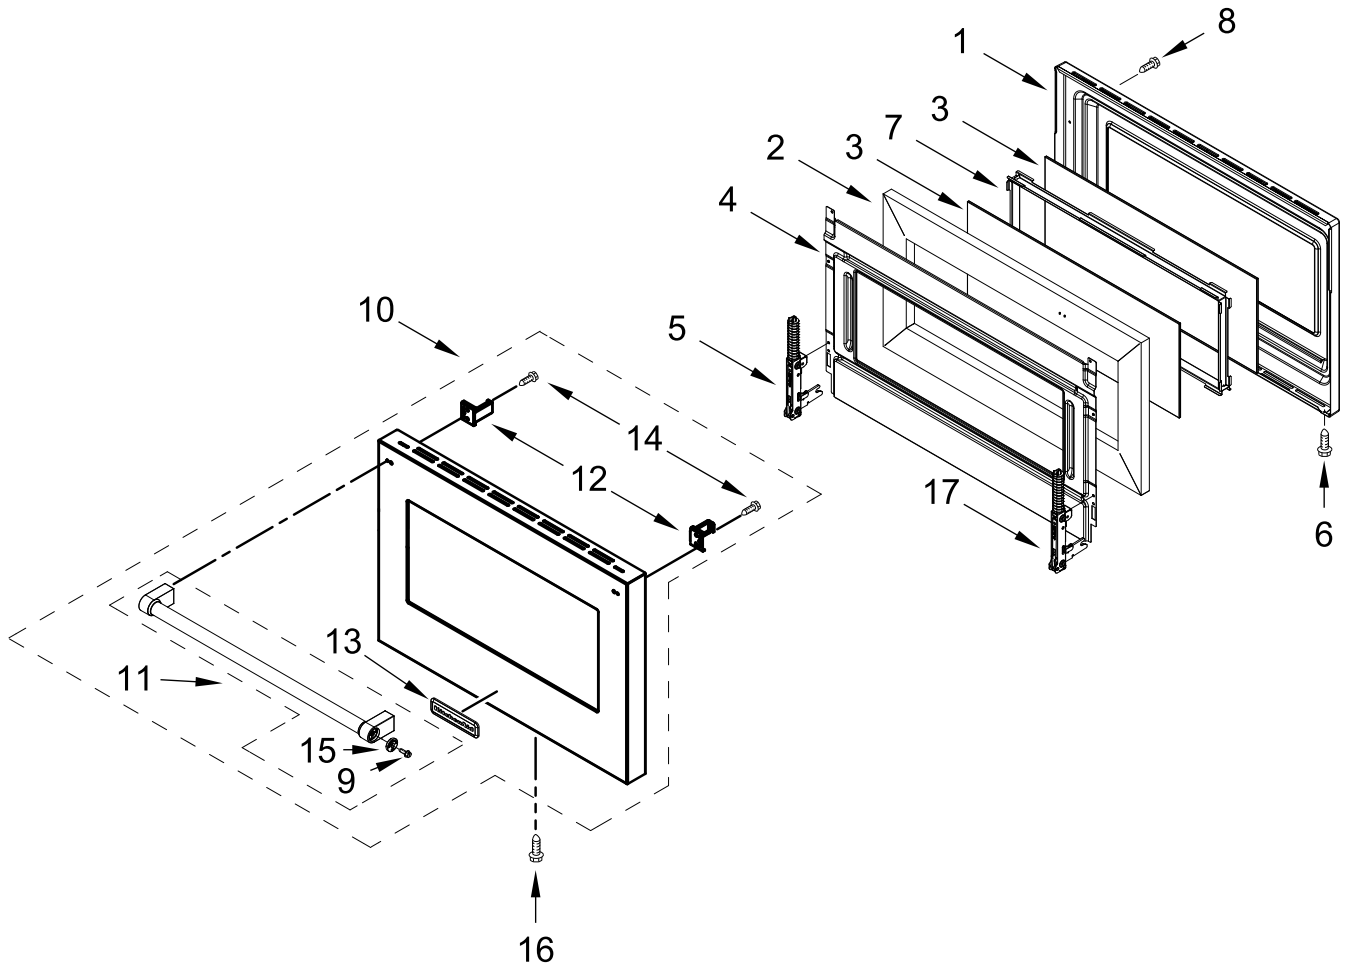

# OVEN DOOR PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>       | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>                       | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>  |
|-----------------------------|-----------------|--------------------------|-----------------------------|-----------------|------------------------------------------|-----------------------------|-----------------|---------------------|
| 1                           | W11036771       | Liner, Door              | 7                           | W10272594       | Frame, Glass                             | 12                          | W11197830       | Bracket, Handle     |
| 2                           | W11413190       | Insulation, Door (30 in) | 8                           | W10898280       | Screw                                    | 13                          | W10518672       | Badge               |
| 3                           | W11184409       | Glass, Inner             | 9                           | W10656499       | Screw                                    | 14                          | W10276043       | Screw               |
| 4                           | W11194821       | Retainer, Glass          | 10                          | W11712124       | Outer Door Assembly<br>(Includes Handle) | 15                          | W11361073       | Medallion, Handle   |
| 5                           | W11390105       | Hinge, Door (Left)       | 11                          | W11362707       | Handle Assembly,<br>Door                 | 16                          | W10162096       | Screw               |
| 6                           | W10607120       | Screw                    |                             |                 |                                          | 17                          | W11390124       | Hinge, Dual (Right) |

# INTERNAL OVEN PARTS

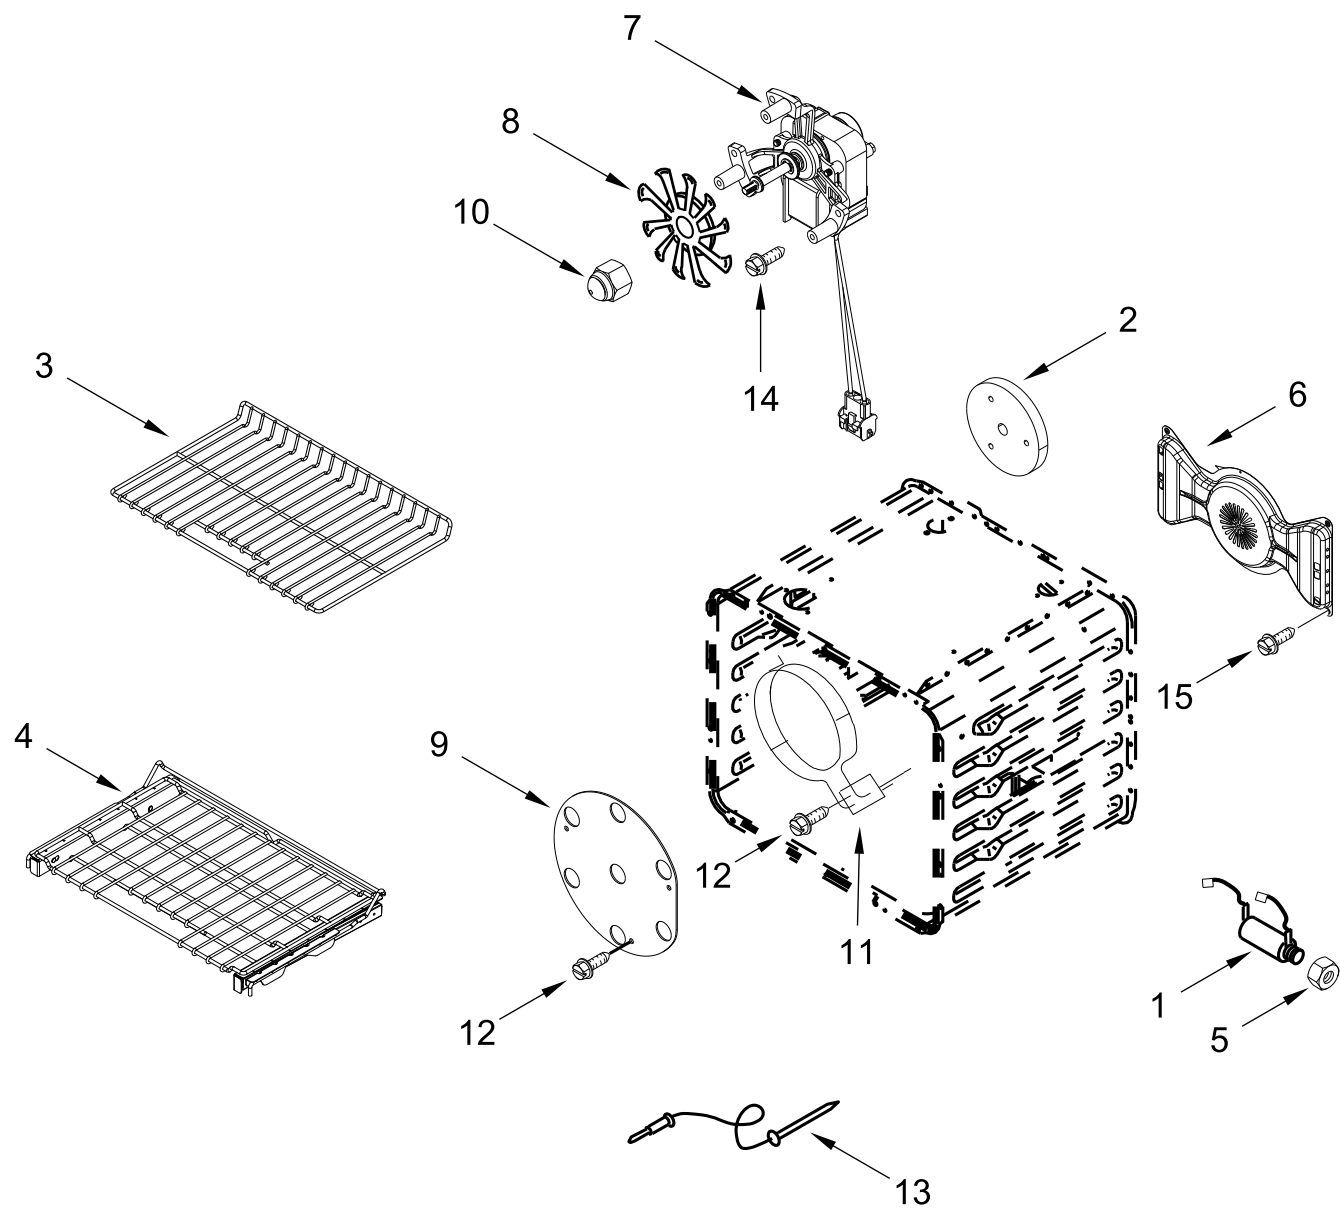

# INTERNAL OVEN PARTS

| <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>           | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u>       | <u>Illus.</u><br><u>No.</u> | <u>Part No.</u> | <u>Description</u> |
|-----------------------------|-----------------|------------------------------|-----------------------------|-----------------|--------------------------|-----------------------------|-----------------|--------------------|
| 1                           | 9755543         | Jack, Meat Probe             | 7                           | W10631506       | Motor, Convection        | 13                          | 9755542         | Probe, Temperature |
| 2                           | W10282821       | Insulation, Convection Cover | 8                           | W10631503       | Blade, Fan               | 14                          | W10720084       | Screw              |
| 3                           | W10570887       | Rack, Oven                   | 9                           | W10261523       | Plate, Fan               | 15                          | W10739592       | Screw              |
| 4                           | W11496977       | Rack, Sliding Oven           | 10                          | W10631504       | Nut, Acorn (LH)          |                             |                 |                    |
| 5                           | 9755546         | Nut, Hidden                  | 11                          | W11098505       | Element, Convection Heat |                             |                 |                    |
| 6                           | W11212180       | Baffle, Convection           | 12                          | 4449154         | Screw                    |                             |                 |                    |

# OPTIONAL PARTS (NOT INCLUDED)

**Illus.**

| <b><u>No.</u></b> | <b><u>Part No.</u></b> | <b><u>Description</u></b>   |
|-------------------|------------------------|-----------------------------|
|                   |                        | ACCESSORIES                 |
|                   | 30-48KITRC             | Gas Range Connector Kit     |
|                   | 4396096RB              | Griddle                     |
|                   | 4396923                | Broiler Pan and Grid        |
|                   | W10355051              | Cleaner, Cooktop Backsplash |
|                   | W10285447              | 30-in With Shelves          |
|                   |                        | Medallion, Handle           |
|                   | W11368841BO            | Black ANO                   |
|                   | W11368841RE            | Red ANO                     |
|                   | W11368841MP            | Marscapone (Cream)          |
|                   | W11368841NE            | New Gold                    |
|                   | W11368841CF            | Copper                      |
|                   | W11368841BN            | Bronze                      |
|                   | W11368841DD            | Dark Blue                   |