




ELECTRIC COMBO WALL OVEN

MODELS:

KOEC530PBS01 (Black Stainless)


CONTROL PANEL PARTS

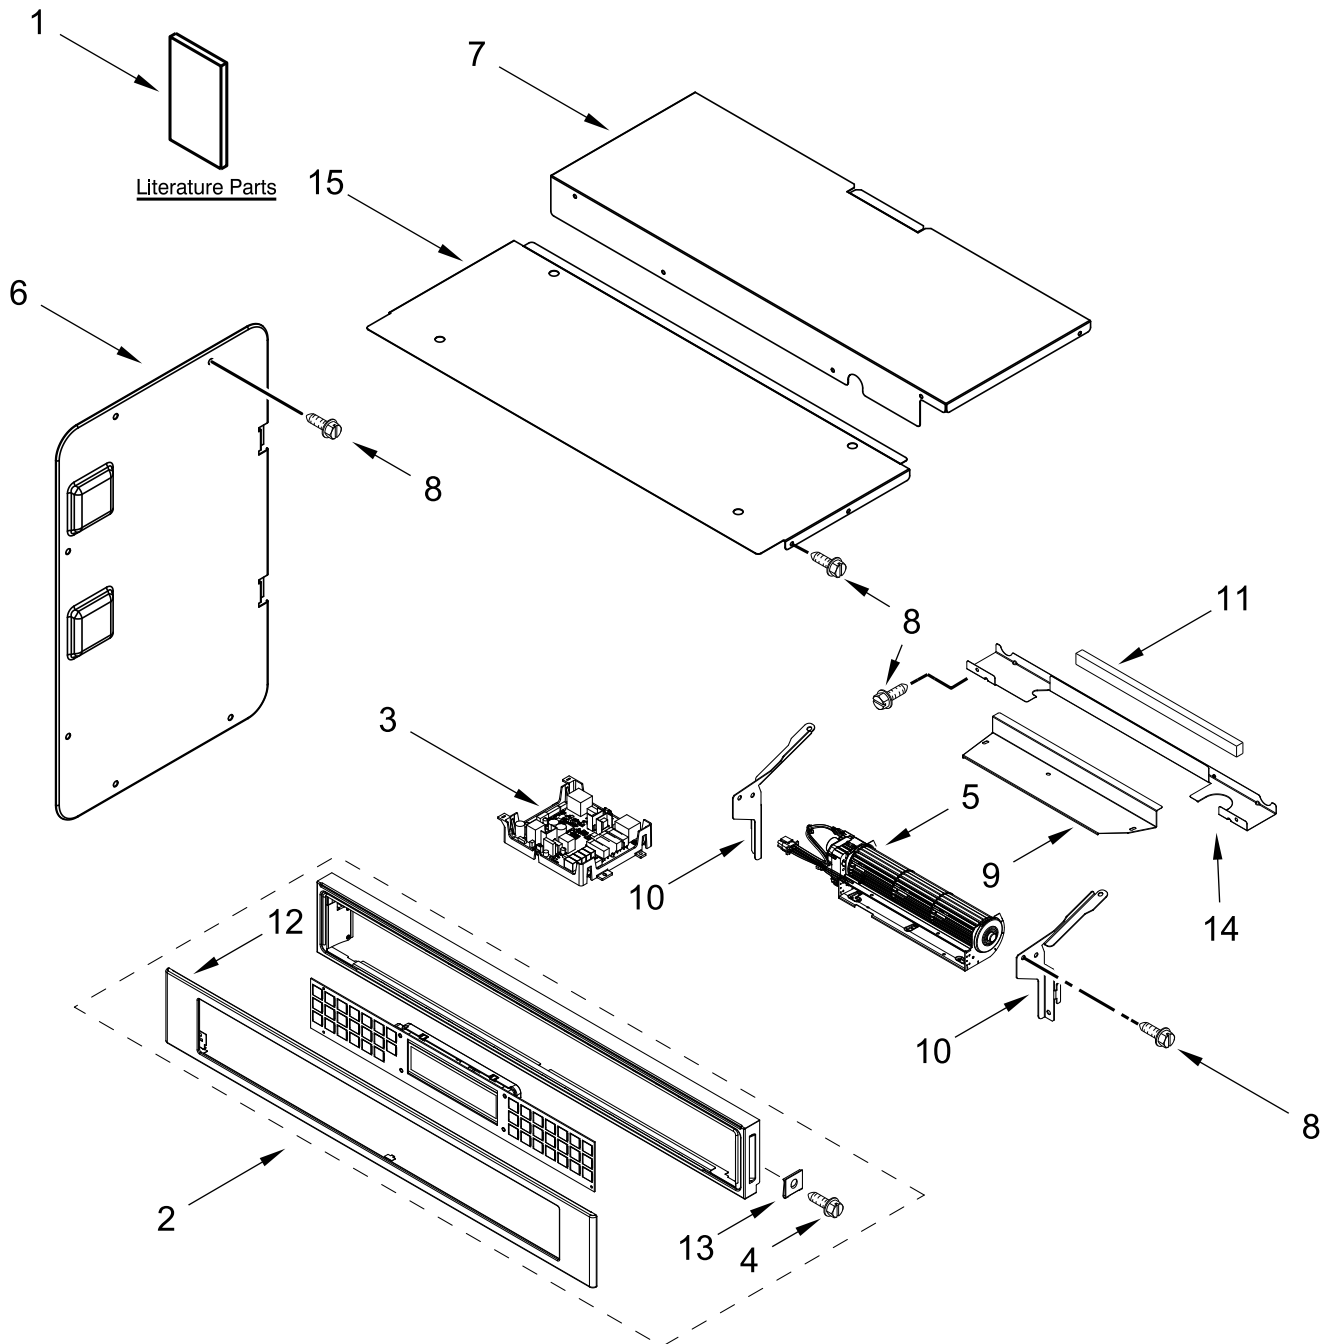

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	W10588732	Cover, Top Back 30 IN Chassis	15	W10318158	Chassis, Cover Top Front 30 IN
	W11655510	Owner's Manual	8	7101P426-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11618058	Quick Start Guide	9	W10681157	Cover, Combo Blower			
	W11382178	Tech Manual	10	W10655463	Bracket, Blower (Left)		W11659368	Harness, Main
	W11340885	Wiring Diagram		W10655462	Bracket, Blower (Right)		W11256627	Harness, Signal
2		Control Panel Assembly (Includes Overlay)					W11264646	Harness, Door Latch
	W11640547	Black Stainless	11	4451758	Block, Foam		W11229448	Harness, Communication
3	W11249218	Appliance Manager, Copernicus	12		Skin, Control Panel		3400015	Screw, Grounding
				W10776407	Black Stainless		W11226264	Strap, Ground
4	W11339492	Screw (Black)	13	4450118	Nut		4448664	Clamp, Conduit
5	W11397930	Blower	14	W11166802	Divider, Chassis Back		313438	Clip, Harness
6	W10655467	Chassis, Combo Side					W11394923	Bag, Hardware


OVEN PARTS

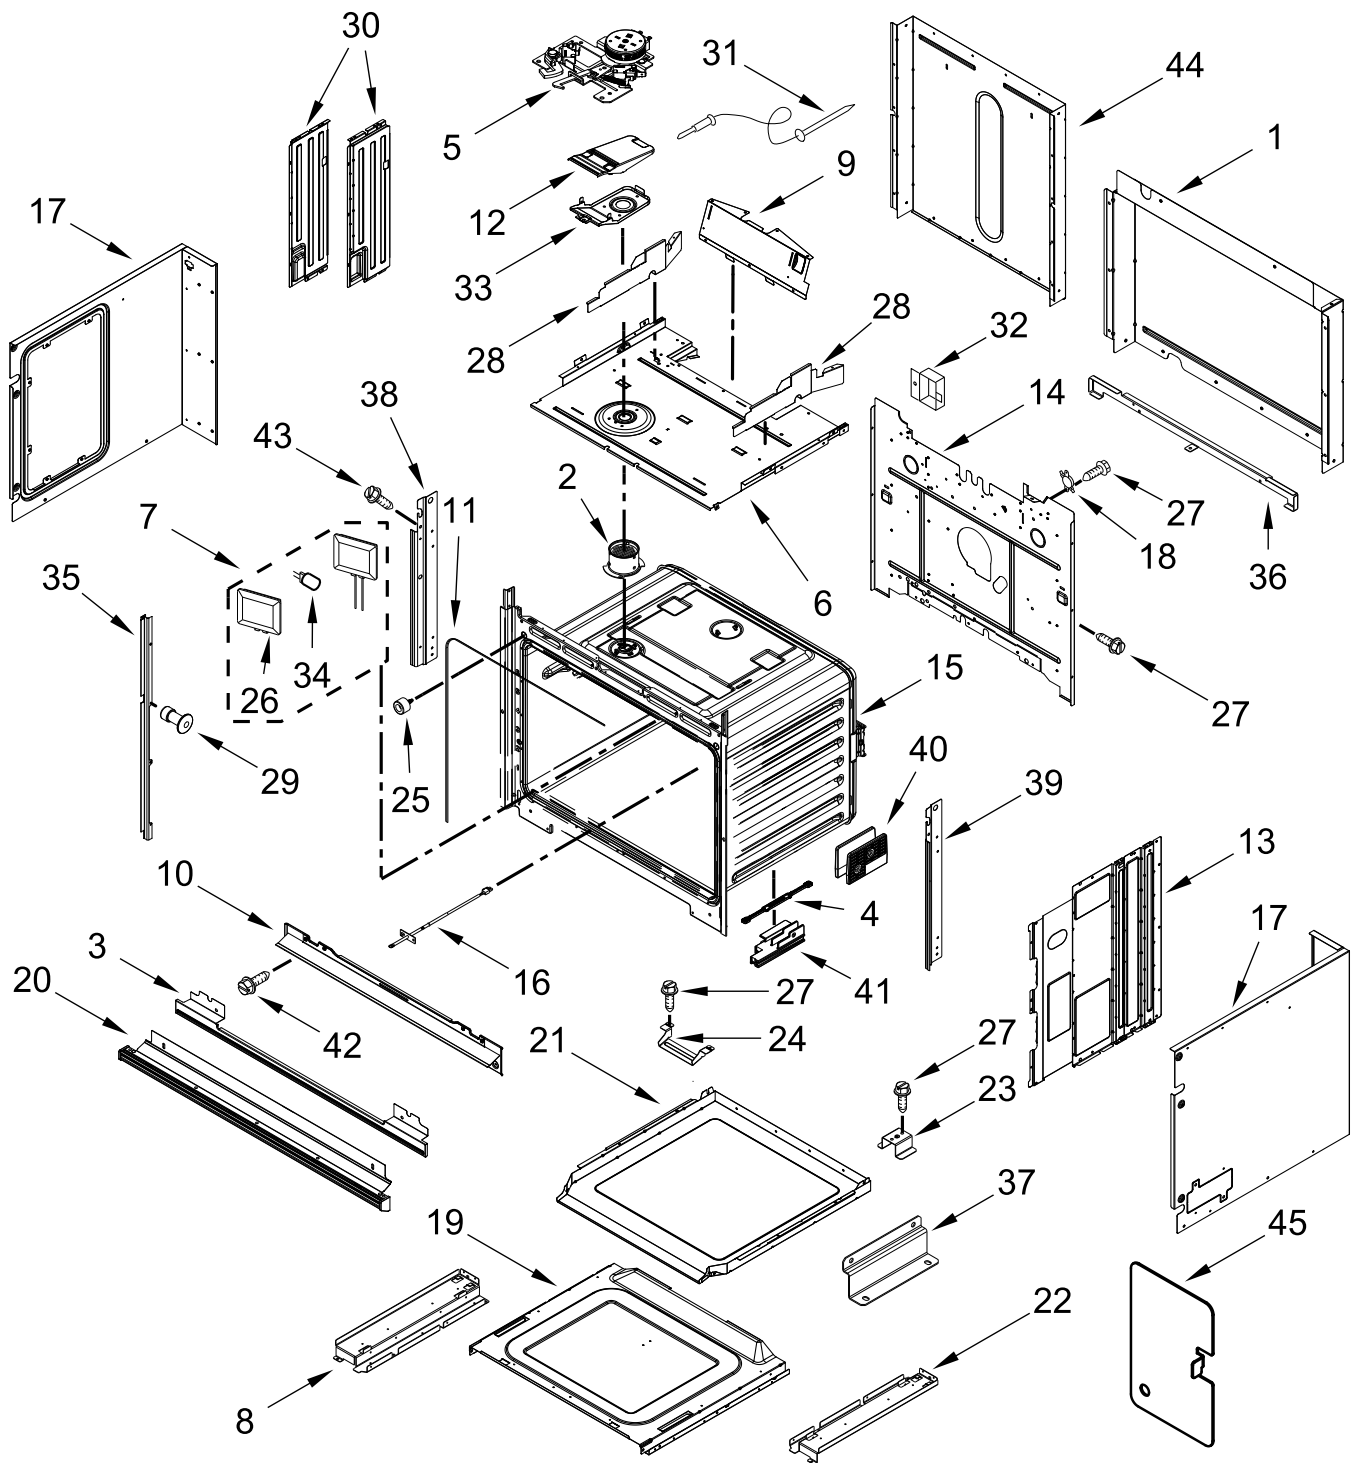

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11171004	Cover, Combo Chassis Back Duct	18	4449751	Thermostat (TOD)	34	W10472384	Bulb, Light
2	W11085298	Tube, Vent	19	W11135103	Base, Chassis	35		Trim, Side
3		Trim, Bottom Vent	20		Bottom Vent Assembly		W11235457	Black (Left)
	W11624689	Black		W11467336	Black		W11235458	Black (Right)
4	W11558603	Spacer, Base	21	W11244446	Duct, Bottom Chassis	36	W10283022	Support, Crossbar
5	W11655005	Latch, Motorized	22	W10283021	Support, Base (Right)	37	W10283024	Side, Bracket
6	W11168071	Top, Chassis	23	W11135135	Support, Air Channel	38	W11627410	Siderail, Combo (Left)
7	W11205574	Light Assembly	24	W11135125	Spacer, Bottom Chassis Duct	39	W11627411	Siderail, Combo (Right)
8	W10283020	Support, Base (Left)	25	W11166315	Bumper and Screw	40	W11245118	Foot, Base
9	W10904163	Deflector, Blower	26	W10472386	Lens, Light	41	W11245114	Foot, Chassis (Left)
10	W11518347	Vent, Combo Center	27	7101P426-60	Screw		W11245116	Foot, Chassis (Right)
11	W11608108	Gasket	28	W11186391	Deflector, Chassis (Left)	42	W11249635	Screw
12	W11256424	Cover, Vent Exhaust		W11186398	Deflector, Chassis (Right)	43	7101P633-60	Screw (Black)
13	W11165274	Side, Chassis	29	W11696855	Rivet (Black)	44	W11134657	Duct, Lower Chassis Back
14	W11223327	Back, Chassis	30	W11167419	Cover, Suction (Left)	45	W11533682	Cover, WIFI
15		Liner, Oven (Not Serviceable)		W11186675	Cover, Suction (Right)			FOLLOWING PARTS NOT ILLUSTRATED
16	W11346074	Probe, Sensor	31	9755542	Probe, Temperature		W11188284	Insulation, Wrap
17	W11171909	Side, Combo Chassis (Left)	32	8285593	Cover, Connector		W11234758	Insulation, Cavity
	W11171919	Side, Combo Chassis (Right)	33	W11256423	Base, Vent Exhaust			


OVEN DOOR PARTS

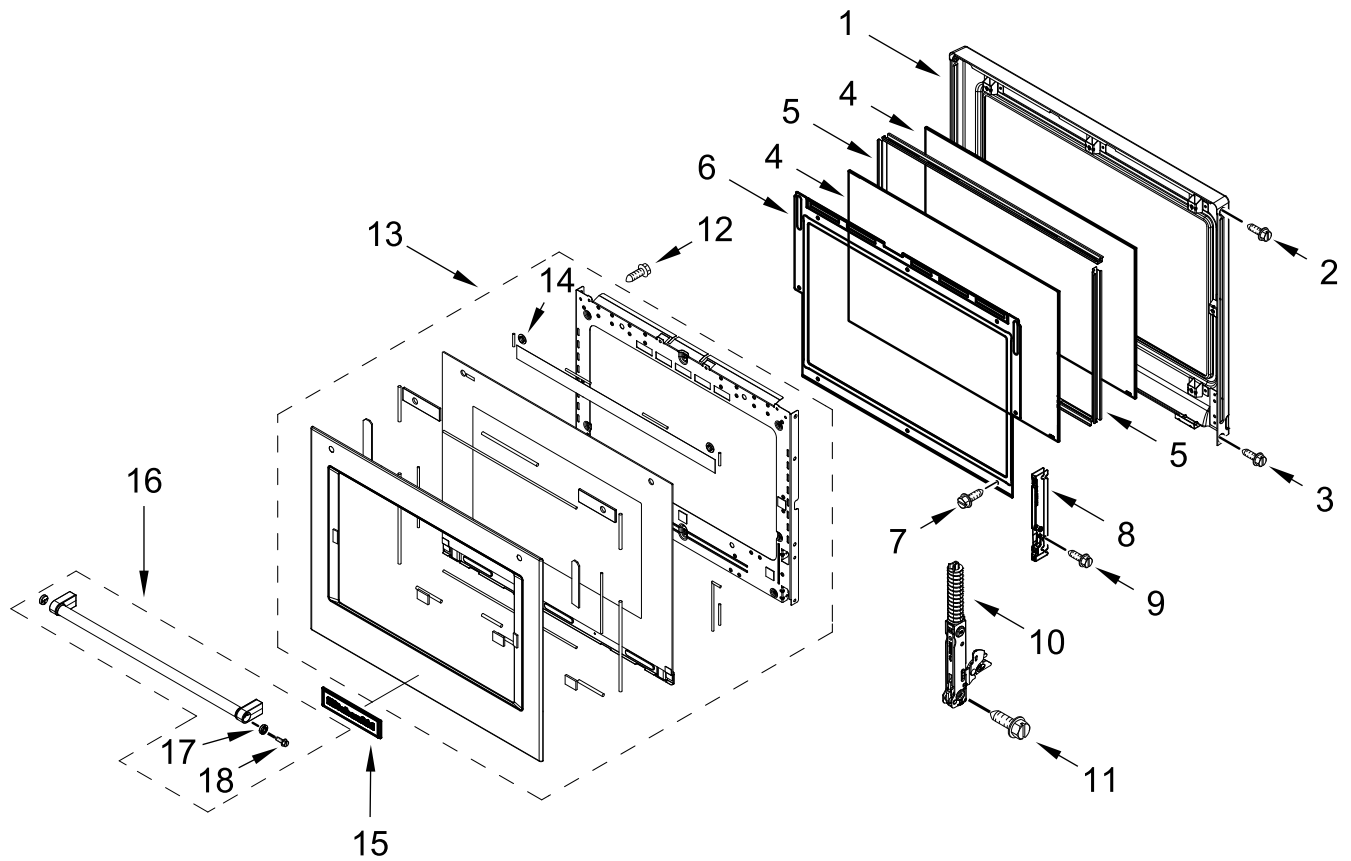

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	8	W11239070	Receiver, Hinge (Left)	13		Door Assembly
2	7101P375-60	Screw		W11239072	Receiver, Hinge (Right)		W11295959	Black Stainless
3	W11290045	Screw				14	W10319024	Washer, Door
4	W10618107	Glass, Inner	9	W10254050	Screw	15	W10518672	Badge
5	W11647160	Spacer, Air Divider	10	W11633413	Hinge, Door (Left)	16		Handle Assembly
6	W11174095	Retainer, Air Divider Glass		W11633414	Hinge, Door (Right)		W11241572	Stainless
7	7101P426-60	Screw	11	3196183	Screw	17	W10551026	Medallion, Handle
			12	W11317731	Screw (Black)	18	W10656499	Screw


INTERNAL OVEN PARTS

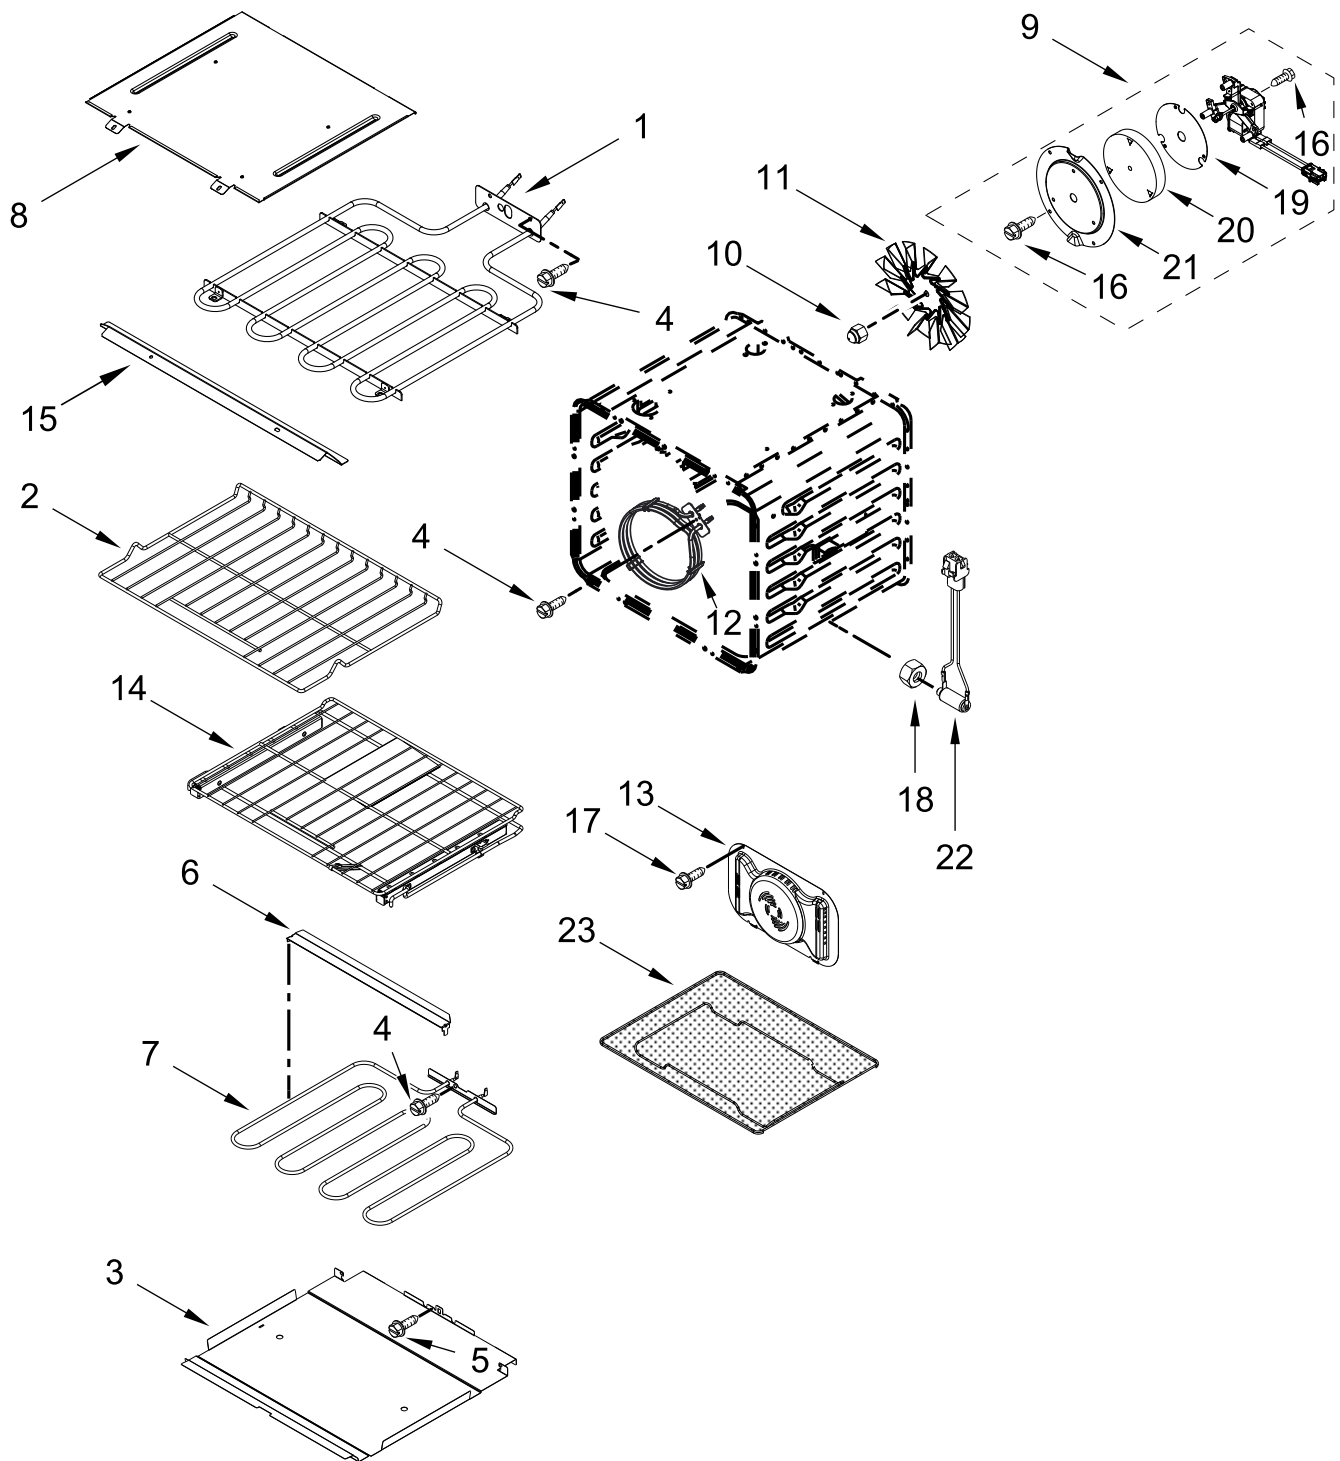

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238159	Element, Broil	9	W11398058	Convect Motor Assembly	17	W10906658	Screw
2	W10554526	Rack, Oven				18	W11033111	Nut, Locking
3	W10318198	Tray, Hidden Bake	10	W11433702	Nut, Acorn (LH)	19	W11251715	Plate, Convect Motor
4	7101P434-60	Screw	11	W11425715	Blade, Fan	20	W11251716	Insulation, Convect Motor
5	7101P426-60	Screw	12	W10546519	Element, Convection	21	W11398057	Cover, Convect Plate
6	W10282957	Crossbar, Hidden Bake Tray	13	W10918895	Baffle, Bow Tie	22	W11252826	Jack, Meat Probe
7	W11292248	Element, Bake	14	W10554531	Rack, Sliding	23	W11661815	Basket, Airfry
8	W11235537	Reflector, Broil	15	W10588737	Shield, Broil Front			
			16	W10720084	Screw			


CABINET AND STIRRER PARTS

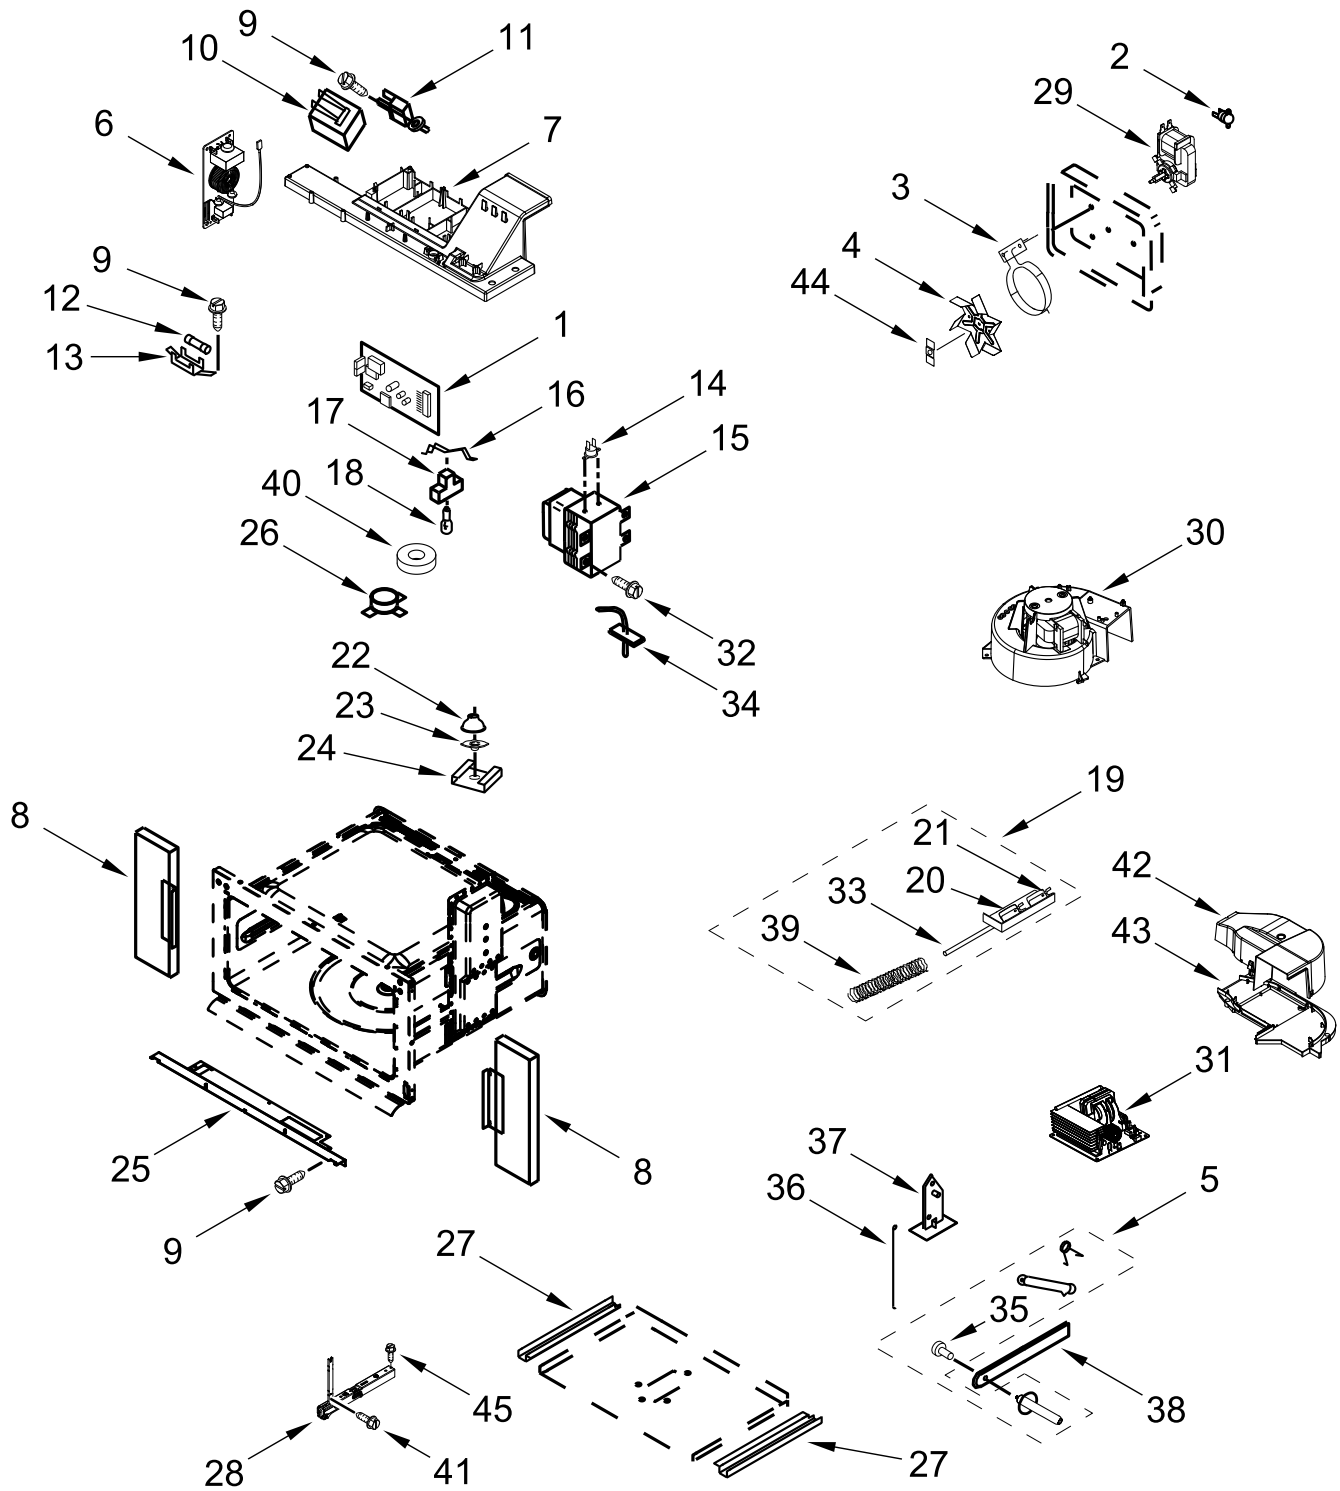

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11289998	Manager, Appliance	17	W10490593	Holder, Lamp	37	461967750494	Support
2	423107845441	Sensor, Convection	18	W10795595	Lamp, Halogen	38	W11213889	Arm, Sliding
3	461967848711	Heater, Convection Element	19	W11555168	Harness, Interlock	39	423107570871	Spring, Release Rod
4	W11453899	Blade, Fan	20	461967848881	Switch	40	W10769147	Sealing, Lamp
5	W10128850	Sliding Arm Assembly	21	W10876593	Holder, Switch	41	461967825781	Screw (Shoulder)
6	W11505129	Filter, Noise	22	423107022541	Reflector	42	W11591019	Housing, Upper Inverter
7	461967754821	Duct, Magnetron	23	423107720491	Lens, Lamp	43	W11591018	Housing, Lower Inverter
8	461967017491	Trim, Side (Left)	24	W11440819	Clip, Spring	44	W10120233	Nut, Speed
	461967017481	Trim, Side (Right)	25	W11334716	Vent, Top Microwave	45	461967825601	Screw
9	461967825321	Screw	26	W10460457	Sensor, Humidity			MISCELLANEOUS PARTS
10	461967848621	Transformer, Light (20V)	27	461967008461	Support, Bottom	W11454022		Harness, Fan and Turntable
11	461967842541	Thermoactuator	28	W11681075	Hinge, Door	W11539527		Jumper Harness, Communication
12	241908600053	Fuse	29	W11233698	Motor, Convection Fan	W11539494		Harness, Inverter
13	4375231	Block, Fuse	30	W11131760	Cooling Fan Assembly			
14	461967846741	Thermostat, Magnetron	31	W11504539	Inverter			
15	W11504545	Magnetron	32	461967825971	Screw			
16	W10465869	Spring, Lamp	33	461967750464	Rod, Push			
			34	241960100002	Sensor, Temperature			
			35	461967510191	Bushing			
			36	461967570351	Spring, Torsion			


MICROWAVE DOOR PARTS

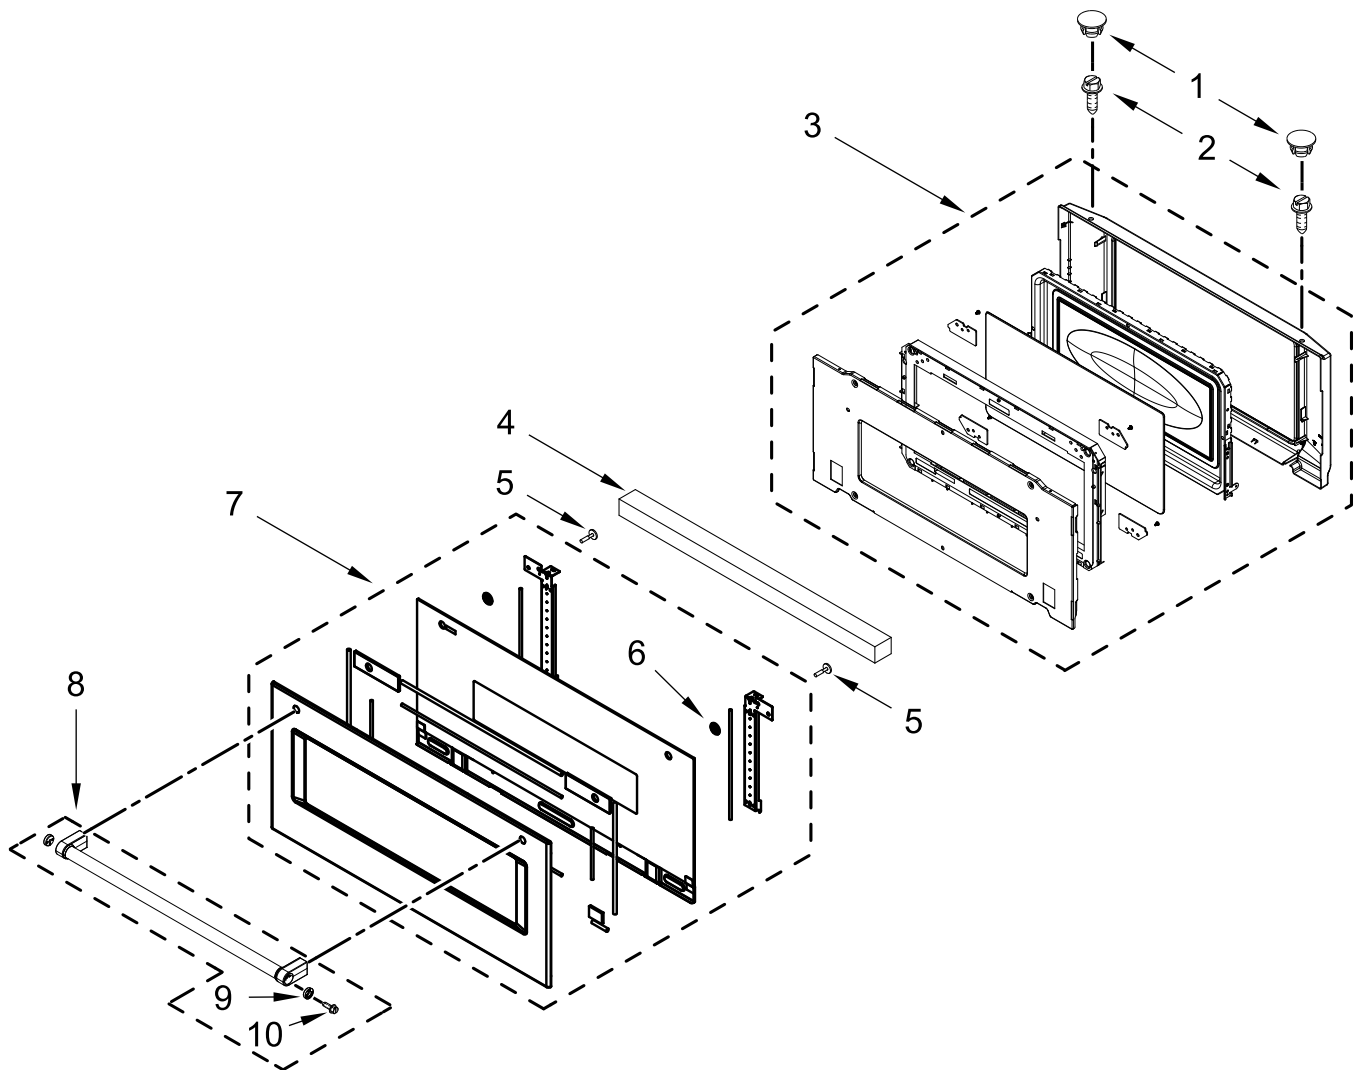

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	5	W11317731	Screw (Black)	8		Handle Assembly
2	7101P338-60	Screw	6	W10319024	Washer, Door		W11241572	Stainless
3	W11639555	Inner Door Assembly	7		Door Assembly	9	W10551026	Medallion, Handle
4	W10359769	Foam, Door Handle		W11300496	Black Stainless	10	W10656499	Screw

INTERNAL MICROWAVE PARTS

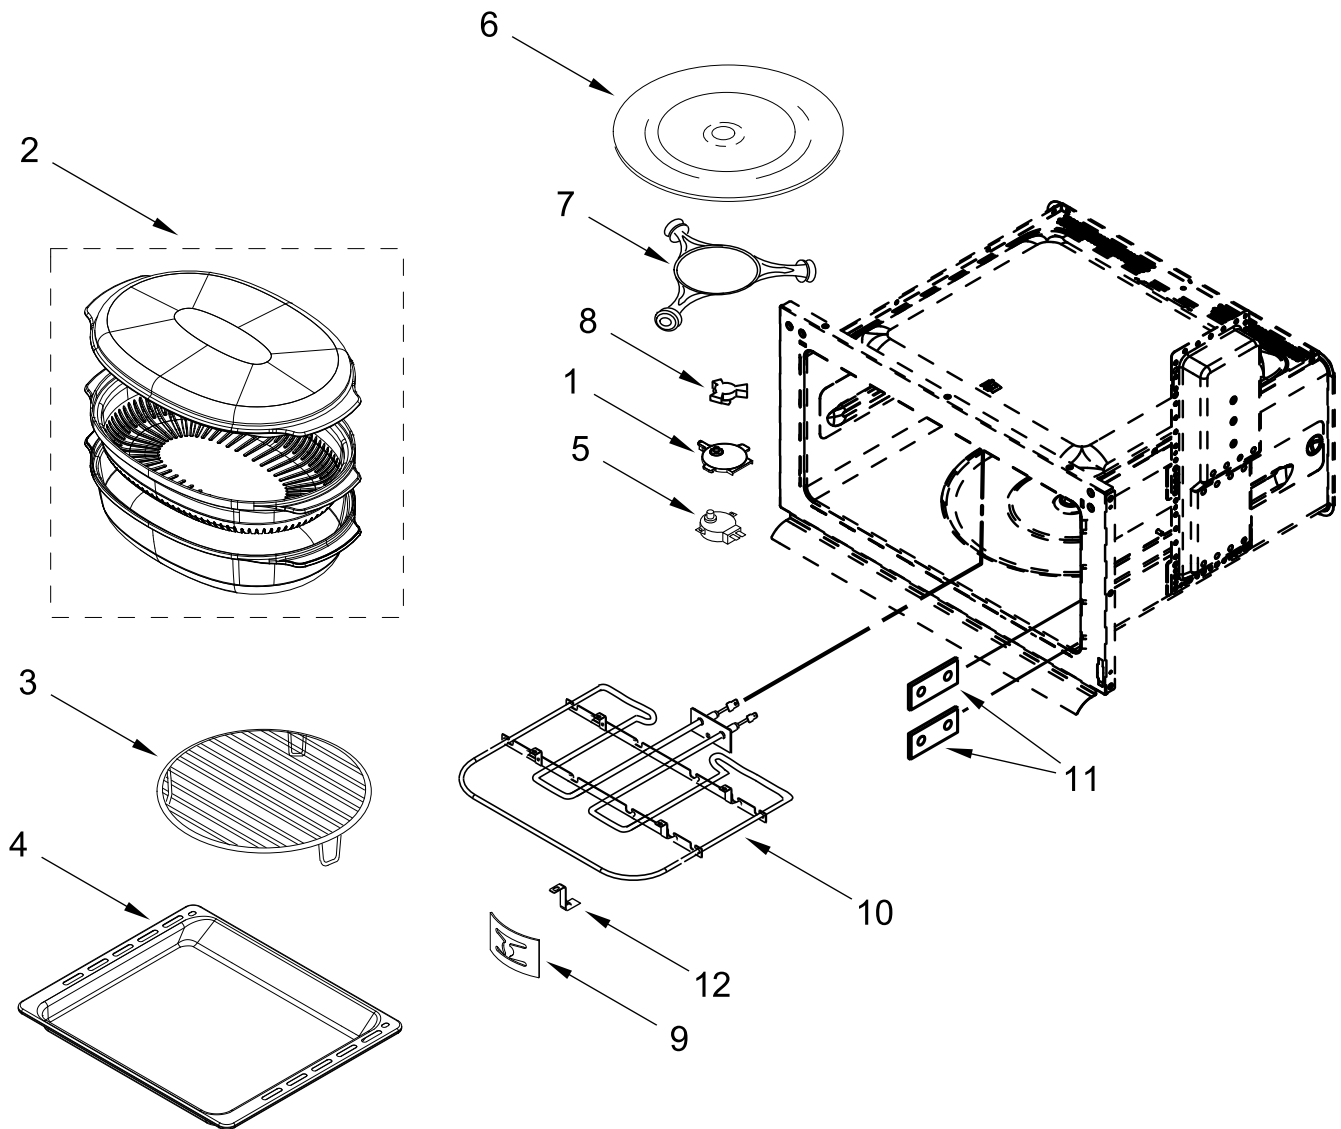

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461967753742	Adapter, Turntable Motor	6	W11340343	Turntable	11	461967451001	Plate, Cover
2	W10796139	Steamer	7	W10367316	Ring, Turntable	12	461967753871	Support, Element
3	W10748279	Rack, Low Convection	8	W10545578	Drive, Turntable			
4	W10750839	Plate, Baking	9	252262898008	Support, Spring Lock Grill			
5	461967848971	Motor, Turntable	10	W10387651	Element, Grill			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		FOLLOWING PARTS NOT ILLUSTRATED
		ACCESSORIES
		Trim, Tall Vent
W11570325	Black	Bottom Vent Assembly
W11369889	Stainless	Vent, Deflector
W11594553	Black	PAINT, TOUCH-UP (1/2oz.)
72017	White	
72032	Black	PAINT, SPRAY
350930	White	
261900	Citrine White	
830864	Black	
		ADHESIVE
482338	Sealer, Silastic	