




GAS RANGE

MODELS:

WEG515S0LZ4 (Stainless)

WEG515S0LV4 (Black Stainless)


COOKTOP PARTS

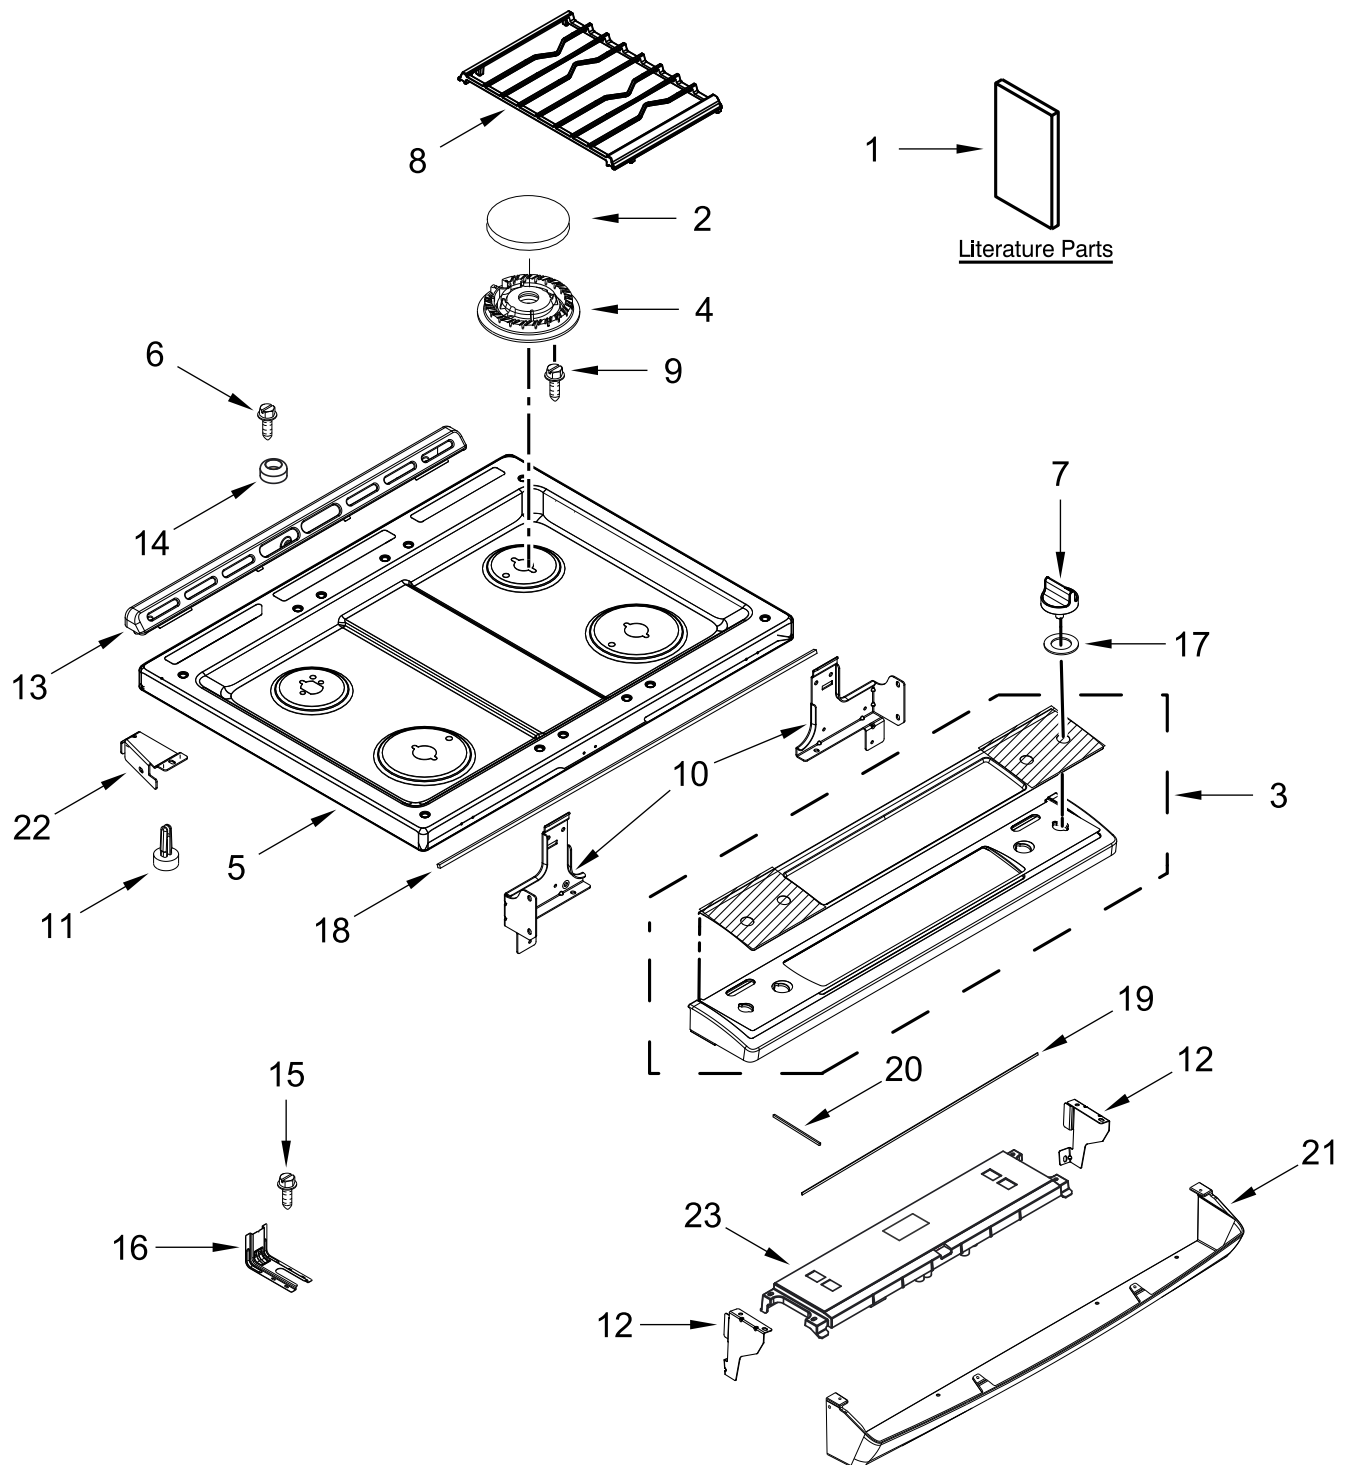

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8		Kit, Grate (Set of 2)	19	W10689101	Gasket, Console
	W11426595	Owners Manual		W11241651	Black	20	W10689102	Gasket, Console Short
	W10842031	Sheet, Tech	9	3196173	Screw	21		Console, Lower Panel
	W11508880	Diagram, Wiring	10	W10814303	Support, Cooktop (Left)		W10816943	Black
	W11428054	Quick Start Guide		W10814304	Support, Cooktop (Right)	22	W10162253	Brace, Corner (Left)
2		Burner Cap Kit (Set of 4)		W10814305	Bracket, Console (Center)		W10162252	Brace, Corner (Right)
	W10825883	Black				23	W11520693	Electronic, Control (LCX)
3		Console	11	8016P022-60	Glide, Main Top			FOLLOWING PARTS NOT ILLUSTRATED
	W11512200	Stainless	12	W10547960	Bracket, Console (Left)		W11458865	Harness, Main
	W11512201	Black Stainless		W10547961	Bracket, Console (Right)		W11450462	Harness, Bake and Broil
4	W10732322	Spreader, Flame (Left Front and Right Front)					W11466697	Harness, Console
	W10732319	Spreader, Flame (Left Rear)	13		Trim, Vent		313438	Clip, Harness
	W10732320	Spreader, Flame (Right Rear)		W10577781	Black		3196520	Clip, Wire
5		Cooktop	15	7101P485-60	Screw, Anti-Tip Kit		W10580229	Wire, Ground
	W11341045	Black	16	W11379947	Bracket, Anti-Tip		7111P017-60	Clamp, Wire
6	3196169	Screw	17		Bushing			
7		Knob		W10739036	Black			
	W11513755	Stainless	18	W10612719	Gasket, Console and Cooktop			
	W11599578	Black Stainless						


MANIFOLD PARTS

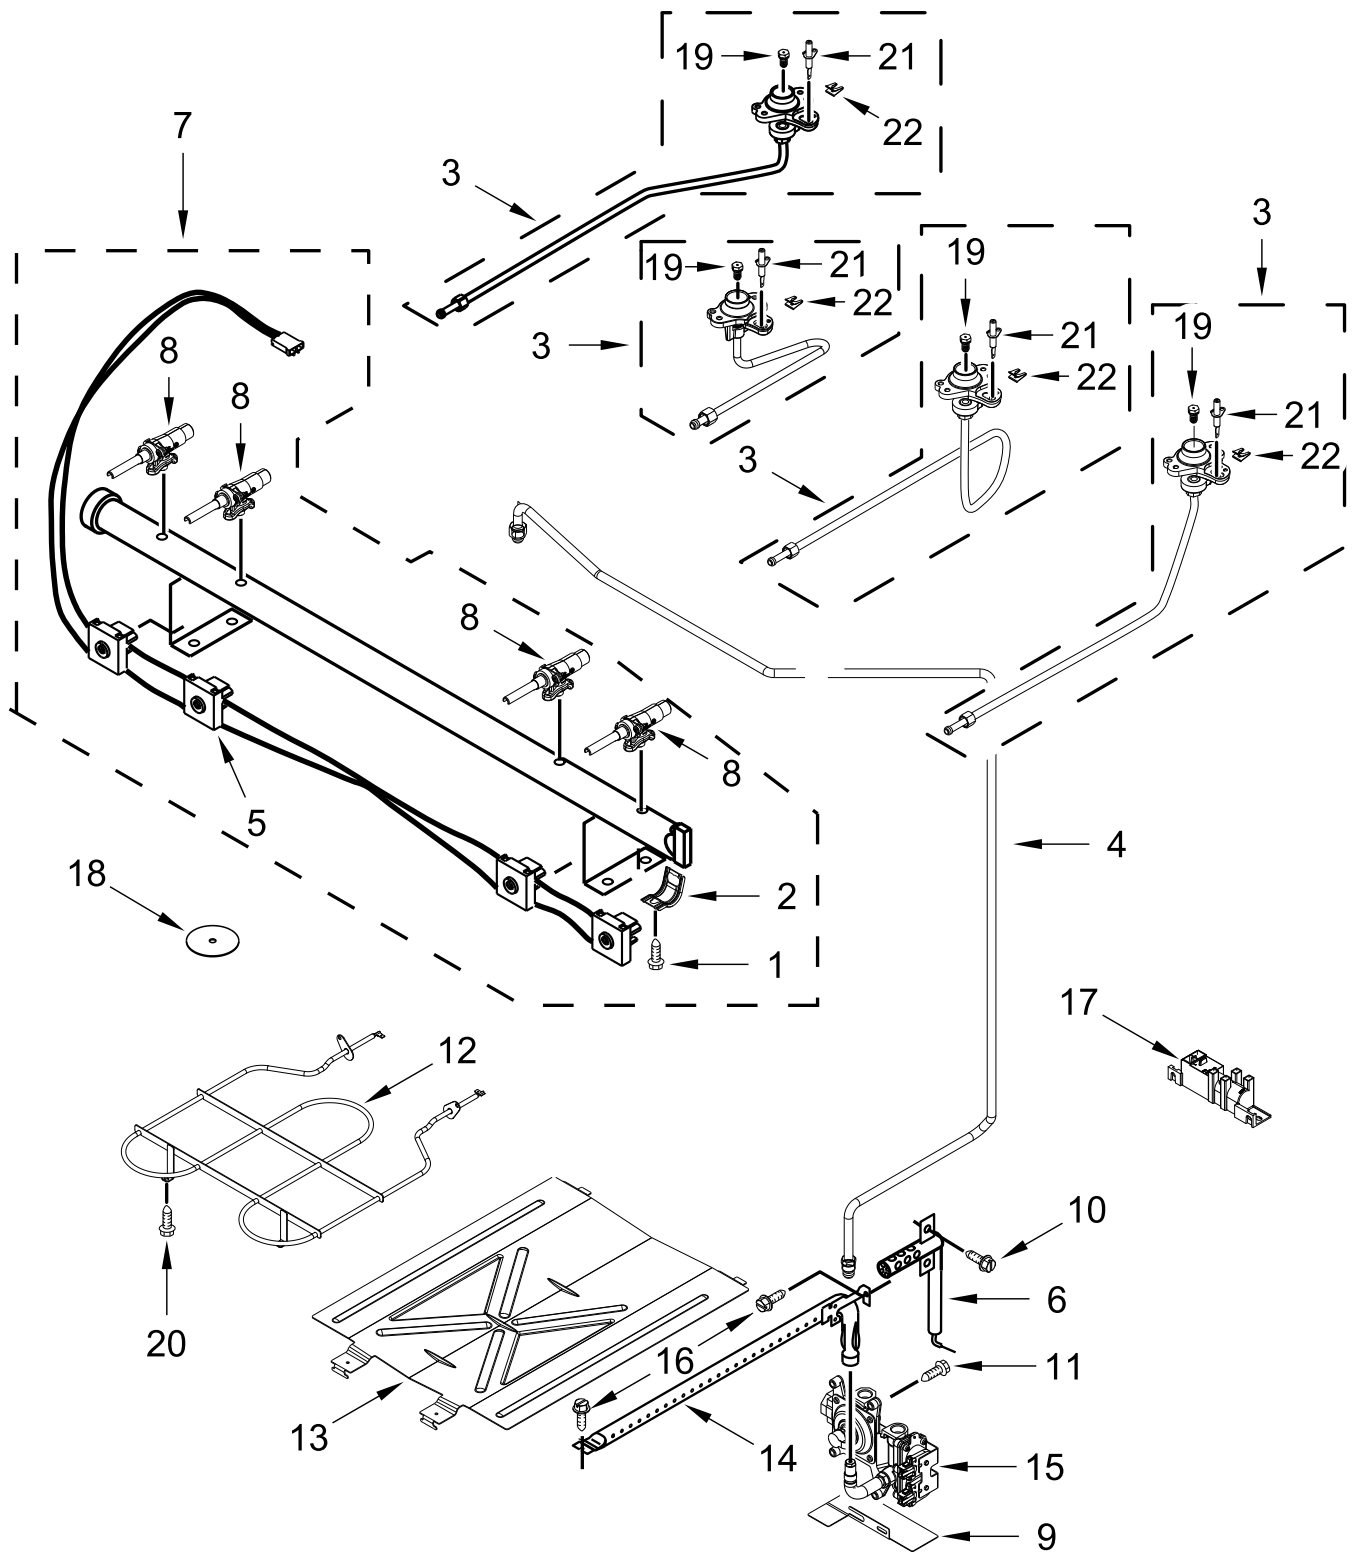

MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10246216	Screw	9	W10224921	Bracket, Aegis	21	W10669526	Electrode, Burner
2	W10949105	Bracket, Saddle Valve	10	3196385	Screw			(Left Front)
3	W10827780	Assembly, Orifice Holder (9.5K)	11	3400080	Screw		W10669525	Electrode
		(Left Rear)	12	W10714060	Element, Broiler			(Left Rear)
	W10827775	Assembly, Orifice Holder (15K)	13	W10184491	Spreader, Flame (Oven)		W10669524	Electrode, Burner
		(Left Front)	14	9758078	Burner, Bake			(Right Front)
	W10827777	Assembly, Orifice Holder (15K)	15	W10818355	Regulator		W10669523	Electrode, Burner
		(Right Front)	16	3196169	Screw			(Right Rear)
	W10827779	Assembly, Orifice Holder (5K)	17	W11349967	Module, Spark	22	W10827923	Electrode, Spring
		(Right Rear)	18	W11507167	Seal, Switch Shaft			FOLLOWING PARTS NOT ILLUSTRATED
			19	W10849717	Orifice (15K)		W10838118	Spuds, LP Gas
					(Left Front, Right Front)		W10838304	Orifice, LP Bake
4	W10804030	Tubing (Manifold to Regulator)		W10849714	Orifice (9.5K)		W10182767	Tie, Manifold Wire
					(Right Rear)			
5	W11537738	Harness, Switch		W10849719	Orifice (5K)			
6	W11450459	Electrode, Bake			(Left Rear)			
7	W11512354	Assembly, Manifold	20	W10362924	Screw			
8	W11511835	Valve, Gas						
		(Left Rear)						
	W11511834	Valve, Gas						
		(Left Front and Right Front)						
	W11511833	Valve, Gas						
		(Right Rear)						


CHASSIS PARTS

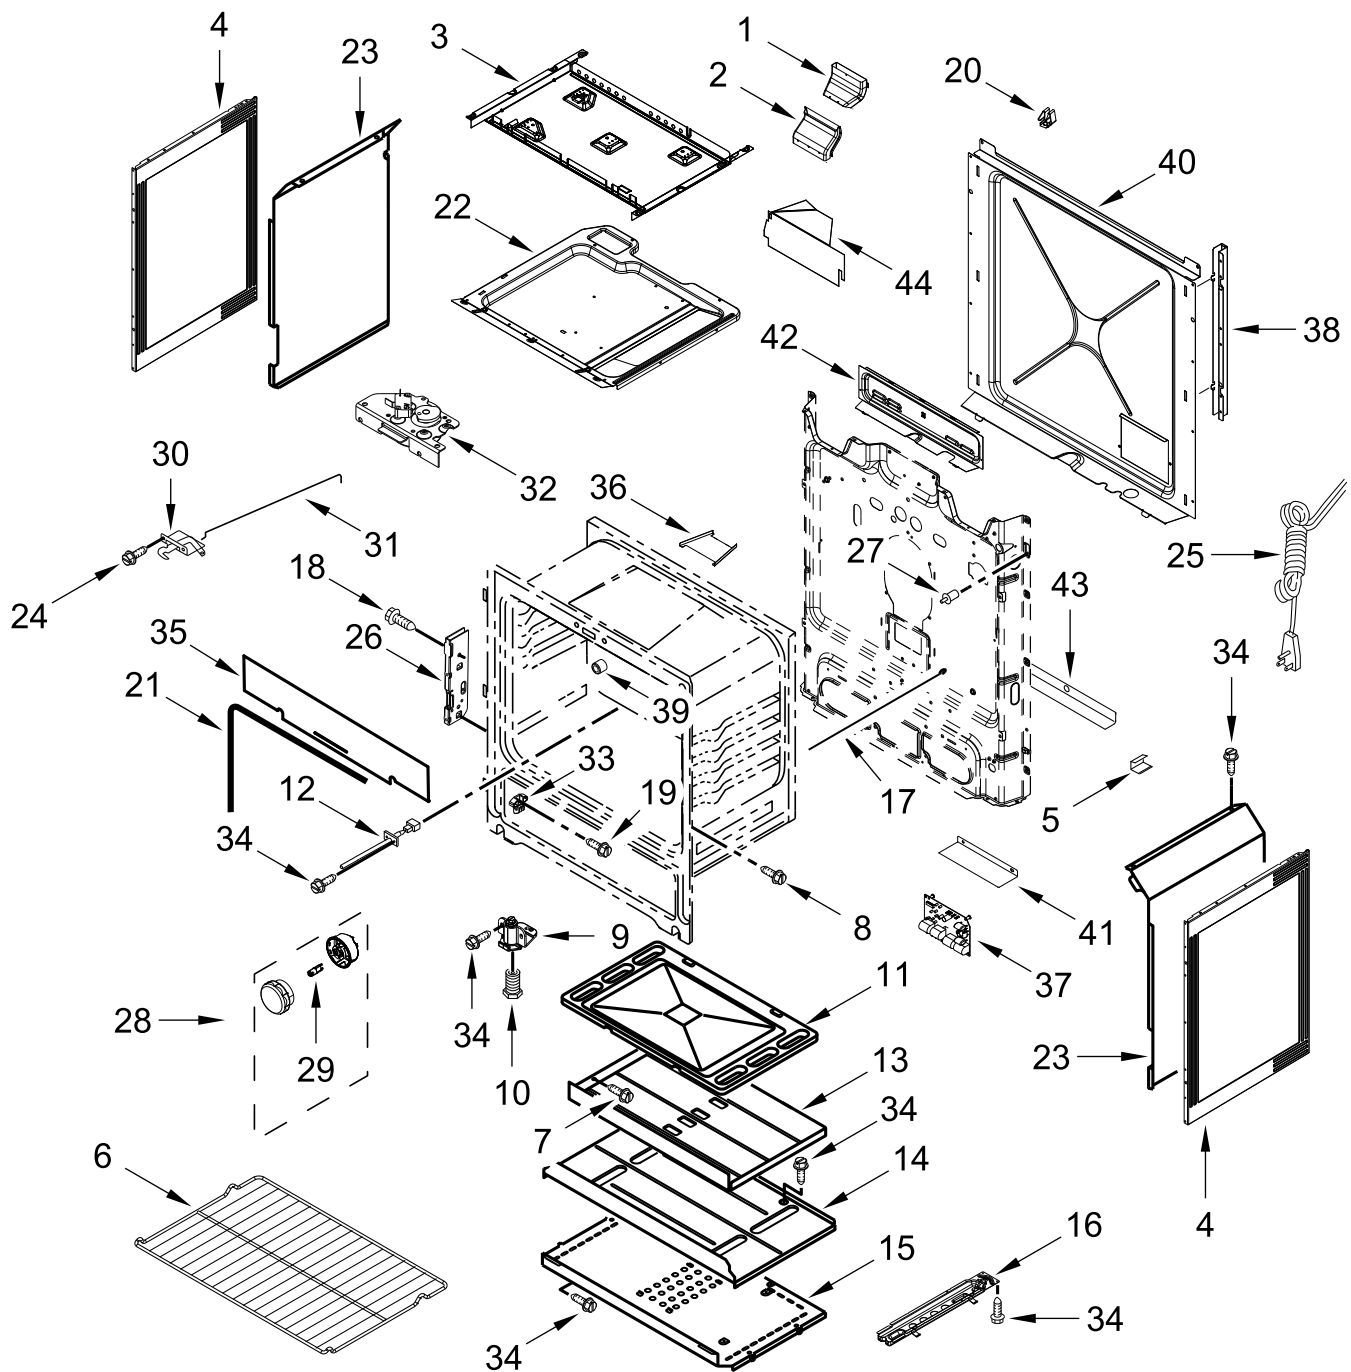

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10814257	Adapter, Flue Assembly	17	9757239	Rod, Door Switch	32	W10107820	Rear Door Latch Assembly
2	W10614920	Assembly, Flue	18	W10031780	Screw	33	W10674705	Glide, Drawer Front
3	W10558276	Burner, Box Gas	19	W10379120	Screw	34	3196178	Screw
4		Panel, Side	20	W10866583	Clip-Panel, Ratcheting	35	W10848443	Chassis, Upper Insulation
	W10162245	Black	21	W11491751	Seal, Door	36	W10853400	Baffle, Upper Chassis
5	W10137382	Clip, Panel	22	W10814301	Chassis, Support Upper	37	W10818365	Module, Spark
6	W11173792	Rack, Oven	23	W11379353	Retainer, Insulation (Left)	38	W10162241	Channel, Rear
7	3196169	Screw		W11379943	Retainer, Insulation (Right)	39	9758701	Spacer, Door
8	W10067840	Screw	24	3196560	Screw	40	W11379354	Cover, Back
9	W10341186	Front Foot Assembly	25	W10910642	Cord, Power	41	W11206138	Guard, Splash
10	W10058460	Foot, Leveling	26	W10289077	Receiver, Hinge	42	W10818356	Wire, Cover
11	3195097	Bottom, Oven	27	W11511828	Switch, Door	43	W10435470	Brace, Main Back
12	W10586204	Sensor	28	W11634772	Light Assembly	44	W10818358	Shield, Wire
13	8053967	Baffle, Burner Oven	29	7407P103-60	Bulb, Light			FOLLOWING PARTS NOT ILLUSTRATED
14	8053969	Shield, Heat	30	9761013	Front Door Latch Assembly		W10818362	Insulation, Wrap
15	8053968	Shield, Lower					W10815344	Insulation, Back
16	W10390008	Base Rail Assembly (Left)	31	W10078370	Rod, Push Latch		3196896	Clip, Wire
	W10390007	Base Rail Assembly (Right)						

DOOR PARTS

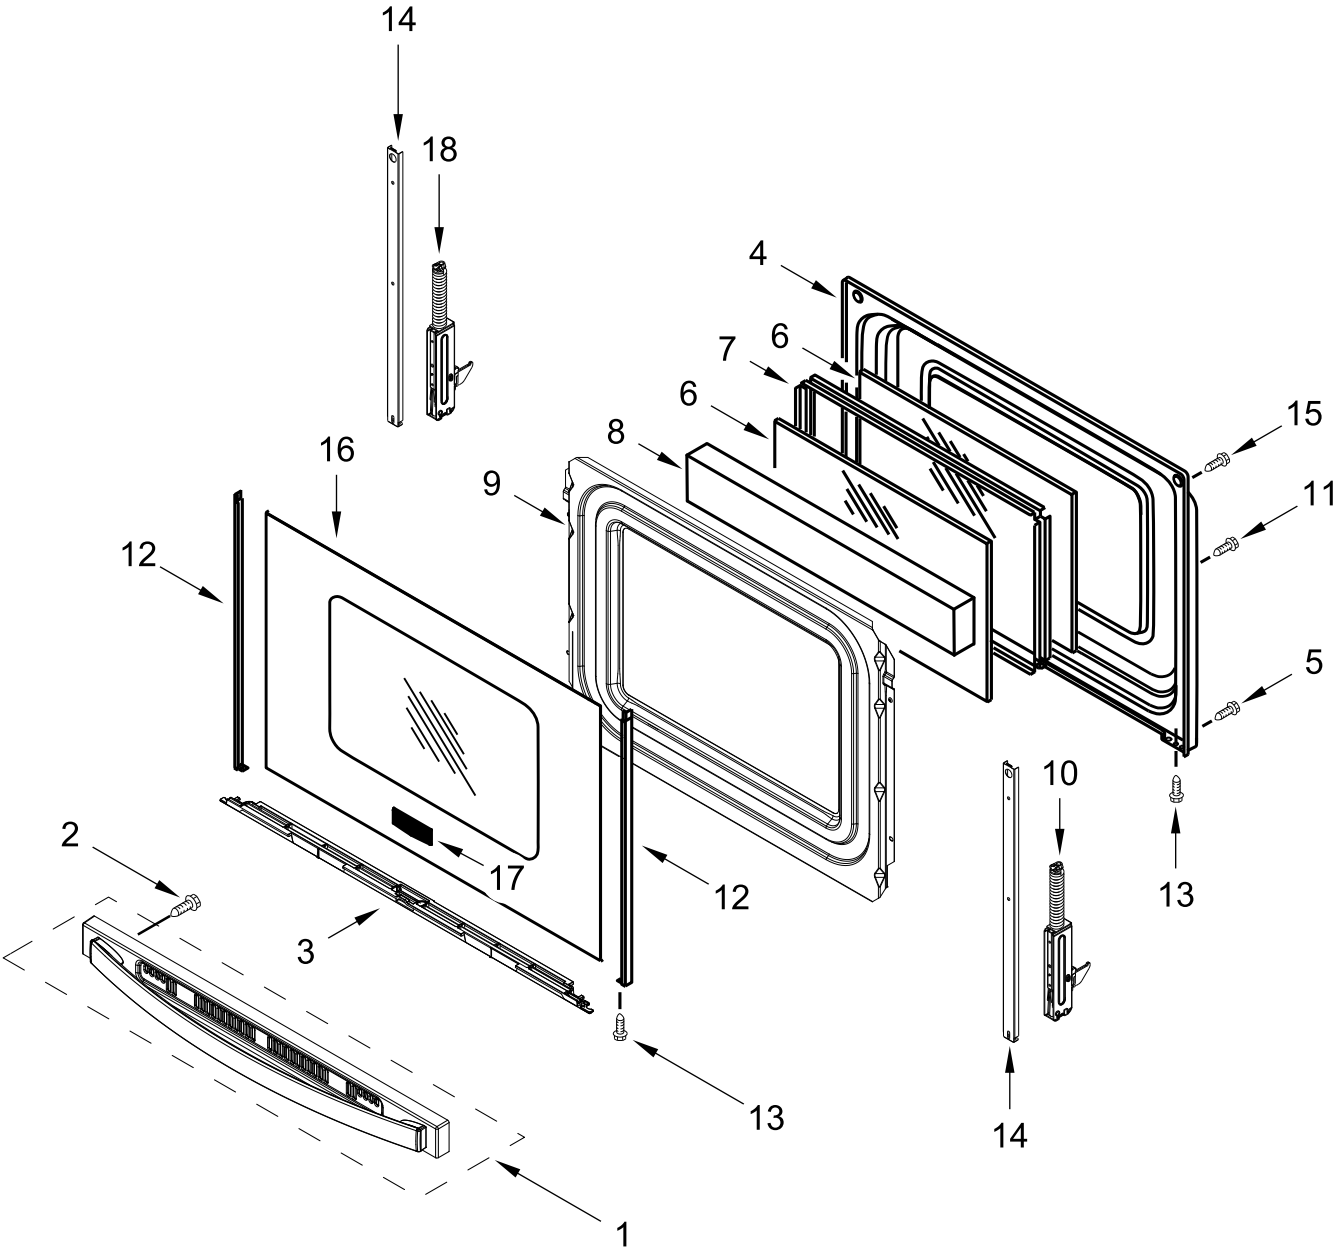


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly
	W11242950	Stainless
	W11242951	Black Stainless
2	W10480830	Screw
3		Trim, Lower Door
	W11444043	Black
4	9761344	Liner, Door
5	W10031780	Screw
6	9758162	Glass, Inner
7	W10316950	Frame, Glass
8	W10278991	Insulation, Door Strip

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
9	W11380222	Retainer, Insulation
10	W10388635	Hinge, Door (Active)
11	W10031790	Screw
12		Trim, Door
	W10746436	Black (Left)
	W10746435	Black (Right)
13	W10327235	Screw
14	W11379944	Strap, Door
15	W10200660	Screw
16		Assembly, Door Glass
	W11687920	Black

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
17	W10884775	Badge
18	W10440013	Hinge, Door (Active)

DRAWER PARTS

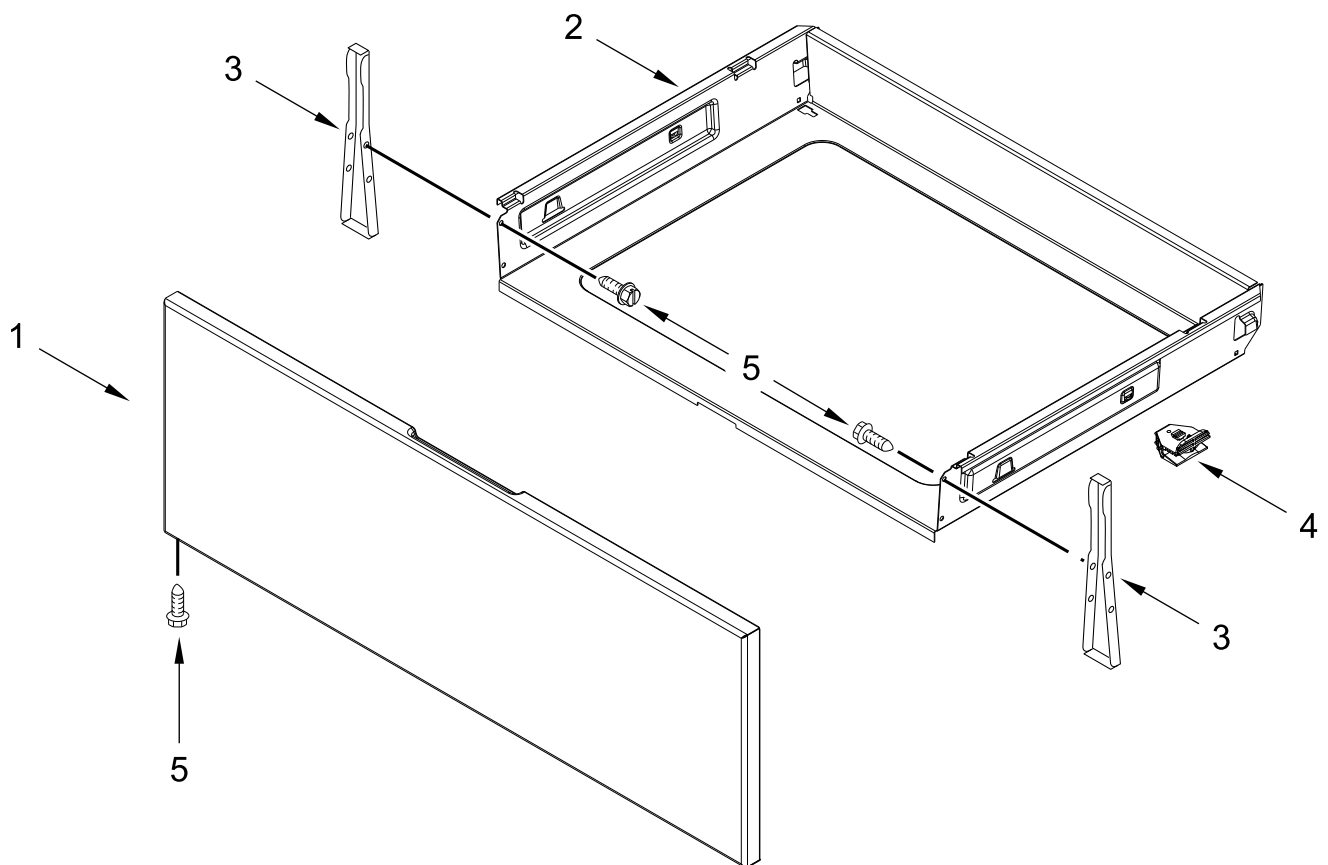

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear
	W11190210	Stainless	3	W10462909	Bracket, Mounting	5	3196178	Screw
	W11450003	Black Stainless						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit and Bisque
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)
	4392900	Biscuit/Bisque

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10268578	Rack, Oven
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting