




**ELECTRIC RANGE**

**MODELS:**

WFE505W0JZ4 (Stainless)


# COOKTOP PARTS

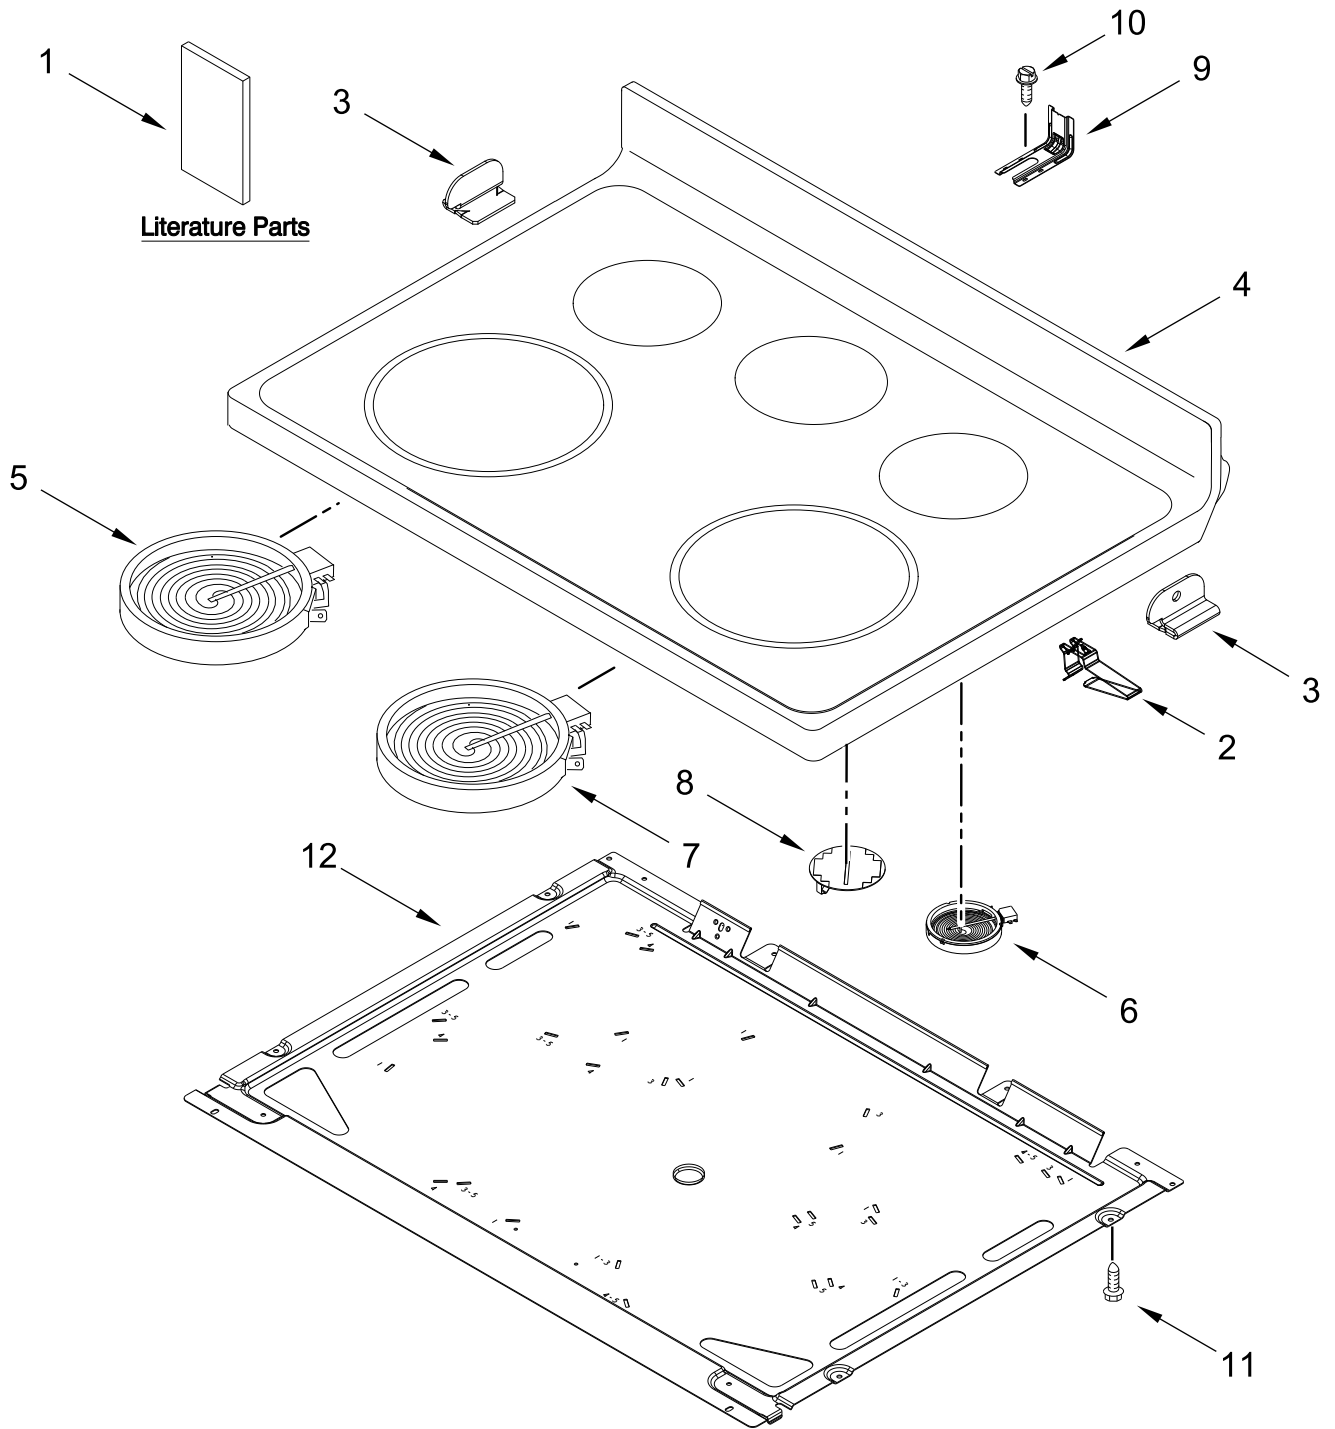

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000 and 1400W)	10	7101P485-60	Screw, Anti-Tip Kit
	W11509595	Owners Manual			(Left Front)	11	3196169	Screw
	W11435582	Quick Start Guide	6	8273994	Element (1200W)	12	W10691223	Pan, Radiant Element
	W11390998	Tech Sheet			(Left Rear and Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
2	W11600012	Spring, Element	7	8273992	Element (2500W)		W11452624	Harness, Main
3	W10607641	Bracket, Cooktop (Left)			(Right Front)		W11134603	Harness, Cooktop (Left)
	W10607642	Bracket, Cooktop (Right)	8	W11668631	Element, Warm Zone		W11134551	Harness, Cooktop (Right)
4		Cooktop			(Center)		W11598759	Harness, Warm Zone
	W11034825	Black	9	W11379945	Bracket, Anti-Tip			


# CONTROL PANEL PARTS

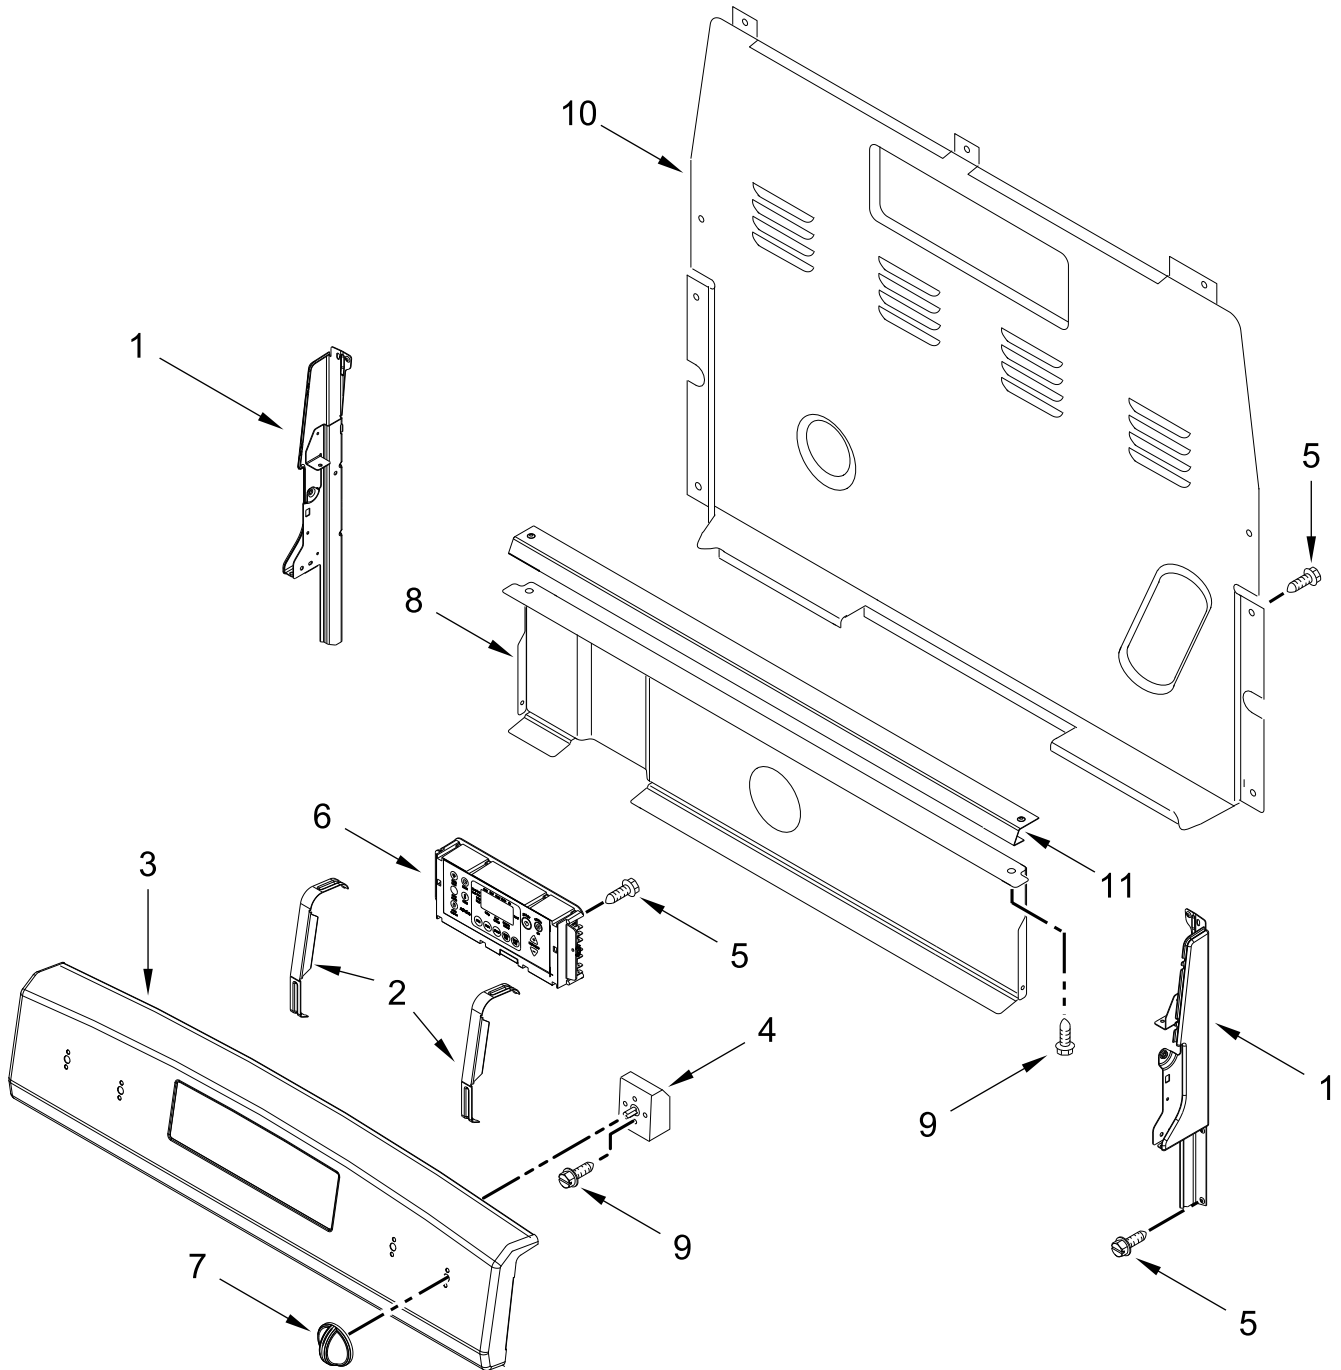

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	7		Knob
	W11130372	Black (Left)			(Left Front)		W11022718	Black
	W11130379	Black (Right)		3148951	Switch, Infinite	8	W10134247	Shield, Heat
2	W10695491	Bracket, Control			(Left Rear and Right Rear)	9	3400882	Screw
3		Console, Assembly		3148954	Switch, Infinite (Orange)	10	8272473	Cover, Upper Rear
	W11027373	Stainless			(Right Front)	11	W10525121	Bracket, Console Mounting
			5	3196178	Screw			
			6		Control, Electronic (LCX)			
				W11428348	Black			


# CHASSIS PARTS

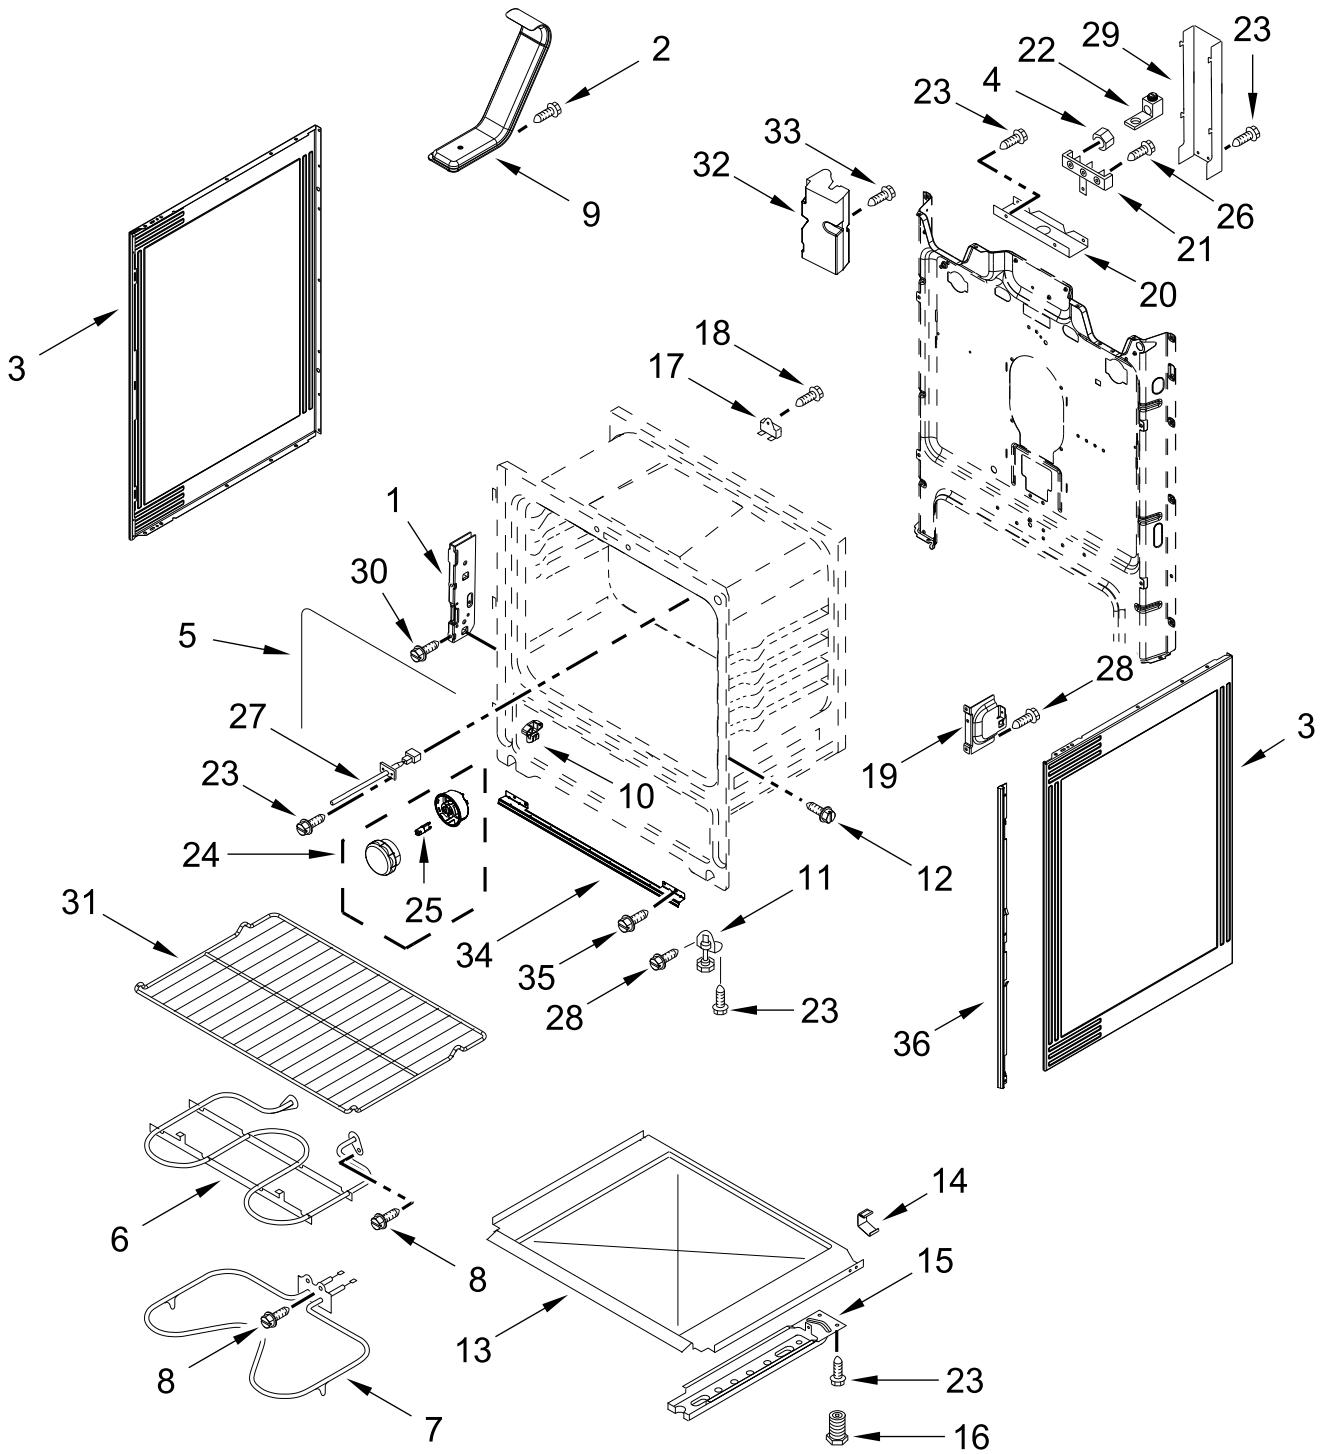

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	15	W10390008	Base Rail Assembly (Left)	27	W10181986	Sensor, Oven
2	W10362924	Screw				28	3196169	Screw
3		Panel, Side		W10390007	Base Rail Assembly (Right)	29	W10326122	Cover, Terminal Block
	W10162245	Black				30	W10031780	Screw
4	3400029	Nut	16	W10058460	Foot, Leveling	31	W11173792	Rack, Oven
5	W10129032	Seal, Door	17	3196548	Fuse, Thermal	32	W10910404	Counterweight
6	9757340	Element, Broil	18	3196172	Screw	33	W11034869	Screw
7	W11111743	Element, Bake	19	W10404688	Clip, Oven Support	34	W11464547	Bracket, Front Frame
8	3196154	Screw	20	3186034	Bracket, Service	35	3196560	Screw
9	W10134285	Tube, Vent	21	W10245259	Block, Terminal	36	W11510560	Barrier Rail, Rubber (Left and Right)
10	W10674705	Glide, Drawer Front	22	W10281322	Kit, Bare Wire Adapter Block			FOLLOWING PARTS NOT ILLUSTRATED
11	W10341186	Front Foot Assembly	23	3196178	Screw			
12	W10067840	Screw	24	W11634772	Light Assembly		8273263	Insulation, Wrap
13	8054068	Retainer, Insulation	25	W10571723	Bulb, Halogen 40 Watts		8272611	Insulation, Back
14	W10137382	Clip, Panel	26	3400016	Screw		W10333344	Insulation, Flue

# DOOR PARTS

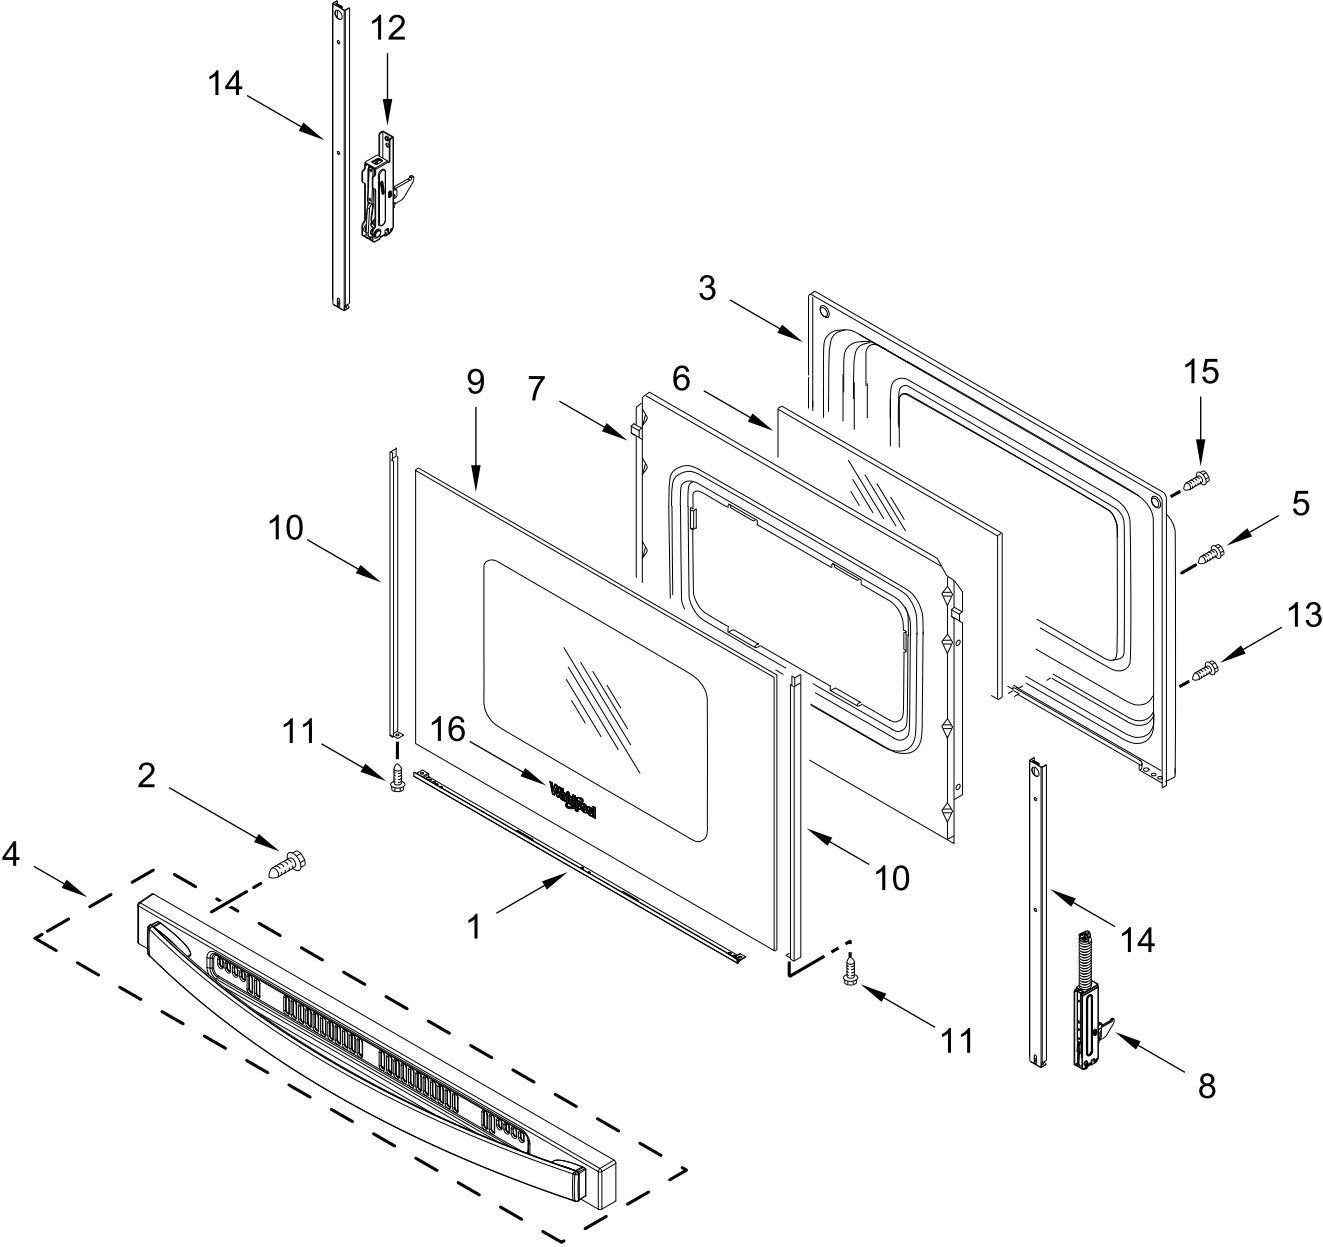




# DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Lower Door	6	W11367326	Glass, Inner	13	W10031780	Screw
	W11444043	Black	7	9761505	Retainer, Insulation	14	W11379944	Strap, Door
2	W10480830	Screw	8	W10299225	Hinge, Active	15	W10200660	Screw
3	9761344	Liner, Door	9		Glass, Outer Door	16	W10884775	Badge
4		Handle and Vent Assembly		W10884159	Black			
	W11242950	Stainless (Stainless Models Only) (Includes Standoff)	10		Trim, Side			
				W10746436	Black (Left)			
				W10746435	Black (Right)			
			11	W10327235	Screw			
5	W10031790	Screw	12	W10299227	Hinge, Door (Passive)			

# DRAWER PARTS

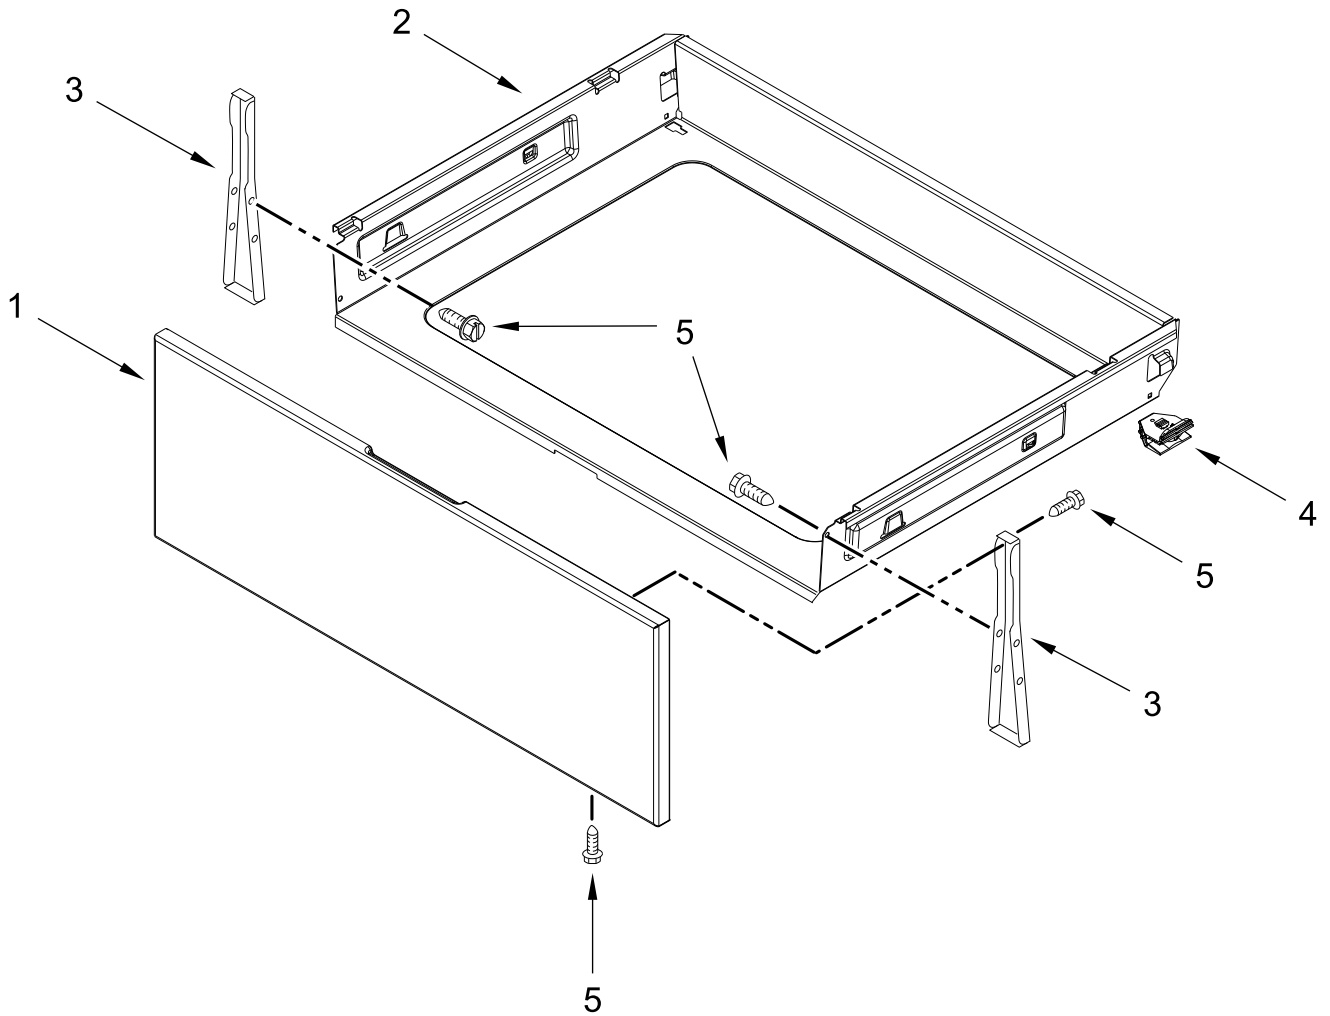

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear
	W11449698	Stainless	3	W10462910	Bracket, Mounting Drawer	5	3196169	Screw

# OPTIONAL PARTS (NOT INCLUDED)

## REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

## PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

## ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting