




GAS RANGE

MODELS:

KFGC506JBK07 (Imperial Black)


BURNER BOX PARTS

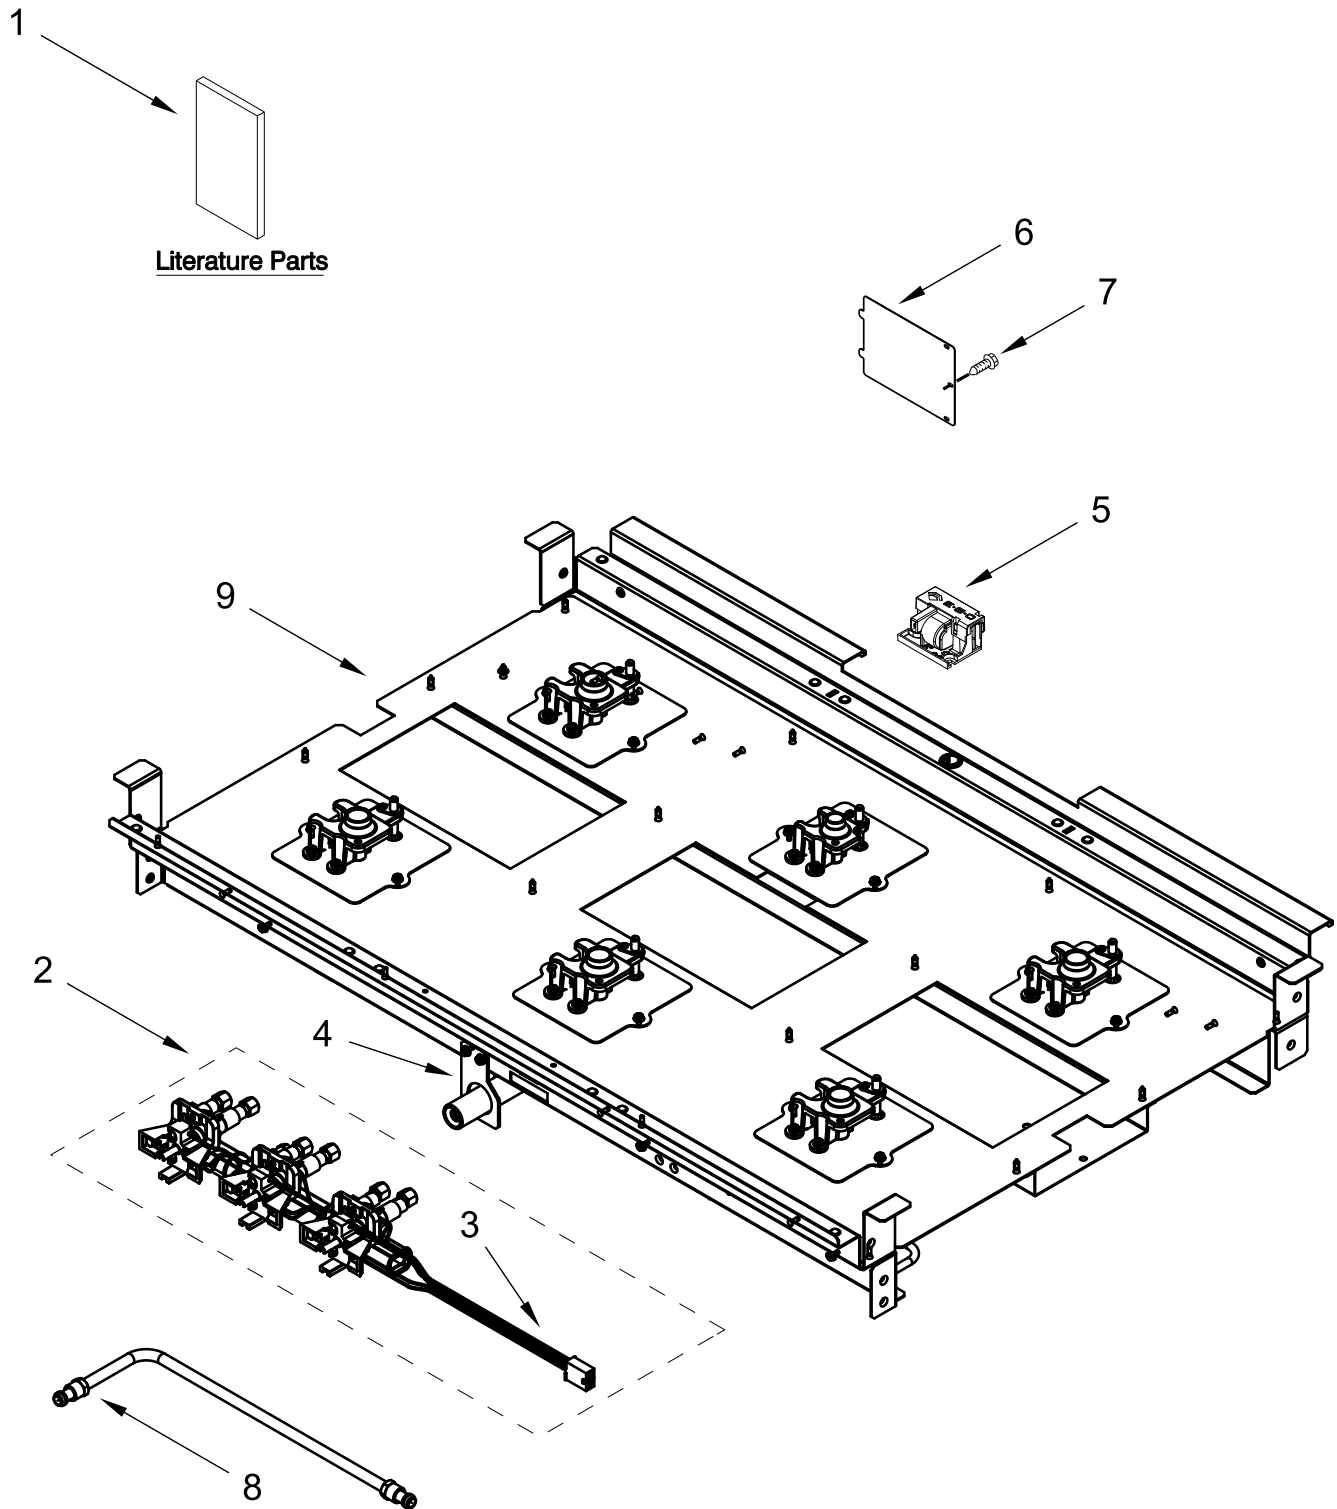

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W10115843	Cover, Ignition	9		Box, Burner (Not Serviced)
	W11508863	Use and Care Guide	7	7101P426-60	Screw			
	W11508887	Installation Instructions	8	W10892073	Tube, Manifold Supply (Left)			FOLLOWING PARTS NOT ILLUSTRATED
	W11184759	Guide, Internet Connectivity		W10892334	Tube, Manifold Supply (Right)	W11448063		Harness, Main (36 in)
	W11575703	Diagram, Wiring (Cooktop)				W11200332		Harness, Cooktop
	W11565467	Tech Sheet				W10780278		Harness, Door Lock
	W11364680	Guide, Quick Start				W11200325		Harness, Communication
2	W10892995	Assembly, Valve Manifold (Left Front, Left Rear, Center Rear)				W11242785		Harness, WIFI
	W10893005	Assembly, Valve Manifold (Center Front, Right Front, Right Rear)				313438		Clip, Harness
3	W10903729	Switch, Harness				W10624584		Cord, Power
4	W11121194	Bracket, Manifold				4450800		Screw, Grounding
5	W11121317	Module, Spark				W10253333		Bracket, Anti-Tip
						7101P485-60		Screw, Anti-Tip Kit
						W11238042		Kit, LP Conversion
						W11311196		Ignitor Wire, Wire-Electrode Bake
						W11311197		Ignitor Wire, Wire-Electrode Broil


COOKTOP, BURNER AND GRATE PARTS

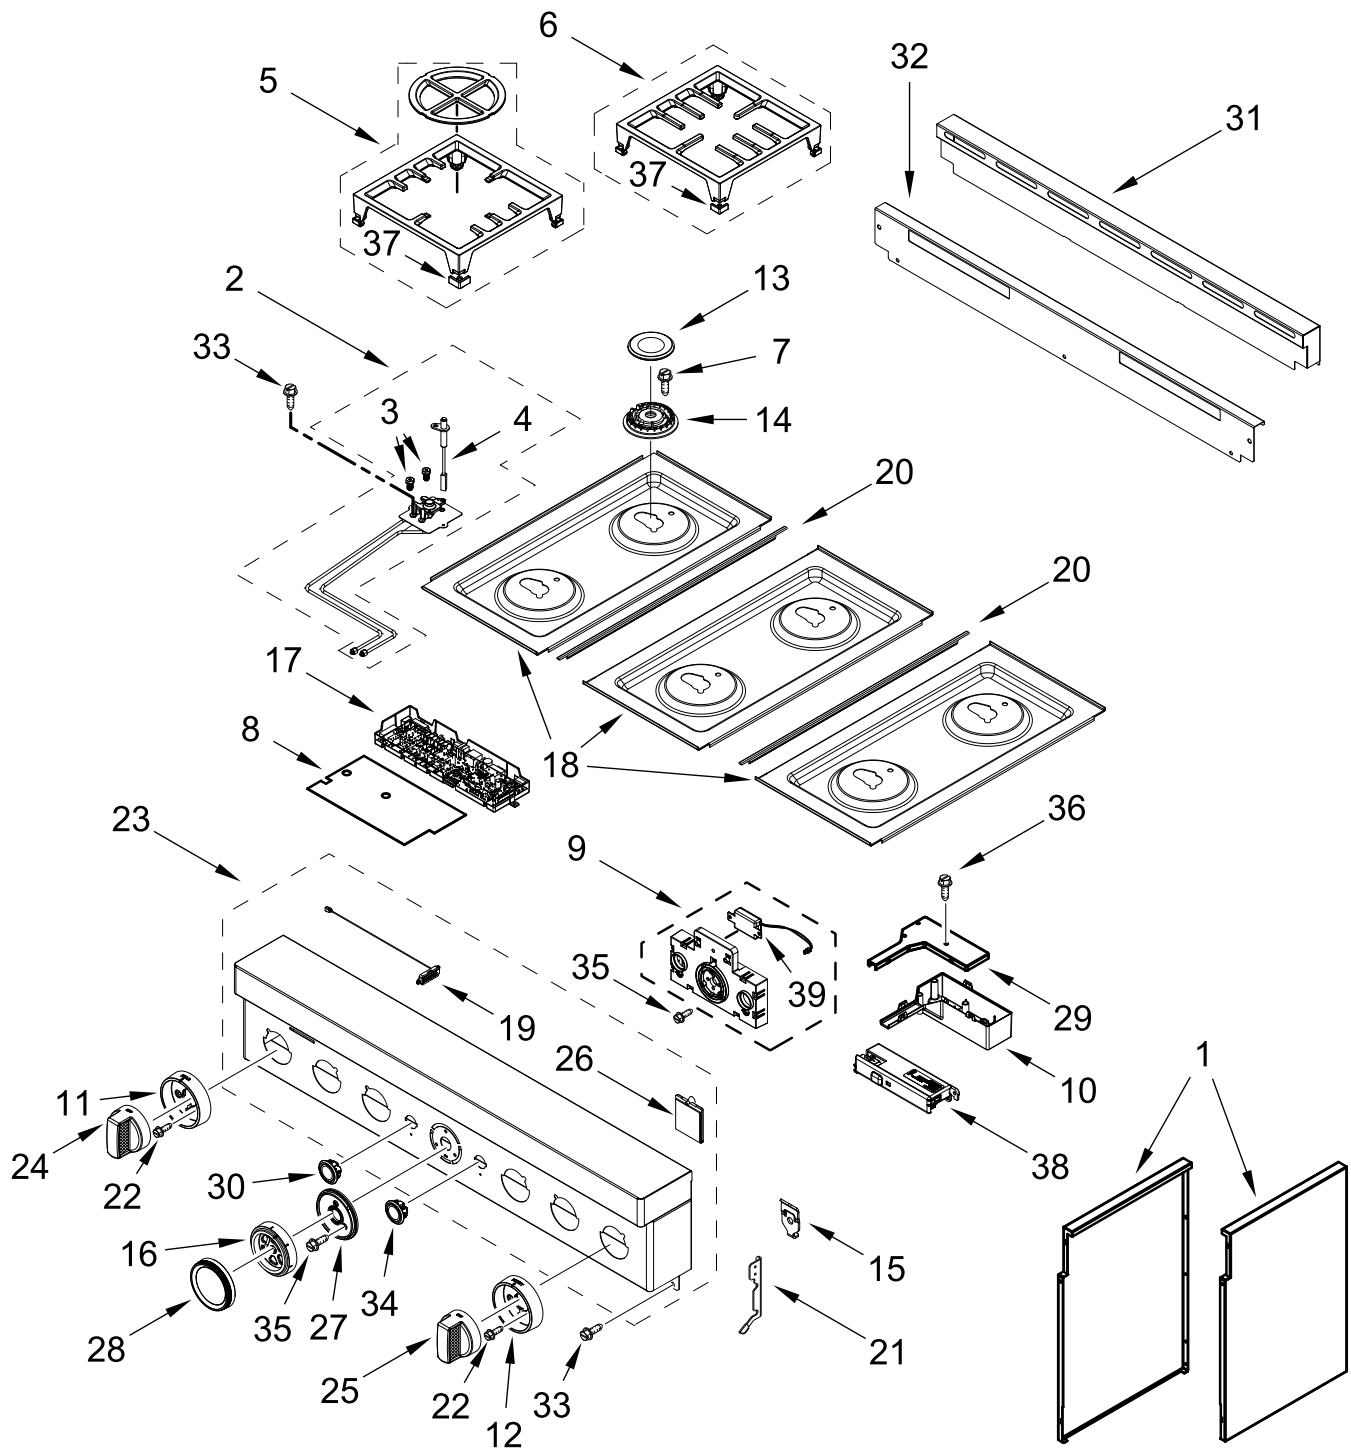

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	5	W11291183	Burner, Grate (With Wok Ring)	21	W10130760	Bracket, Moving Console (Left)
	W11106880	Panel, Cabinet Side (Right)	6	W11291179	Burner, Grate		W10130759	Bracket, Moving Console (Right)
2	W10892774	Assembly, Orifice Holder (Left Front)	7	W11323261	Screw (8-18 X 1 in)	22	W11328357	Screw
	W10892492	Assembly, Orifice Holder (Left Rear)		W11323309	Screw (8-18 X 1/2 in)	23	W11700785	Panel, Console
	W11159467	Assembly, Orifice Holder (Center Front)	8	W11281269	Barrier, Appliance Manager	24		Knob, Single
	W10892725	Assembly, Orifice Holder (Center Rear)	9	W11436337	Interface, User		W10912166	Stainless Knob, Dual
	W10892731	Assembly, Orifice Holder (Right Front)	10	W11205795	Cover, WIFI Outer	25	W10883172	Stainless
	W10892477	Assembly, Orifice Holder (Right Rear)	11	W10883433	Bezel (Rear Burners)	26	W10896366	Assembly, Light Pipe
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	12	W10881642	Bezel (Front Burners)	27		Bezel, Oven
	W10892419	Orifice, Main (15K) (Left Rear, Right Rear, Center Front)	13		Cap, Burner		W11500871	Stainless
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Front)		W11121390	Black (Includes 6)	28		Knob, Oven Temperature
	W10892438	Orifice, Simmer (5K) (Center Rear)	14	W10891746	Spreader, Flame (High) (Left Front, Right Front)		W11500868	Stainless
4	W11238757	Igniter (Left Front, Right Front)		W10891974	Spreader, Flame (Low) (Left Rear, Center Front, Right Rear)	29	W11205794	Cover, WIFI Inner
	W10892340	Igniter (Center Front, Center Rear)		W10891978	Spreader, Flame (AUX) (Center Rear)	30	W11241511	Button Assembly, Oven Light
	W11114379	Igniter (Left Rear, Right Rear)	15	W11036559	Spring Clip, Range	31	W11476245	Trim, Island
			16		Knob, Oven Mode	32	W10323250	Insert, Island Trim
				W11500865	Stainless	33	7101P426-60	Screw
			17	W11543345	Manager, Appliance (Powermax)	34	W11241510	Button Assembly, Oven Start
			18		Panel, Cooktop	35	3400814	Screw
				W11038235	Black (Left)	36	7101P624-60	Screw
				W11038257	Black (Center)	37	W11042504	Bumper, Grate
				W11038248	Black (Right)	38	W11110768	Assembly, WIFI Module
			19	W11130078	Antenna, WIFI	39	W10568405	Assembly, Speaker
			20		Trim, T-Strip			
				W10271524	Black			


CHASSIS PARTS

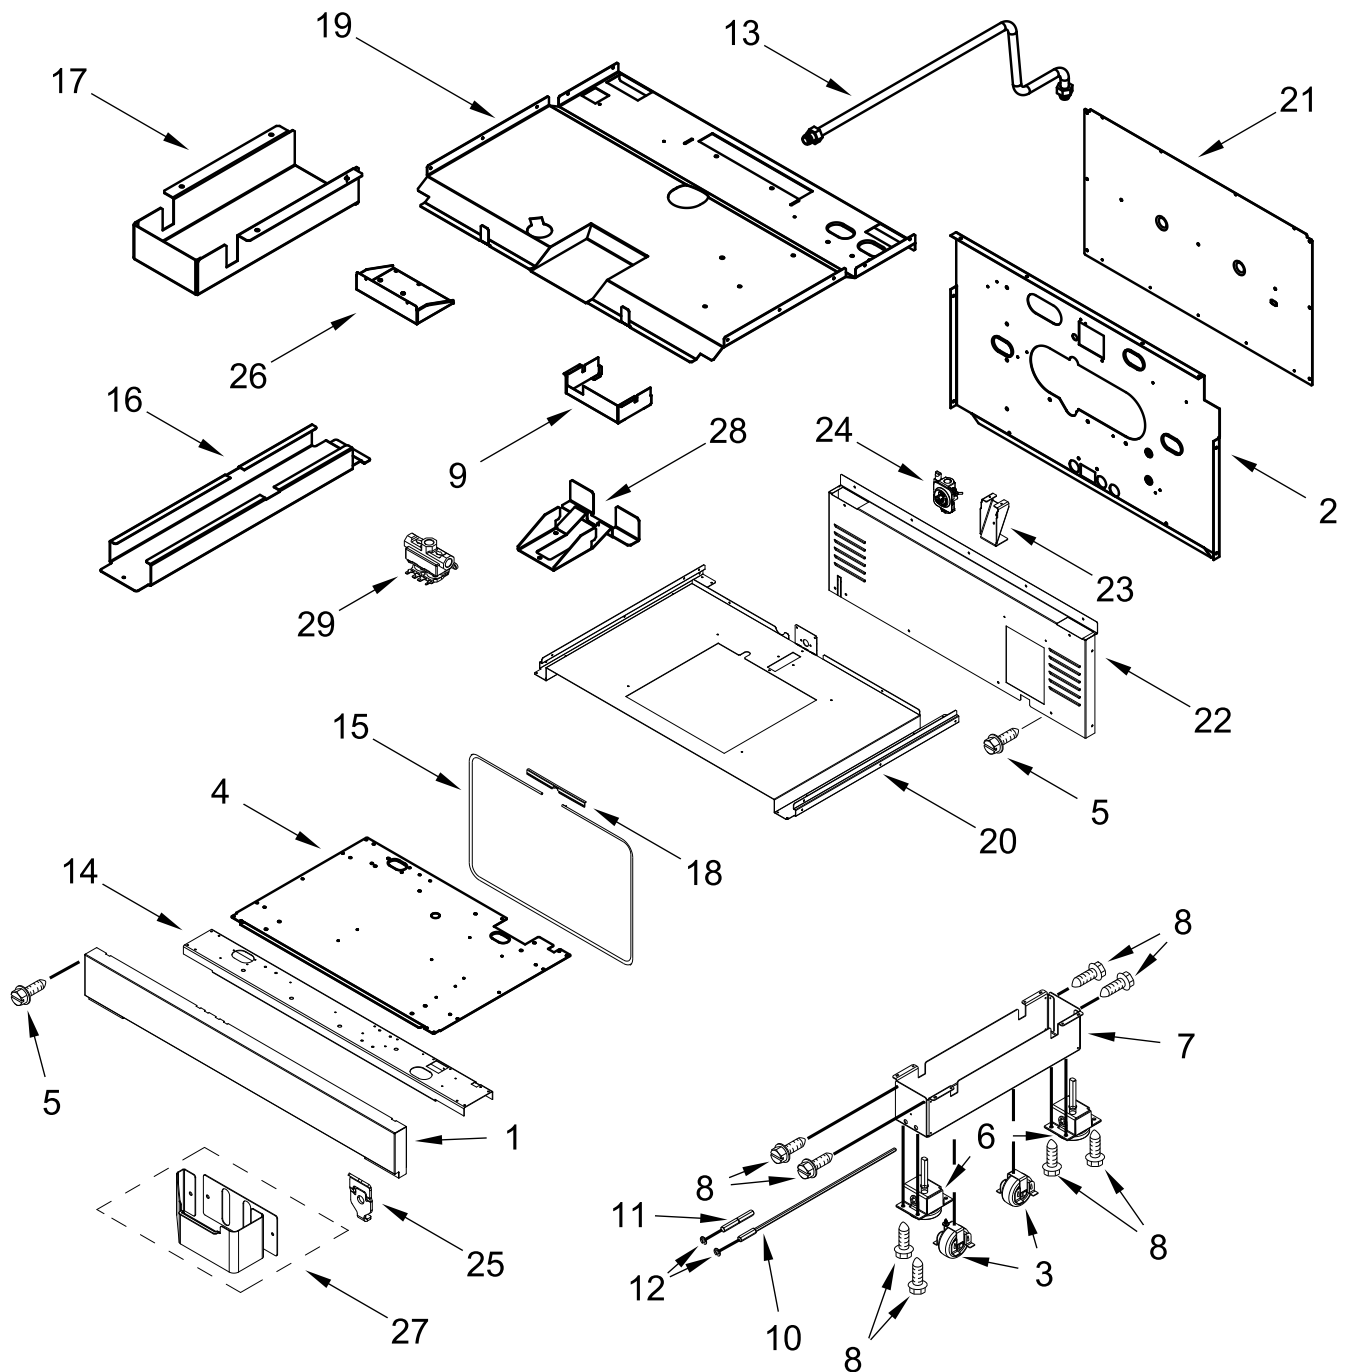

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11697036	Kickplate	13	W11181648	Tube, Pressure Regulator	23	W11096823	Bracket, Pressure Regulator
2	W11324988	Back, Chassis	14	W11087493	Support, Channel	24	W10896959	Regulator, Pressure
3	W10138054	Assembly, Roller	15	W11115330	Gasket, Oven (36 in)	25	W11036559	Spring Clip, Range
4	W11095572	Duct, Bottom (36 in)	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
5	7101P426-60	Screw	17	W11368831	Channel, Wire	27	W11199181	Cover, Foot (Left)
6	9760860	Leveler	18	W11362015	Retainer, Gasket (9 in Long)		W11199178	Cover, Foot (Right)
7	W10908710	Base, Leveling Leg	19	W11324985	Top, Chassis	28	W11190223	Bracket, Bake Alignment
8	4449743	Screw	20	W11040801	Chassis, Bottom	29	W10145680	Valve, Dual
9	W11369237	Cabinet, Appliance Manager	21	W11103333	Panel, Back Top			
10	W10115869	Shaft, Long	22	W11034133	Panel, Back Bottom			
11	W10115793	Shaft, Short						
12	489504	E-Ring						

OVEN PARTS

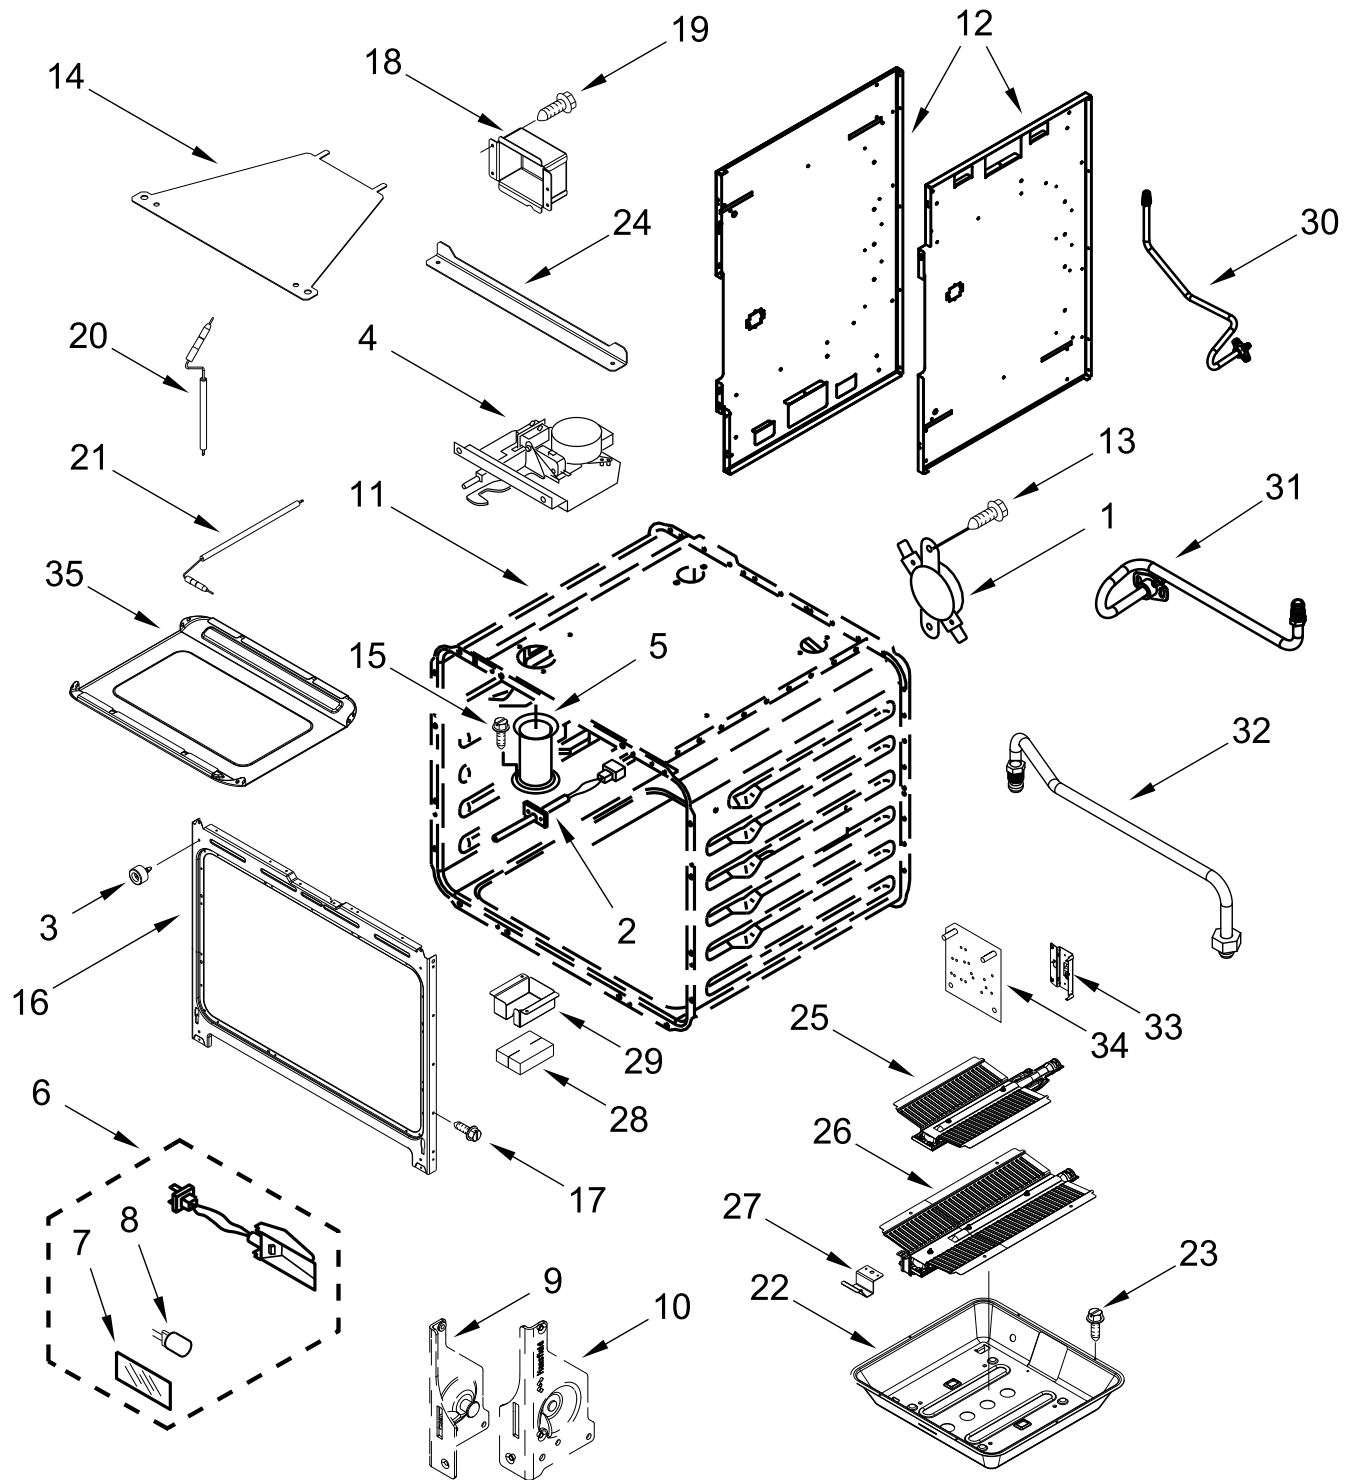

OVEN PARTS

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)
2	W10622170	Probe, Sensor
3	W10351278	Bumper and Screw
4	W10830016	Latch, Motorized
5	W10145743	Tube, Vent
6	W11223932	Assembly, Oven Light
7	W10169756	Lens, Light
8	W10169757	Bulb, Light
9		Receiver, Hinge (Not Serviced)
10		Receiver, Hinge (Not Serviced)
11		Liner, Oven (Not Serviced)
12	W11102297	Chassis, Side (Left)
	W11102296	Chassis, Side (Right)
13	7101P426-60	Screw


Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
14	W10160858	Cover, Latch
15	3196176	Screw
16	W11192749	Frame, Front
17	3196560	Screw
18	W10308051	Box, Broil
19	7101P434-60	Screw
20	W11182863	Electrode, Broil
21	W11205400	Electrode, Bake
22	W10145744	Support, Bake Pan
23	12992902	Screw
24	W10317437	Bracket, Broil Standoff
25	W10878504	Burner, Bake
26	W10311335	Burner, Broil
27	W10308040	Bracket, Bake Burner
28	W10311009	Insulation, Broil Cover
29	W10310985	Cover, Broil
30	W11109238	Tube, Broil

Illus.

<u>No.</u>	<u>Part No.</u>	<u>Description</u>
31	W11106980	Tube, Bake
32	W11107279	Tube, Gas
33	W10145362	Bracket-Board, DSI
34	W10511278	Module, Spark DSI
35	W10496809	Pan, Oven Bottom
		FOLLOWING PARTS NOT ILLUSTRATED
	W10282811	Insulation, Wrap
	W11108226	Insulation, Back, 36 in
	W10299356	Insulation, Bottom
	3400968	Nut


VENTING PARTS

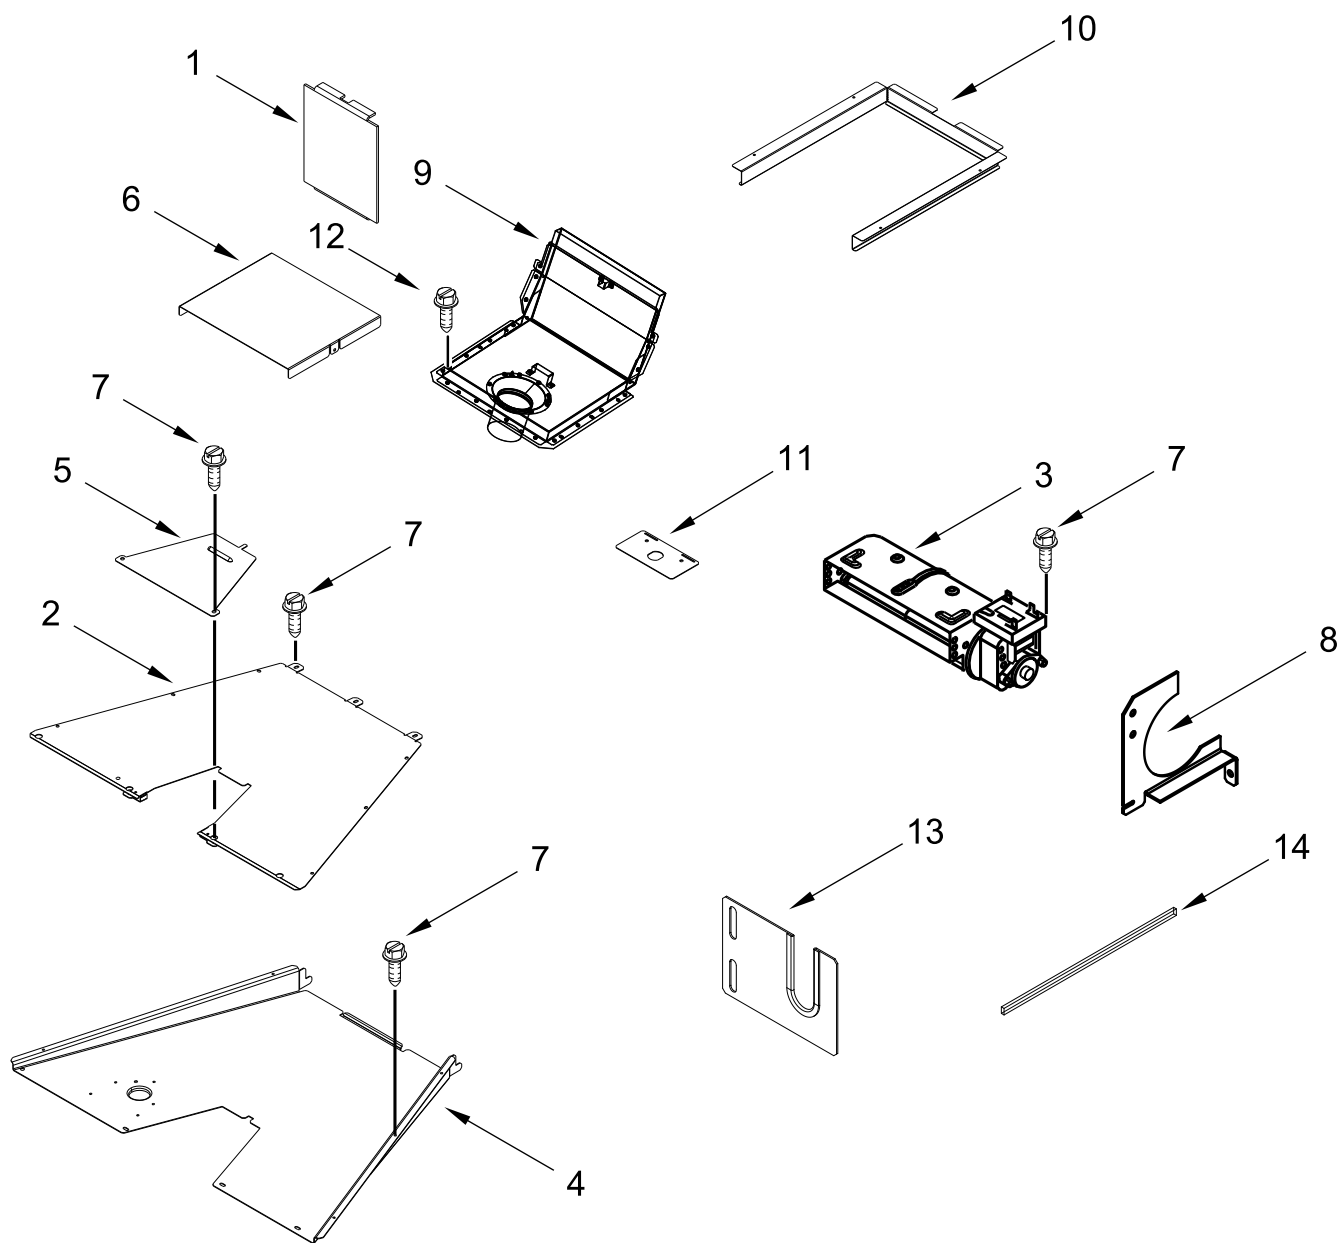

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10246087	Insulation, Chimney	6	W10246086	Retainer, Insulation	11	W10115855	Holder, Strain Relief
2	W11105221	Vent, Cooling Top (30 in)	7	7101P426-60	Screw	12	3400805	Screw (Zinc)
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel
4	W11091676	Vent, Cooling Bottom (30 in)	9	W10340579	Vent, Chimney Box (30 in / 36 in)	14	W10919715	Gasket
5	W11109518	Plate, Cooling Latch	10	W10145363	Duct, Primary Air (30 in)			


OVEN DOOR PARTS

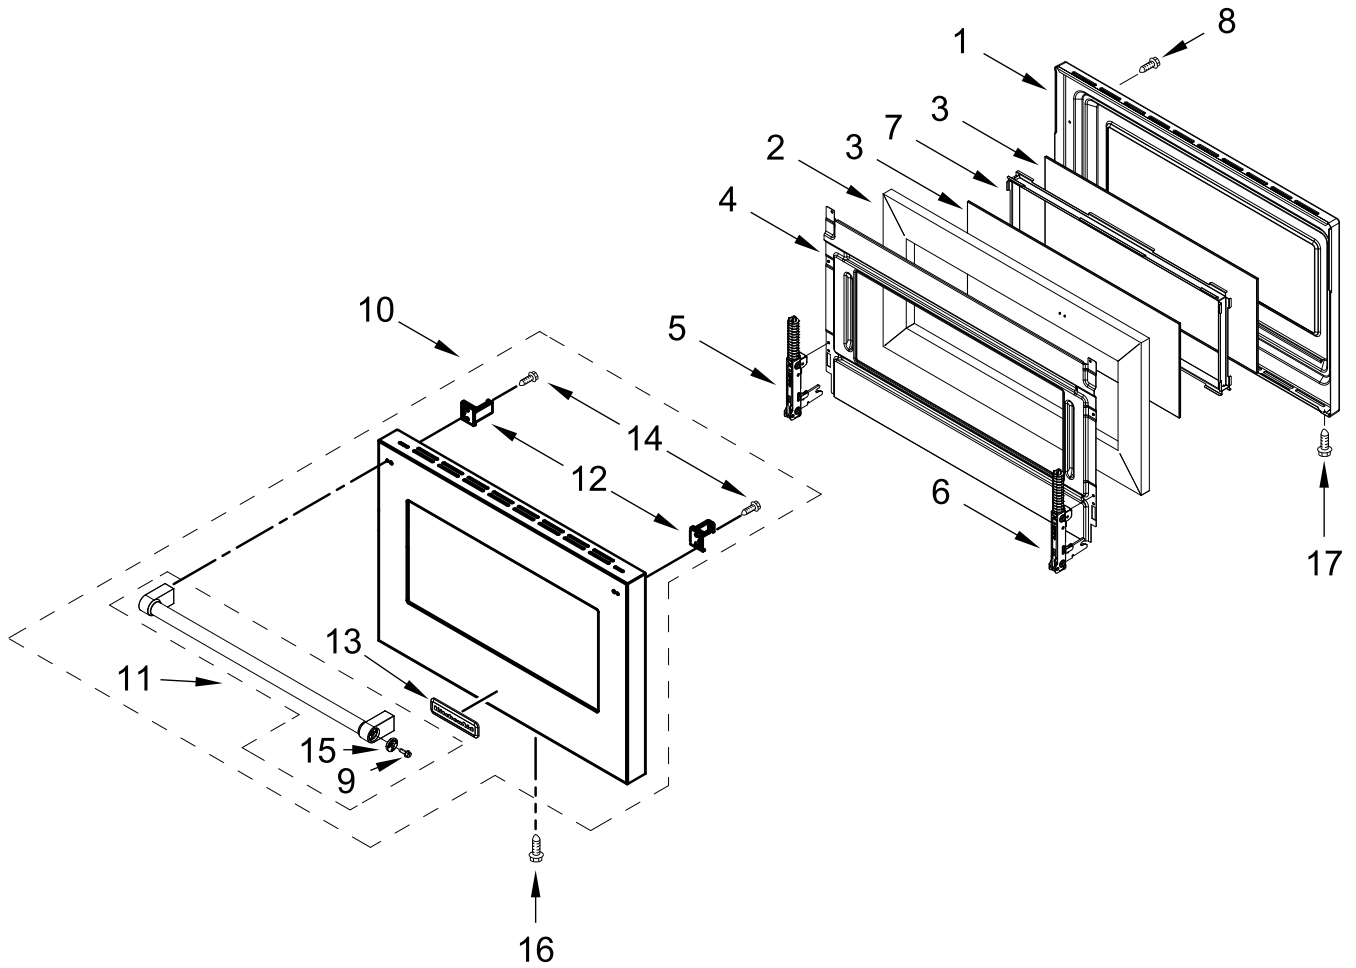

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	7	W11194814	Frame, Glass	12	W11197830	Bracket, Handle
2	W10884823	Insulation, Door	8	W10898280	Screw	13	W10518672	Badge
3	W11036791	Glass, Inner	9	W10656499	Screw	14	W10276043	Screw
4	W11194820	Retainer, Glass	10	W11712135	Outer Door Assembly (Includes Handle)	15	W11361074	Medallion, Handle
5	W11096978	Hinge, Door (Left)	11	W11362709	Handle Assembly	16	W10162096	Screw
6	W11096977	Hinge, Door (Right)				17	W10607120	Screw

INTERNAL OVEN PARTS

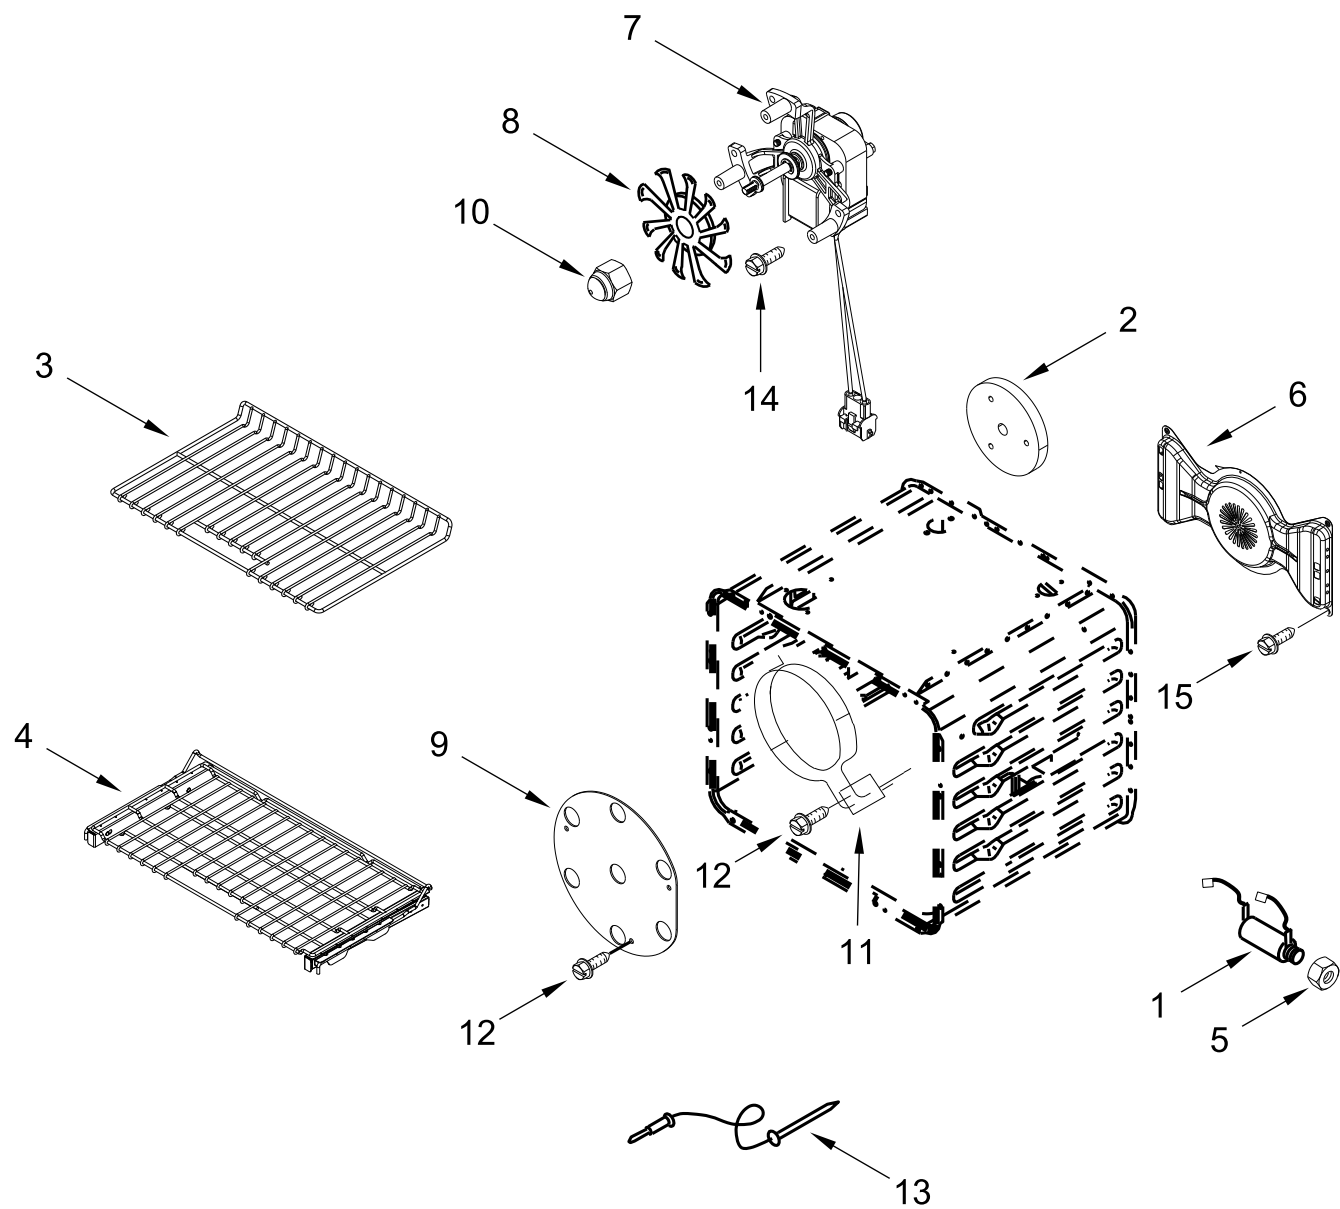

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	9755543	Jack, Meat Probe	7	W10631506	Motor, Convection	13	9755542	Probe, Temperature
2	W10282821	Insulation, Convection Cover	8	W10631503	Blade, Fan	14	W10720084	Screw
3	W10822069	Rack, Oven	9	W10261523	Plate, Fan	15	W10739592	Screw
4	W11496903	Rack, Sliding Oven	10	W10631504	Nut, Acorn (LH)			
5	9755546	Nut, Hidden	11	W11098505	Element, Convection Heat			
6	W11212180	Baffle, Convection	12	4449154	Screw			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	30-48KITRC	Gas Range Connector Kit
	4396923	Broiler Pan and Grid
	4396096RB	Griddle
	W10355051	Cleaner, Cooktop Backsplash
	W10285448	36-in With Shelf Medallion, Handle
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841CF	Copper
	W11368841BN	Bronze
	W11368841DD	Dark Blue