




ELECTRIC RANGE
Finger Print Resistant

MODELS:

WFE975H0HZ5 (Stainless)

WFE975H0HV5 (Black Stainless)


COOKTOP PARTS

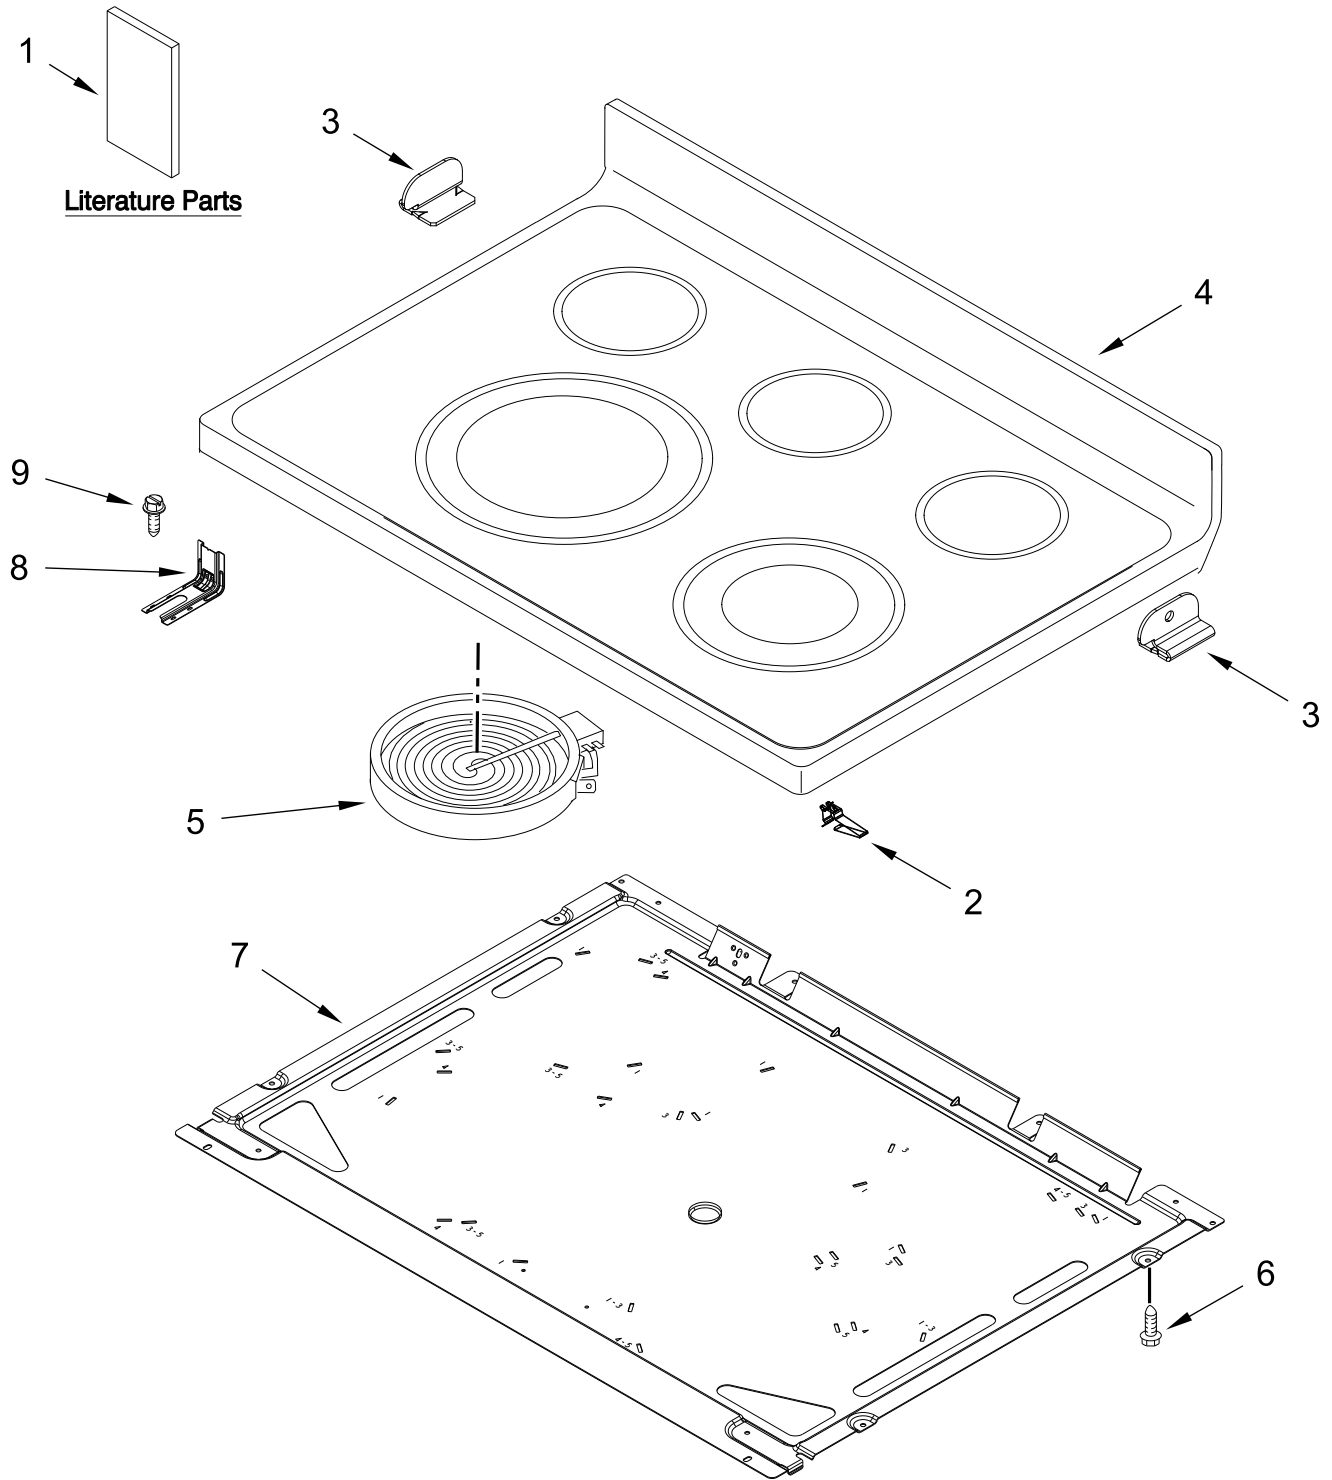

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10342780	Element (1300W) (Left Rear)	9	7101P485-60	Screw, Anti-Tip Kit
	W11435580	Guide, Quick Start (English and French)		W10248261	Element (1200W) (Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11509591	Use and Care Guide		W10275048	Element (3000 and 1400W) (Right Front)		W11454270	Harness, Main
	W11326978	Tech Sheet (English)		W10799048	Element, Warm Zone (Center Rear)		W11134592	Harness, Warm Zone
	W11326979	Diag,Wire (English/French)		W10187839	Element (3000W) (Left Front)		W11212156	Harness, WiFi Module
2	W11600012	Spring, Element					W11134550	Harness, Cooktop (Right)
3	W10607641	Bracket, Cooktop (Left)					W11190446	Harness, Cooktop (Left)
	W10607642	Bracket, Cooktop (Right)	6	3196169	Screw		3196520	Clip, Wire
4		Cooktop	7	W10691223	Pan, Radiant Element			
	W10865061	Black	8	W11379945	Bracket, Anti-Tip			


CONTROL PANEL PARTS

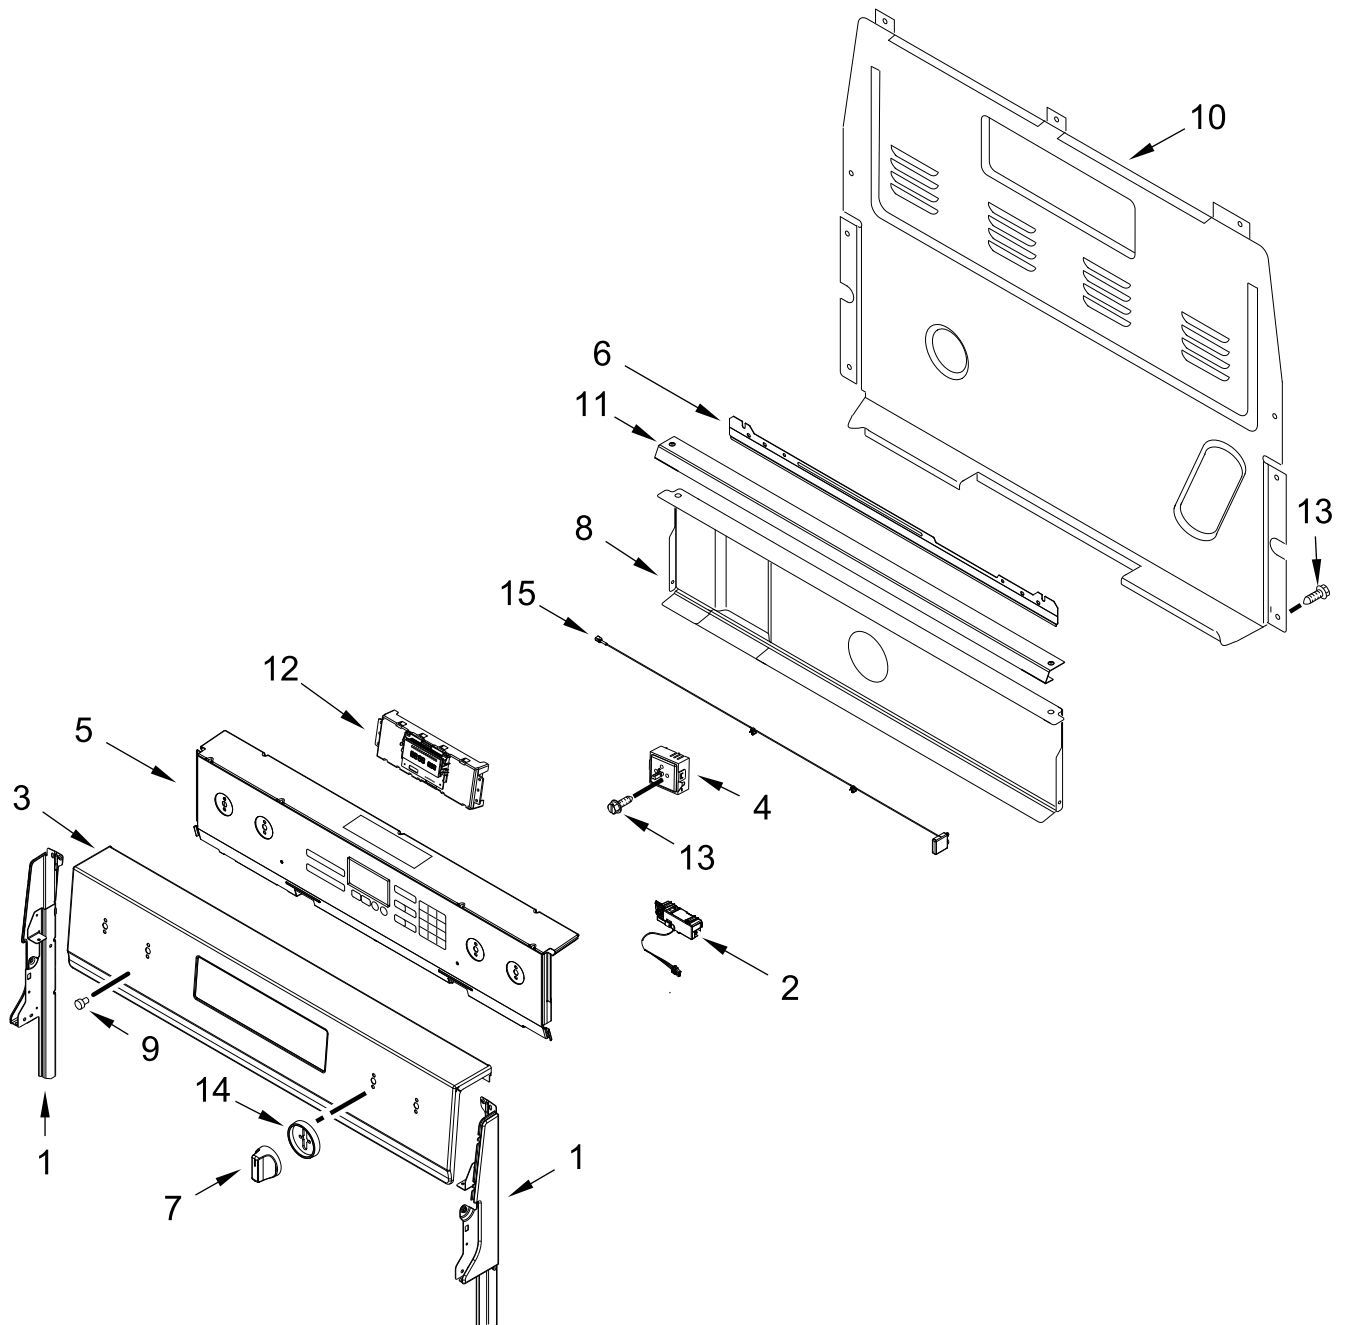

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5		Bracket, Control (Includes Overlay)	13	3196178	Screw
	W11213290	Black (Left)				14		Bezel
	W11213292	Black (Right)		W11527492	Black		W10918419	Stainless
2	W10888670	Assembly, WiFi	6		Bracket, Eye Brow		W10917223	Black Stainless
3		Console		W11443964	Black	15	W11516201	Antenna
	W10869991	Stainless	7		Knob			
	W10881625	Black Stainless		W10917219	Stainless			
4	W10437097	Switch, Infinite (Left Front)		W10917220	Black Stainless			
	W10437092	Switch, Infinite (Right Front)	8	W10134247	Shield, Heat			
	W10578768	Switch, Infinite (Right Rear)	9	3196068	Lens, Indicator			
	W10437094	Switch, Infinite (Left Rear)	10	8272473	Cover, Upper Rear			
			11	W10525121	Bracket, Console Mounting			
			12	W10871059	Control, Maxwell			


CHASSIS PARTS

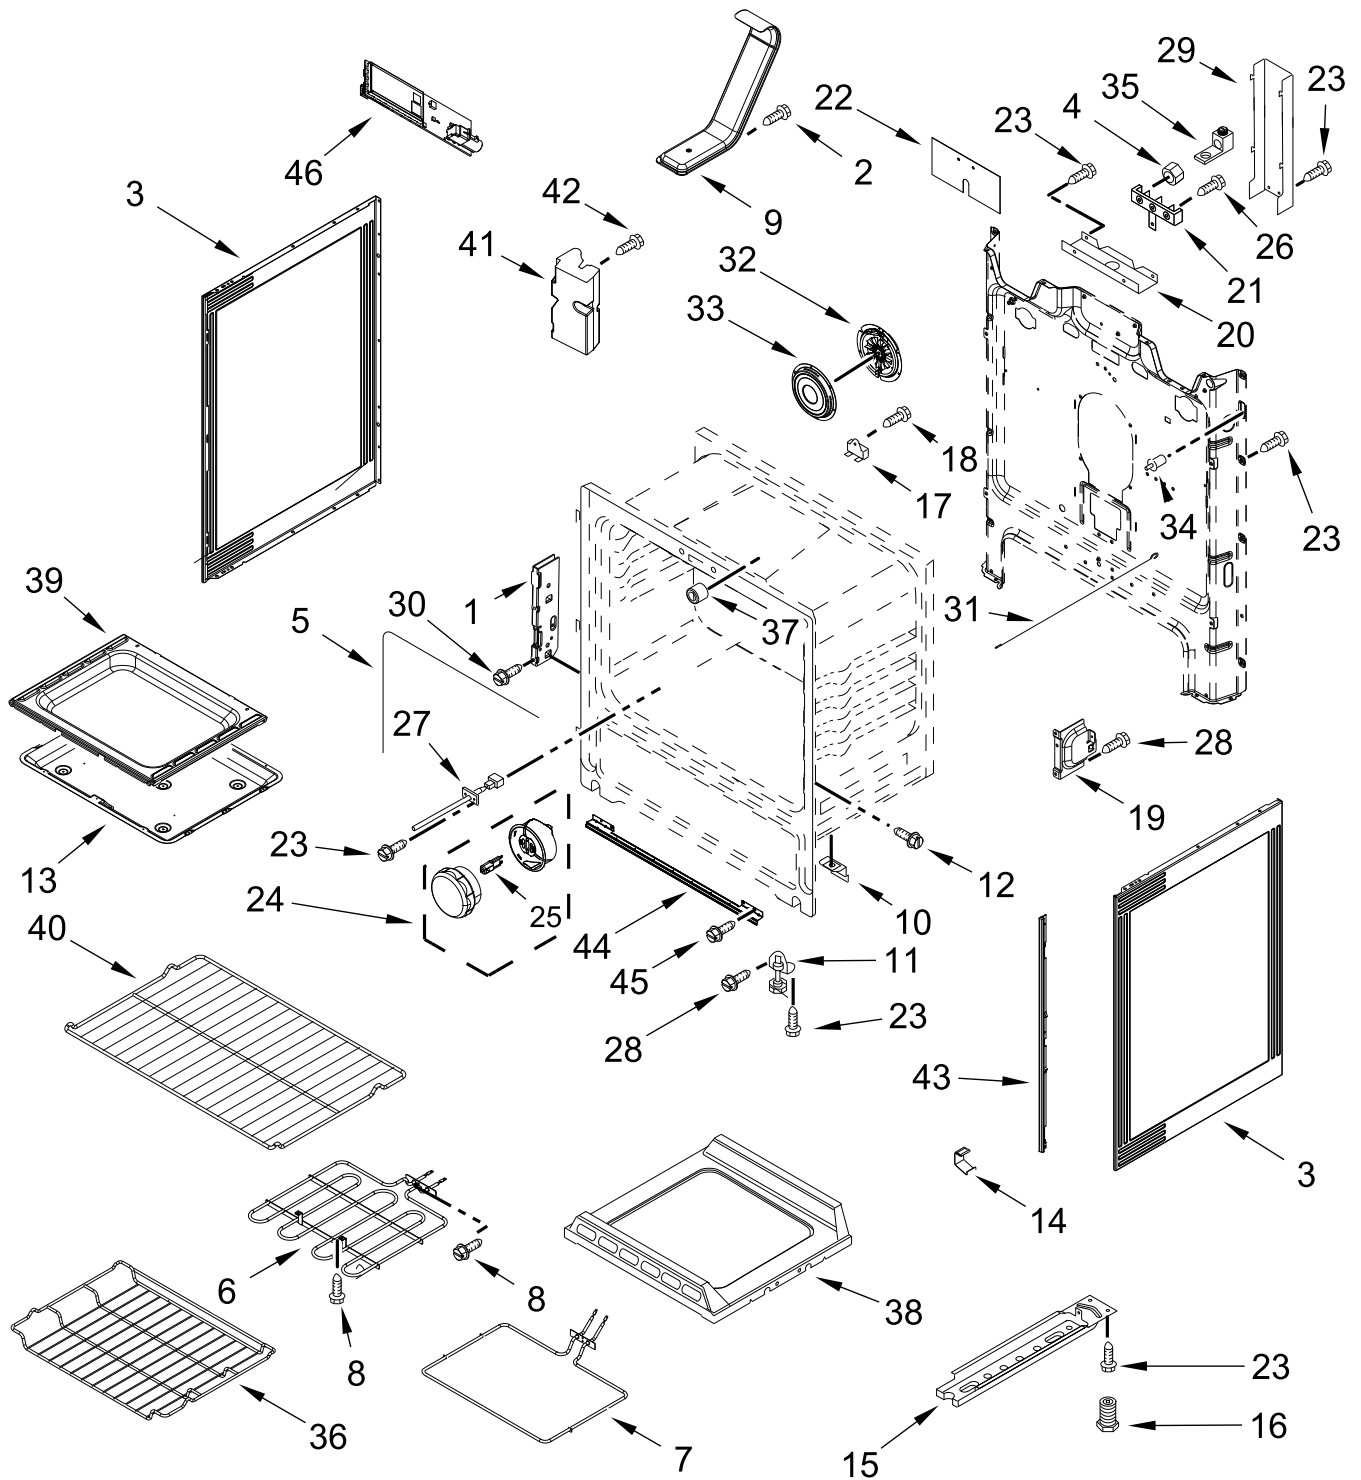

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	18	3196172	Screw	36	W10289145	Rack, Oven (Gull-Wing)
2	3196165	Screw	19	W10273002	Bracket, Oven Support	37	9758701	Spacer, Door
3		Panel, Side	20	3186034	Bracket, Service	38	W10726740	Shield, Heat
	W10162245	Black	21	W10245259	Block, Terminal	39	W10774446	Bottom, Oven
4	3400029	Nut	22	W10655441	Shield, Power Cord	40	W10531060	Rack, Oven
5	W11491752	Gasket, Door	23	3196178	Screw	41	W10910404	Counterweight
6	W11095929	Element, Broil	24	W11634772	Light Assembly	42	W11034869	Screw
7	W10774342	Element, Bake	25	W10571723	Bulb, Halogen 40 Watts	43	W11510560	Barrier Rail, Rubber (Left and Right)
8	W10362924	Screw				44	W11620269	Bracket, Front Frame
9	W10134285	Tube, Vent	26	3400016	Screw	45	3196560	Screw
10	W10035900	Support, Oven Bottom	27	W10586204	Sensor	46	W10916847	Wifi Module
11	W10341186	Front Foot Assembly	28	3196169	Screw			FOLLOWING PARTS NOT ILLUSTRATED
12	W10067840	Screw	29	W10326122	Cover, Terminal Block			
13	W11379357	Bake Pan	30	W10031780	Screw		W10194393	Insulation, Wrap
14	W10137382	Clip, Panel	31	W10273192	Rod, Door Switch		W10225524	Insulation, Back
15	W10390007	Base Rail Assembly (Right)	32	W10756304	Assembly, Convection		W10225523	Insulation, Bottom
	W10390008	Base Rail Assembly (Left)	33	W10346154	Cover, Convection		4820F015-59	Insulation, Strap
16	W10058460	Foot, Leveling	34	W11511828	Switch, Door			
17	3196548	Fuse, Thermal	35	W10281322	Kit, Bare Wire Adapter Block			


DOOR PARTS

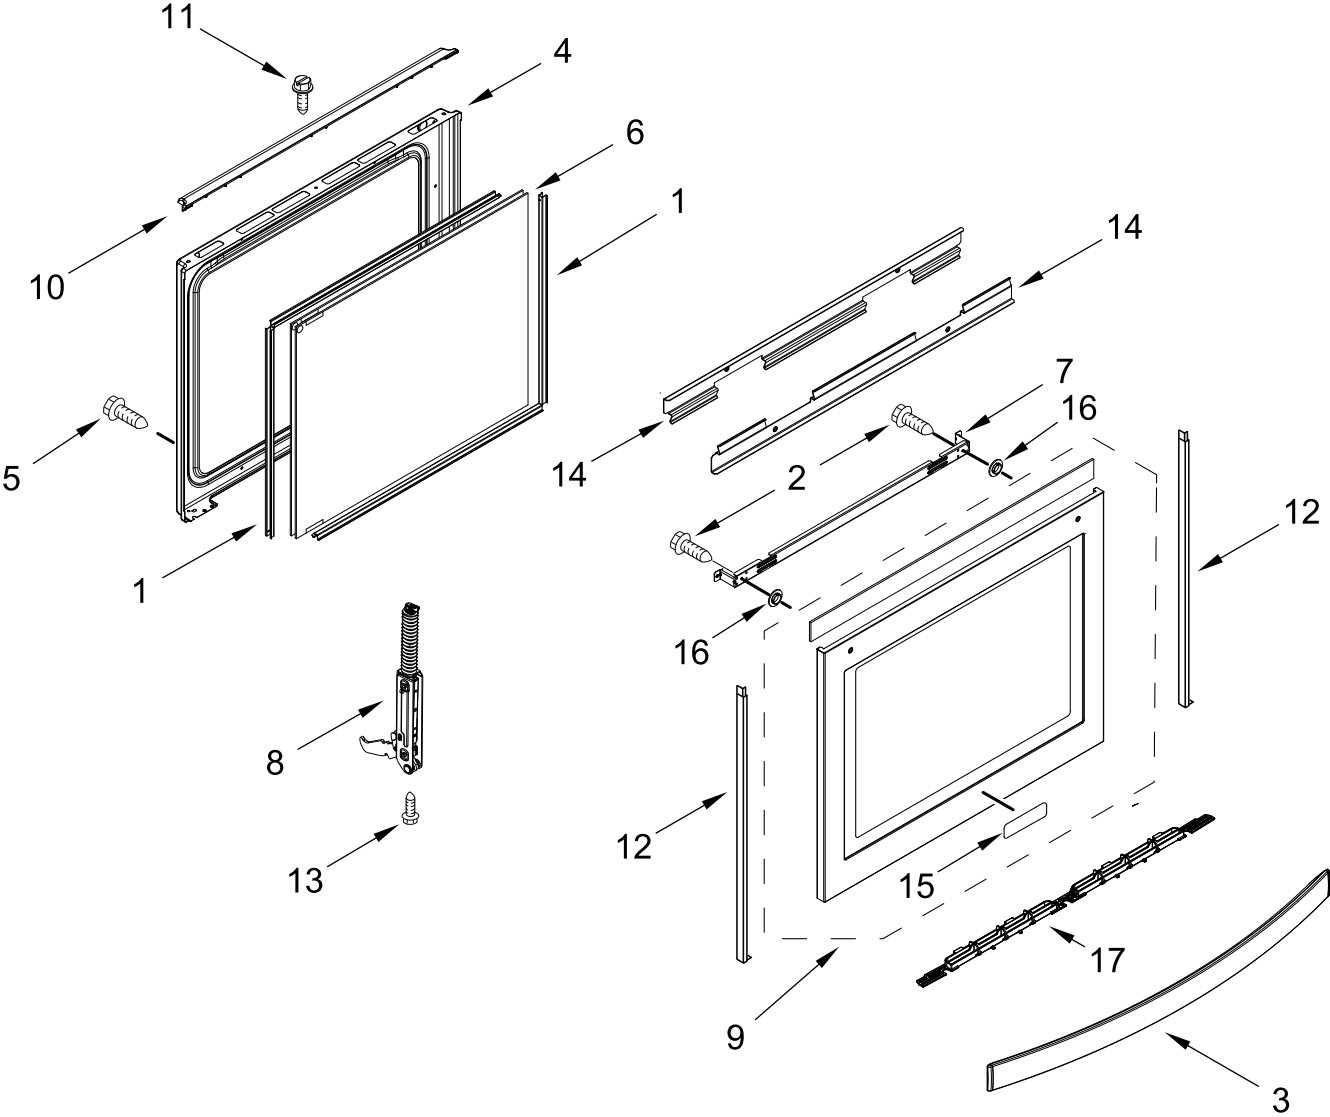

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11379948	Glass Spacer	9		Glass Assembly, Outer Door	15	W10884775	Badge
2	8533988	Screw				16	W10319024	Washer, Door
3		Handle, Door		W10864214	Stainless	17	W11440161	Bottom, Door Cover
	W10918786	Stainless			Black Stainless			
	W10903342	Black Stainless	10		Vent, Trim			
4	W10826568	Liner, Door		W10887939	Black			
5	W10031790	Screw	11	W10327235	Screw			
6	W11223202	Glass, Inner	12	W10813139	Rail, Vertical Support			
7	W10541911	Bracket, Glass Upper Handle	13	W10031780	Screw			
8	W10885519	Hinge, Door (Active)	14	W10813140	Rail, Horizontal Support			

DRAWER PARTS

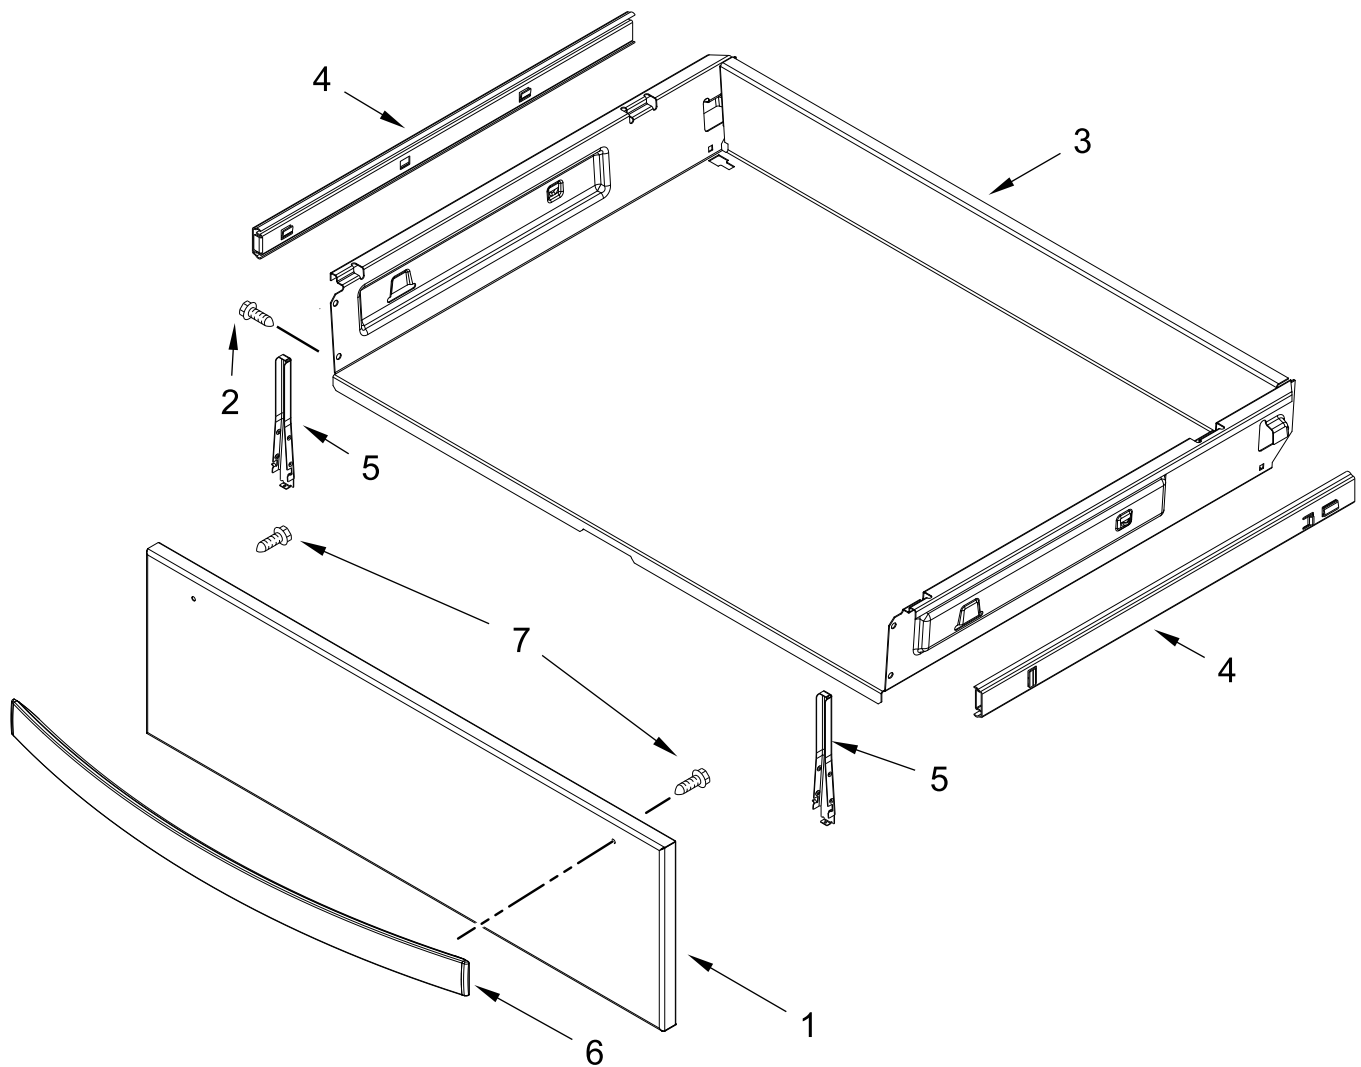

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10688022	Drawer, Storage	6		Handle, Door
	W11190211	Stainless	4	W10441804	Slide, Drawer (Left)		W10918786	Stainless
	W11449763	Black Stainless		W10441805	Slide, Drawer (Right)		W10903342	Black Stainless
2	3196169	Screw	5	W10318027	Bracket, Drawer	7	3400882	Screw

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting