




ELECTRIC RANGE

MODELS:

WFE320M0JS4 (Stainless)


COOKTOP PARTS

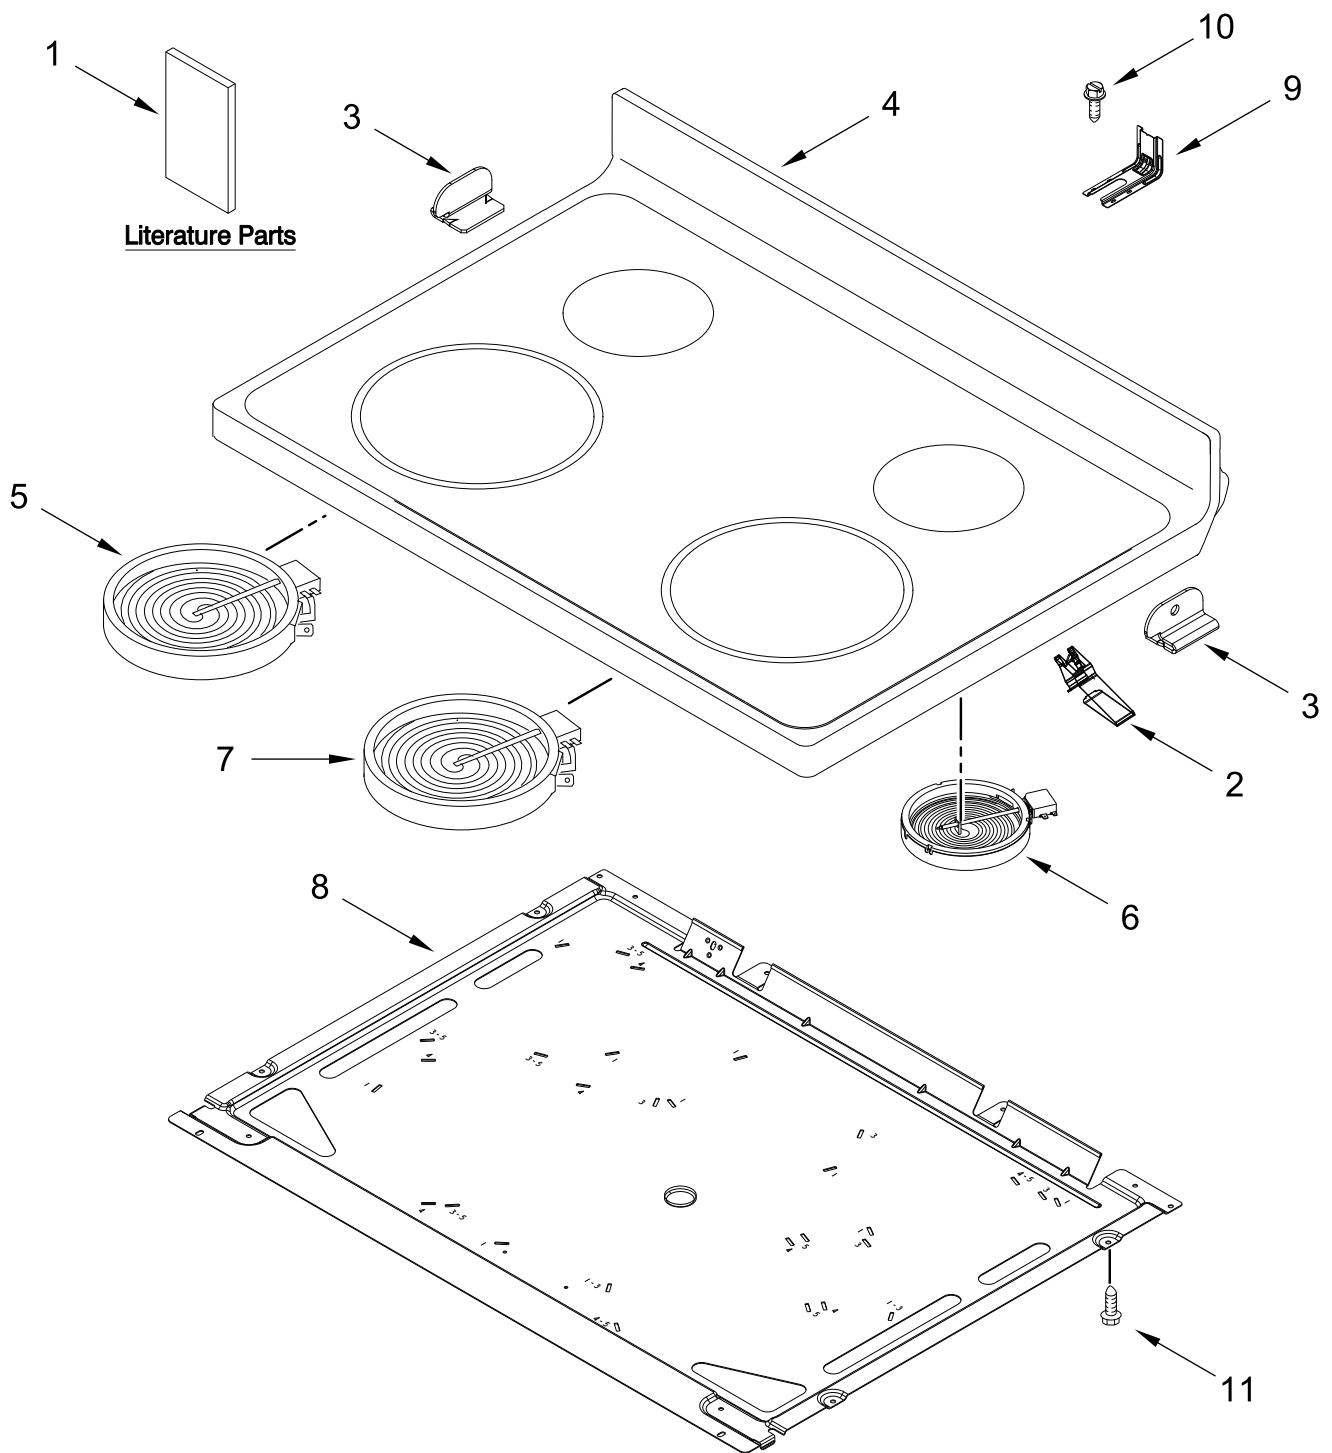

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000 and 1400W)	11	3196169	Screw
	W11509595	Owners Manual			(Left Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11435582	Quick Start Guide	6	W10248261	Element (1200W)		W11452620	Harness, Main
	W11393931	Tech Sheet			(Left Rear and Right Rear)		W11134603	Harness, Cooktop (Left)
2	W11600012	Spring, Element	7	8273992	Element (2500W)		W11134551	Harness, Cooktop (Right)
3	W10607641	Bracket, Cooktop (Left)			(Right Front)			
	W10607642	Bracket, Cooktop (Right)	8	W10691223	Pan, Radiant Element			
4		Cooktop	9	W11379945	Bracket, Anti-Tip			
	W11034830	Black	10	7101P485-60	Screw, Anti-Tip Kit			


CONTROL PANEL PARTS

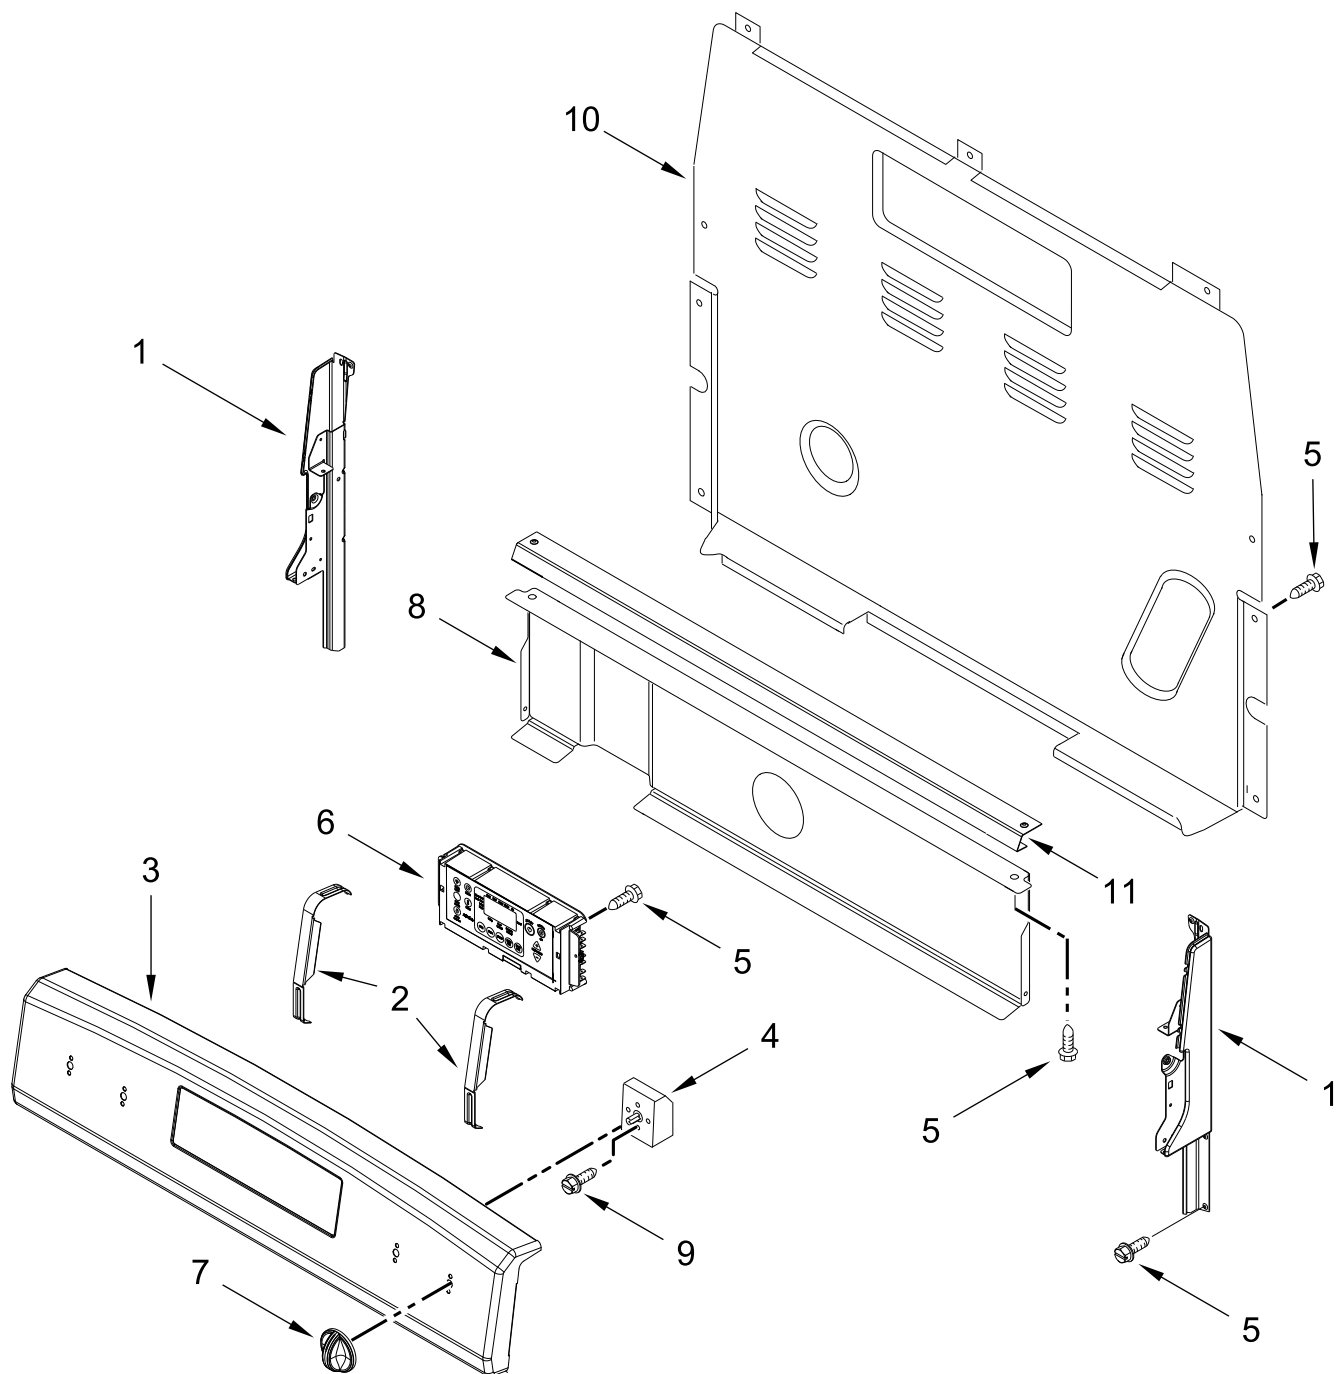

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	7		Knob
	W11130372	Black (Left)			(Left Front)		W11022718	Black
	W11130379	Black (Right)		3148951	Switch, Infinite	8	W10134247	Shield, Heat
2	W10695491	Bracket, Control			(Left Rear and Right	9	3400882	Screw
3		Console, Assembly			Rear)	10	8272473	Cover, Upper Rear
	W11027387	Stainless		3148954	Switch, Infinite	11	W10525121	Bracket, Console
					(Orange)			Mounting
					(Right Front)			
			5	3196178	Screw			
			6		Control, Electronic			
					(LCX)			
				W11536412	Black			


CHASSIS PARTS

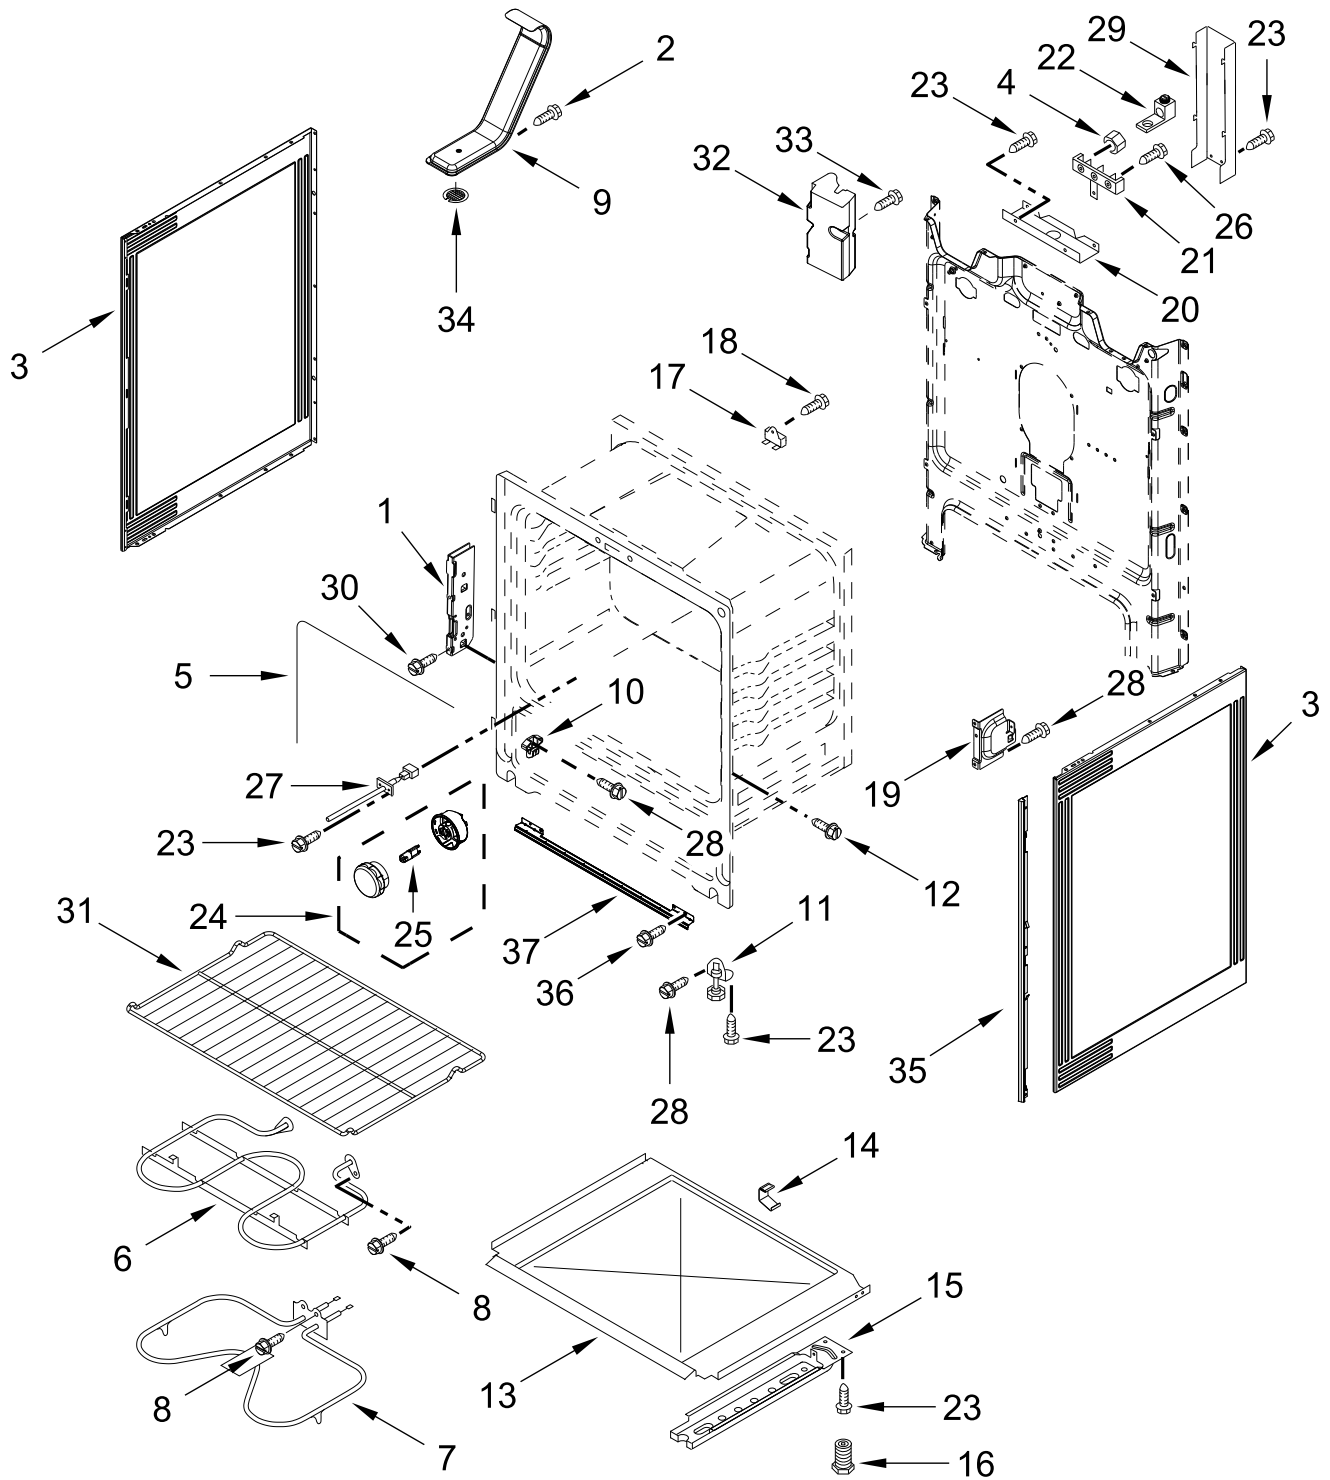

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	16	W10058460	Foot, Leveling	33	W11034869	Screw
2	3196154	Screw	17	3196548	Fuse, Thermal	34	9761301	Screen, Vent
3		Panel, Side	18	3196172	Screw	35	W11510560	Barrier Rail, Rubber (Left and Right)
	W10162245	Black	19	W10404688	Clip, Oven Support	36	3196560	Screw
4	3400029	Nut	20	3186034	Bracket, Service	37	W11464547	Bracket, Front Frame
5	W10129032	Seal, Door	21	W10245259	Block, Terminal			FOLLOWING PARTS NOT ILLUSTRATED
6	W10308476	Element, Broil	22	W10281322	Kit, Bare Wire Adapter Block		8273263	Insulation, Wrap
7	W11022836	Element, Bake	23	3196178	Screw		8272611	Insulation, Back
8	3196174	Screw	24	W11634772	Light Assembly	W10333344		Insulation, Flue
9	W10134285	Tube, Vent	25	W10571723	Bulb, Halogen 40 Watts			
10	W10674705	Glide, Drawer Front	26	3400016	Screw			
11	W10341186	Front Foot Assembly	27	W10181986	Sensor, Oven			
12	W10067840	Screw	28	3196169	Screw			
13	8054068	Retainer, Insulation	29	W10326122	Cover, Terminal Block			
14	W10137382	Clip, Panel	30	W10031780	Screw			
15	W10390008	Base Rail Assembly (Left)	31	W11173792	Rack, Oven			
	W10390007	Base Rail Assembly (Right)	32	W10910404	Counterweight			


DOOR PARTS

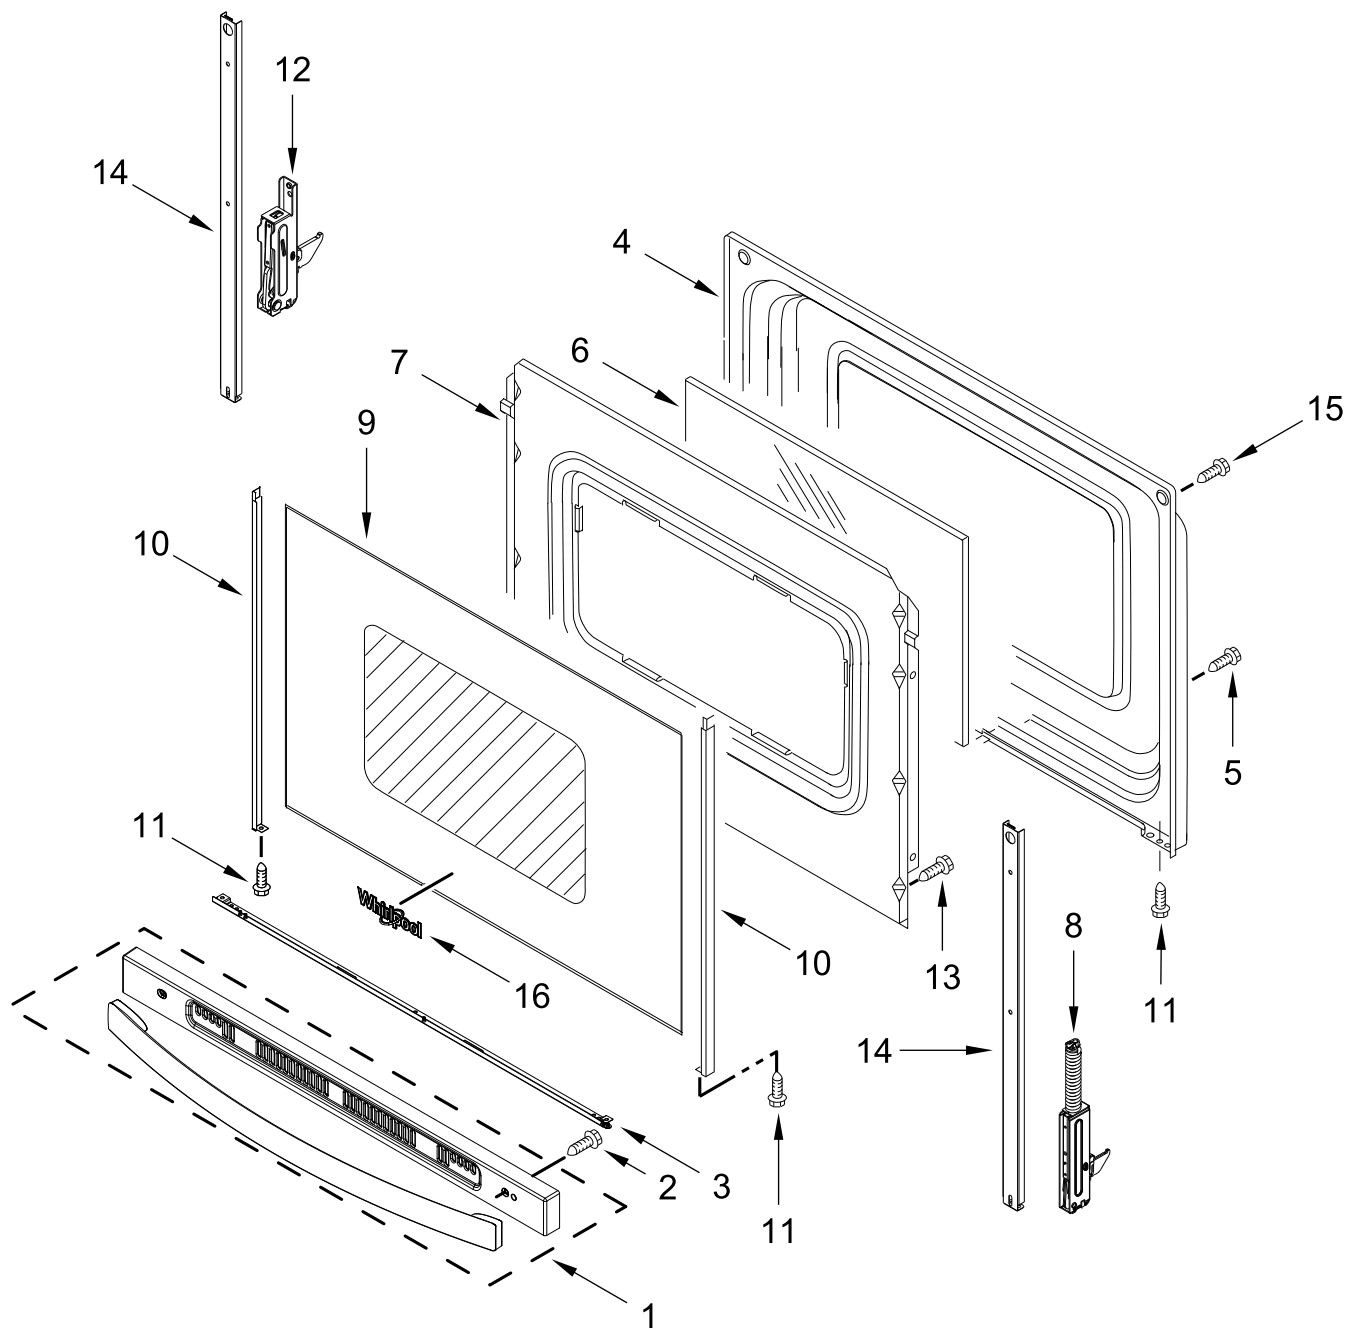

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	8	W10299225	Hinge, Active	15	W10200660	Screw
	W11026570	Stainless (Includes Standoff)	9		Glass Assembly, Outer Door	16	W10884775	Badge
2	W10480830	Screw		W10409946	Black			
3		Trim, Lower Door	10		Trim, Side			
	W11444043	Black		W10746436	Black (Left)			
4	9761344	Liner, Door		W10746435	Black (Right)			
5	W10031790	Screw	11	W10327235	Screw			
6	W11367326	Glass, Inner	12	W10299227	Hinge, Door (Passive)			
7	9761505	Retainer, Insulation	13	W10031780	Screw			
			14	W11379944	Strap, Door			

DRAWER PARTS

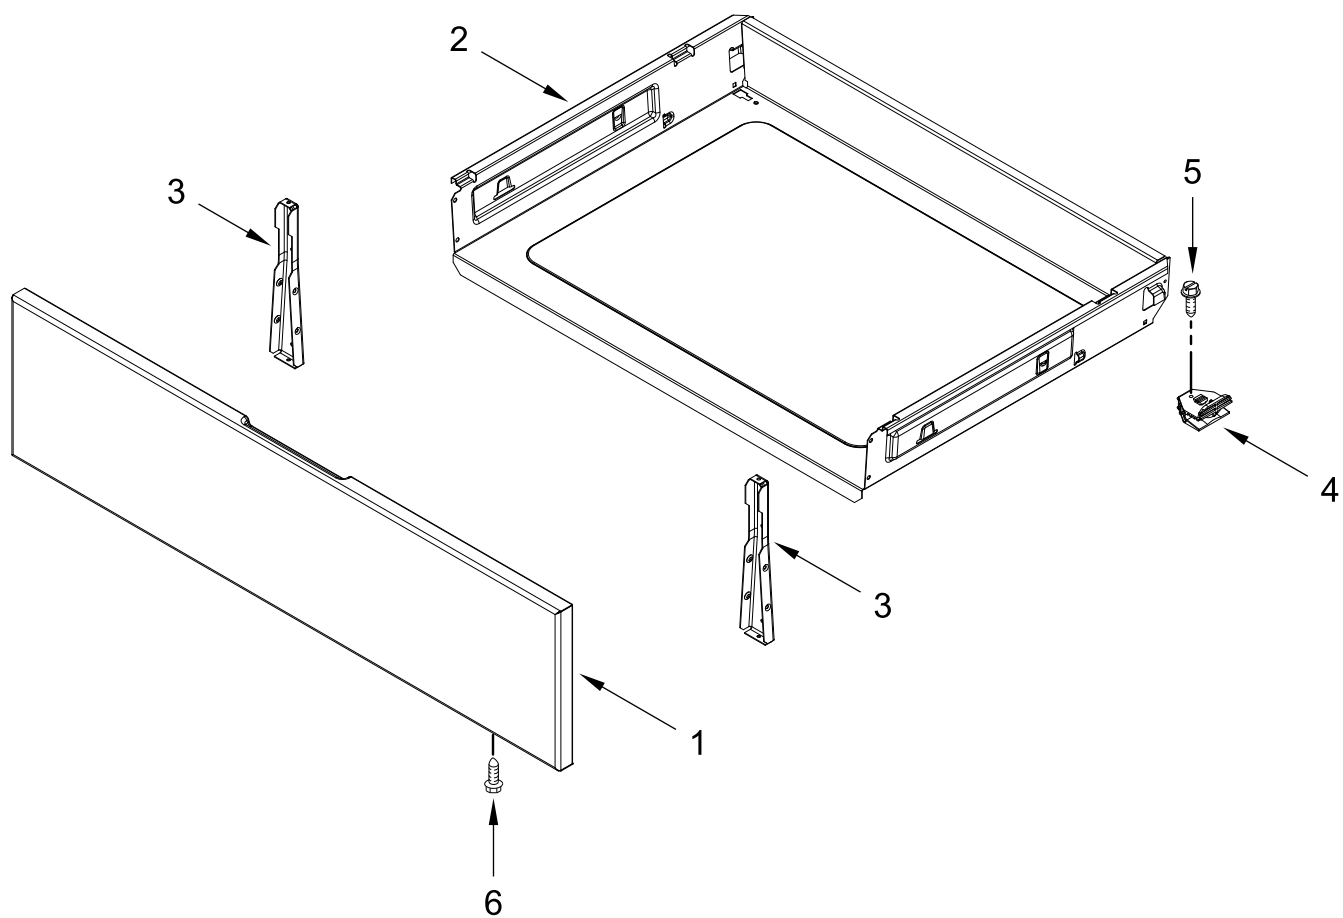

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462910	Bracket, Mounting Drawer	5	3196165	Screw
	W10330070	Stainless				6	3196169	Screw
2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear			

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting