



27" BUILT-IN COMBINATION MICROWAVE WALL OVEN


MODELS:

KOCE507EWH20 (White)

KOCE507ESS20 (Stainless)

KOCE507EBS20 (Black Stainless)


CONTROL PANEL PARTS

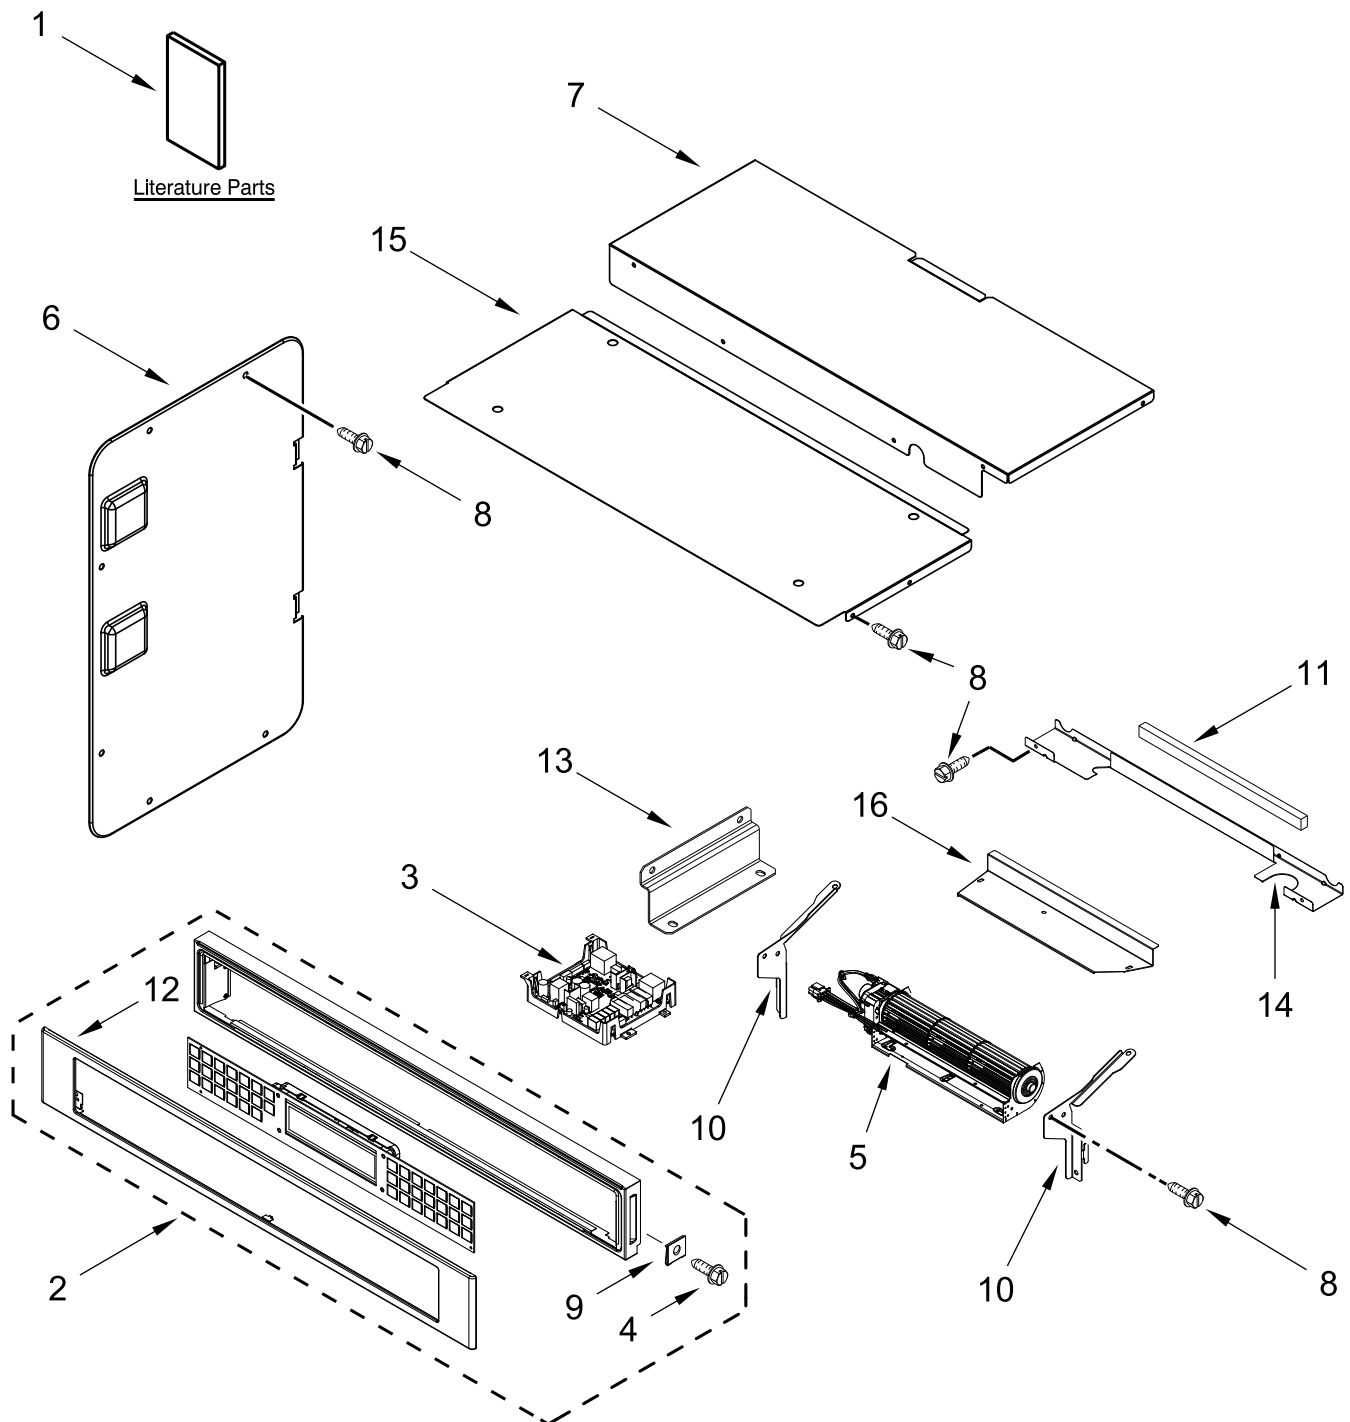

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	7101P426-60	Screw	16	W10681157	Cover, Combo Blower
	W11382204	Owner's Manual	9	4450118	Nut			FOLLOWING PARTS NOT ILLUSTRATED
	W11382210	Quick Start Guide	10	W10655463	Bracket, Blower (Left)			
	W11340885	Tech Sheet		W10655462	Bracket, Blower (Right)		W11245670	Harness, Main
2		Assembly, Control Panel (Includes Overlay)	11	4451758	Block, Foam		W11256627	Harness, Signal
	W11304128	White	12		Skin, Control Panel		W11264646	Harness, Door Latch
	W11304125	Stainless		W10588747	White		W11229448	Harness, Communication
	W11304129	Black Stainless		W10588741	Stainless		313438	Clip, Harness
3	W11249218	Appliance Manager, Copernicus		W10861075	Black Stainless		4450800	Screw, Grounding
4	W11339492	Screw (Black)	13	W10283025	Side, Bracket		W11226264	Strap, Ground
5	W11397930	Blower	14	W11166802	Divider, Chassis Back		4448664	Clamp, Conduit
6	W10655467	Chassis, Combo Side	15	W10318159	Chassis, Cover Top Front 27"		W10017410	Fuse, Time Delay
7	W11037652	Chassis, Cover Top Back 27" WIFI					4454949	Holder, Fuse
							W11394923	Bag, Hardware


OVEN PARTS

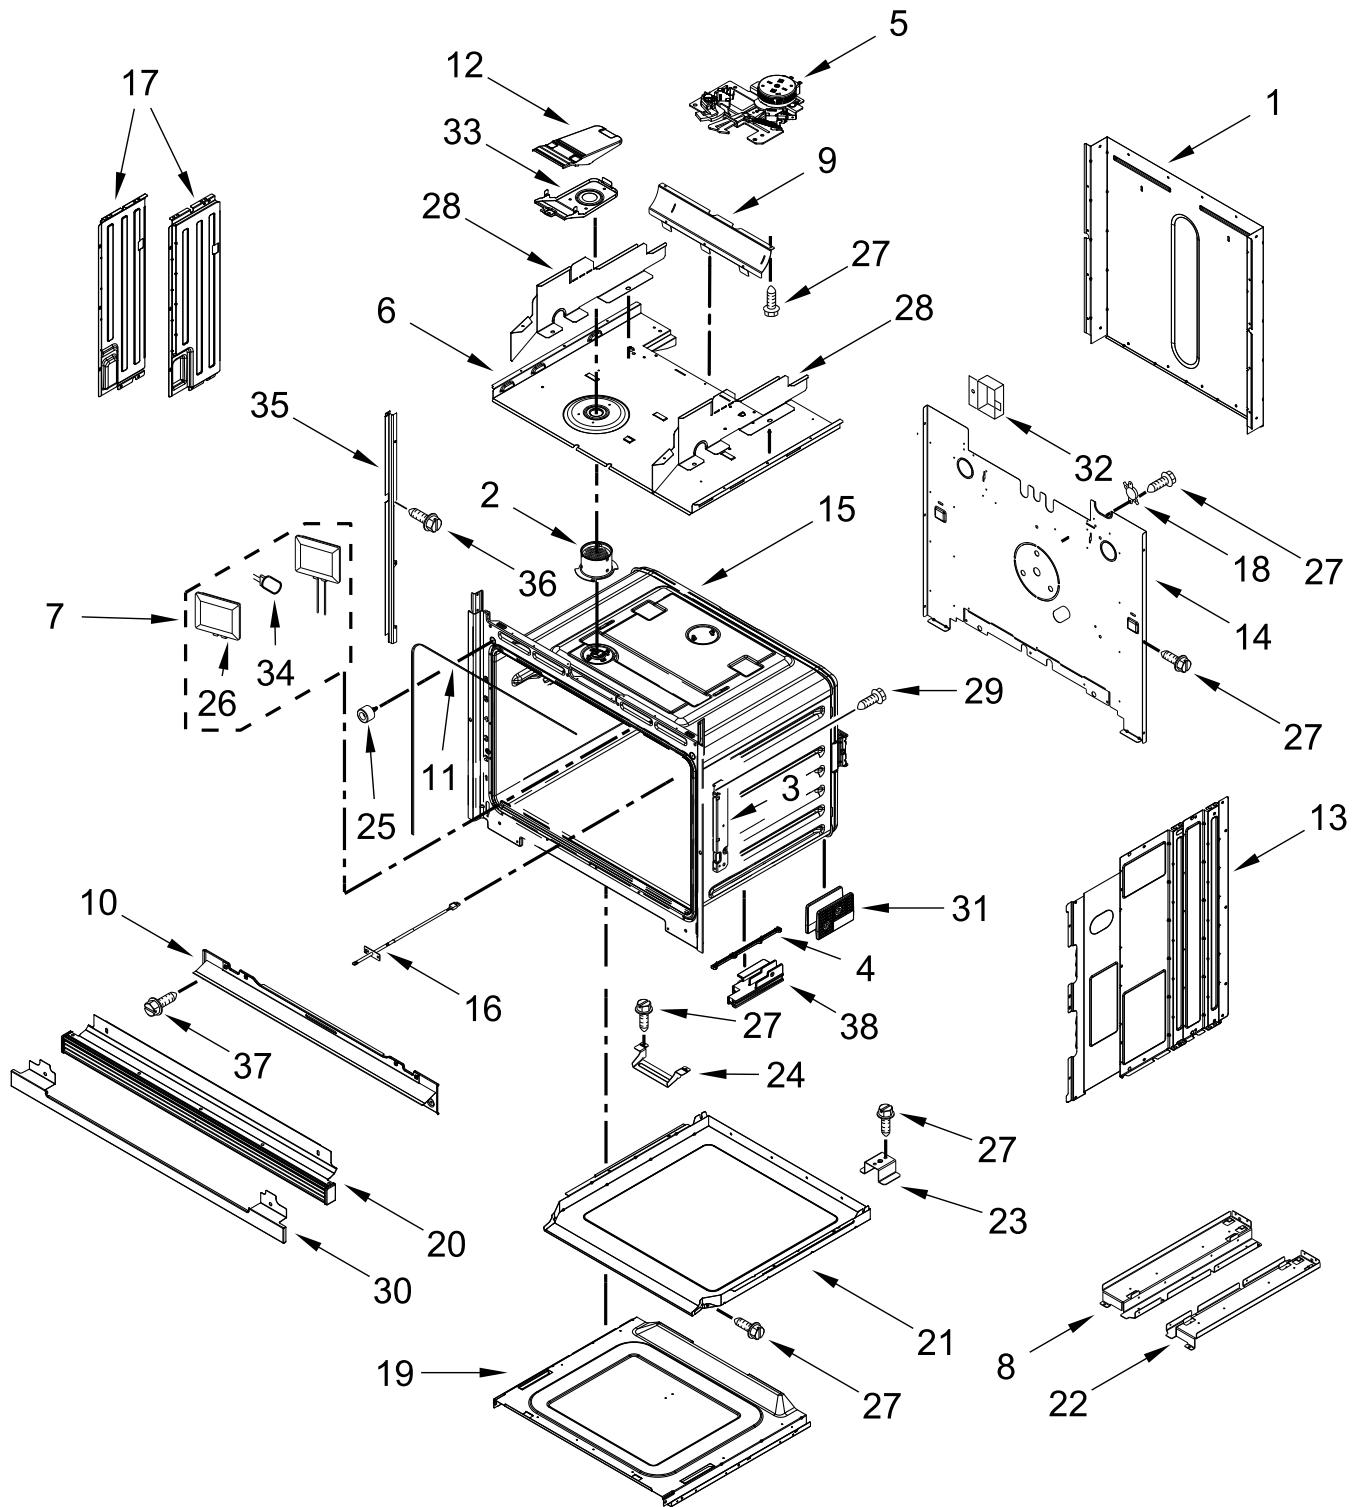

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11134657	Duct, Lower Chassis Back	17	W11167419	Cover, Suction (Left)	30		Trim, Bottom Vent
2	W11085298	Tube, Vent		W11186675	Cover, Suction (Right)		W11356754	Black
3	W11239070	Receiver, Hinge (Left)	18	4449751	Thermostat (TOD)	31	W11245118	Foot, Base
	W11239072	Receiver, Hinge (Right)	19	W11244454	Base, Chassis	32	8285593	Cover, Connector
4	W11156710	Spacer, Base	20		Assembly, Bottom Vent	33	W11256423	Base, Vent Exhaust
5	W11132456	Latch, Motorized		W11369894	White	34	W10472384	Bulb, Light
6	W11244456	Top, Chassis		W11369886	Stainless	35		Sidetrims, Bended
7	W11205574	Assembly, Oven Light		W11369893	Black		W11235457	Black (Left)
8	W10283020	Support, Base (Left)	21	W11244446	Duct, Bottom Chassis		W11235458	Black (Right)
9	W10904163	Deflector, Blower	22	W10283021	Support, Base (Right)	36	W11404000	Screw
10	W11518348	Vent, 27" Combo Center	23	W11135135	Support, Air Channel	37	W11249635	Screw
11	W11262572	Gasket, Cavity	24	W11390667	Spacer, Chassis Bottom Duct	38	W11245114	Foot, Chassis (Left)
12	W11256424	Cover, Vent Exhaust					W11245116	Foot, Chassis (Right)
13	W11165274	Side, Chassis	25	W11166315	Bumper & Screw			FOLLOWING PARTS NOT ILLUSTRATED
14		Back, Chassis (Not Serviced)	26	W10472386	Lens, Light		W11244474	Insulation, Wrap
15		Liner, Oven (Not Serviceable)	27	7101P426-60	Screw		W11244475	Insulation, Back
16	W11346074	Probe, Sensor	28	W11186391	Deflector, Chassis (Left)			
				W11186398	Deflector, Chassis (Right)			
			29	W10254050	Screw			


OVEN DOOR PARTS

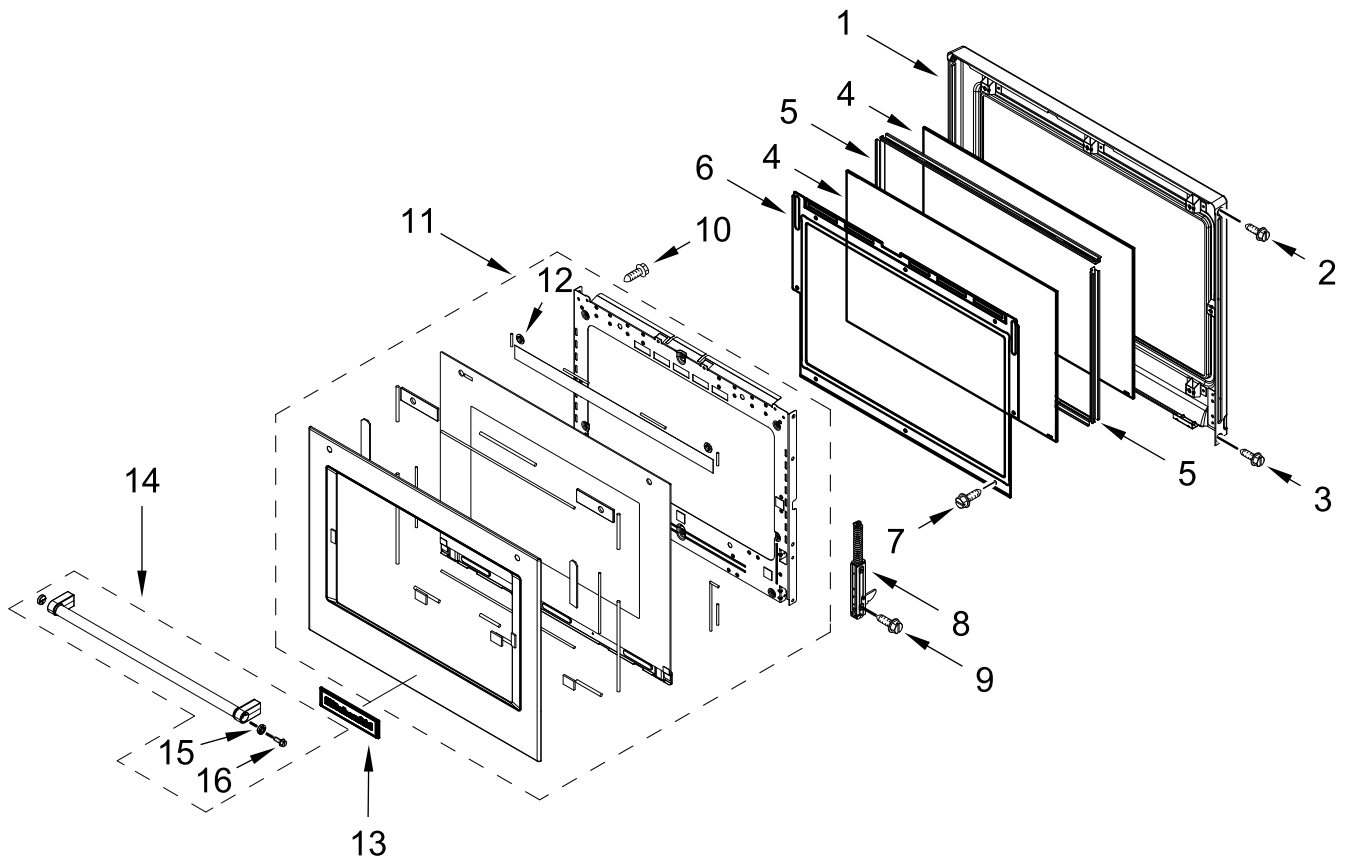

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302593	Liner Assembly	8	W11296054	Hinge, Door (Left)	12	W10319024	Washer, Door
2	7101P375-60	Screw		W11296055	Hinge, Door (Right)	13	W10518672	Badge
3	W11290045	Screw	9	3196183	Screw	14		Handle Assembly
4	W10618123	Glass, Inner	10	W11317731	Screw (Black)		W11241574	Stainless
5	W11302731	Spacer, Air Divider	11		Door Assembly	15	W10551026	Medallion, Handle
6	W11204277	Retainer, Air Divider Glass		W11264144	White	16	W10656499	Screw
7	7101P426-60	Screw		W11295967	Stainless			
				W11295968	Black Stainless			


INTERNAL OVEN PARTS

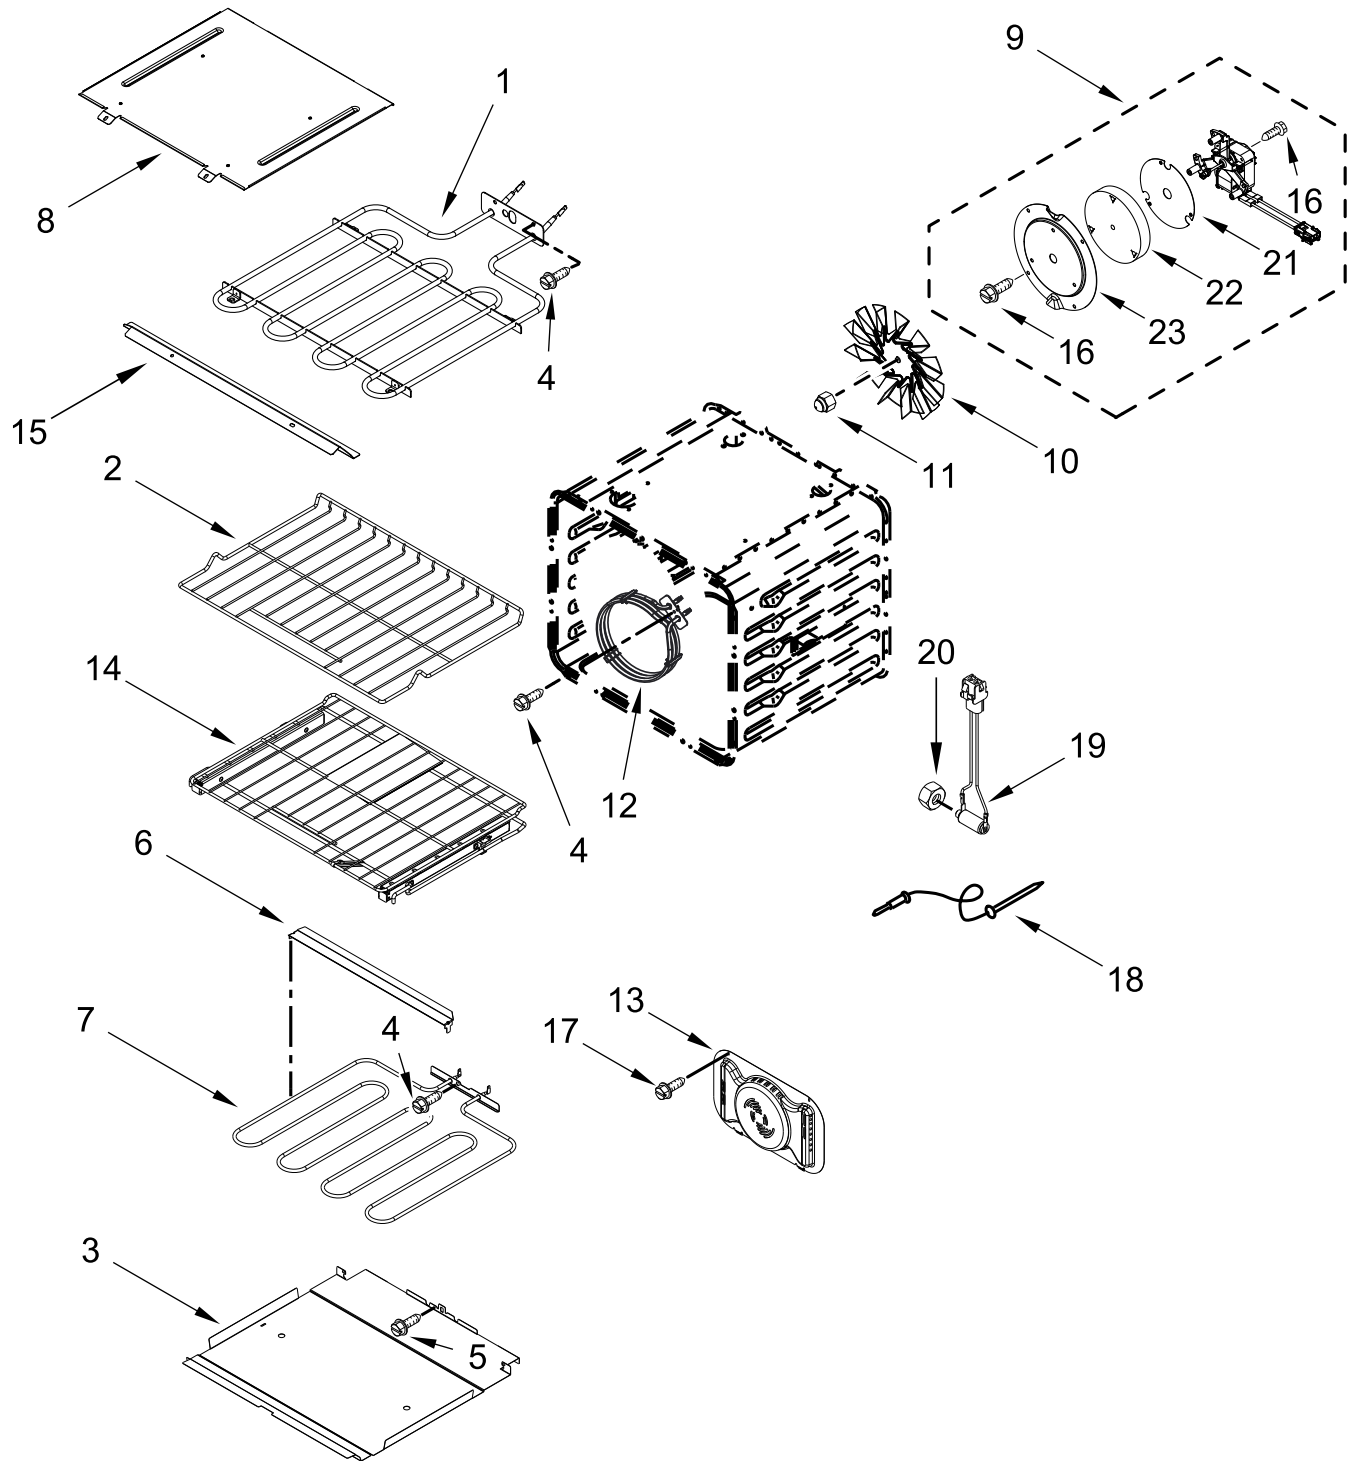

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238159	Element, Broil	11	W11433702	Nut, Acorn (LH)	18	9755542	Probe, Temperature
2	W10554529	Rack, Oven	12	W10546519	Element, Convection	19	W11252826	Jack, Meat Probe
3	W10318198	Tray, Hidden Bake	13	W10819989	Baffle, Bow Tie	20	W11033111	Nut, Locking
4	7101P434-60	Screw			(For White and Stainless Models)	21	W11251715	Plate, Convect Motor
5	7101P426-60	Screw				22	W11251716	Insulation, Convect Motor
6	W10282957	Crossbar, Hidden Bake Tray		W10918895	Baffle, Bow Tie	23	W11398057	Cover, Convect Plate
					(For Black Stainless Models)			
7	W11292248	Element, Bake	14	W10554532	Rack, Sliding			
8	W11235537	Reflector, Broil	15	W10588737	Shield, Broil Front			
9	W11398058	Convect Motor Assembly	16	W10720084	Screw			
10	W11425715	Blade, Fan	17	W10906658	Screw			


TOP VENTING PARTS

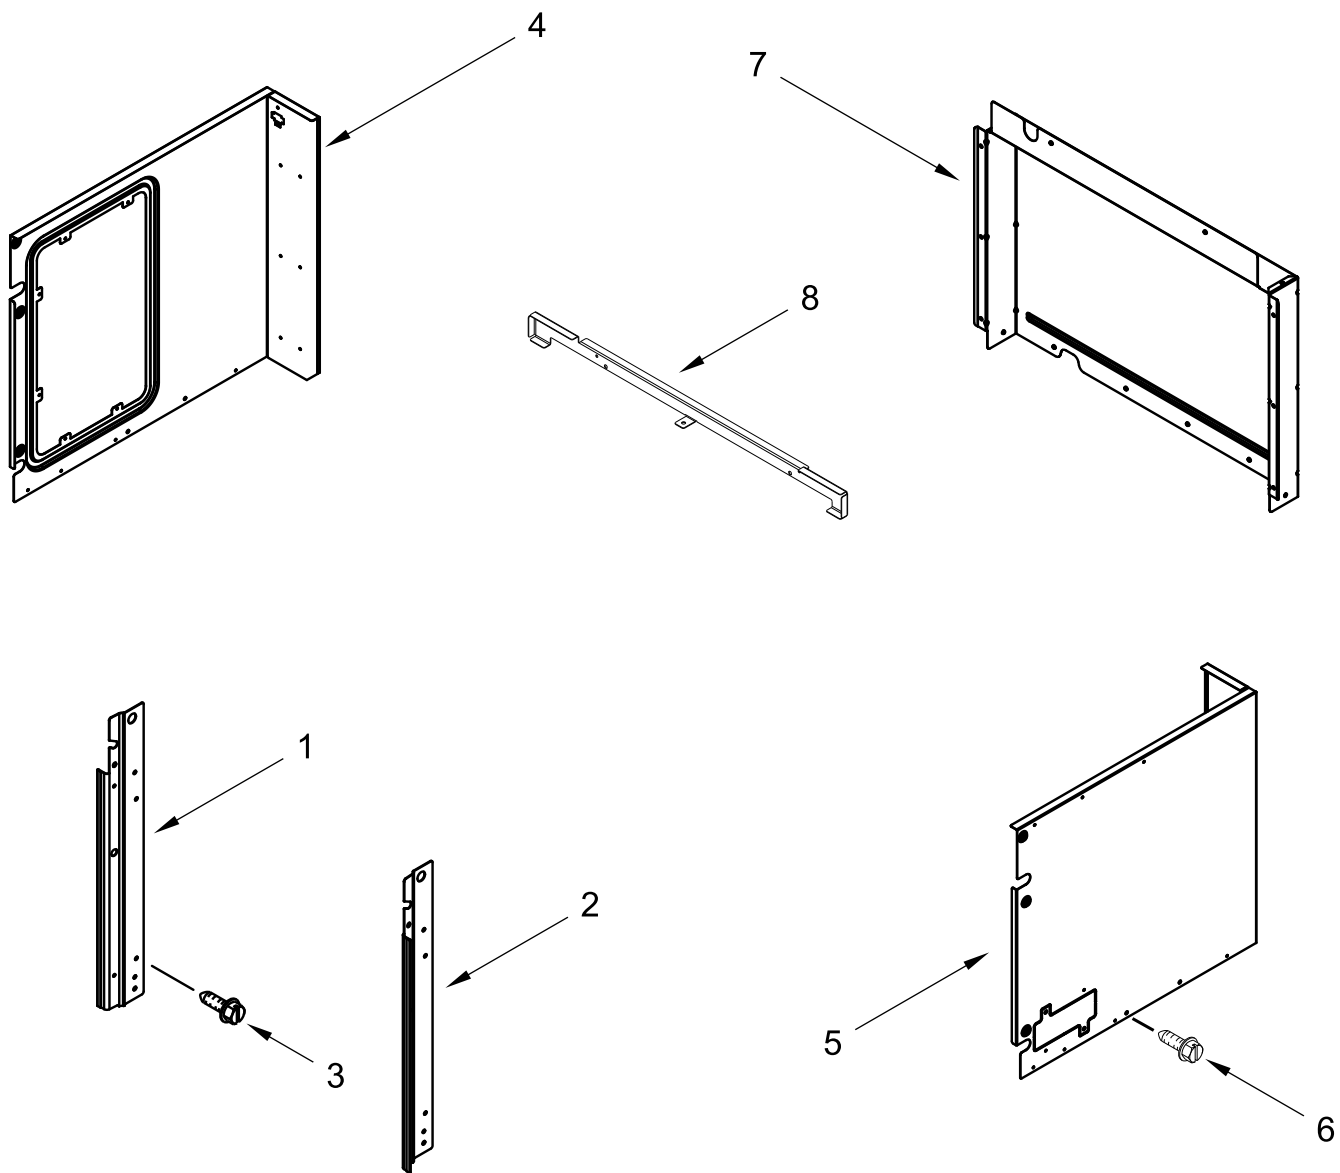

TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11235470	Rail, Side (Left)	5	W11244451	Side, Combo Chassis (Right)	7	W11171004	Cover, Combo Chassis Back Duct
2	W11235471	Rail, Side (Right)	6	7101P426-60	Screw	8	W10283023	Support, Crossbar
3	7101P653-60	Screw						
4	W11171909	Side, Combo Chassis (Left)						


CABINET AND STIRRER PARTS

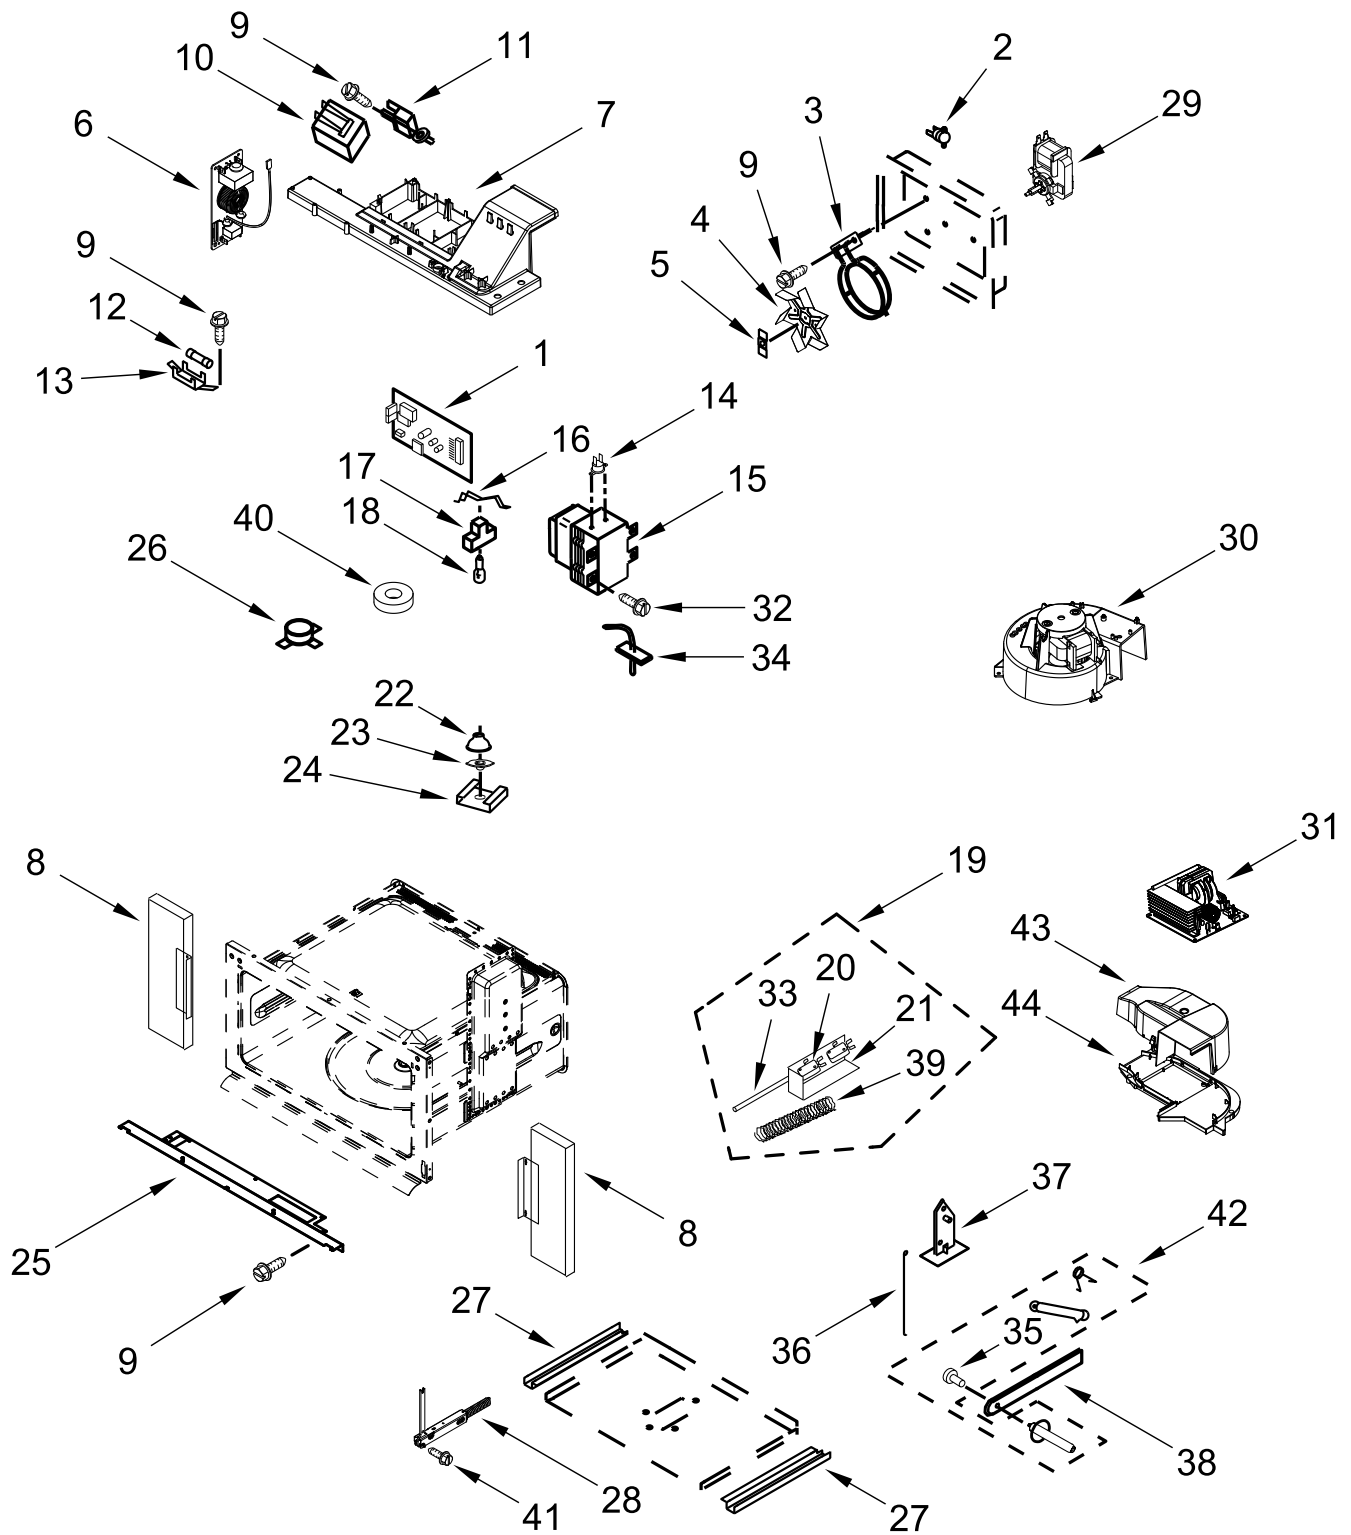

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11289998	Manager, Appliance	17	W10490593	Holder, Lamp	37	461967750494	Support
2	423107845441	Sensor, Convection	18	W10795595	Lamp, Halogen	38	W11213889	Arm, Sliding
3	461967848711	Heater, Convection Element	19	W10358241	Assembly, Interlock Switch	39	423107570871	Spring, Release Rod
4	W11453899	Blade, Fan	20	461967848881	Switch	40	W10769147	Sealing, Lamp
5	W10120233	Nut, Speed	21	W10876593	Holder, Switch	41	461967825781	Screw (Shoulder)
6	W11505129	Filter, Noise	22	423107022541	Reflector	42	W10128850	Assembly, Sliding Arm
7	461967754821	Duct, Magnetron	23	423107720491	Lens, Lamp	43	W11504615	Housing, Upper Inverter
8	461967017511	Trim, Side (Left)	24	W11440819	Clip, Spring	44	W11504613	Housing, Lower Inverter
	W11044584	Trim, Side (Right)	25	W11334717	Vent, Top			MISCELLANEOUS PARTS
9	461967825321	Screw	26	W10460457	Sensor, Humidity			
10	461967848621	Transformer, Light (20V)	27	461967008461	Support, Bottom			
11	461967842541	Thermoactuator	28	W11319465	Hinge, Door	W11539494		Harness, Inverter
12	241908600053	Fuse	29	W11233698	Motor, Convection Fan	W11555168		Harness, Interlock
13	4375231	Block, Fuse	30	W11131760	Cooling Fan Assembly	W11454022		Harness, Fan and Turntable
14	461967846741	Thermostat, Magnetron	31	W11504539	Inverter	W11539527		Jumper Harness, Communication
15	W11504545	Magnetron	32	461967825971	Screw			
16	W10465869	Spring, Lamp	33	461967750464	Rod, Push			
			34	241960100002	Sensor, Temperature			
			35	461967510191	Bushing			
			36	461967570351	Spring, Torsion			


MICROWAVE DOOR PARTS

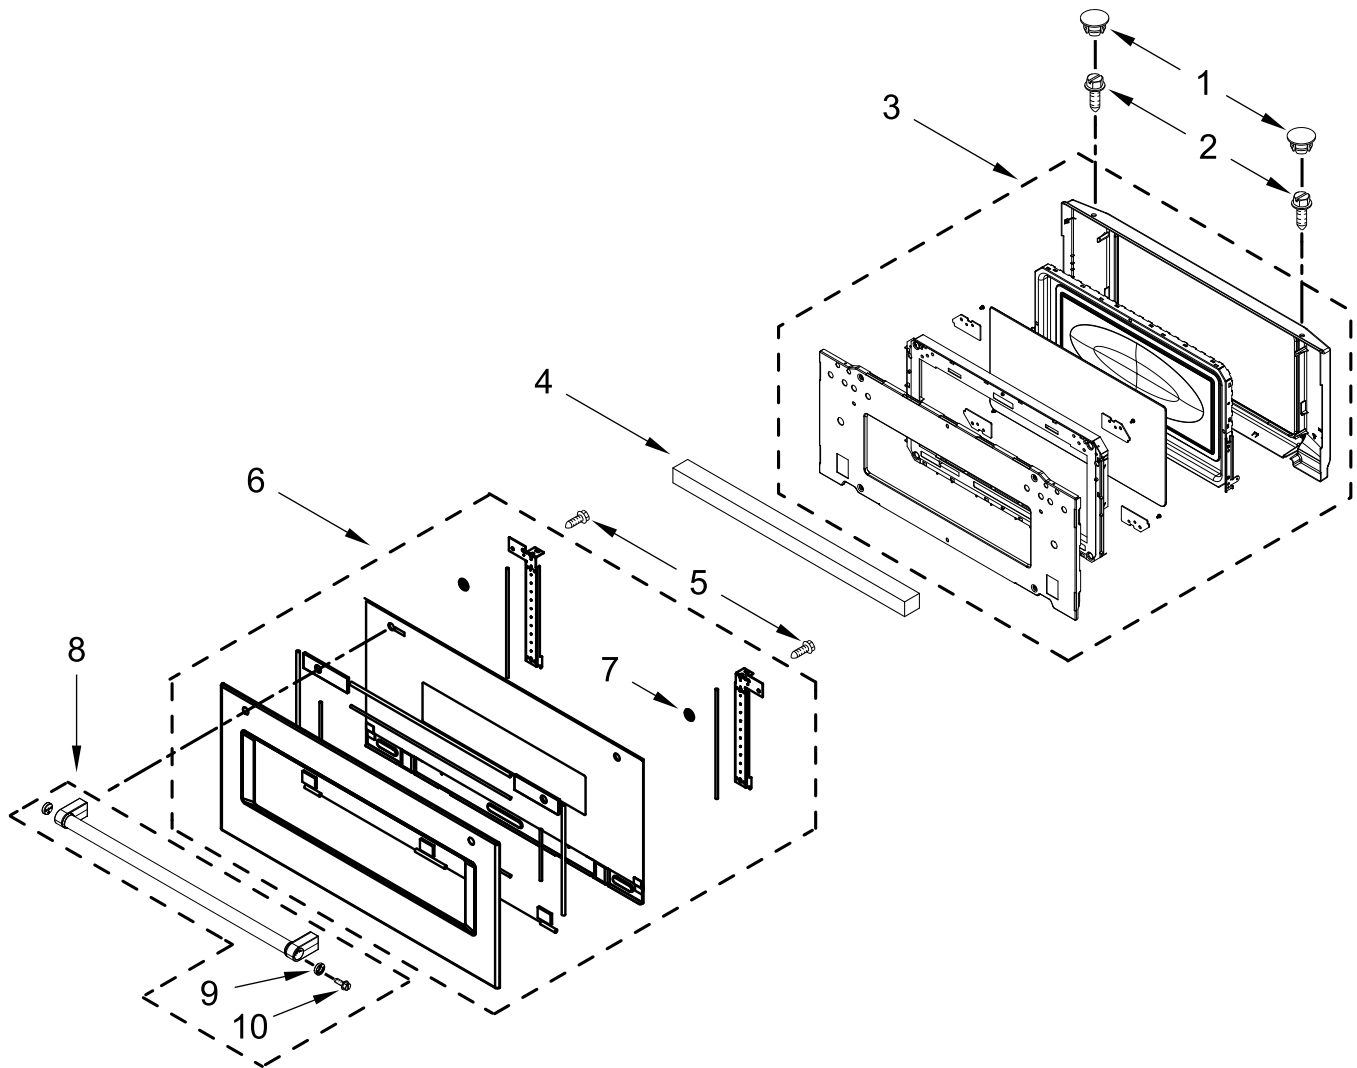

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	5	W11317731	Screw (Black)	7	W10319024	Washer, Door
2	7101P338-60	Screw	6		Door Assembly	8		Handle Assembly
3	W11328749	Inner Door Assembly		W11300495	White		W11241574	Stainless
4	W10359769	Foam, Door Handle		W11300493	Stainless	9	W10551026	Medallion, Handle
				W11300497	Black Stainless	10	W10656499	Screw

INTERNAL MICROWAVE PARTS

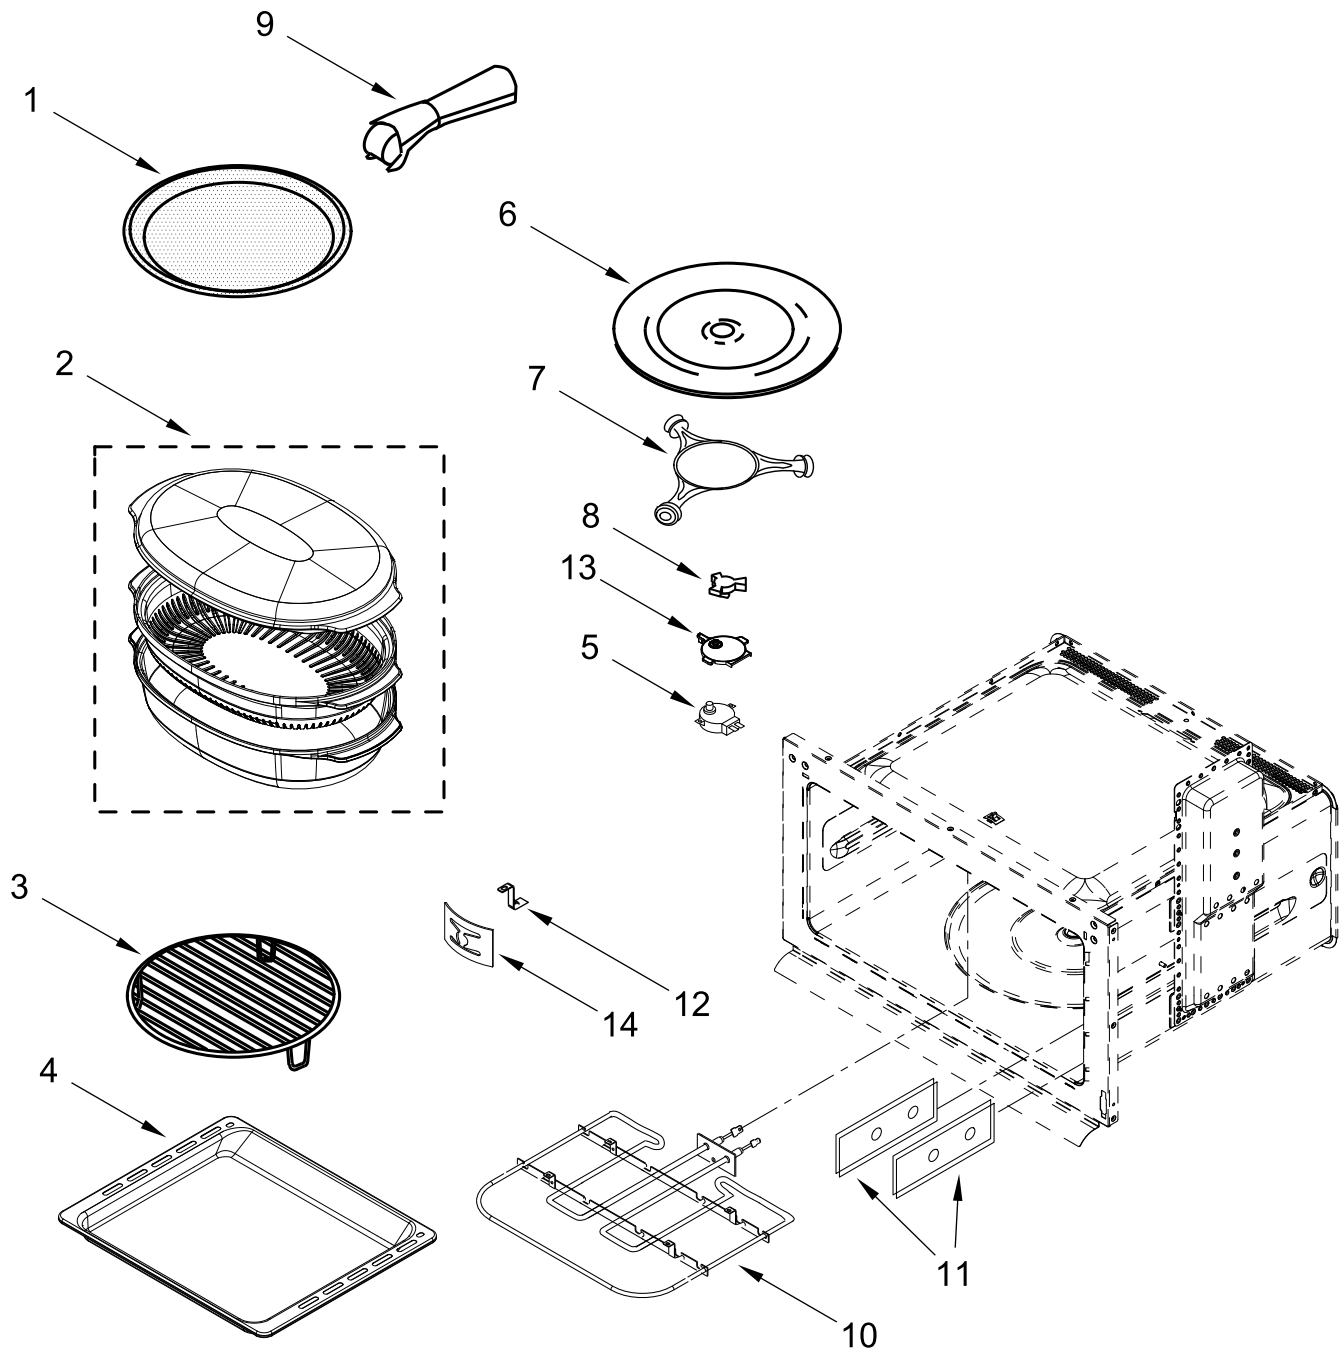

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461968977491	Plate, Crisp	7	W10367316	Ring, Turntable	13	461967753742	Adapter, Turntable Motor
2	W10796139	Steamer	8	W10545578	Drive, Turntable	14	252262898008	Support, Spring Lock Grill
3	W10748279	Rack, Low Convection	9	461968929542	Handle, Pan			
4	W10750839	Plate, Baking	10	W10387651	Element, Grill			
5	461967848971	Motor, Turntable	11	461967451001	Plate, Cover			
6	W11340343	Turntable	12	461967753871	Support, Element			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black

PAINT, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	261900	Citrine White
	830864	Black

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting

ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic