




GAS RANGE

MODELS:

KFDC506JSS04 (Stainless)


BURNER BOX PARTS

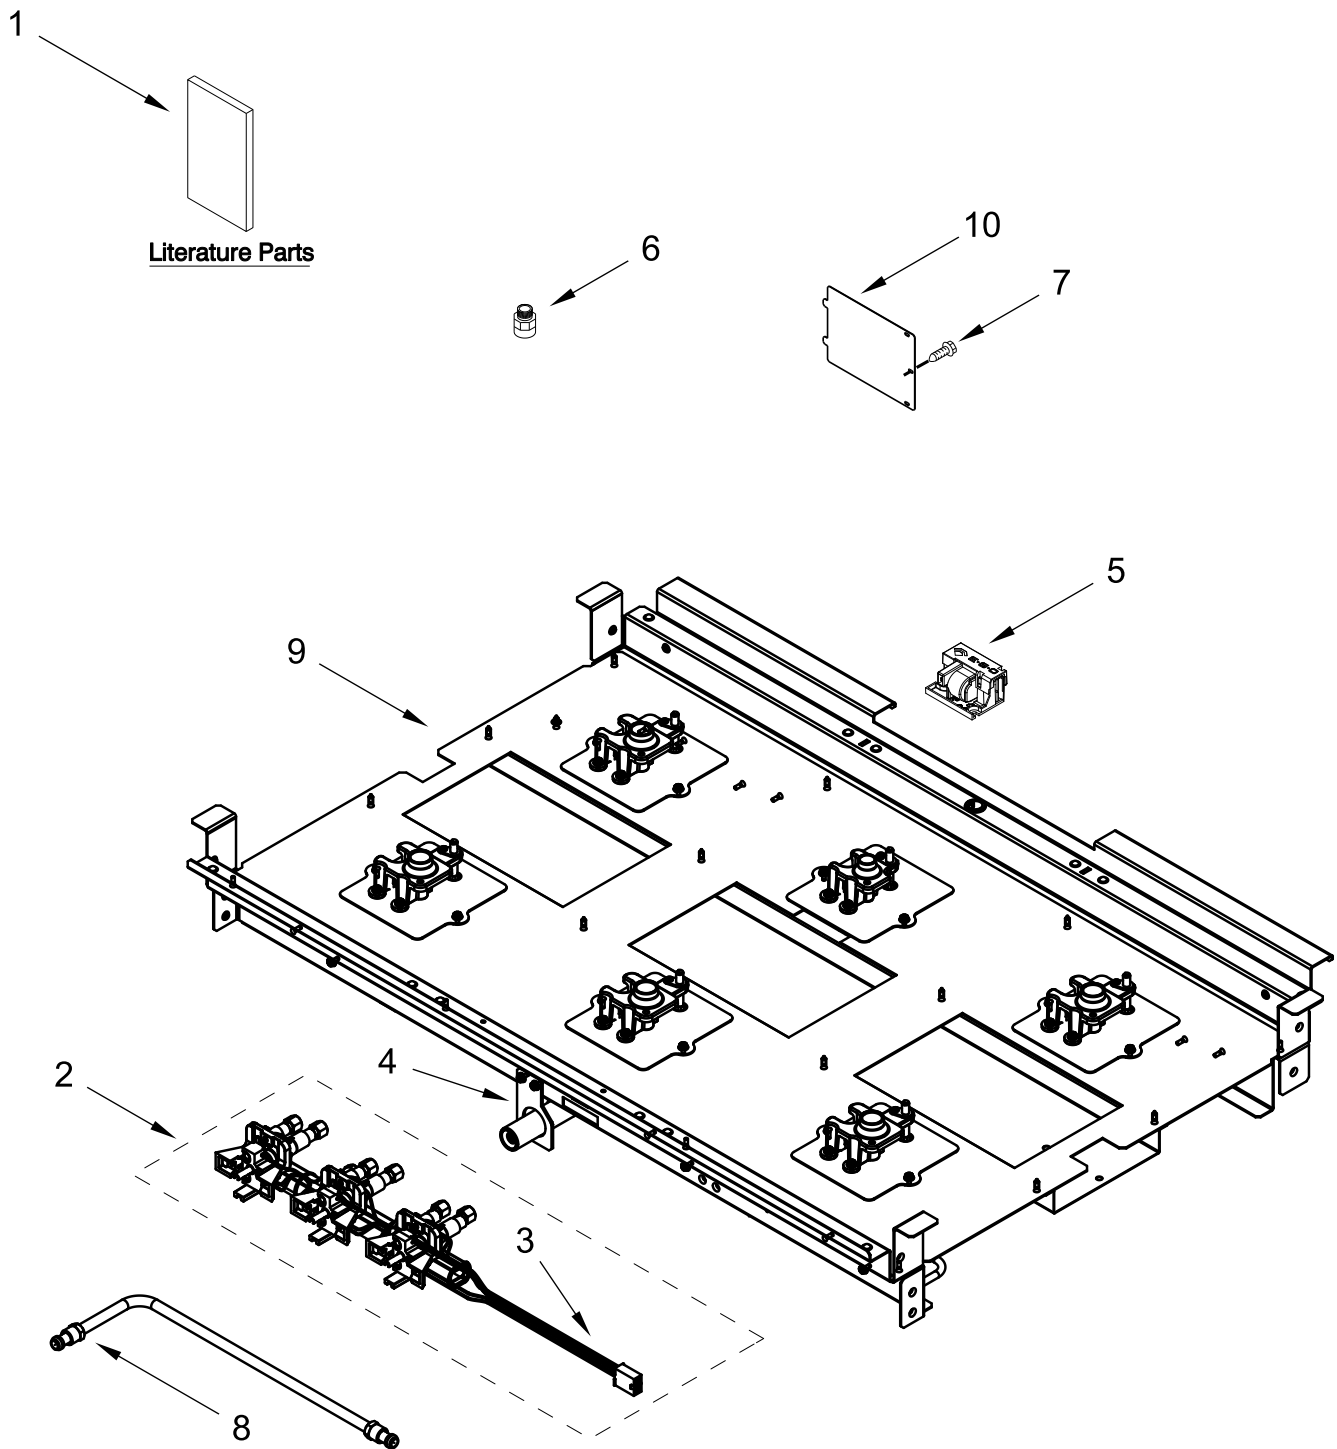

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10903729	Switch, Harness	10	W10115843	Cover, Ignition
	W11508897	Owner's Manual	4	W11121194	Bracket, Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11508889	Installation Instructions	5	W11121317	Module, Spark		W11200303	Harness, Main (36")
	W11184759	Guide, Internet Connectivity	6	4453116	Adapter, Male		W11200332	Harness, Cooktop
	W11508932	Wiring Diagram (Cooktop)	7	7101P426-60	Screw		W10780278	Harness, Door Lock
	W11565460	Wiring Diagram (Oven)	8	W10892073	Tube, Manifold Supply (Left)		W11200325	Harness, Communication
	W11114332	Guide, Quick Start		W10892334	Tube, Manifold Supply (Right)		W11242785	Harness, WIFI
2	W10892995	Assembly, Valve Manifold	9		Box, Burner (Not Serviced)		W11212216	Cord, Power
		(Left Front, Left Rear, Center Rear)					313438	Clip, Harness
	W10893005	Assembly, Valve Manifold					9759877	Retainer, Strain Relief
		(Center Front, Right Front, Right Rear)					4450800	Screw, Grounding
							W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11238042	Kit, LP Conversion


COOKTOP, BURNER AND GRATE PARTS

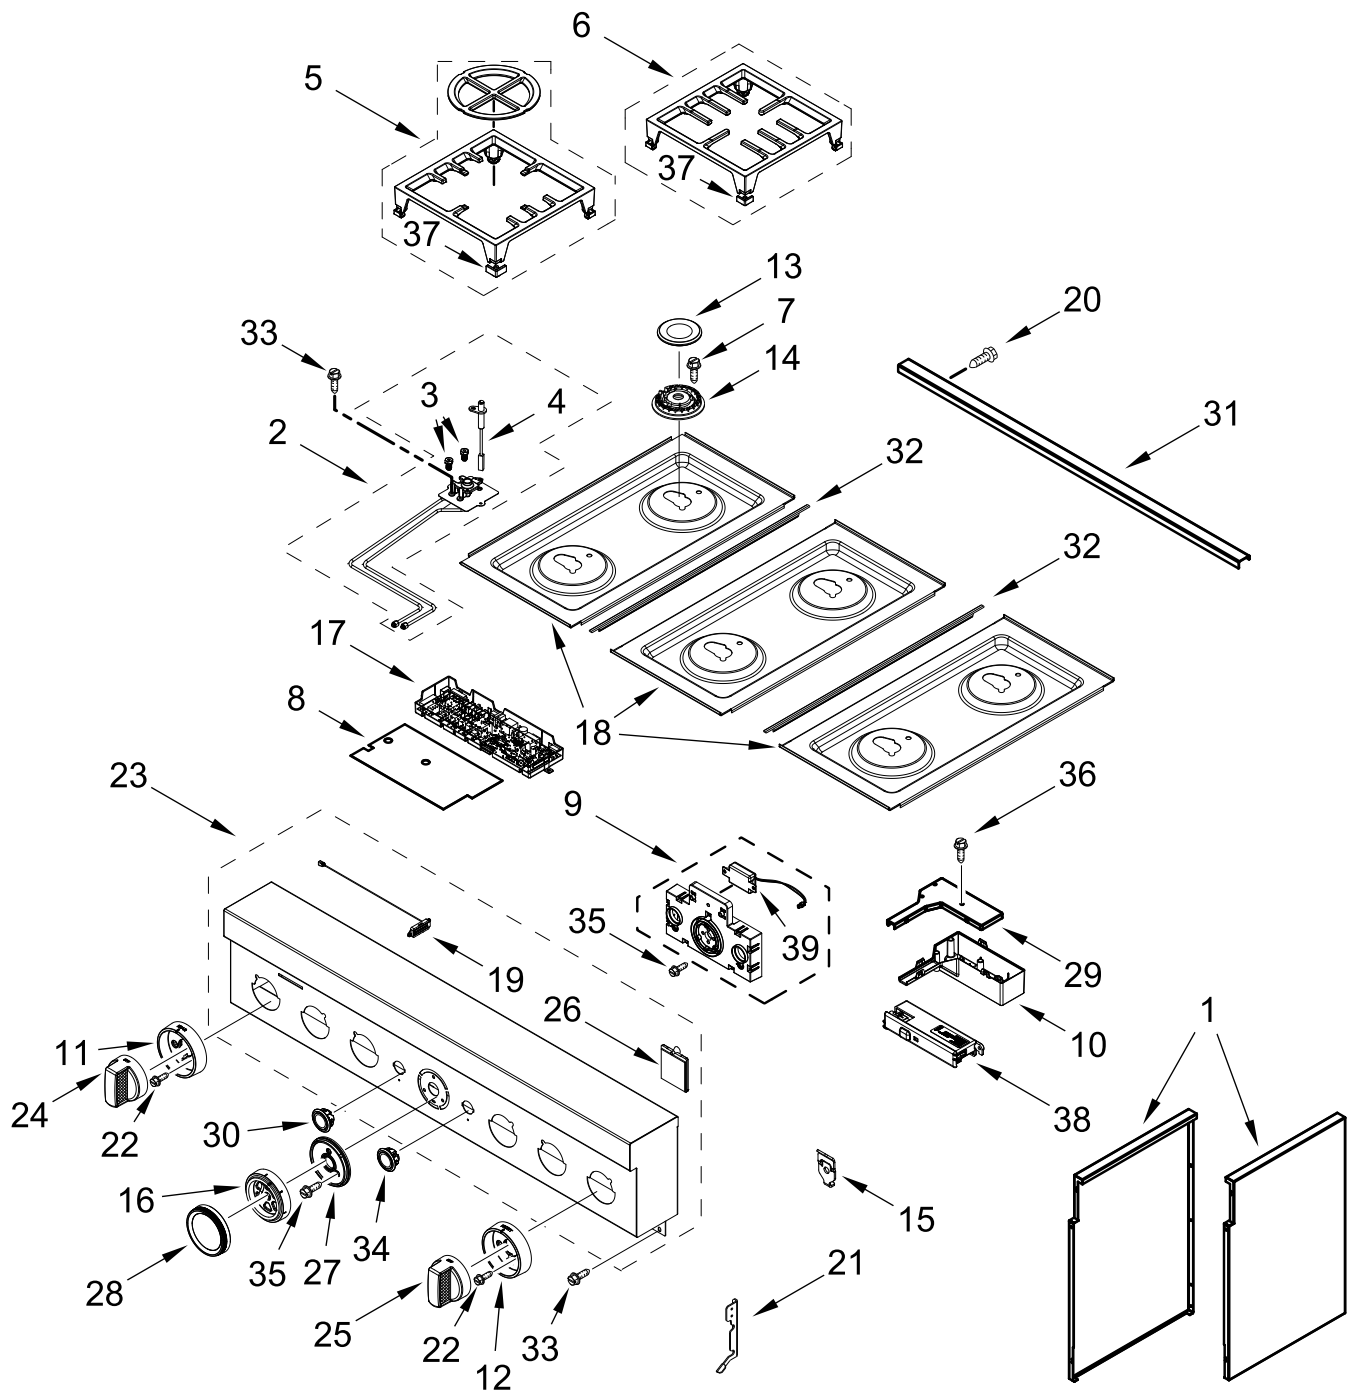

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	5	W11291183	Burner, Grate (With Wok Ring)	21	W10130760	Bracket, Moving Console (Left)
	W11106880	Panel, Cabinet Side (Right)	6	W11291179	Burner, Grate		W10130759	Bracket, Moving Console (Right)
2	W10892774	Assembly, Orifice Holder (Left Front)	7	W11323261	Screw (8-18 X 1 in)	22	W11328357	Screw
	W10892492	Assembly, Orifice Holder (Left Rear)		W11323309	Screw (8-18 X 1/2 in)	23	W11700785	Panel, Console
	W11159467	Assembly, Orifice Holder (Center Front)	8	W11281269	Barrier, Appliance Manager	24		Knob, Single
	W10892725	Assembly, Orifice Holder (Center Rear)	9	W11436332	Interface, User		W10912166	Stainless Knob, Dual
	W10892731	Assembly, Orifice Holder (Right Front)	10	W11205795	Cover, WIFI Outer	25	W10883172	Stainless
	W10892477	Assembly, Orifice Holder (Right Rear)	11	W10883433	Bezel (Rear Burners)	26	W10896366	Assembly, Light Pipe
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	12	W10881642	Bezel (Front Burners)	27		Bezel, Oven
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Front)	13		Cap, Burner		W11500871	Stainless
	W10892419	Orifice, Main (15K) (Left Rear, Center Front, Right Rear)		W11121390	Black (Includes 6)	28		Knob, Oven Temperature
	W10892438	Orifice, Simmer (5K) (Center Rear)	14	W10891746	Spreader, Flame (High)		W11500868	Stainless
4	W11238757	Igniter (Left Front, Right Front)			(Left Front, Right Front)	29	W11205794	Cover, WIFI Inner
	W10892340	Igniter (Center Front, Center Rear)		W10891974	Spreader, Flame (Low)	30	W11241511	Button Assembly, Oven Light
	W11114379	Igniter (Left Rear, Right Rear)			(Left Rear, Center Front, Right Rear)	31	W11156416	Trim, Island
				W10891978	Spreader, Flame (AUX) (Center Rear)	32		Trim, T-Strip
			15	W11036559	Spring Clip, Range		W10271524	Black
			16		Knob, Oven Mode	33	7101P426-60	Screw
				W11500863	Stainless	34	W11241510	Button Assembly, Oven Start
			17	W11100280	Manager, Appliance (Powermax)	35	3400814	Screw
			18		Panel, Cooktop	36	7101P624-60	Screw
				W11038235	Black (Left)	37	W11042504	Bumper, Grate
				W11038257	Black (Center)	38	W11110768	Assembly, WIFI Module
				W11038248	Black (Right)	39	W10568405	Assembly, Speaker
			19	W11130078	Antenna, WIFI			
			20	7101P338-60	Screw			


CHASSIS PARTS

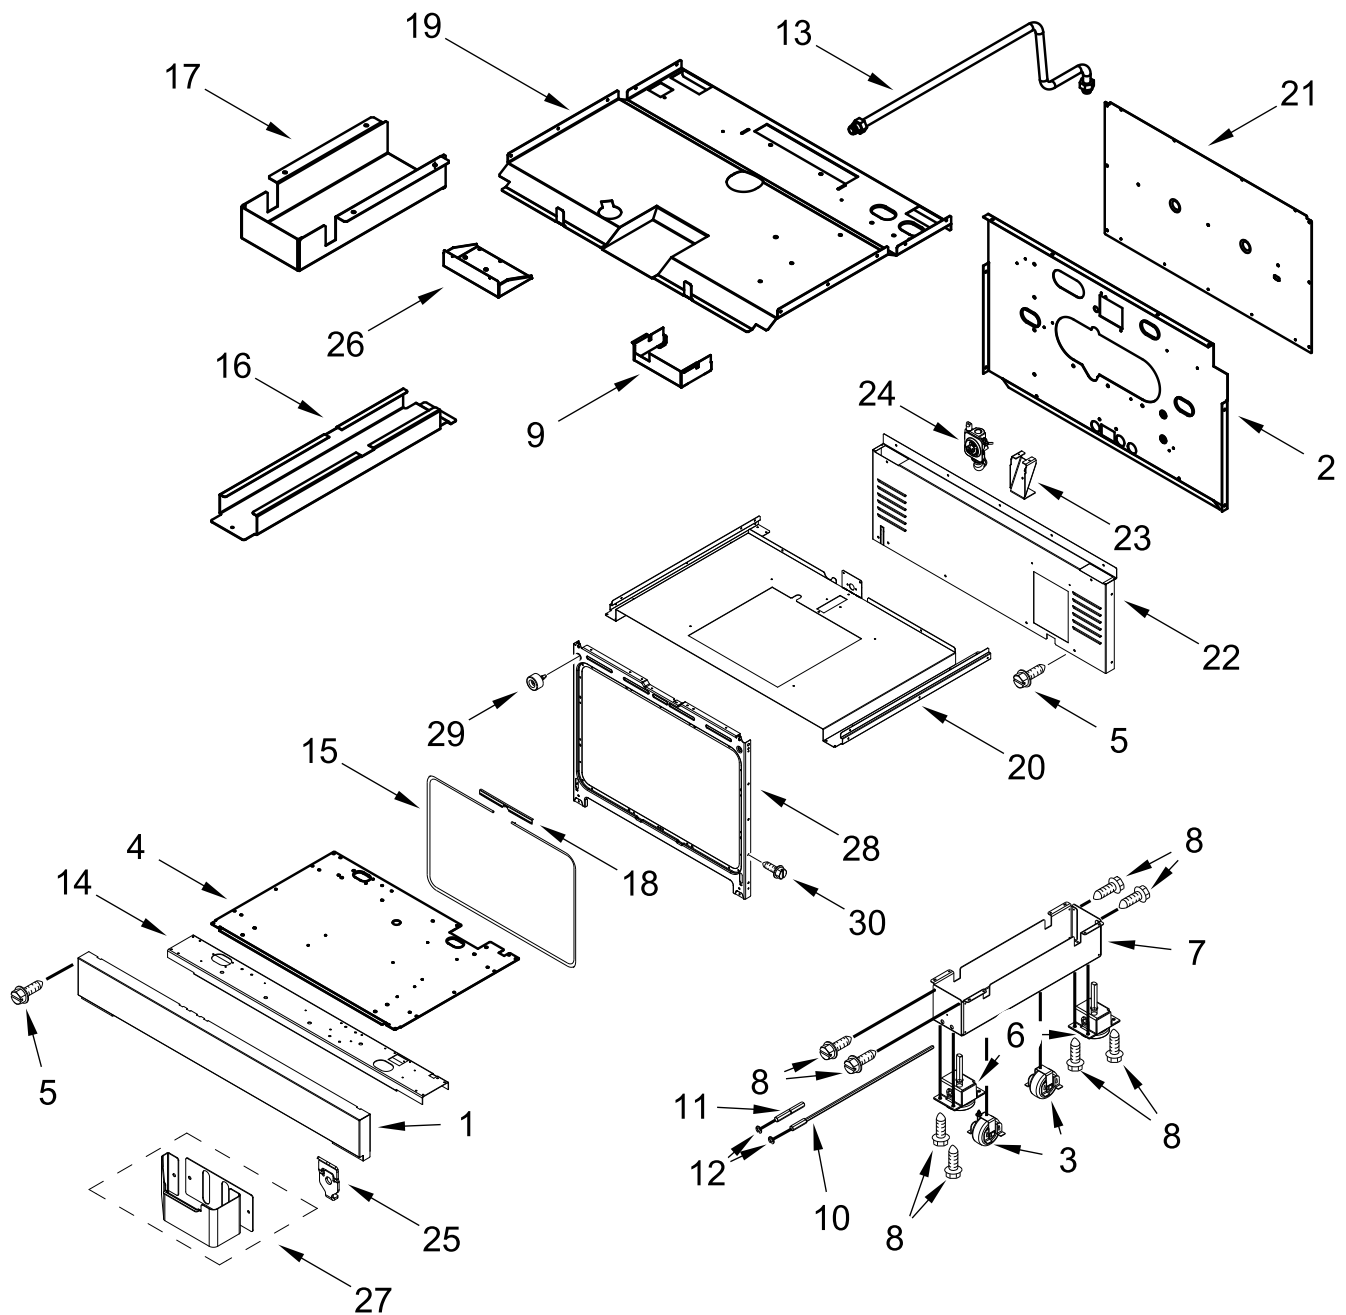

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11697033	Kickplate	13	W11106963	Tube, Pressure Regulator	23	W11096823	Bracket, Pressure Regulator
2	W11324988	Back, Chassis	14	W11087493	Support, Channel	24	W10449140	Regulator, Pressure
3	W10138054	Assembly, Roller	15	W11115330	Gasket, Oven (36 in)	25	W11036559	Spring Clip, Range
4	W11095572	Duct, Bottom (36 in)	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
5	7101P426-60	Screw	17	W11368831	Channel, Wire	27	W11199181	Cover, Foot (Left)
6	9760860	Leveler	18	W11362015	Retainer, Gasket (9 in Long)		W11199178	Cover, Foot (Right)
7	W10908710	Base, Leveling Leg	19	W11324985	Top, Chassis	28	W11192749	Frame, Front
8	4449743	Screw	20	W11040801	Chassis, Bottom	29	W10351278	Bumper and Screw
9	W11369237	Cabinet, Appliance Manager	21	W11103333	Panel, Back Top	30	3196560	Screw
10	W10115869	Shaft, Long	22	W11034133	Panel, Back Bottom			
11	W10115793	Shaft, Short						
12	489504	E-Ring						


OVEN PARTS

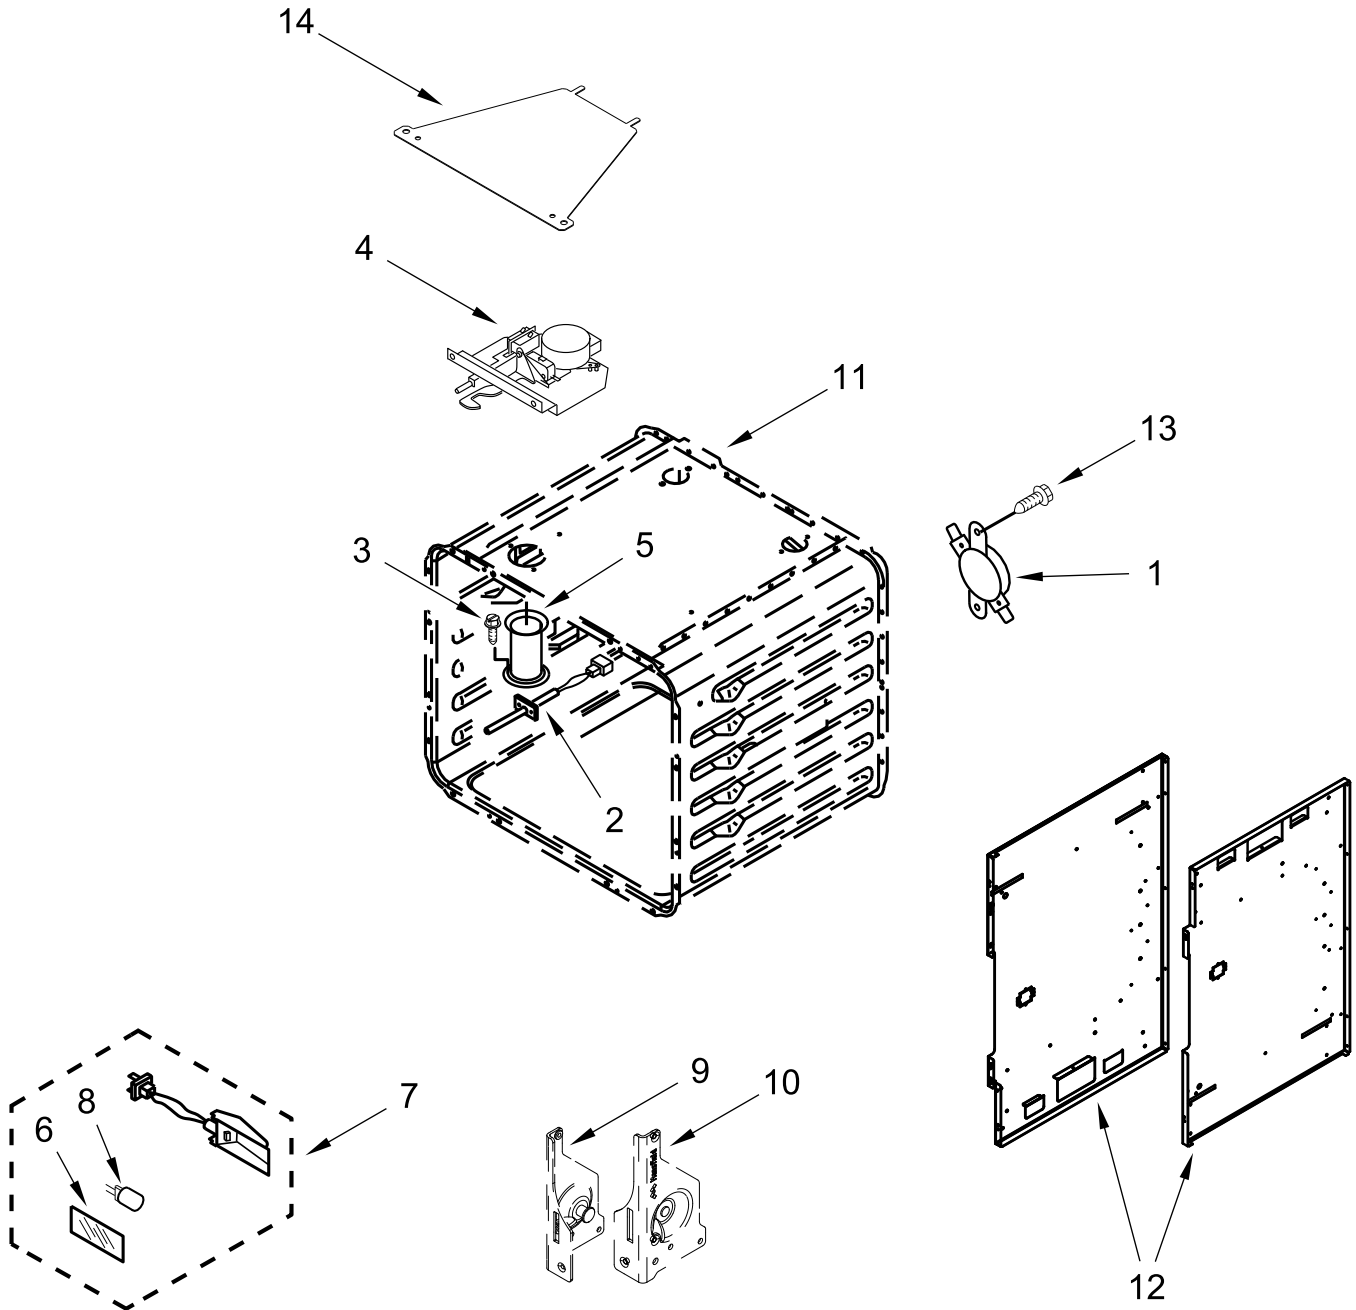

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	9		Receiver, Hinge (Not Serviced)	13	7101P426-60	Screw
2	W10622170	Probe, Sensor				14	W10160858	Cover, Latch
3	3196176	Screw	10		Receiver, Hinge (Not Serviced)			FOLLOWING PARTS NOT ILLUSTRATED
4	W10830016	Latch, Motorized					W10282811	Insulation, Wrap
5	W11290663	Tube, Vent	11		Liner, Oven (Not Serviced)		W10282813	Insulation, Back, 36 In
6	W10169756	Lens, Light					3400968	Nut
7	W11223932	Assembly, Oven Light	12	W11102297	Chassis, Side (Left)			
8	W10169757	Bulb, Light		W11102296	Chassis, Side (Right)			


VENTING PARTS

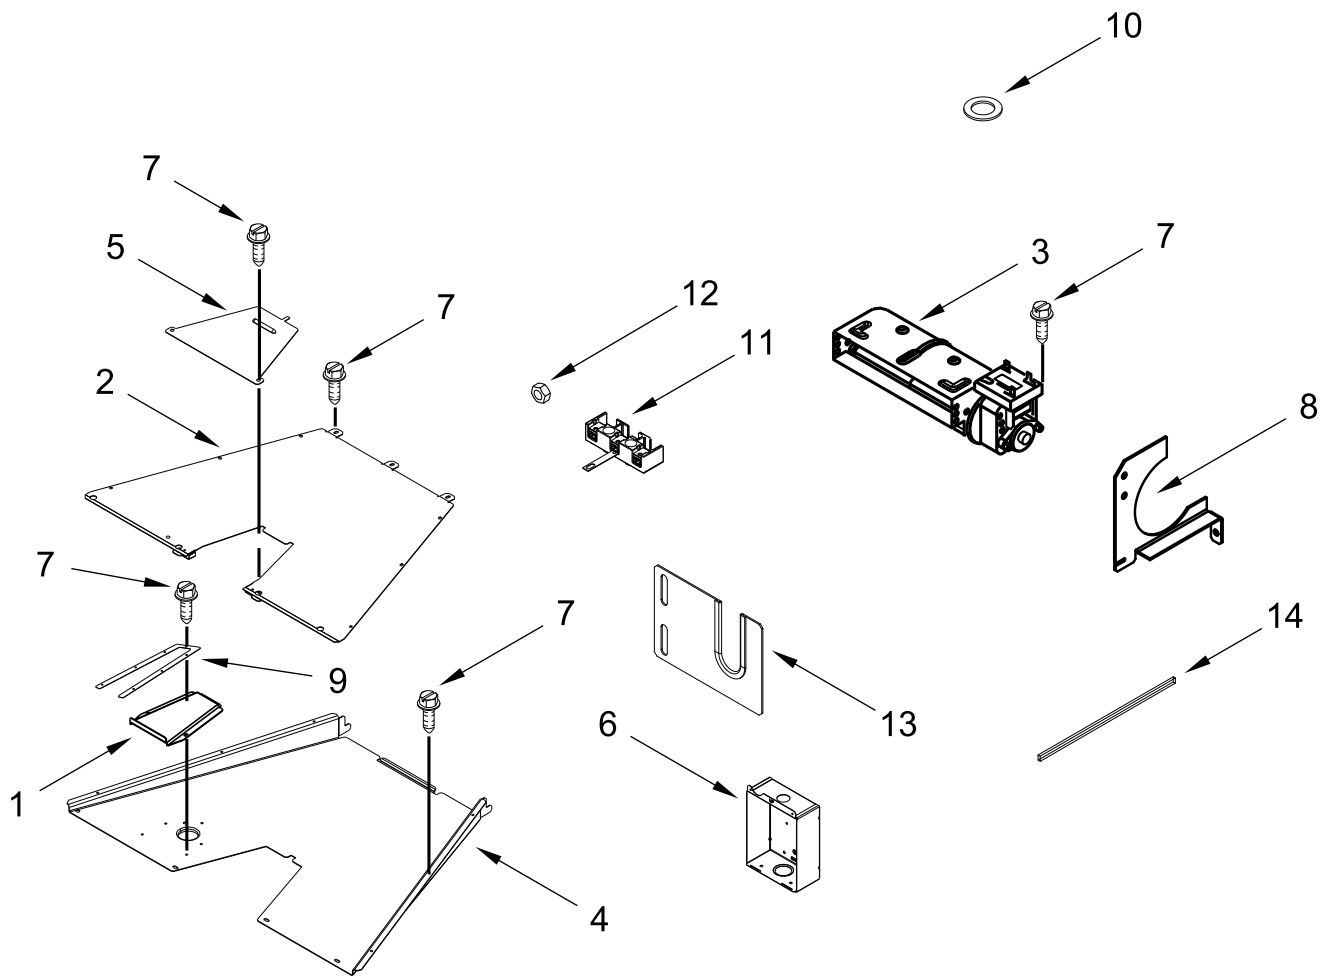

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30 In)	5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney
2	W11105223	Vent, Cooling Top (30 In)	6	W11353392	Box, Terminal	11	9761958	Block, Terminal
3	W11200129	Blower	7	7101P426-60	Screw	12	112432	Nut, Hex
4	W11105222	Vent, Cooling Bottom (30 In)	8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel
			9	W10270397	Seal, Vent Slope (30 In)	14	W10919715	Gasket


OVEN DOOR PARTS

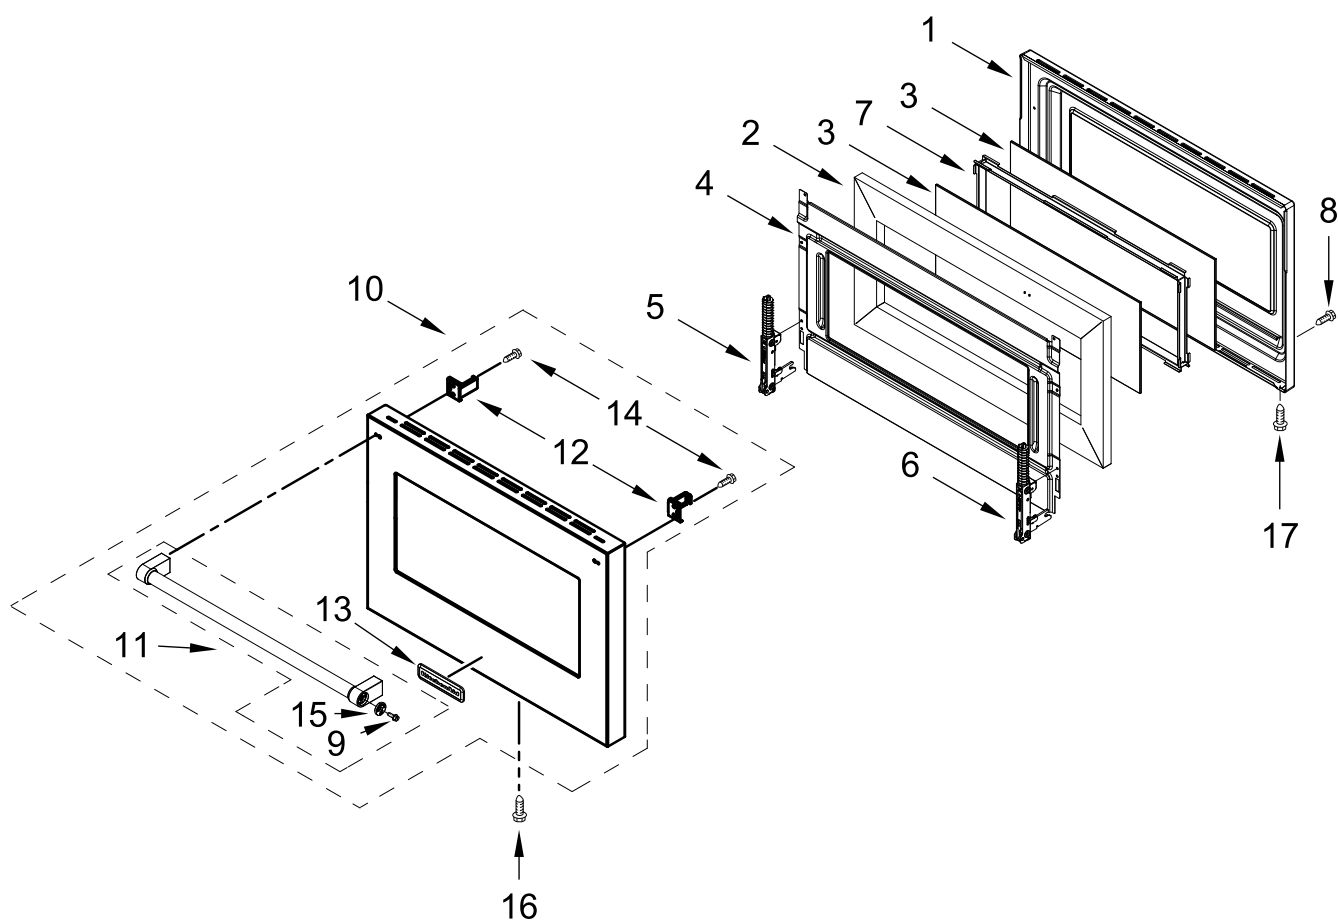

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	8	W10898280	Screw	14	W10276043	Screw
2	W10884823	Insulation, Door	9	W10656499	Screw	15	W11361073	Medallion, Handle
3	W11036791	Glass, Inner	10	W11712133	Outer Door Assembly (Includes Handle)	16	W10162096	Screw
4	W11194820	Retainer, Glass	11	W11362710	Door Handle Assembly	17	W10607120	Screw
5	W11096978	Hinge, Door (Left)	12	W11197830	Bracket, Handle			
6	W11096977	Hinge, Door (Right)	13	W10518672	Badge			
7	W11194814	Frame, Glass						

INTERNAL OVEN PARTS

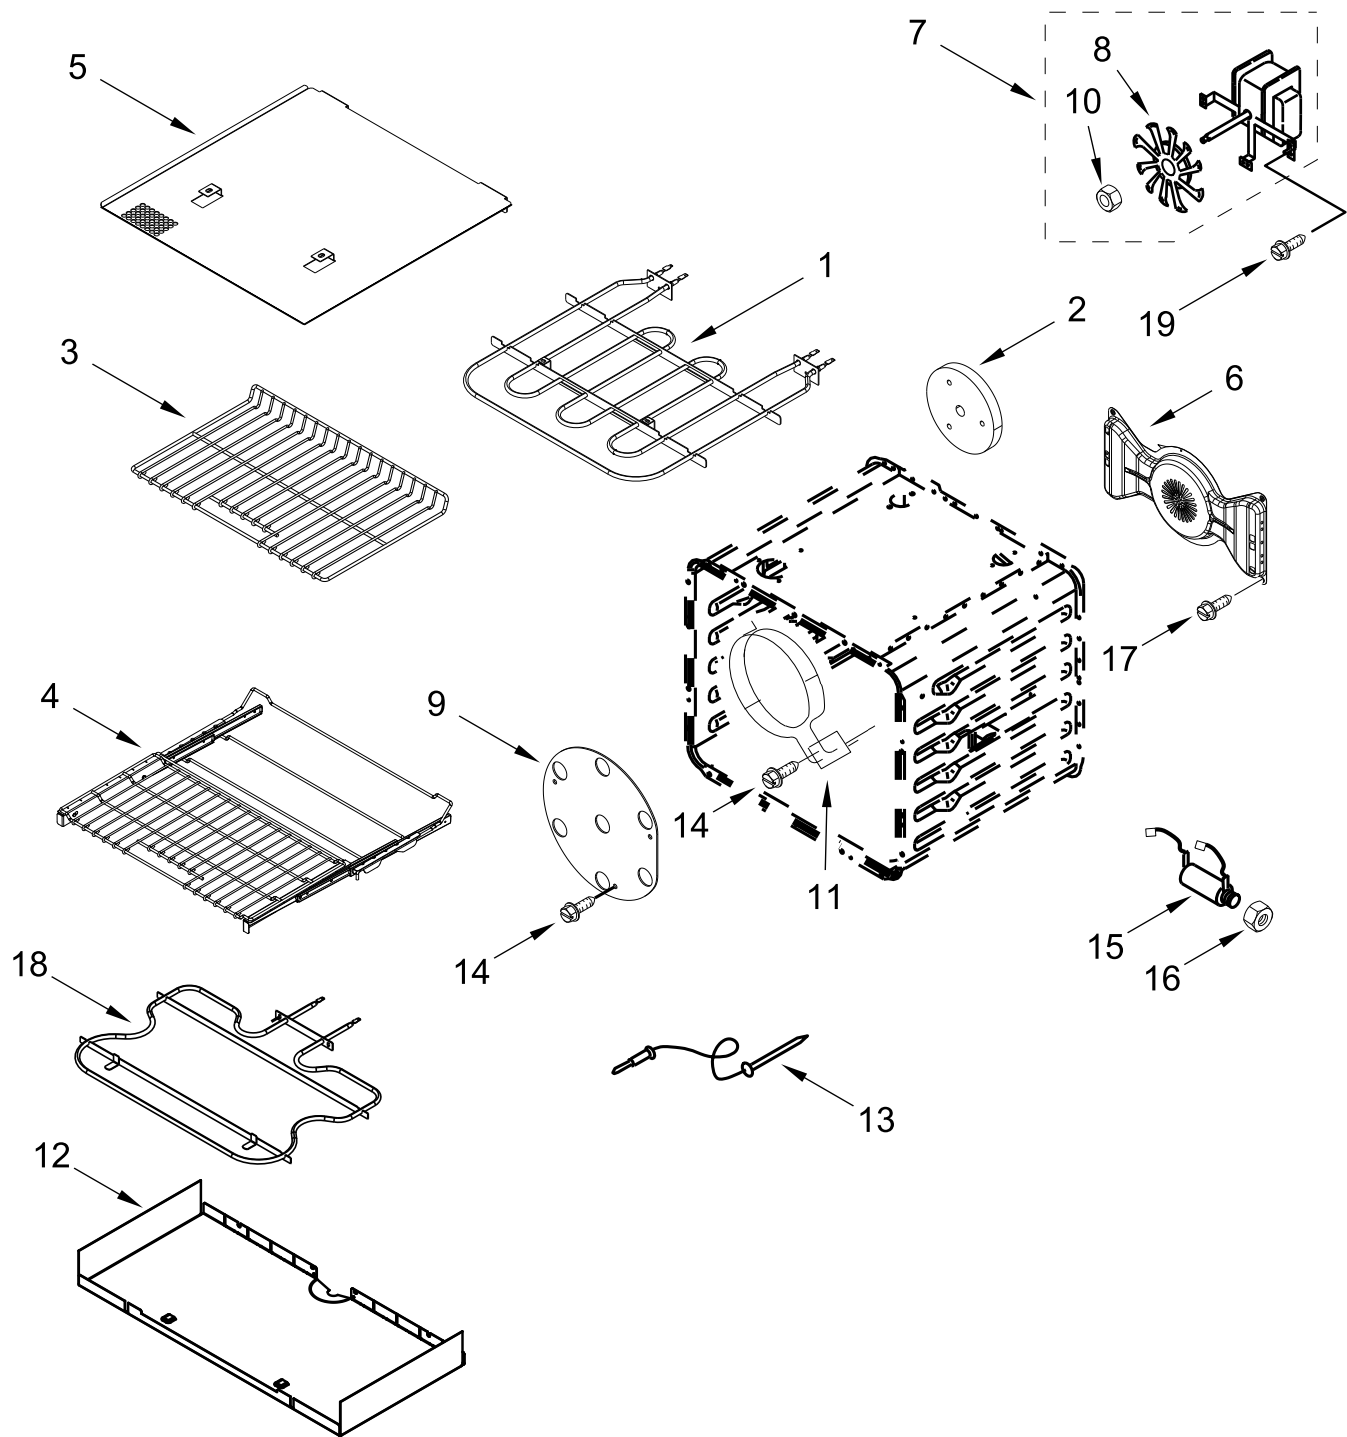

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10115994	Element, Broil	9	W10261523	Plate, Fan	17	W10739592	Screw
2	W10282821	Insulation, Convection Cover	10	W10631504	Nut, Acorn (LH)	18	W10115992	Element, Hidden Bake
3	W10822069	Rack, Oven	11	9762242	Element, Convection Steam	19	W10720084	Screw
4	W11496903	Rack, Sliding Oven	12	W11106922	Tray, Hidden Bake			
5	W10160856	Shield, Element Broil	13	9755542	Probe, Temperature			
6	W11212180	Baffle, Convection	14	4449154	Screw			
7	W10722667	Fan, Convection	15	9755543	Jack, Meat Probe			
8	W10631503	Blade, Fan	16	9755546	Nut, Hidden			

OPTIONAL PARTS (NOT INCLUDED)

Illus.

No.

Part No.

Description

ACCESSORY PARTS

W10355051 Cleaner, Cooktop

W10115776 Backguard (36 in)

Backsplash

W10285448 36-in With Shelf

Medallion, Handle

W11368841BOBlack ANO

W11368841RERed ANO

W11368841MPMarscapone (Cream)

W11368841NENew Gold

W11368841CF Copper

W11368841BNBronze

W11368841DDDDark Blue