




**ELECTRIC RANGE
30" FREESTANDING CONVECTION**

MODELS:

KFEG500EWH7 (White)


COOKTOP PARTS

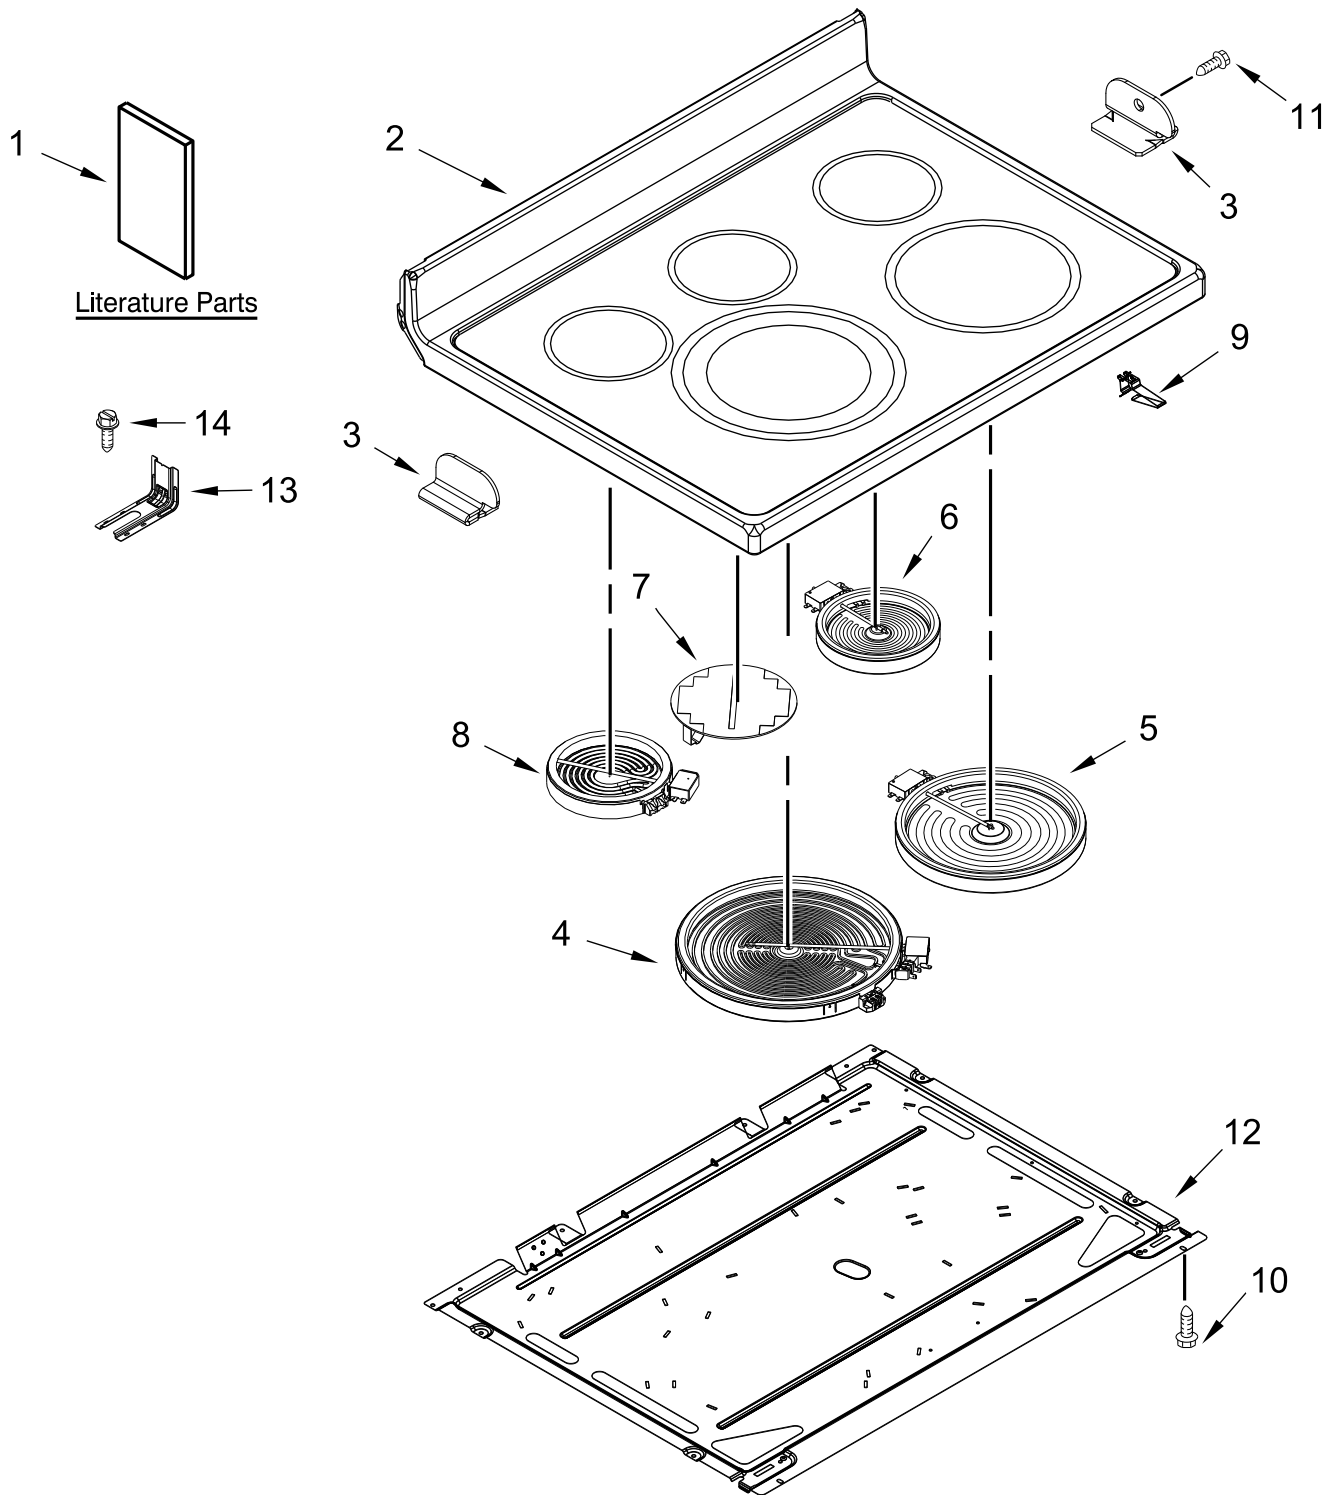

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000 and 1400W)	12	W10691223	Pan, Radiant Element
	W11509613	Use and Care Guide			(Right Front)	13	W11379945	Bracket, Anti-Tip
	W11489748	Quick Start Guide	6	W10248261	Element (1200W)	14	7101P485-60	Screw, Anti-Tip Kit
	W11393917	Tech Sheet			(Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
2		Cooktop	7	W10799048	Element, Warm Zone			
	W10697350	White			(Center Rear)		W11454490	Harness, Main
3	W10607641	Bracket, Cooktop (Left)	8	W10342780	Element (1300W)		W11188424	Harness, Cooktop (Left)
	W10607642	Bracket, Cooktop (Right)	9	W11600012	Spring, Element		W11134550	Harness, Cooktop (Right)
4	W10711900	Element (3000W) (Left Front)	10	3196169	Screw		W11212183	Harness, Sensor
			11	3196172	Screw		W11134592	Harness, Warm Zone


CONTROL PANEL PARTS

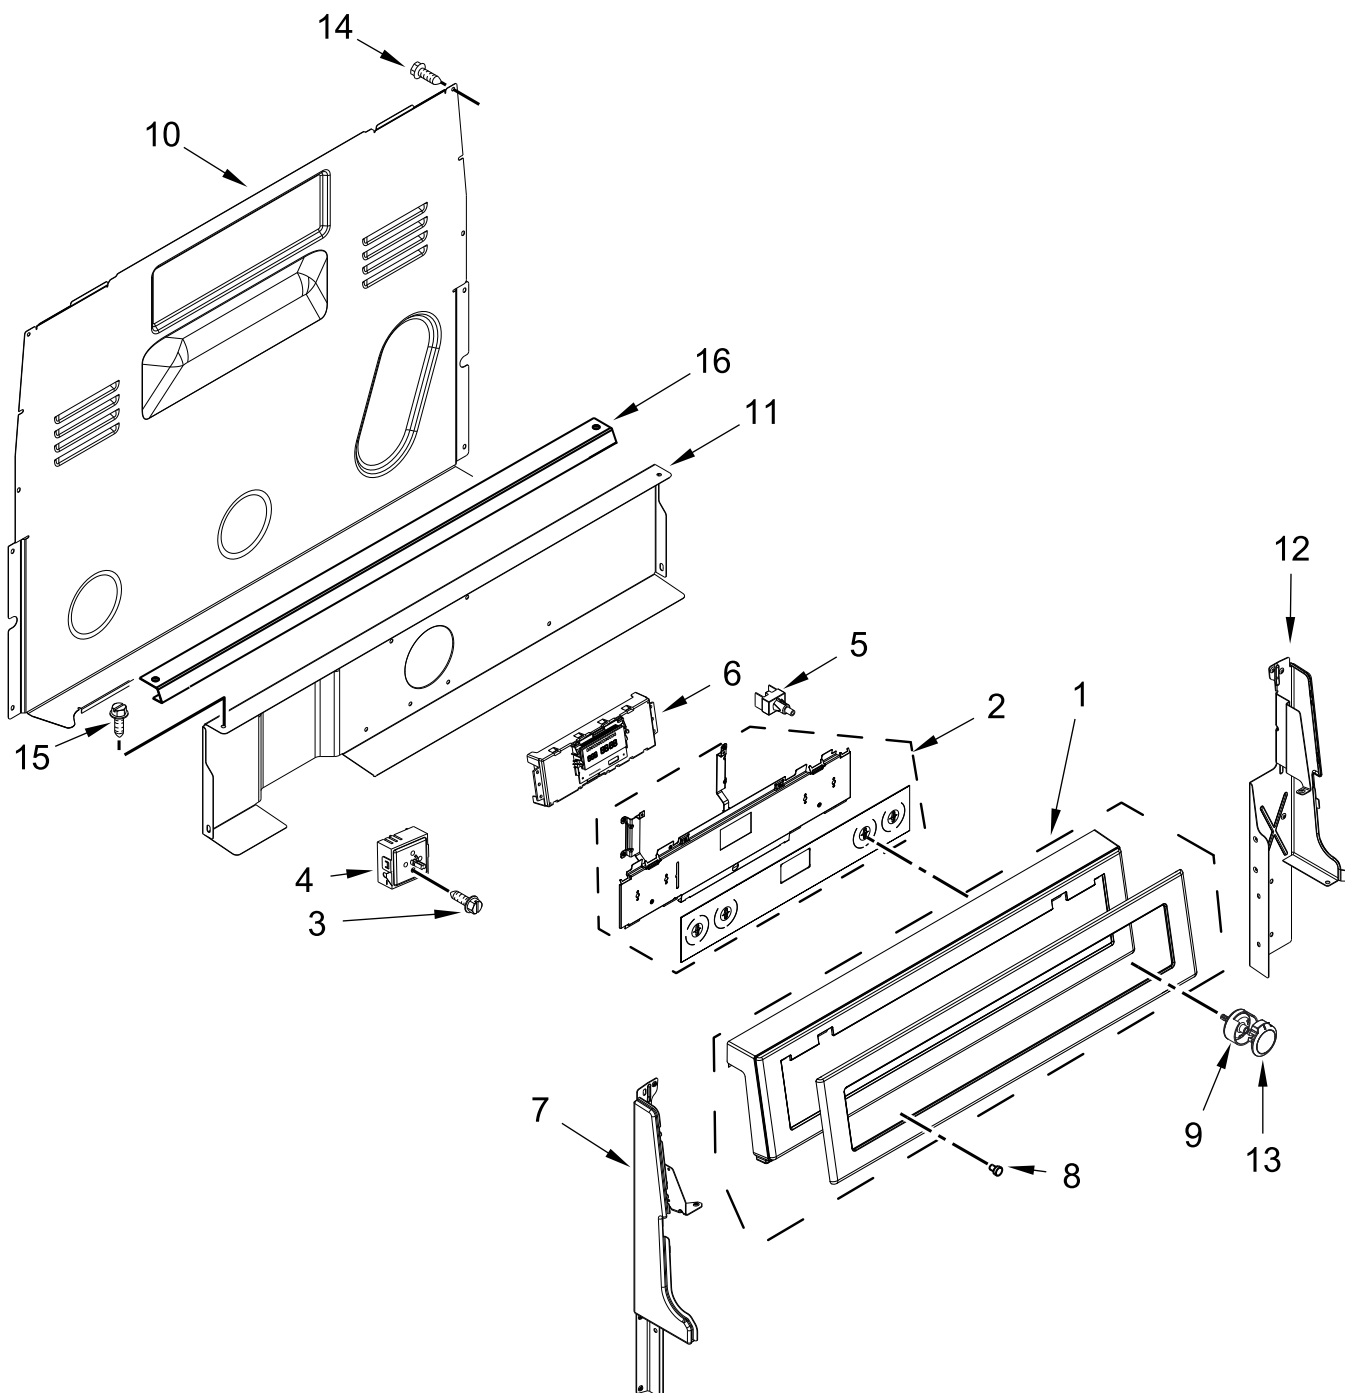

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	5	8523265	Light, Indicator (125V)	14	3196178	Screw
	W10645847	White	6	W10894863	Control, Maxwell	15	W10362924	Screw
2		Assembly, Active Overlay	7		Endcap	16	W10525121	Bracket, Console Mounting
	W11527493	White		W11130371	White (Left)			
3	9780274	Screw	8	3196068	Lens, Indicator			
4	W10437092	Switch, Infinite	9	W10645811	Bezel, Knob			
		(Left Front and Right Front)	10	8272473	Cover, Upper Rear			
	W10437094	Switch, Infinite	11	W10134247	Shield, Heat			
		(Left Rear)	12		Endcap			
W10578768	Switch, Infinite			W11130378	White (Right)			
		(Right Rear)	13		Knob			
				W10823535	Stainless			


CHASSIS PARTS

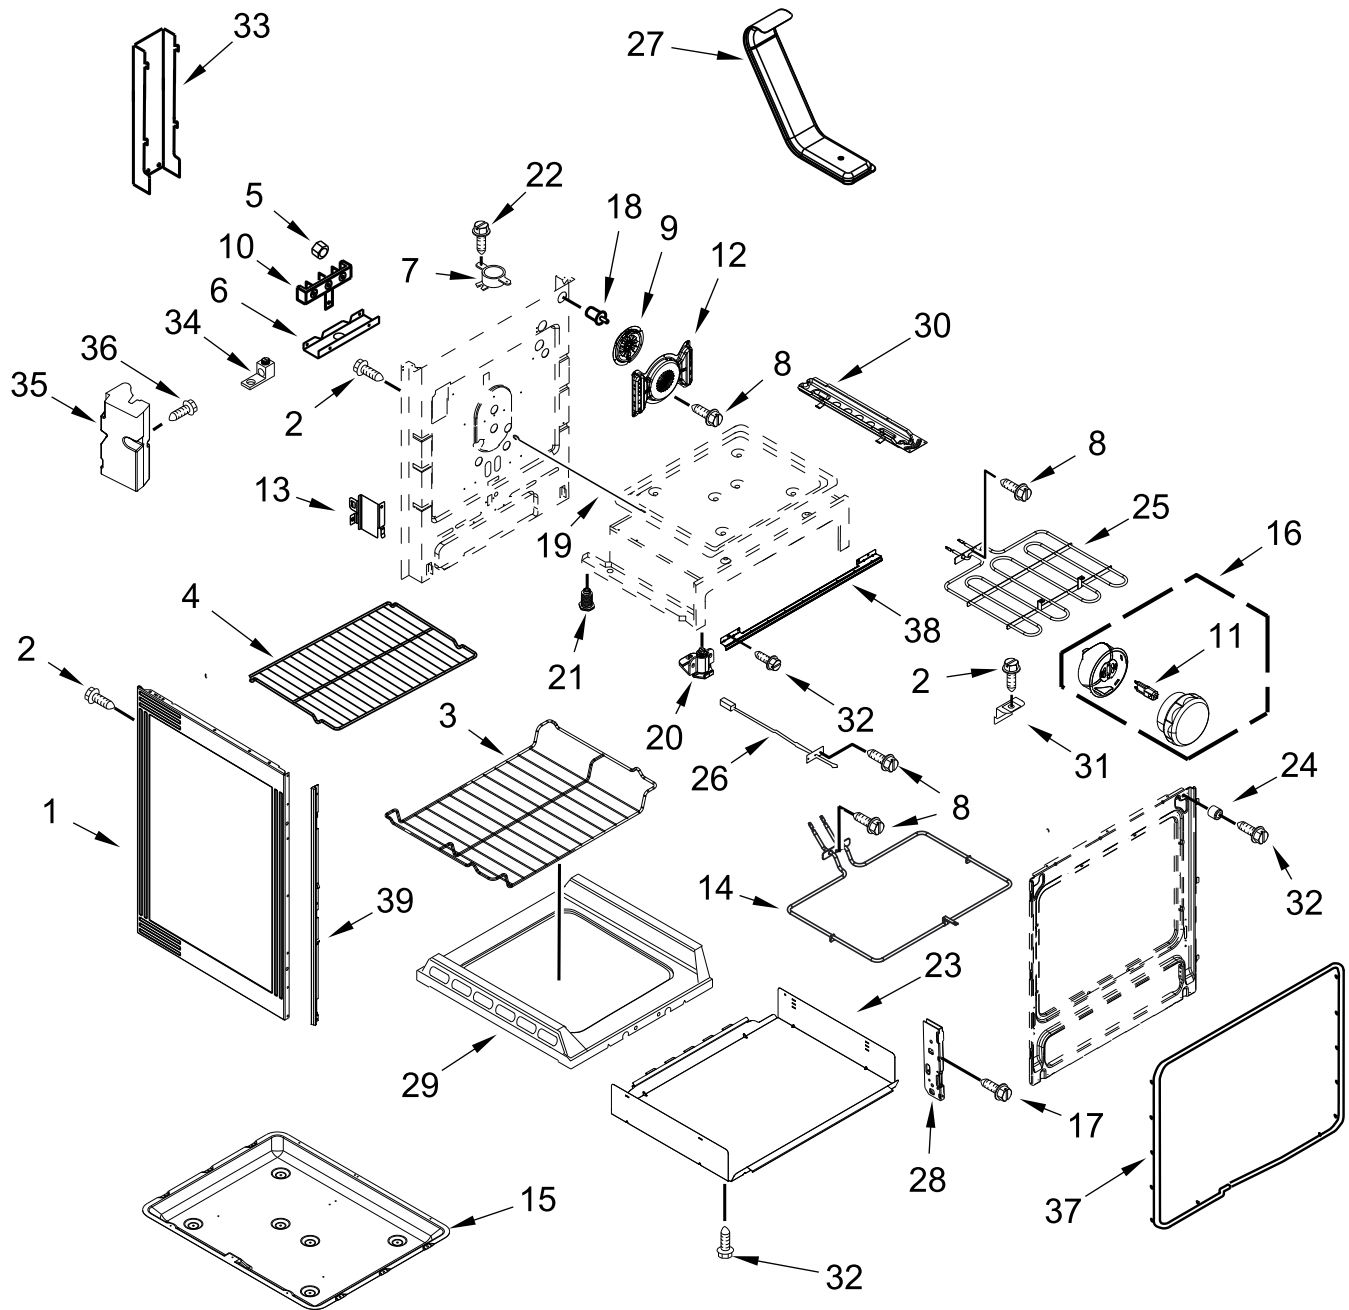

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Side	16	W11634772	Light Assembly	32	3196560	Screw
	W10575396	White	17	W10031780	Screw	33	W10326122	Cover, Terminal Block
2	3196172	Screw	18	W11511828	Switch, Door	34	W10281322	Kit, Bare Wire Adapter Block
3	W10289145	Rack, Oven (Gull-Wing)	19	W10273192	Rod, Door Switch	35	W10910404	Counterweight
4	W10531060	Rack, Oven	20	W10341186	Front Foot Assembly	36	W11034869	Screw
5	3400029	Nut	21	W10058460	Foot, Leveling	37	W11491752	Gasket, Door
6	3186034	Bracket, Service	22	3196172	Screw	38	W11620269	Bracket, Front Frame
7	3196548	Fuse, Thermal	23	W10726740	Shield, Heat	39	W11510560	Barrier Rail, Rubber (Left and Right)
8	W10362924	Screw	24	9758701	Spacer, Door			FOLLOWING PARTS NOT ILLUSTRATED
9	W10756304	Assembly, Convection	25	W11095929	Element, Broil			
10	W10245259	Block, Terminal	26	W10586204	Sensor			
11	W10571723	Bulb, Halogen 40 Watts	27	W10134285	Tube, Vent			
12	W10346153	Baffle, Full Convection	28	W10289077	Receiver, Hinge			
13	W10273002	Bracket, Oven Support	29	W10774446	Bottom, Oven			
14	W10774342	Element, Bake	30	W10390008	Base Rail Assembly (Left)			
15	W11379357	Bake Pan		W10390007	Base Rail Assembly (Right)			
			31	W10035900	Support, Oven Bottom			
							W10194393	Insulation, Wrap
							W10225524	Insulation, Back
							4820F015-59	Insulation, Strap
							W10225523	Insulation, Bottom


DOOR PARTS

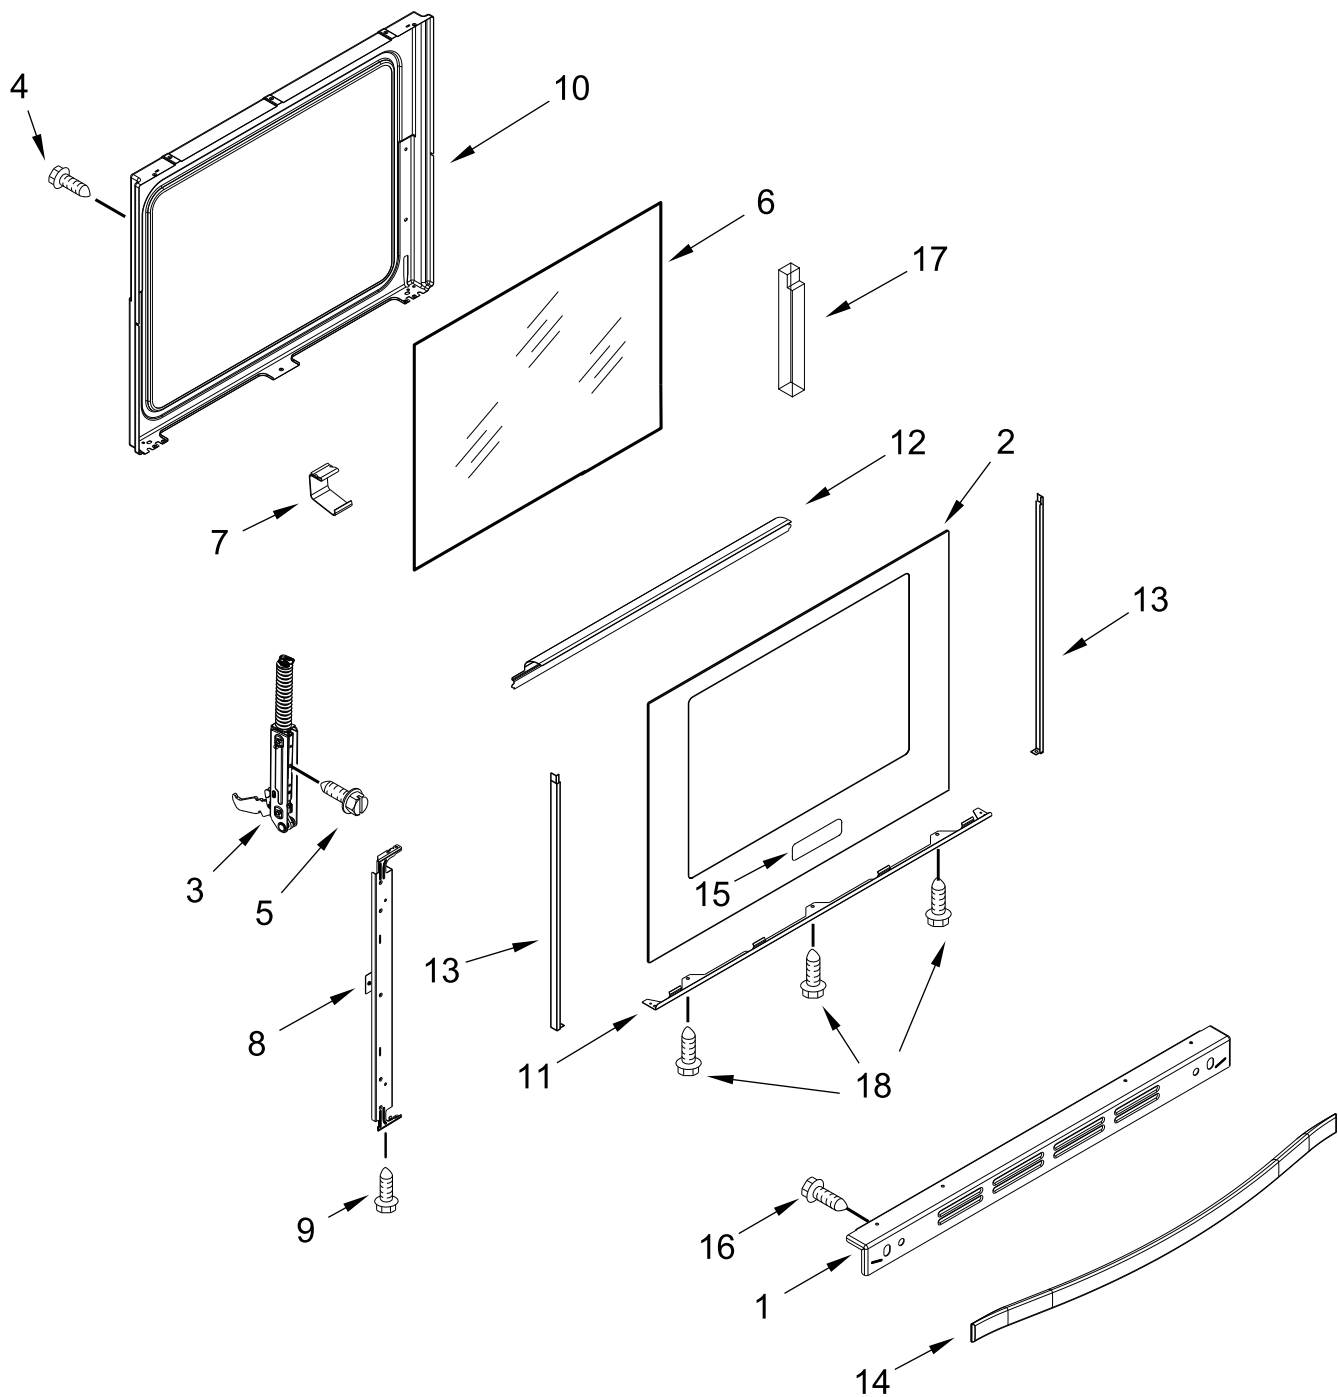

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent	6	W10300487	Glass, Inner	13		Trim, Side
	W10335331	White	7	W10137382	Clip, Panel		W10334003	White
2		Glass, Outer Door	8	W10294851	Rail, Door	14		Handle, Door
	W10495962	White	9	W10241367	Screw		W10551000	Stainless
3	W10440013	Hinge, Door (Active)	10	W10297318	Liner, Door	15	W10518672	Badge
4	W10031790	Screw	11		Trim, Lower	16	W10480830	Screw
5	W10362924	Screw		W10333990	White	17	W10772958	Insulation, Door
			12	W10294853	Bracket, Glass Liner	18	W10327235	Screw

DRAWER PARTS

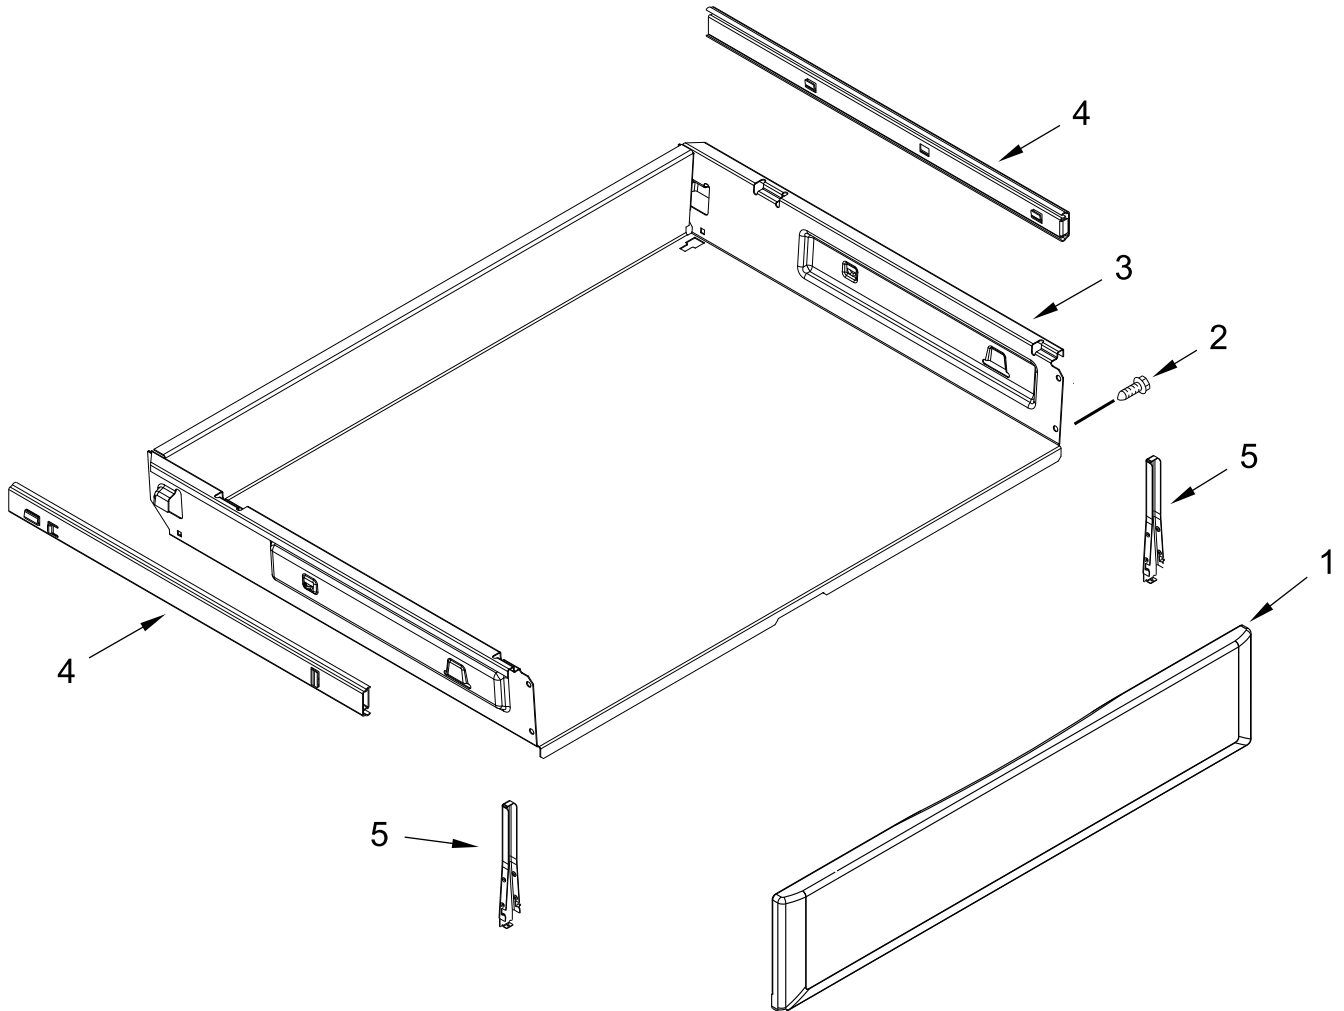

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W11190202	White
2	3196169	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
5	W10318027	Bracket, Drawer

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	350938	Gray Primer
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	W10432019	Alt Cleaning Kit
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	W10205524	Split Oven Rack
	W10289145	Rack, Oven (Gull-Wing)
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting