




ELECTRIC RANGE

MODELS:

WFE525S0JS4 (Stainless)


COOKTOP PARTS

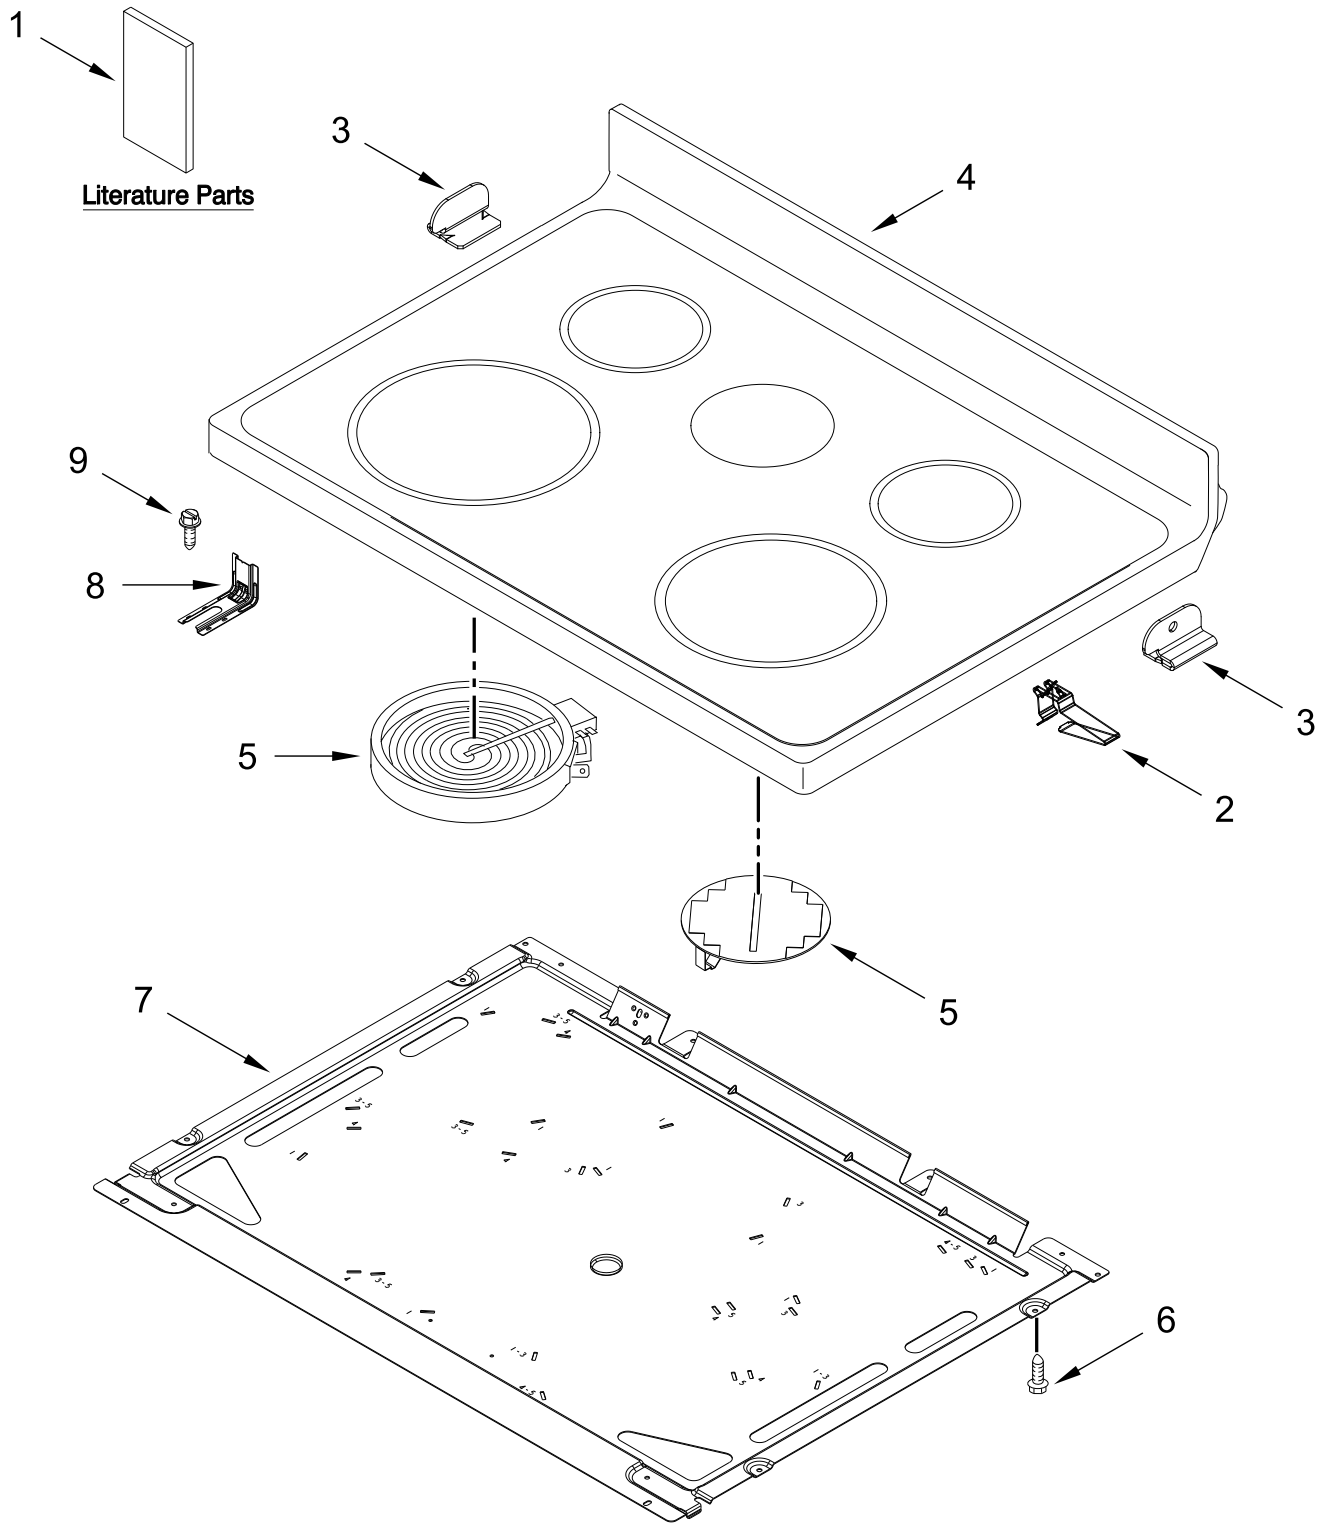

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10275048	Element (3000 and 1400W)	8	W11379945	Bracket, Anti-Tip
	W11435582	Quick Start Guide			(Left Front)	9	7101P485-60	Screw, Anti-Tip Kit
	W11509617	Owners Manual		8273994	Element (1200W)			FOLLOWING PARTS NOT ILLUSTRATED
	W11401737	Tech Sheet			(Left Rear, Right Rear)		W11452622	Harness, Main
2	W11600012	Spring, Element		8273992	Element (2500W)		W11134603	Harness, Cooktop (Left)
3	W10607641	Bracket, Cooktop (Left)			(Right Front)		W11134551	Harness, Cooktop (Right)
	W10607642	Bracket, Cooktop (Right)		W11668631	Element, Warm Zone (Center)		W11598759	Harness, Warm Zone
4		Cooktop	6	3196169	Screw			
	W11034825	Black	7	W10691223	Pan, Radiant Element			


CONTROL PANEL PARTS

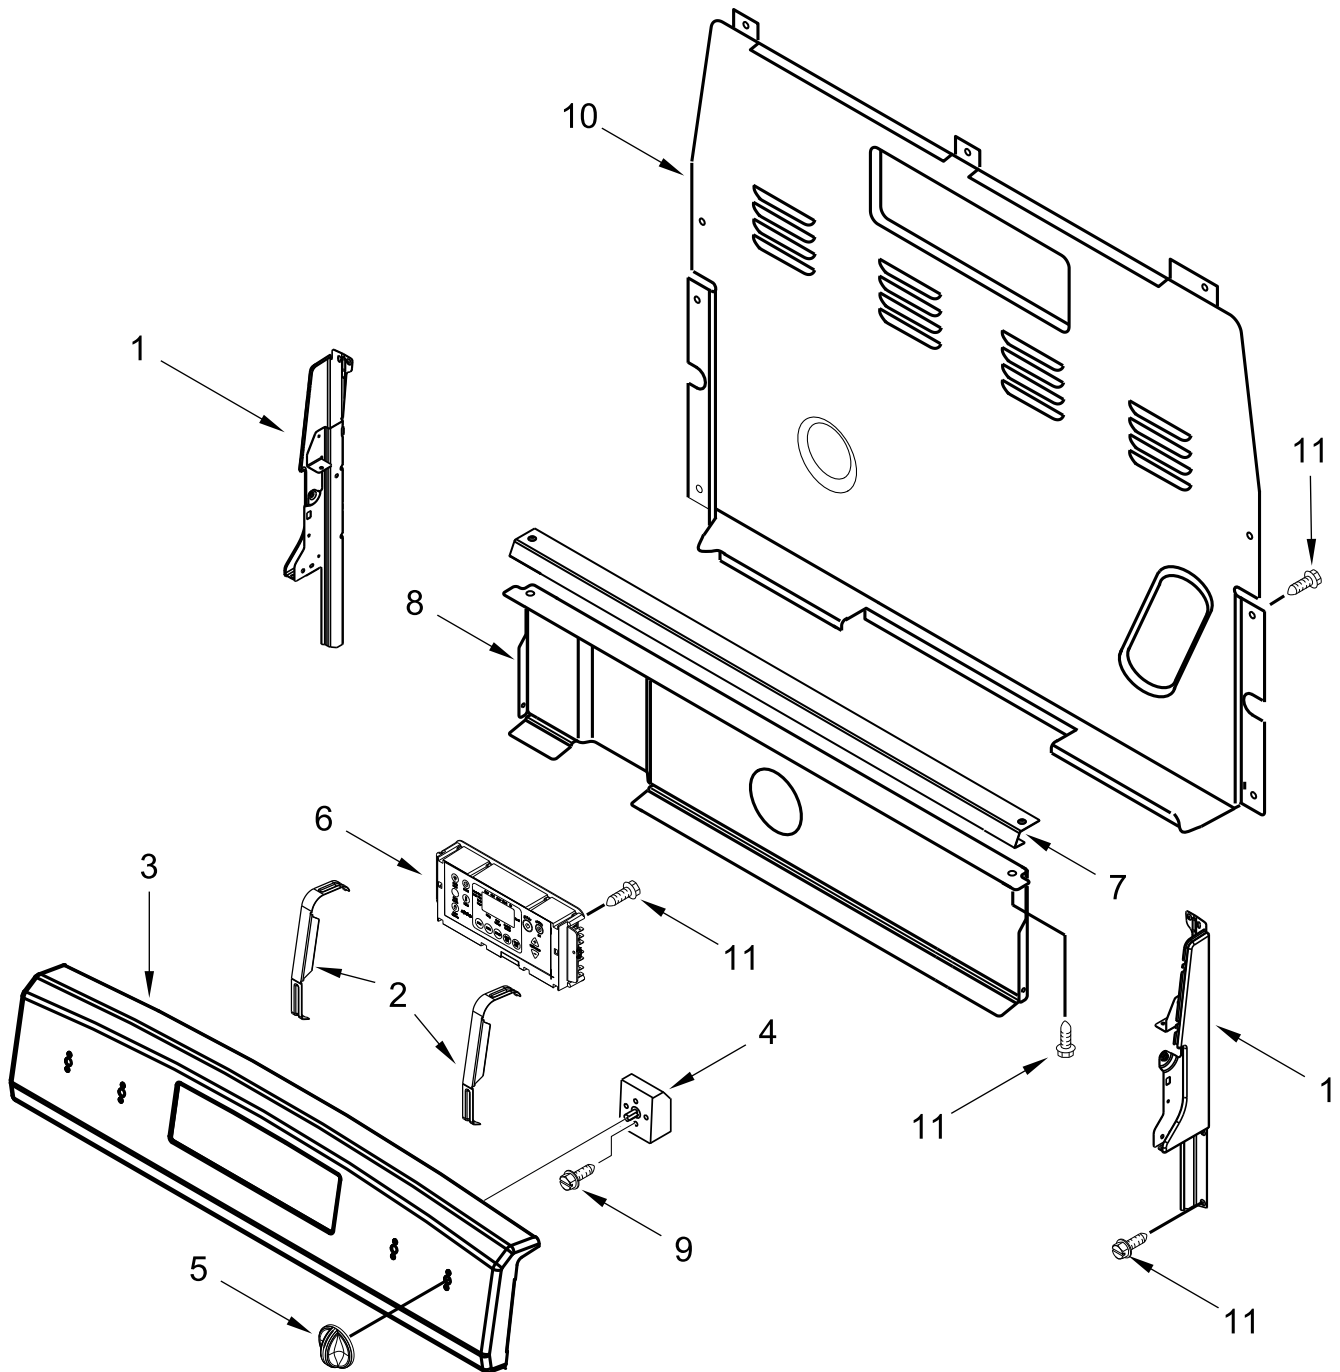

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	6		Control, Electronic (LCX)
	W11130372	Black (Left)			(Left Front)		W11515108	Black
	W11130379	Black (Right)		3148951	Switch, Infinite	7	W10525121	Bracket, Console Mounting
2	W10695491	Bracket, Control			(Right Rear and Left Rear)	8	W10134247	Shield, Heat
3		Console, Assembly		3148954	Switch, Infinite (Orange)	9	3400882	Screw
	W11027373	Stainless			(Right Front)	10	8272473	Cover, Upper Rear
			5		Knob	11	3196178	Screw
				W11022717	Stainless			


CHASSIS PARTS

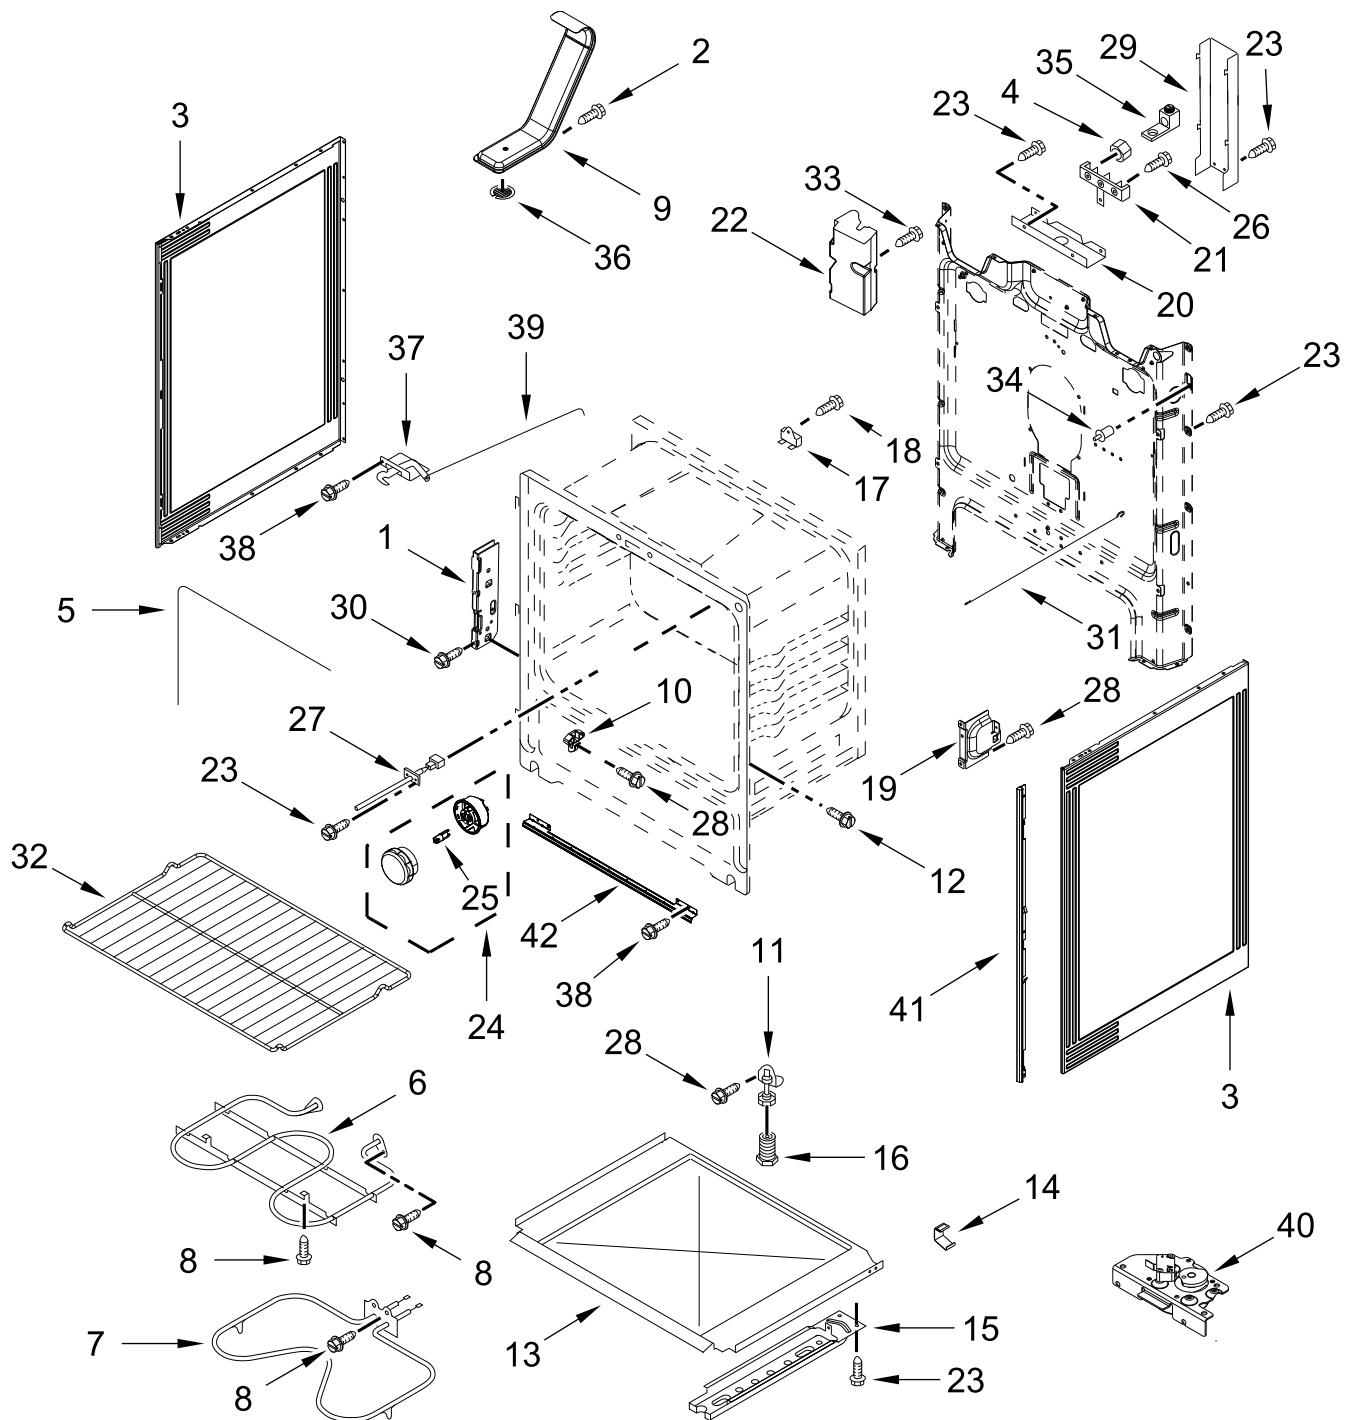

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	16	W10058460	Foot, Leveling	34	W11511828	Switch, Door
2	3196154	Screw	17	3196548	Fuse, Thermal	35	W10281322	Kit, Bare Wire Adapter Block
3		Panel, Side	18	3196172	Screw	36	W11092984	Screen, Vent
	W10162245	Black	19	W10404688	Clip, Oven Support	37	9761013	Front Door Latch Assembly
4	3400029	Nut	20	3186034	Bracket, Service	38	3196560	Screw
5	W11491751	Seal, Door	21	W10245259	Block, Terminal	39	W10078380	Rod, Latch
6	9757340	Element, Broil	22	W10910404	Counterweight	40	W10107820	Rear Door Latch Assembly
7	W11111743	Element, Bake	23	3196178	Screw	41	W11510560	Barrier Rail, Rubber (Left and Right)
8	3196174	Screw	24	W11634772	Light Assembly	42	W11464547	Bracket, Front Frame
9	W10134285	Tube, Vent	25	W10571723	Bulb, Halogen 40 Watts			FOLLOWING PARTS NOT ILLUSTRATED
10	W10674705	Glide, Drawer Front	26	3400016	Screw	W10774939		Insulation, Wrap
11	W10341186	Front Foot Assembly	27	W10181986	Sensor, Oven	W11127325		Insulation, Back
12	W10067840	Screw	28	3196169	Screw	W10333344		Insulation, Flue
13	8054068	Retainer, Insulation	29	W10326122	Cover, Terminal Block			
14	W10137382	Clip, Panel	30	W10031780	Screw			
15	W10390008	Base Rail Assembly (Left)	31	9757239	Rod, Door Switch			
	W10390007	Base Rail Assembly (Right)	32	W11173792	Rack, Oven			
			33	W11034869	Screw			


DOOR PARTS

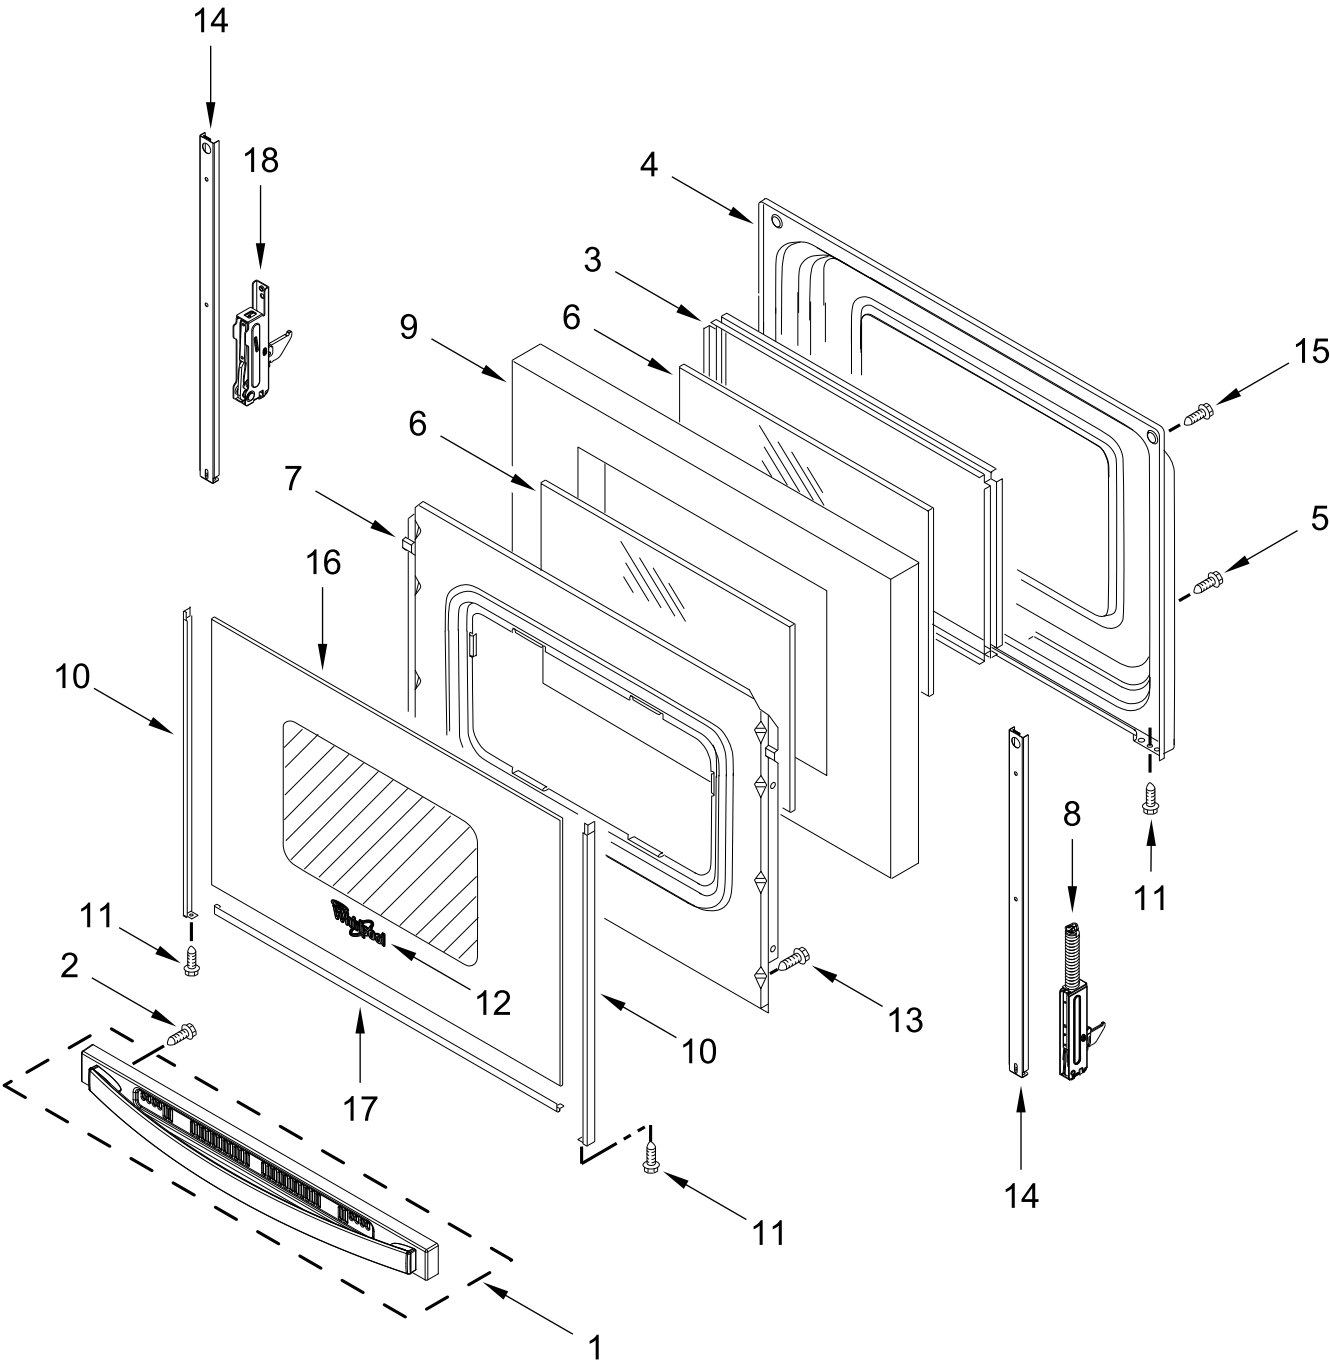

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	9	W10278991	Insulation, Door Strip	16		Glass Assembly, Outer Door
	W11242950	Stainless	10		Trim, Side		W10884159	Black
2	W10480830	Screw		W10746436	Black (Left)	17		Trim, Lower
3	W10316950	Frame, Glass		W10746435	Black (Right)		W11444043	Black
4	9761344	Liner, Door	11	W10327235	Screw	18	W10299227	Hinge, Door (Passive)
5	W10031790	Screw	12	W10884775	Badge			
6	9758162	Glass, Inner	13	W10031780	Screw			
7	W11380222	Retainer, Insulation	14	W11379944	Strap, Door			
8	W10299224	Hinge, Active (With Spring)	15	W10200660	Screw			

DRAWER PARTS

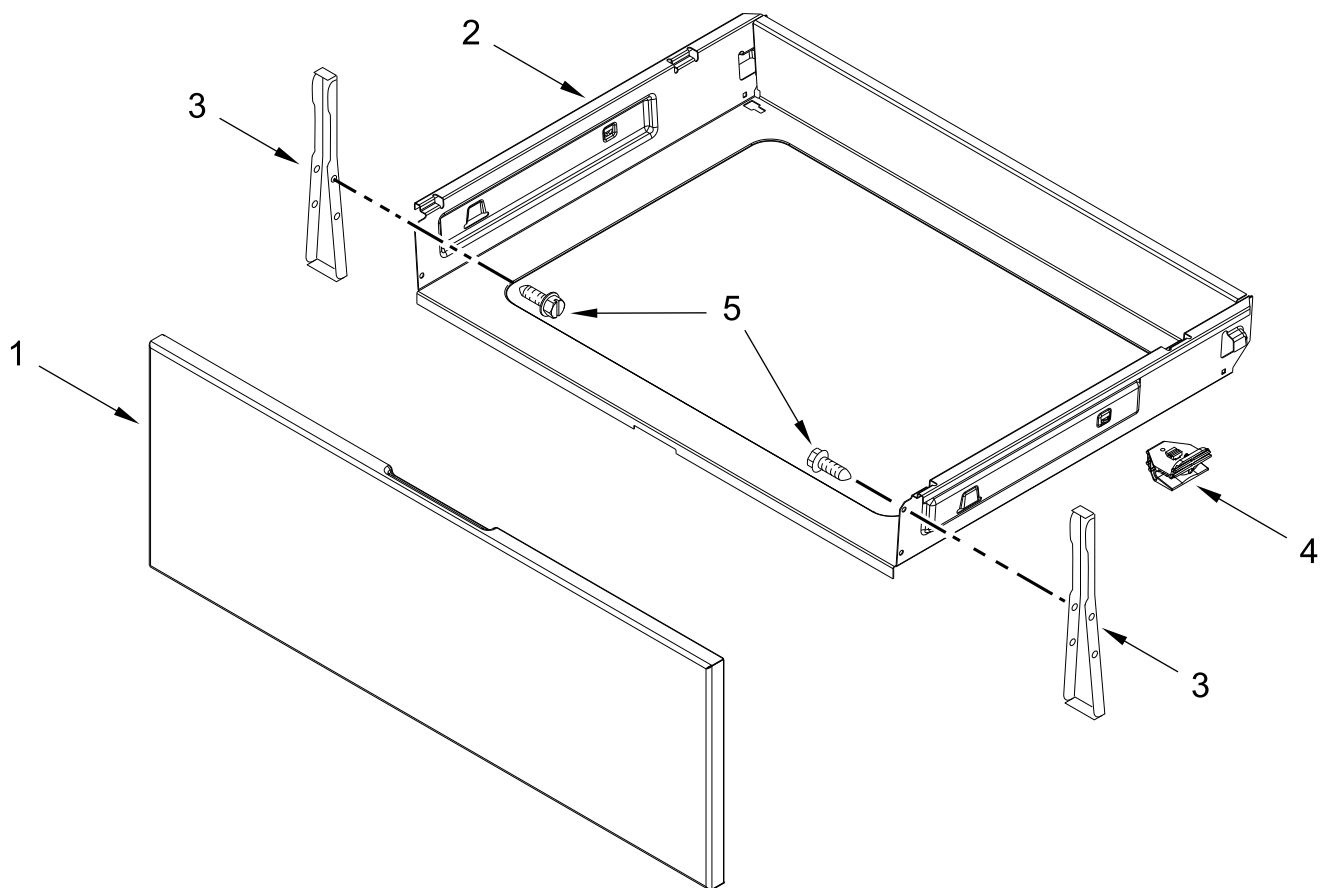

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear
	W10330070	Stainless	3	W10462910	Bracket, Mounting Drawer	5	3196165	Screw

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting