




ELECTRIC RANGE

MODELS:

WFE775H0HW5 (White)


COOKTOP PARTS

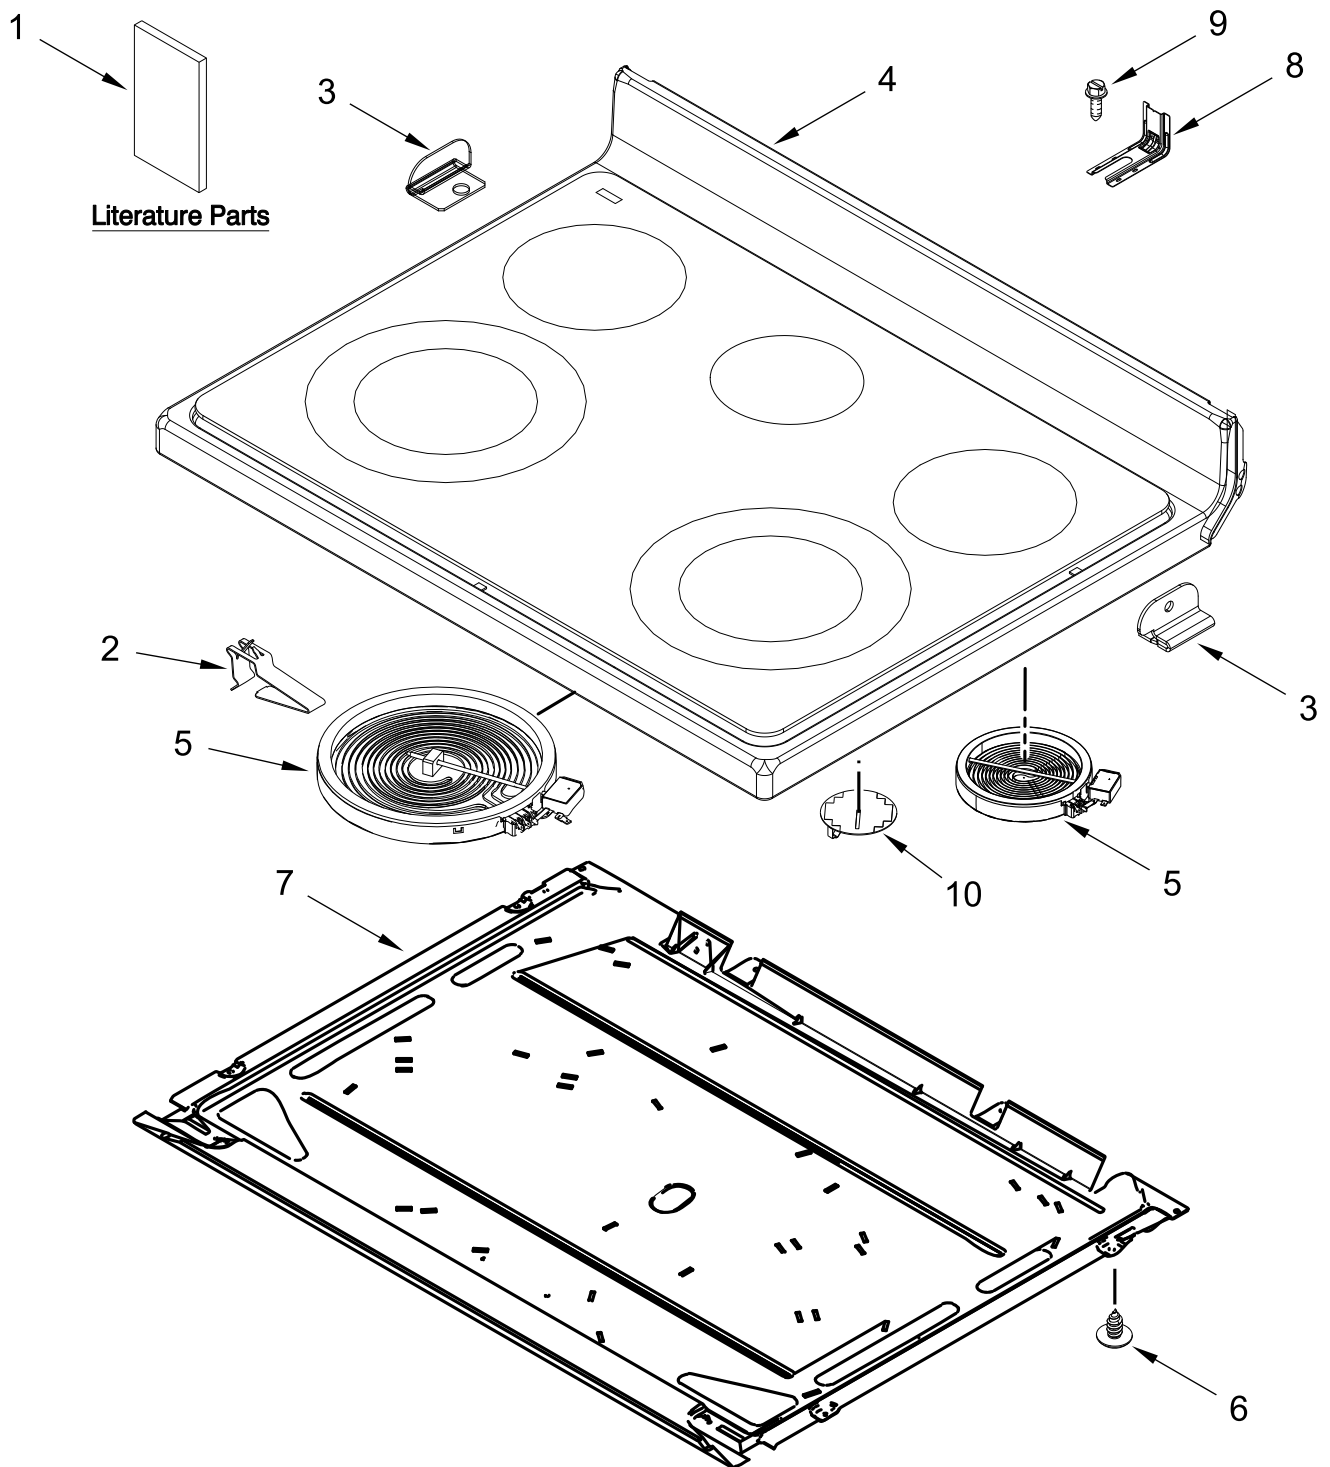

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W10342780	Element (1300W) (Left Rear)	10	W10799048	Element, Warm Zone (Center Rear)
	W11509589	Owner's Manual		W10248261	Element (1200W) (Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11326953	Tech Sheet		W11282542	Element (3000W Dual) (Right Front)		W11451584	Harness, Main
	W11435580	Guide, Quick Start (English and French)					W11134592	Harness, Warm Zone
	W11326954	Wiring Diagram		W10711900	Element (3000W) (Left Front)		W11176668	Harness, Cooktop (Right)
2	W11600012	Spring, Element	6	3196169	Screw		W11176669	Harness, Cooktop (Left)
3	W10607641	Bracket, Cooktop (Left)	7	W10691223	Pan, Radiant Element			
	W10607642	Bracket, Cooktop (Right)	8	W11379945	Bracket, Anti-Tip			
4		Cooktop	9	7101P485-60	Screw, Anti-Tip Kit			
	W10865059	White						


CONTROL PANEL PARTS

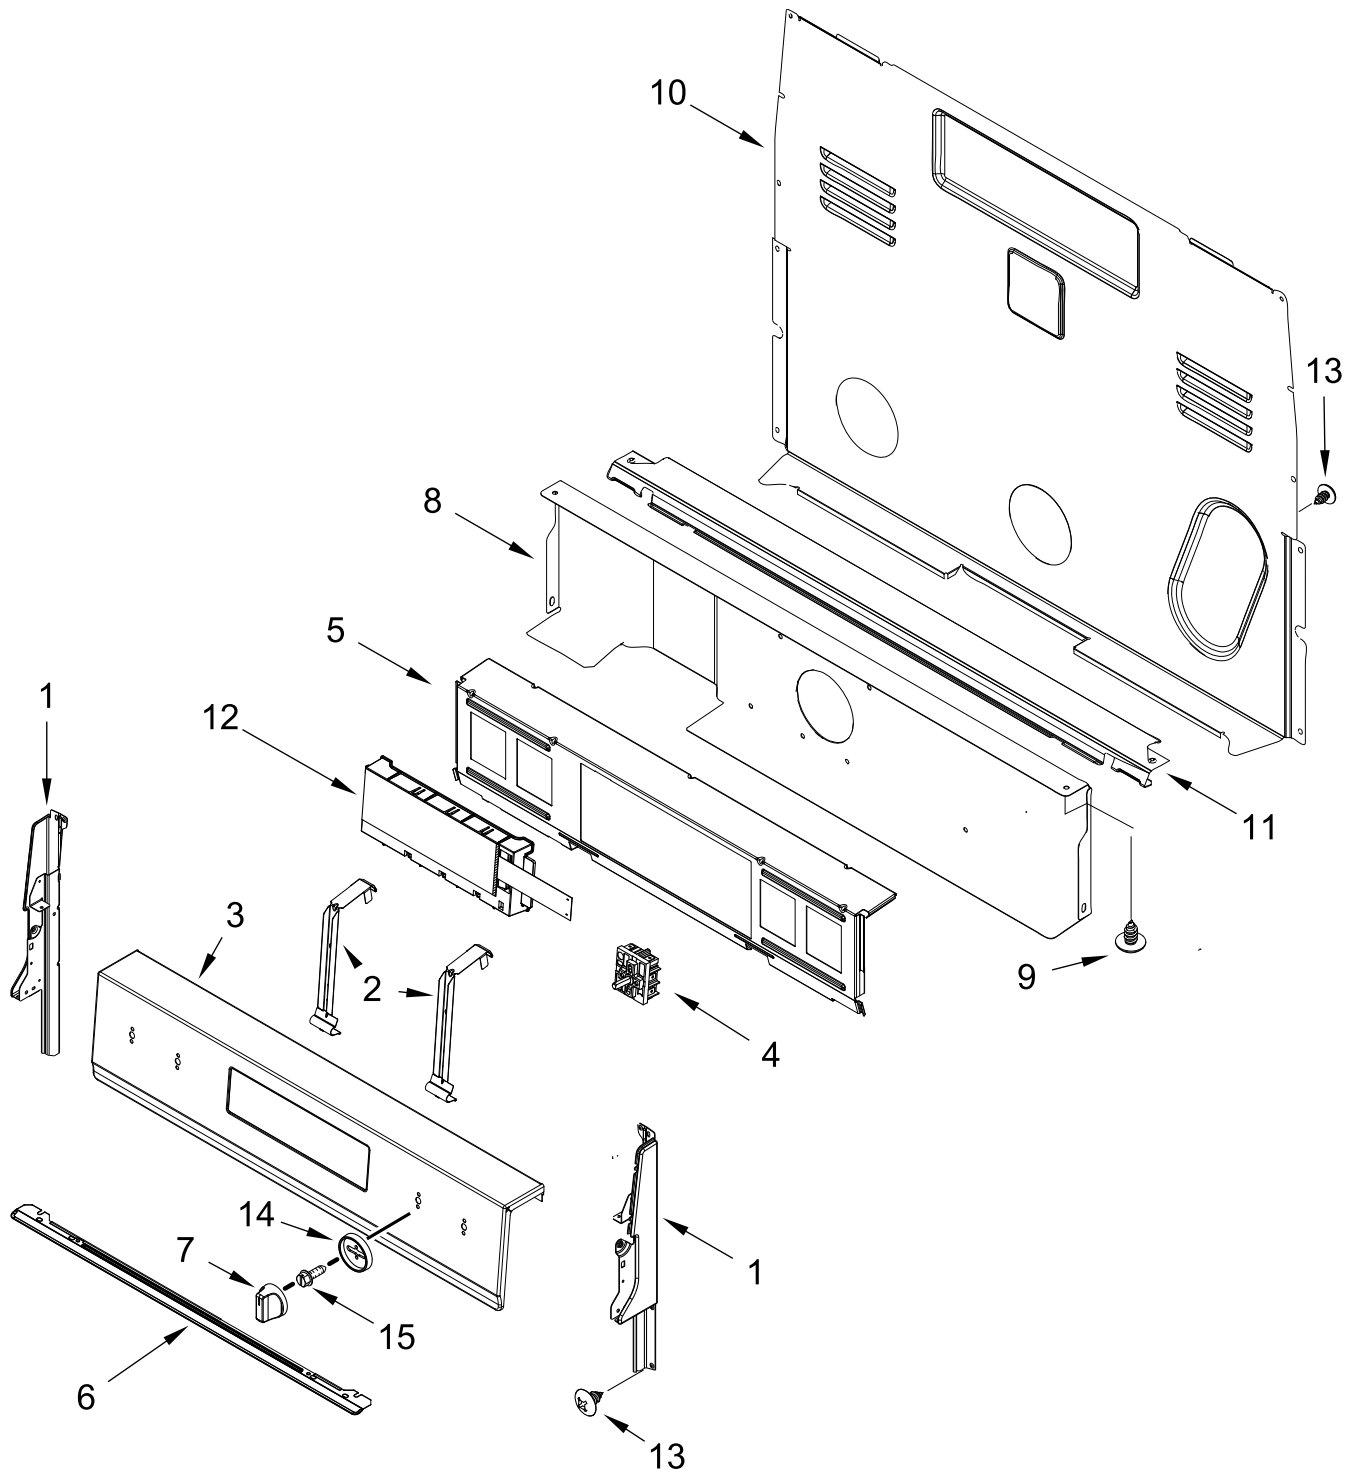

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	W10901802	Panel, Backer	12		Control, Electronic (LCX)
	W11213291	White (Left)	6		Bracket, Eye Brow			
	W11213293	White (Right)		W11443963	White		W11511567	Black
2	W10856361	Bracket, Control	7		Knob	13	3196178	Screw
3		Console		W11027257	White	14		Bezel
	W10869984	White	8	W10134247	Shield, Heat		W10912200	White
4	W10437092	Switch, Infinite	9	3196169	Screw	15	W10498399	Screw
		(Left Front and Right Front)	10	8272473	Cover, Upper Rear			
	W10578768	Switch, Infinite (Right Rear)	11	W10525121	Bracket, Console Mounting			
	W10437094	Switch, Infinite (Left Rear)						


CHASSIS PARTS

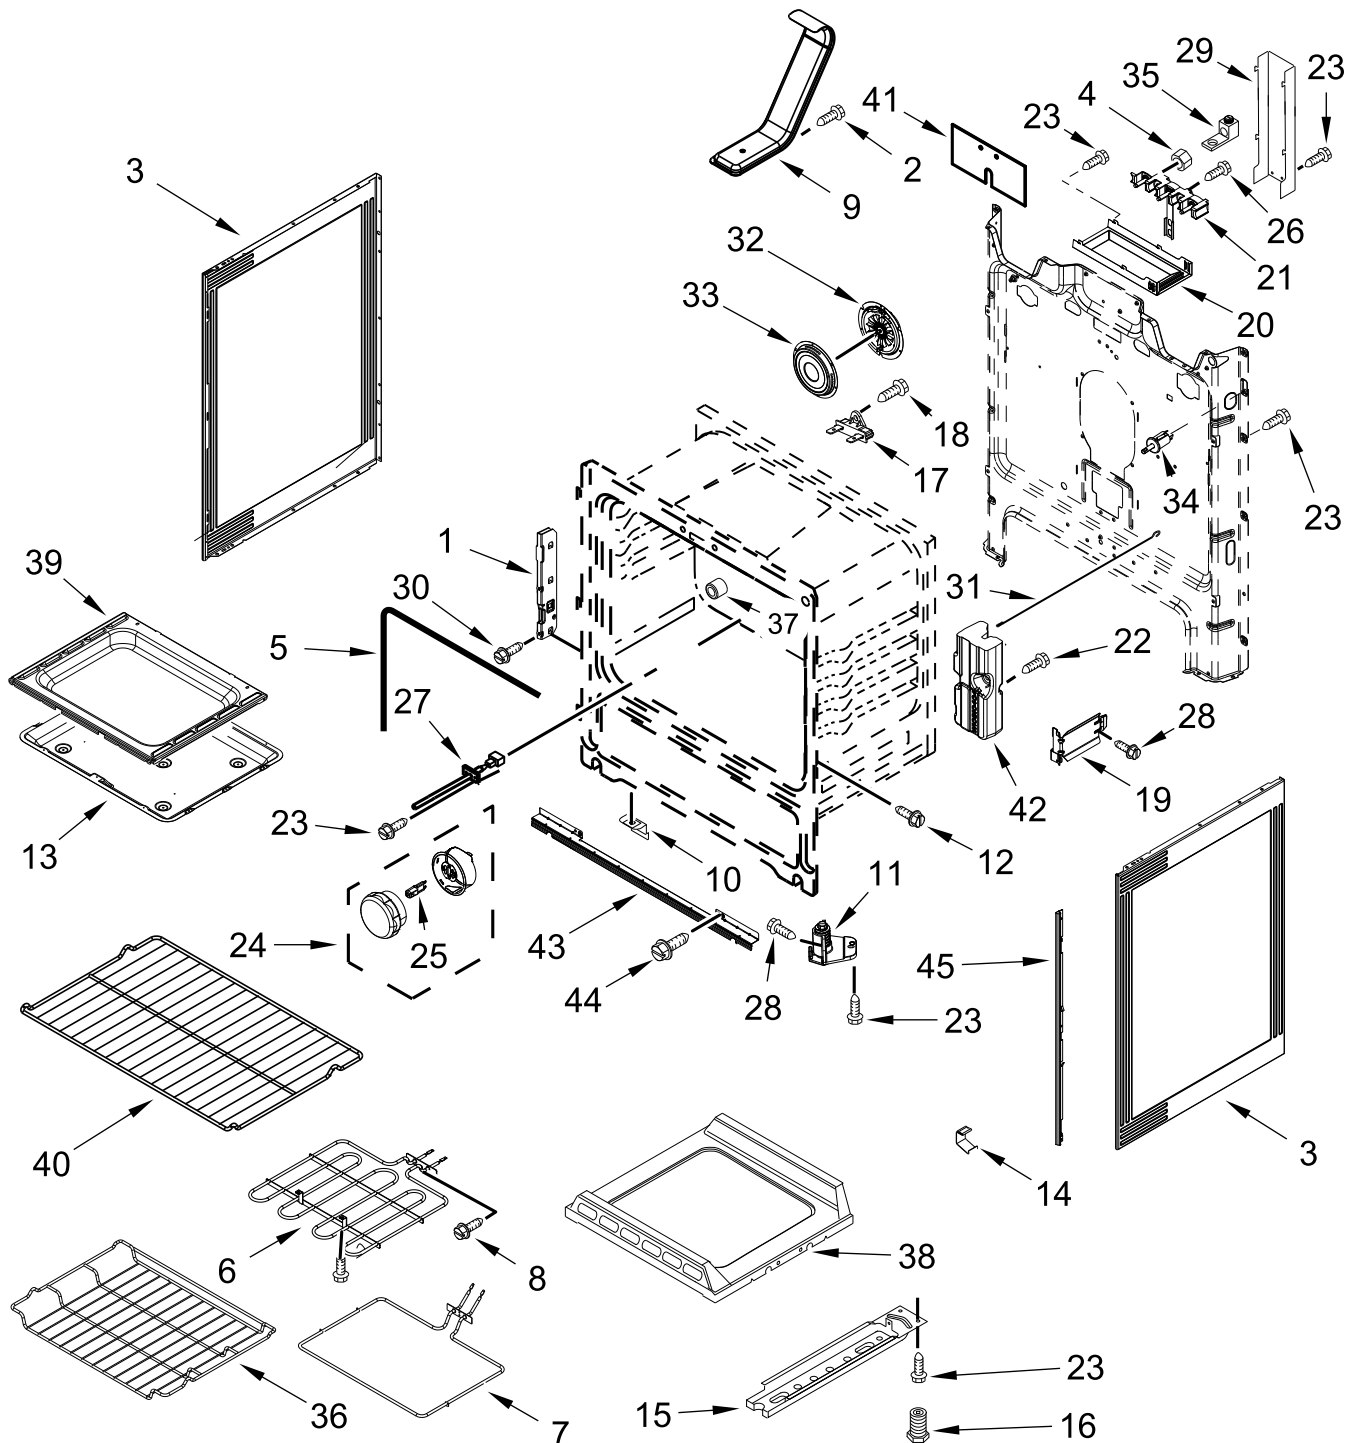

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	19	W10273002	Bracket, Oven Support	38	W10726740	Shield, Heat
2	3196165	Screw	20	3186034	Bracket, Service	39	W10774446	Bottom, Oven
3		Panel, Side	21	W10245259	Block, Terminal	40	W10531060	Rack, Oven
	W10575396	White	22	W11034869	Screw	41	W10655441	Shield, Power Cord
4	3400029	Nut	23	3196178	Screw	42	W10910404	Counterweight
5	W11491752	Gasket, Door	24	W11634772	Light Assembly	43	W11620269	Bracket, Front Frame
6	W11095929	Element, Broil	25	W10571723	Bulb, Halogen 40 Watts	44	3196560	Screw
7	W10774342	Element, Bake	26	3400016	Screw	45	W11510560	Barrier Rail, Rubber (Left and Right)
8	W10362924	Screw	27	W10586204	Sensor			FOLLOWING PARTS NOT ILLUSTRATED
9	W10134285	Tube, Vent	28	3196169	Screw			
10	W10035900	Support, Oven Bottom	29	W10326122	Cover, Terminal Block			
11	W10341186	Front Foot Assembly	30	W10031780	Screw	W10194393		Insulation, Wrap
12	W10067840	Screw	31	W10273192	Rod, Door Switch	W10225524		Insulation, Back
13	W11379357	Bake Pan	32	W11353930	Fan, Convection	W10225523		Insulation, Bottom
14	W10137382	Clip, Panel	33	W10346154	Cover, Convection	4820F015-59		Insulation, Strap
15	W10390007	Base Rail Assembly (Right)	34	W11511828	Switch, Door			
	W10390008	Base Rail Assembly (Left)	35	W10281322	Kit, Bare Wire Adapter Block			
16	W10058460	Foot, Leveling	36	W10289145	Rack, Oven (Gull-Wing)			
17	3196548	Fuse, Thermal	37	9758701	Spacer, Door			
18	3196172	Screw						

DOOR PARTS

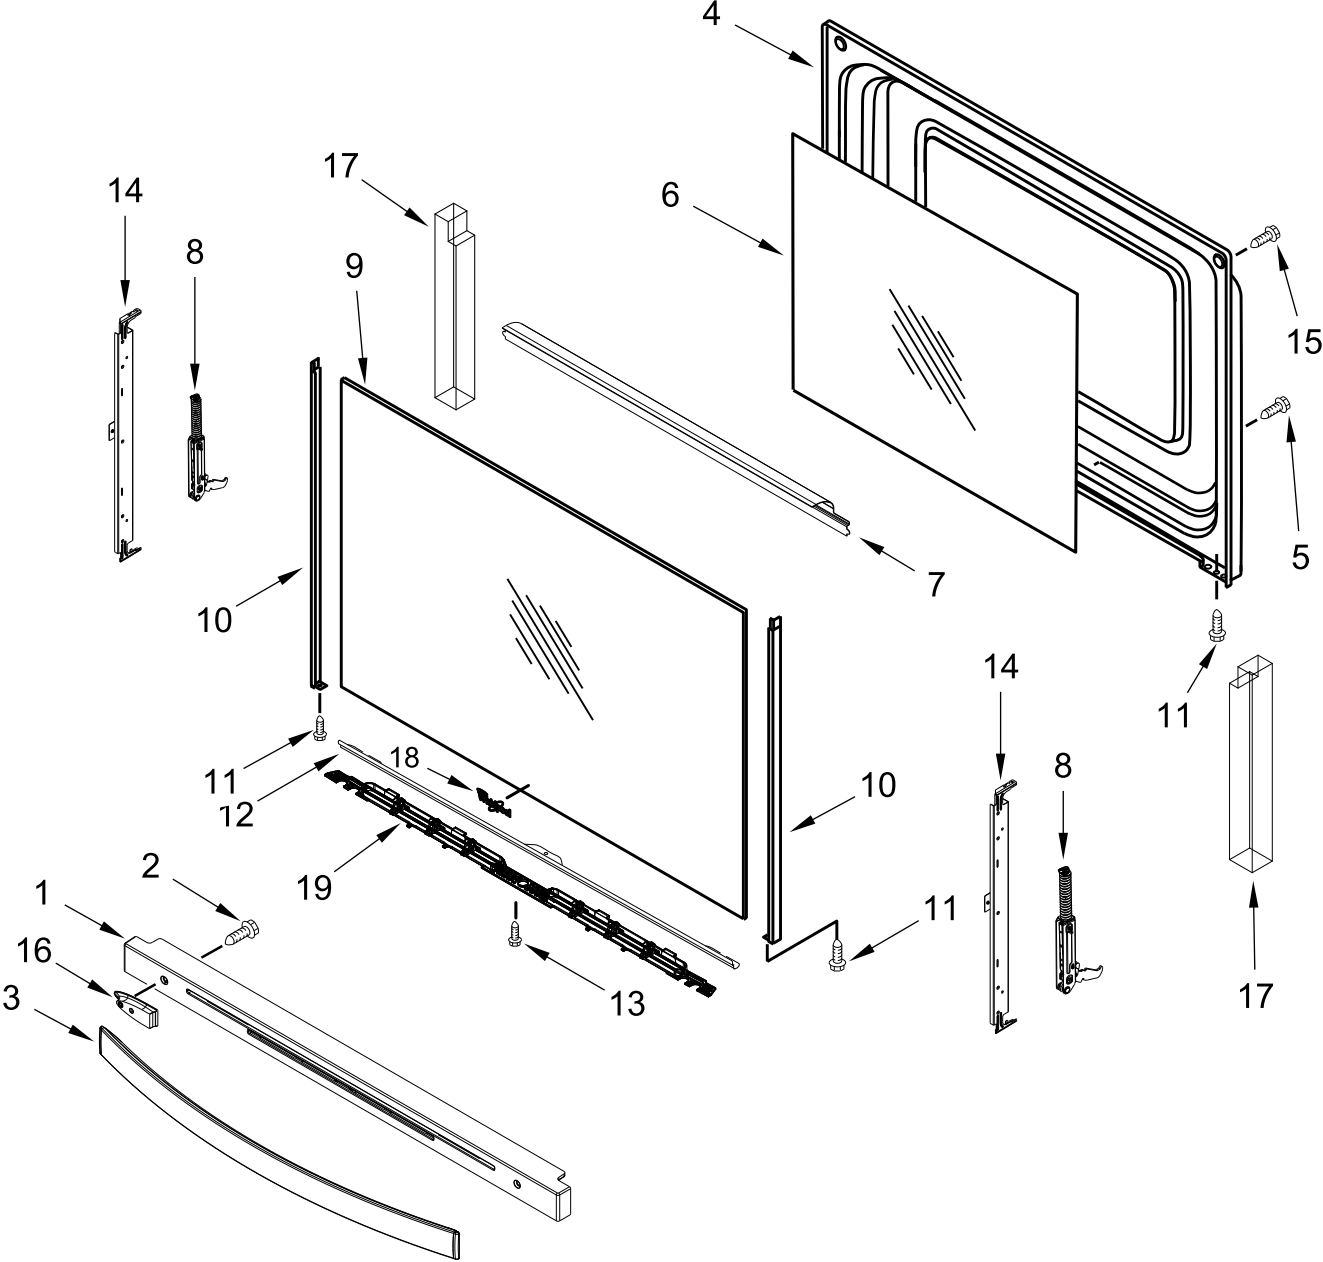


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10880612	White
2	W10477496	Screw
3		Handle, Door
	W11022644	White
4	W10297318	Liner, Door
5	W10031790	Screw
6	W10300487	Glass, Inner
7	W10294853	Bracket, Glass Liner
8	W10440013	Hinge, Door (Active)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
9		Glass Assembly, Outer Door
	W10871830	White
10		Trim, Side
	W10334003	White
11	W10327235	Screw
12		Trim, Bottom
	W10333990	White
13	W10031780	Screw
14	W10294851	Rail, Door

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
15	W10317886	Screw
16		Standoff, Handle
	W10917797	White
17	W10772958	Insulation, Door
18	W10884775	Badge
19	W11440160	Door, Bottom Cover

DRAWER PARTS

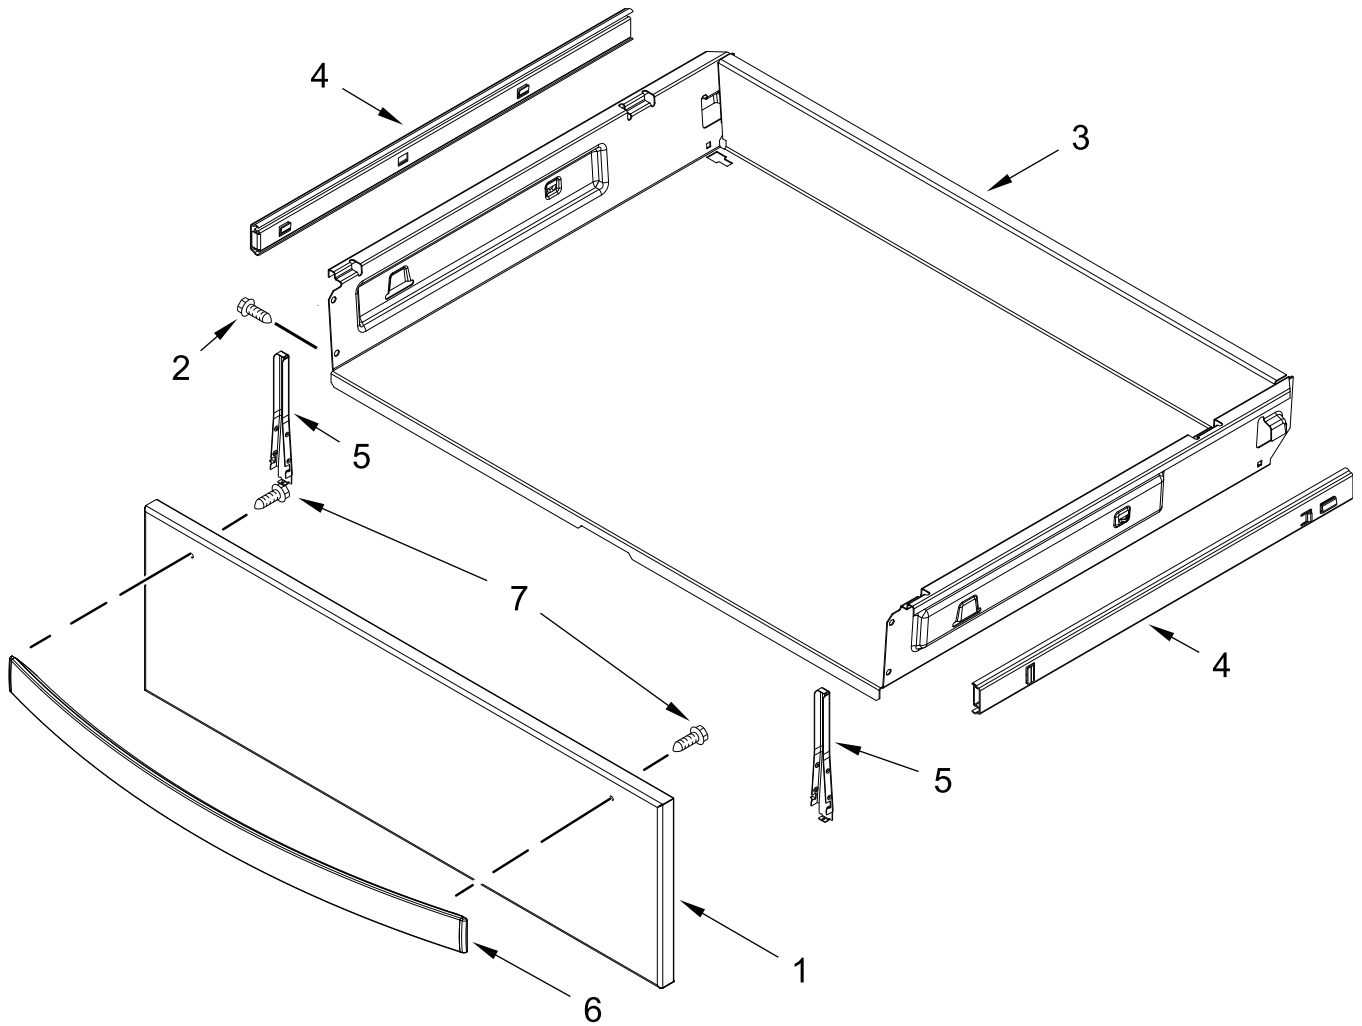

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	4	W10441804	Slide, Drawer (Left)	6		Handle, Door
	W11190205	White		W10441805	Slide, Drawer (Right)		W11022644	White
2	3196169	Screw	5	W10318027	Bracket, Drawer	7	3400882	Screw
3	W10688022	Drawer, Storage						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting