




ELECTRIC WALL OVEN

MODELS:

WOD51EC7HS21 (Stainless)


CONTROL PANEL PARTS

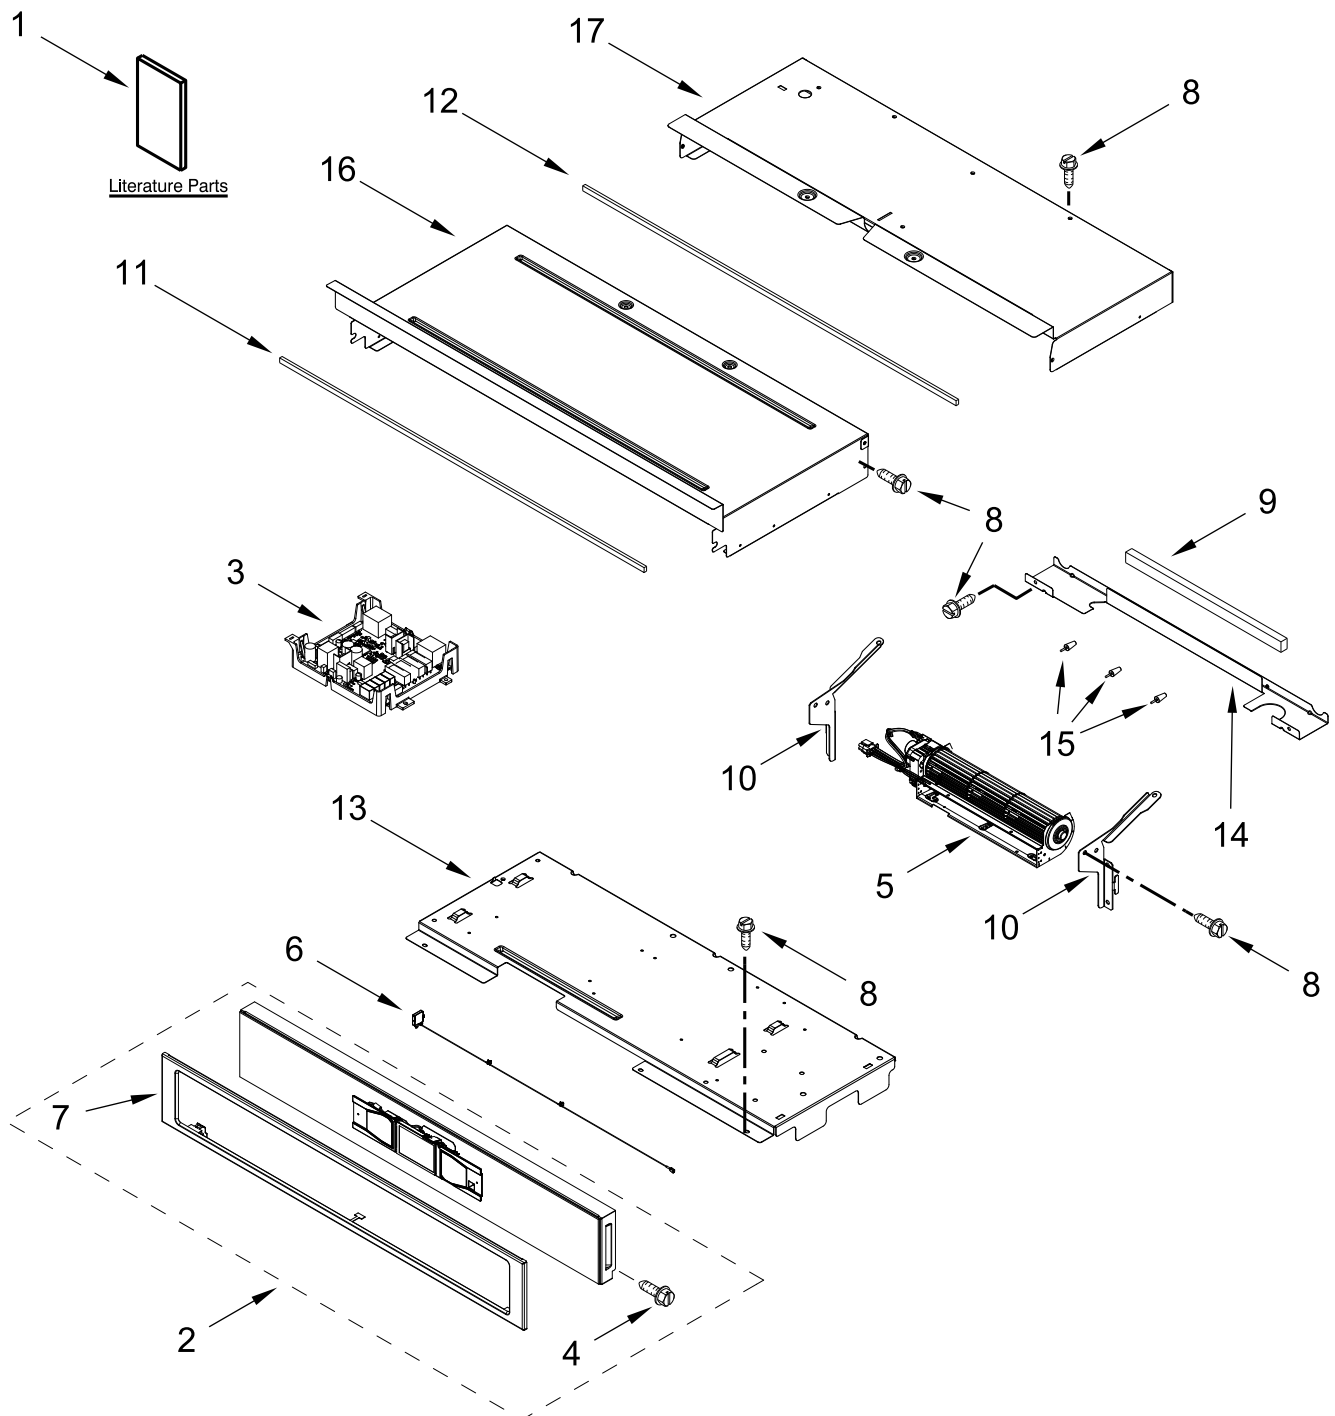

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7		Skin, Control Panel	17	W11244459	Cover, Top Back 27 IN Chassis
	W11340821	Owner's Manual		W10899876	Stainless			
	W11419188	Quick Start Guide	8	7101P426-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11419201	Tech Sheet	9	4451758	Block, Foam			
2		Assembly, Control Panel (Includes Overlay)	10	W10655463	Bracket, Blower (Left)	W11245673		Harness, Main
	W11304440	Stainless		W10655462	Bracket, Blower (Right)	W11245677		Harness, Signal
3	W11253187	Appliance Manager, Copernicus	11	W11162062	Gasket, Rubber (652mm)	W11264646		Harness, Door Latch
	W11253188	Manager, Appliance (Without Power Supply)	12	W10728475	Gasket, Rubber	W10562910		Harness, EOL
4	W11339492	Screw (Black)	13	W11179509	Tray, Electronic	W11233570		Harness, Console
5	W11397930	Blower	14	W11166802	Divider, Chassis Back	4448664		Clamp, Conduit
6	W11409842	Antenna	15	W10351295	Bumper	W10655464		Bracket, Harness
			16	W11244469	Cover, Top Front 27 IN Chassis	313438		Clip, Harness
						4450800		Screw, Grounding
						W10487999		Clip, Harness
						W11394923		Bag, Hardware


OVEN PARTS

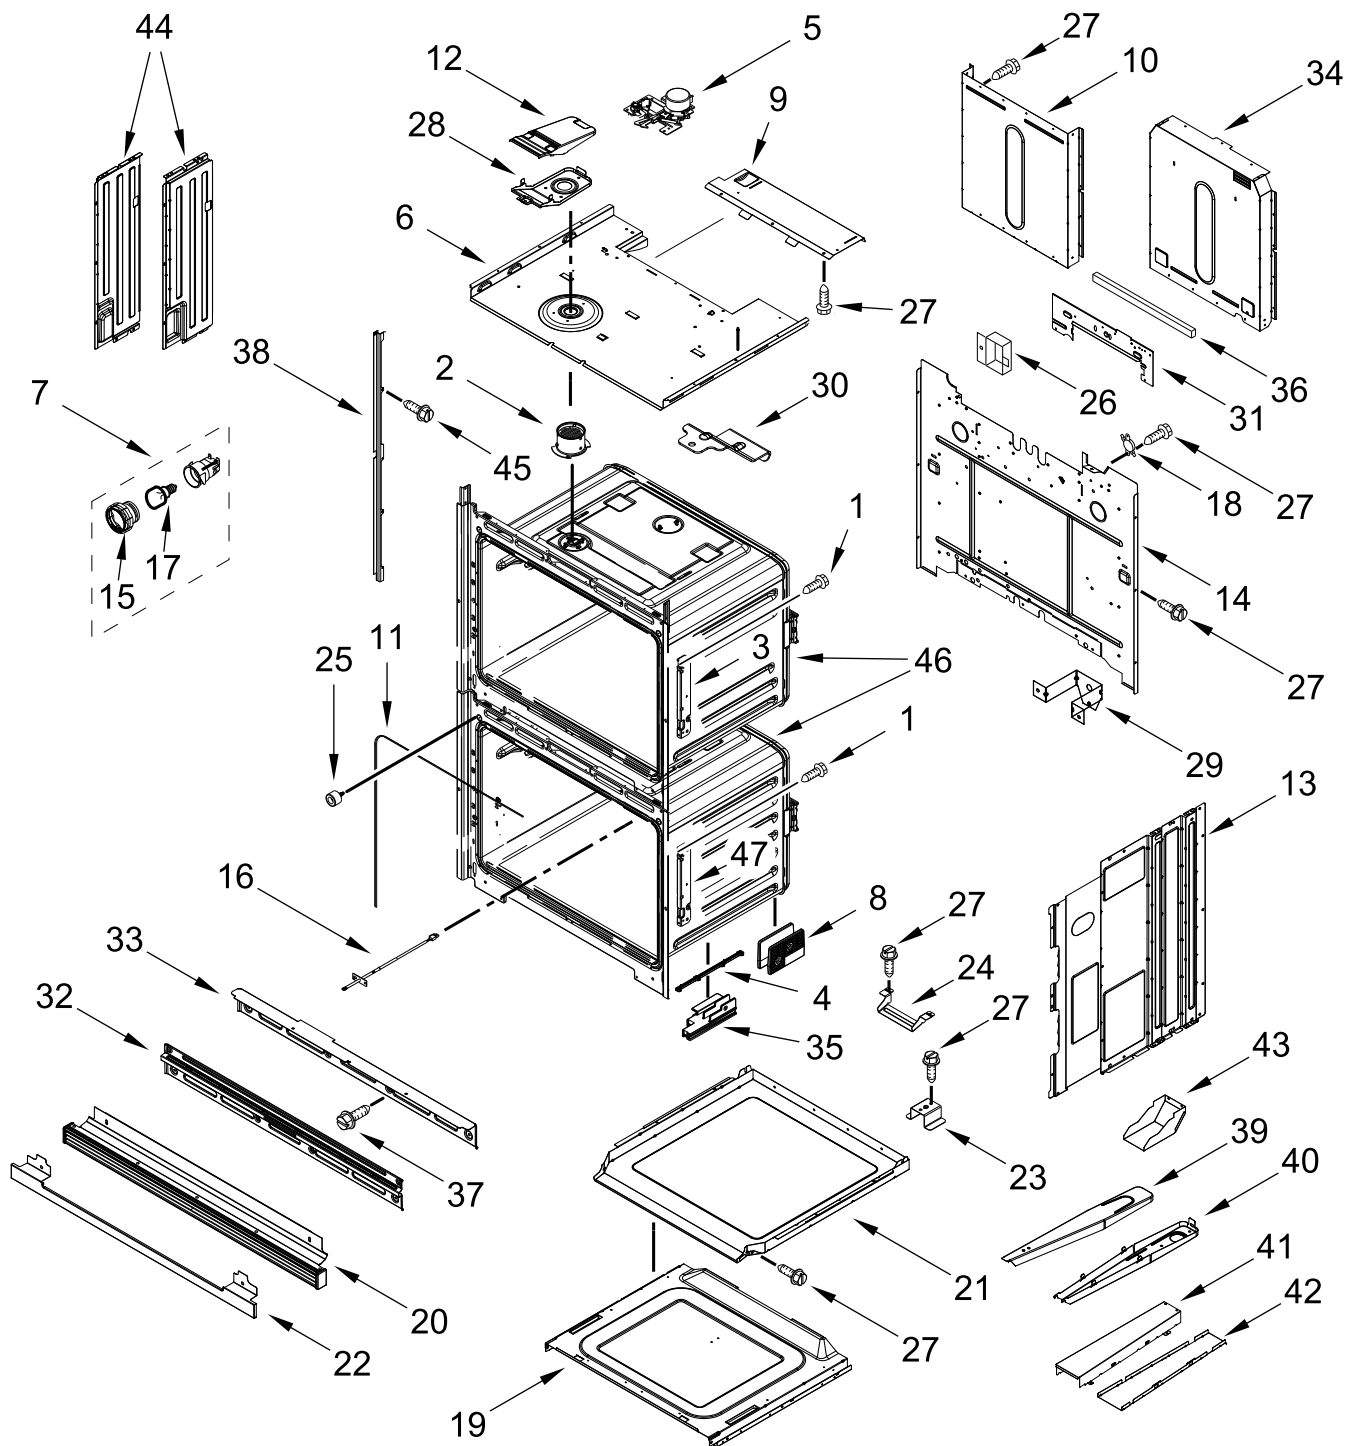

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10254050	Screw	22		Trim, Bottom Vent	39	W11256421	Cover, Top Back Exhaust
2	W11085298	Tube, Vent		W11356754	Black	40	W11256420	Base, Top Back Exhaust
3	W11100732	Receiver, Hinge (Upper)	23	W11135135	Support, Air Channel	41	W11256431	Cover, Lower Back Exhaust
4	W11156710	Spacer, Base	24	W11390667	Spacer, Chassis Bottom Duct	42	W11256430	Base, Lower Back Exhaust
5	W11132456	Latch, Motorized	25	W11166315	Bumper and Screw	43	W11256432	Deflector, Lower Back Exhaust
6	W11244456	Top, Chassis	26	8285593	Cover, Connector	44	W11167419	Cover, Suction (Left)
7	W11246615	Assembly, Light	27	7101P426-60	Screw		W11186675	Cover, Suction (Right)
8	W11245118	Foot, Base	28	W11256423	Base, Vent Exhaust	45	W11404000	Screw
9	W10904163	Deflector, Blower	29	W11344645	Hat Bracket, Vent	46		Liner, Oven (Not Serviceable)
10	W11219304	Duct, Chassis Back (Lower)	30	W11342780	Bracket, Top Front	47	W11239070	Receiver, Hinge (Left)
11	W11608109	Gasket, Cavity	31	W11186652	Bracket, U-Shape		W11239072	Receiver, Hinge (Right)
12	W11256424	Cover, Vent Exhaust	32	W11235483	Vent, Center 27"			(Lower)
13	W11165274	Side, Chassis	33	W11334858	Vent, Top 27 in			FOLLOWING PARTS NOT ILLUSTRATED
14	W11442210	Back, Chassis	34	W11165250	Duct, Chassis Back (Upper)	W11244474		Insulation, Wrap
15	W11297361	Lens, Light				W11244475		Insulation, Back
16	W11346074	Probe, Sensor	35	W11245114	Foot, Chassis (Left)			
17	W11297362	Bulb, Light		W11245116	Foot, Chassis (Right)			
18	4449751	Thermostat (TOD)	36	W11211345	Foam, U-Bracket			
19	W11244454	Base, Chassis	37	W11249635	Screw			
20		Assembly, Bottom Vent	38	W11235460	Cover, Side Trim (Left)			
	W11369886	Stainless		W11235461	Cover, Side Trim (Right)			
21	W11244446	Duct, Bottom Chassis						


UPPER OVEN DOOR PARTS

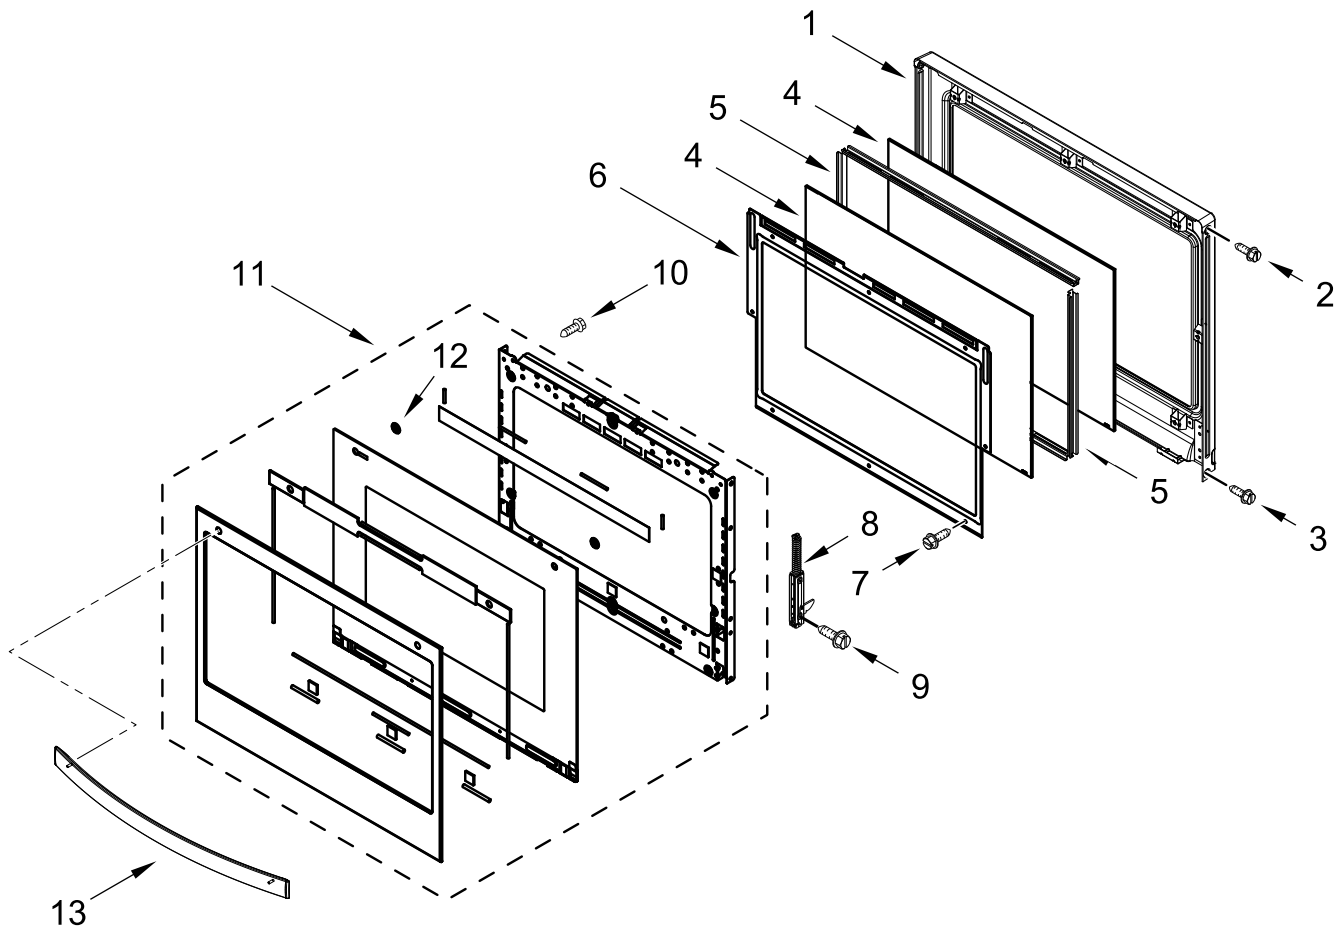

UPPER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302593	Liner Assembly	7	7101P426-60	Screw	11		Door Assembly
2	7101P375-60	Screw	8	W11296079	Hinge, Door (Left)		W11296060	Stainless
3	W11290045	Screw		W11296080	Hinge, Door (Right)	12	W10319024	Washer, Door
4	W10618123	Glass, Inner				13		Handle Assembly
5	W11302731	Spacer, Air Divider	9	3196183	Screw		W10880280	Stainless
6	W11204277	Retainer, Air Divider Glass	10	W11317731	Screw (Black)			






LOWER OVEN DOOR PARTS

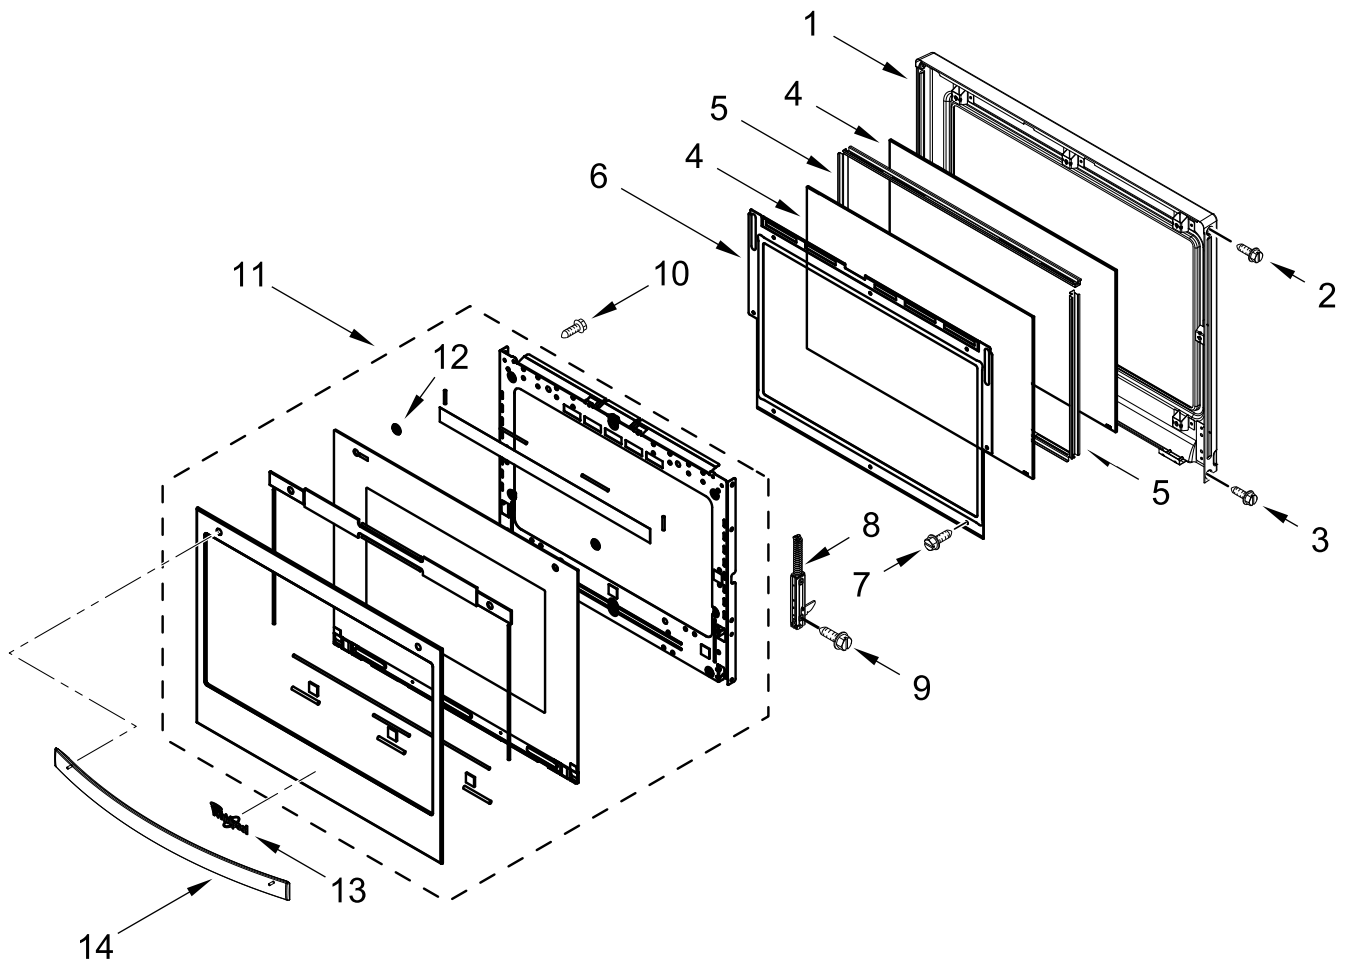

LOWER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302593	Liner Assembly	7	7101P426-60	Screw	11		Door Assembly
2	7101P375-60	Screw	8	W11296079	Hinge, Door (Left)		W11296060	Stainless
3	W11290045	Screw		W11296080	Hinge, Door (Right)	12	W10319024	Washer, Door
4	W10618123	Glass, Inner				13	W10884775	Badge
5	W11302731	Spacer, Air Divider	9	3196183	Screw	14		Handle Assembly
6	W11204277	Retainer, Air Divider Glass	10	W11317731	Screw (Black)		W10880280	Stainless

INTERNAL OVEN PARTS

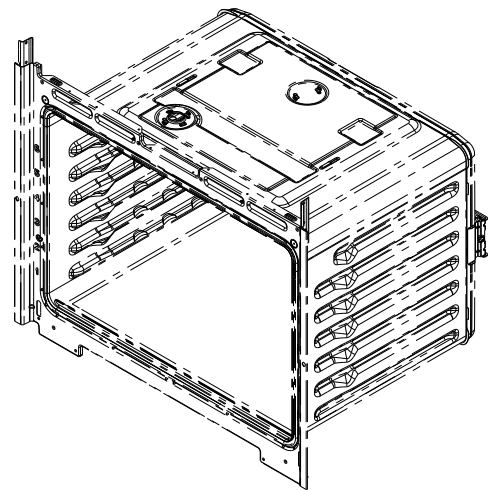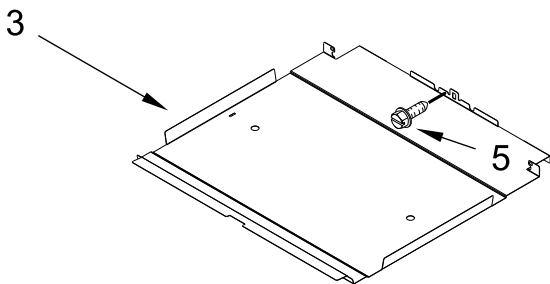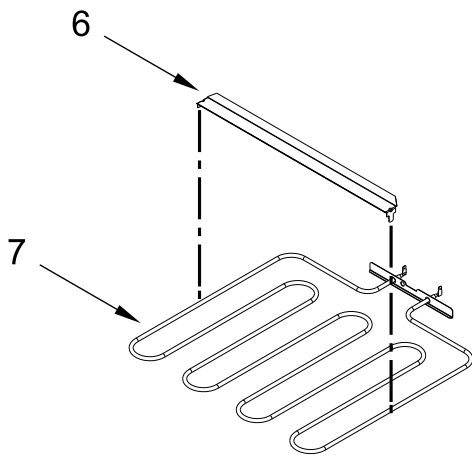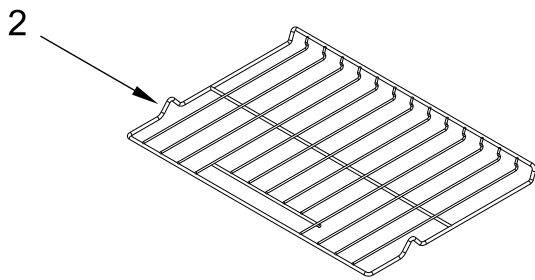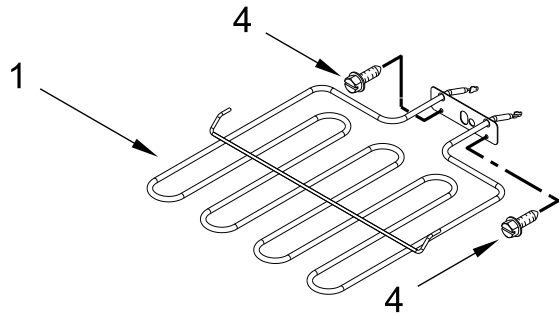

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238160	Element, Broil	4	7101P434-60	Screw	6	W10282957	Crossbar, Hidden Bake Tray
2	W10317431	Rack, Oven	5	7101P426-60	Screw	7	W11292248	Element, Bake
3	W10318198	Tray, Hidden Bake						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
		Kit, Built-In Double Oven Side Trim
	W10536161	Black Assembly, Bottom Vent
	W11369893	Black Trim, Tall Vent
	W11406624	Stainless Deflector, Warming Drawer
	W10536338	Stainless