




ELECTRIC RANGE

MODELS:

WFC315S0JB4 (Black)
WFC315S0JW4 (White)


COOKTOP PARTS

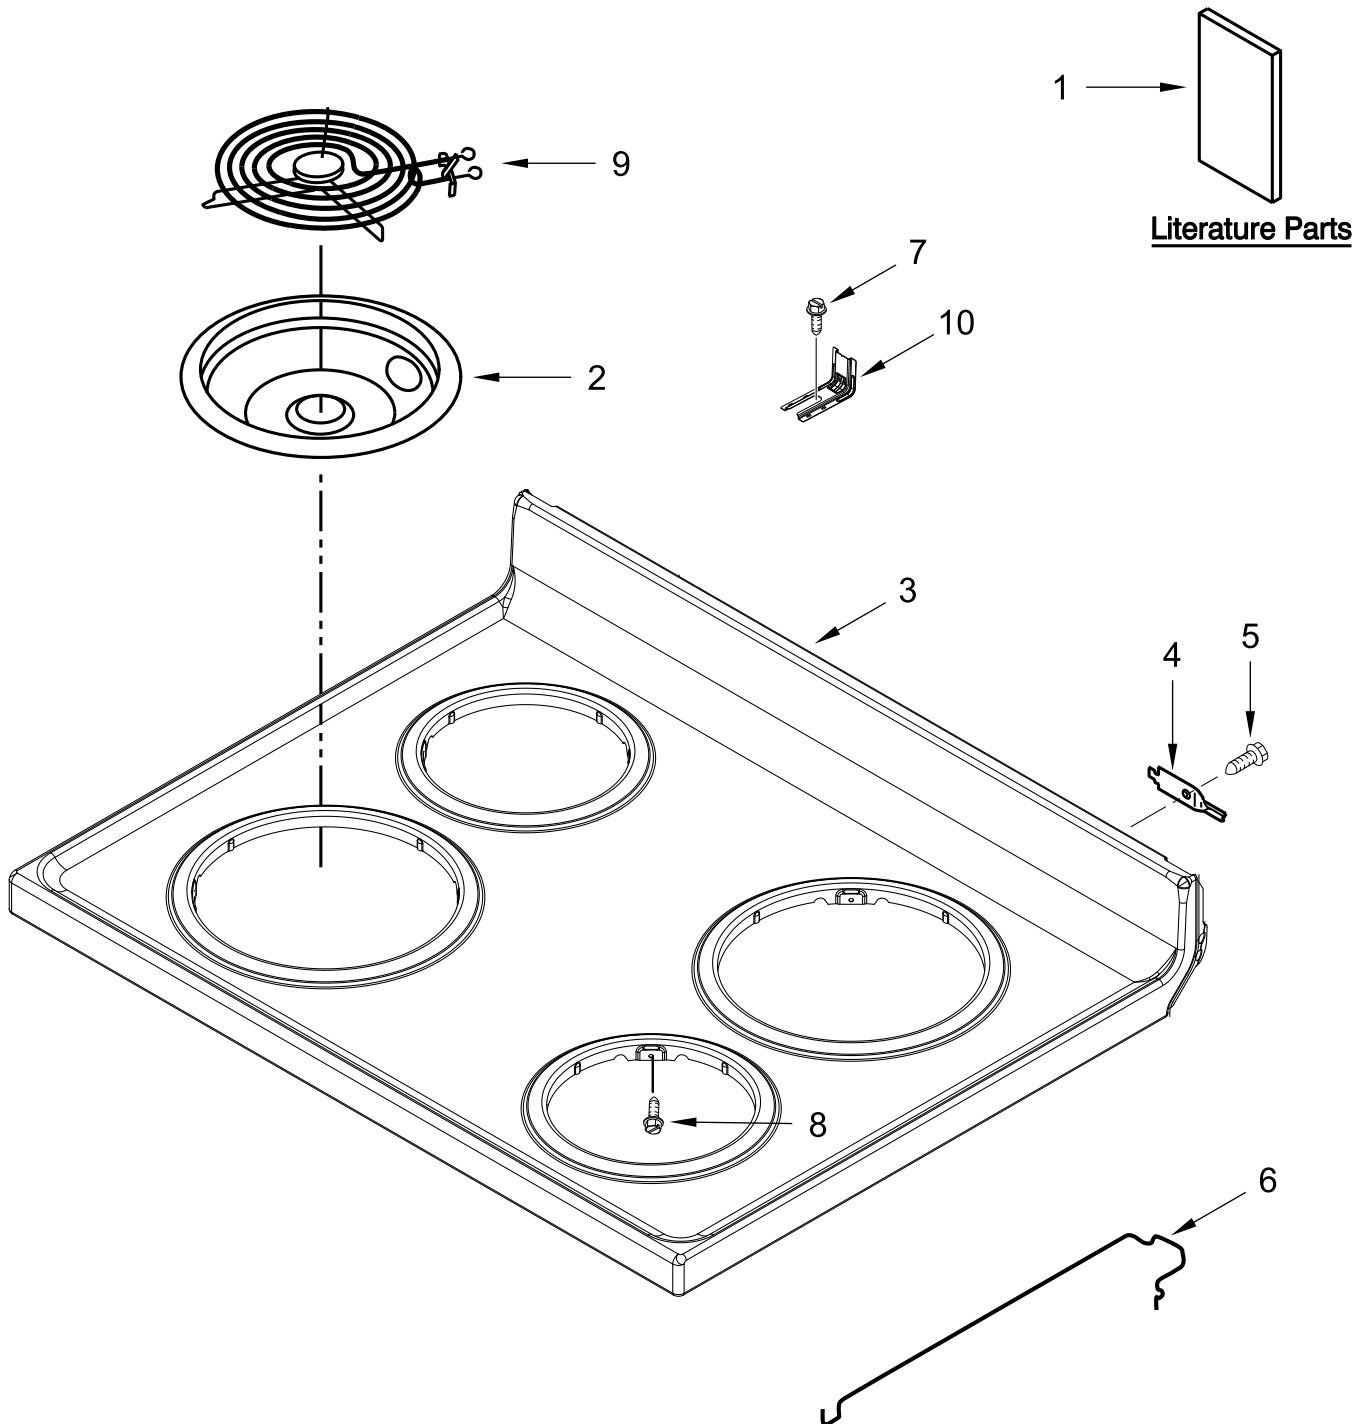

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	3195060	Hinge, Cooktop	10	W11379945	Bracket, Anti-Tip
	W11509617	Owners Manual	5	3196178	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11435582	Quick Start Guide	6	3195812	Rod, Support			
	W11401727	Tech Sheet	7	7101P485-60	Screw, Anti-Tip Kit		W11452636	Harness, Wire (Main)
2	W10196406	Bowl, Drip (6 in)	8	3196154	Screw		W11134595	Harness, Cooktop
		(Right Front and Left Rear)	9	W11364018	Element, Coil Heating (1500W)			
	W10196405	Bowl, Drip (8 in)			(Right Front and Left Rear)			
		(Left Front and Right Rear)	W11364019	Element, Coil Heating (2400W)				
3		Cooktop			(Left Front and Right Rear)			
	3186233	Black						
	3186231	White						


CONTROL PANEL PARTS

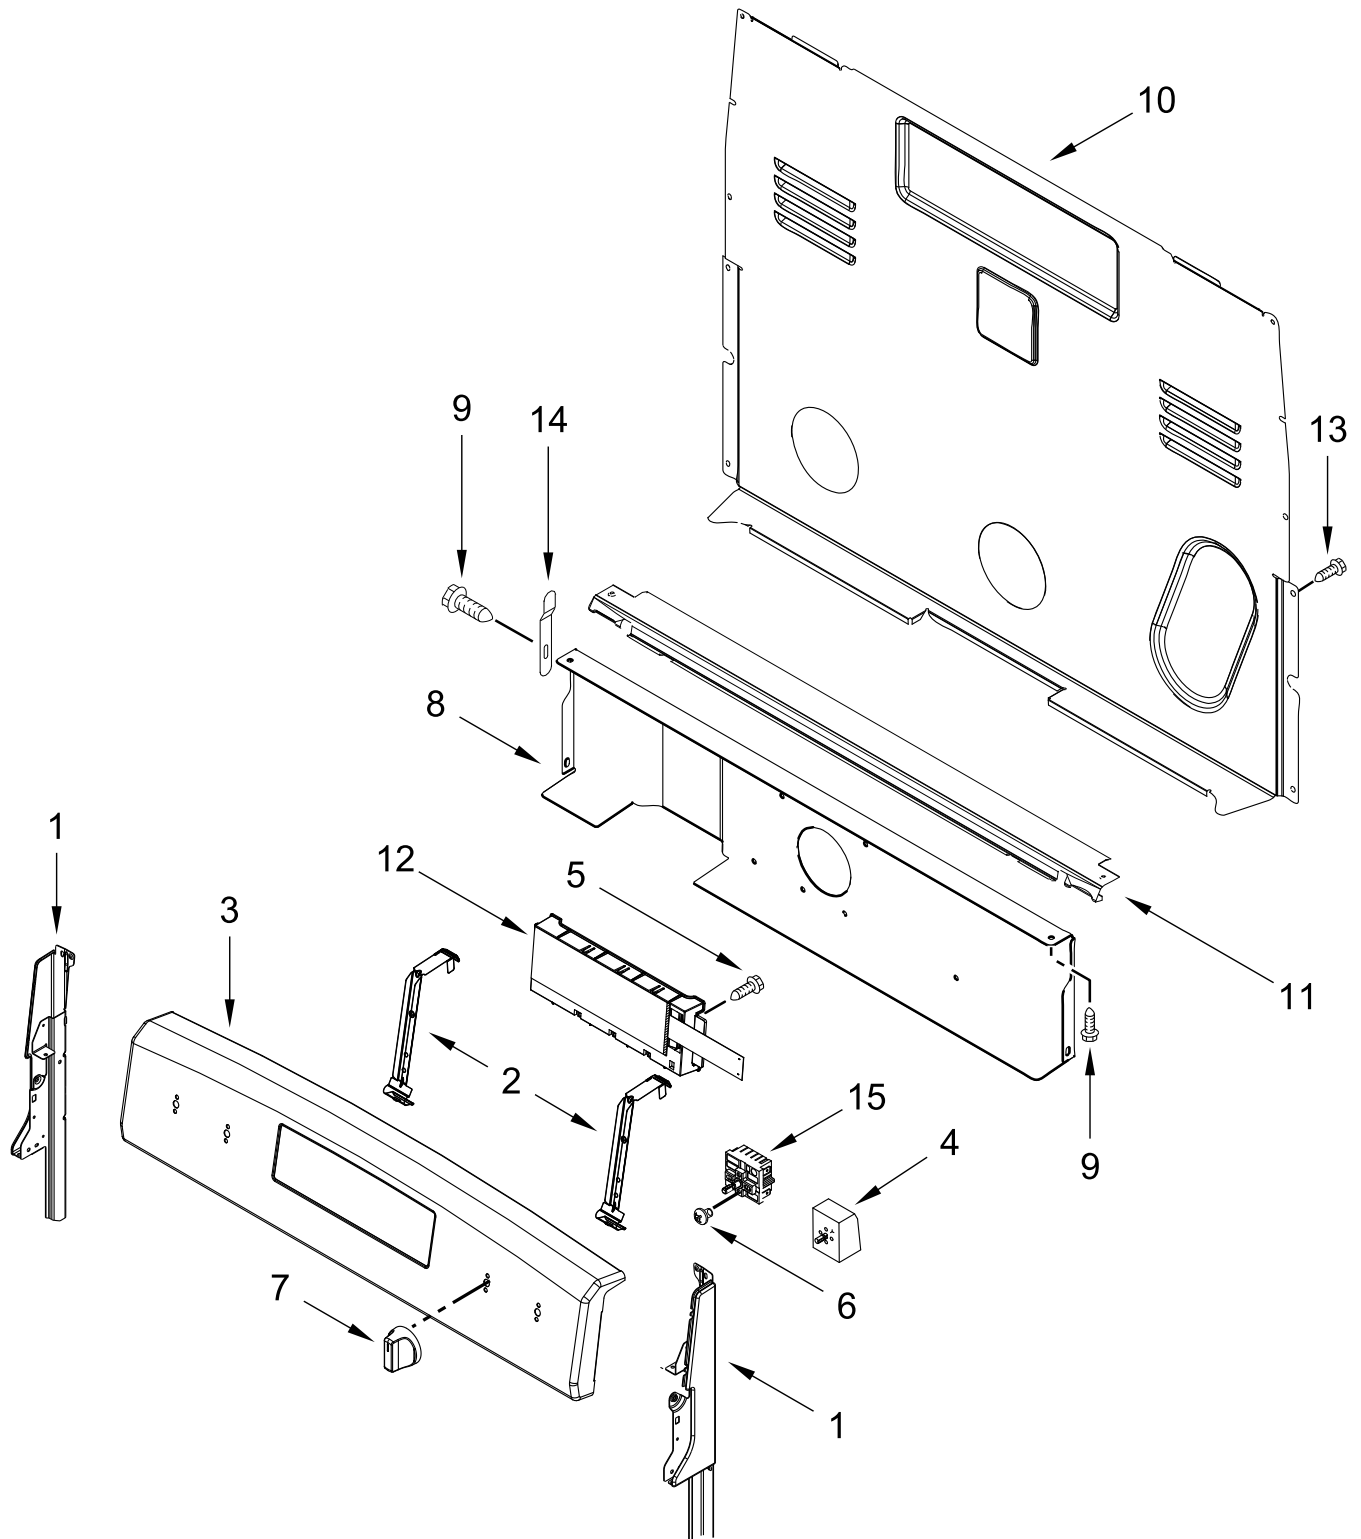

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	6	3400882	Screw	14	3196200	Clip, Spring
	W11130372	Black (Left)	7		Knob, Infinite	15	3148954	Switch, Infinite (Orange)
	W11130371	White (Left)		W11022718	Black			(Right Front and Left Rear)
	W11130379	Black (Right)		W11022720	White			
	W11130378	White (Right)	8	W10134247	Shield, Heat			
2	W10695491	Bracket, Control	9	3196165	Screw			
3		Panel, Control	10	8272473	Cover, Upper Rear			
	W11027440	Black	11	W10525121	Bracket, Console Mounting			
	W11027441	White	12		Control, Electronic (LCX)			
4	3148952	Switch, Infinite (Yellow)		W11515104	Black			
		(Left Front and Right Rear)		W11515105	White			
5	3196169	Screw	13	3196178	Screw			


CHASSIS PARTS

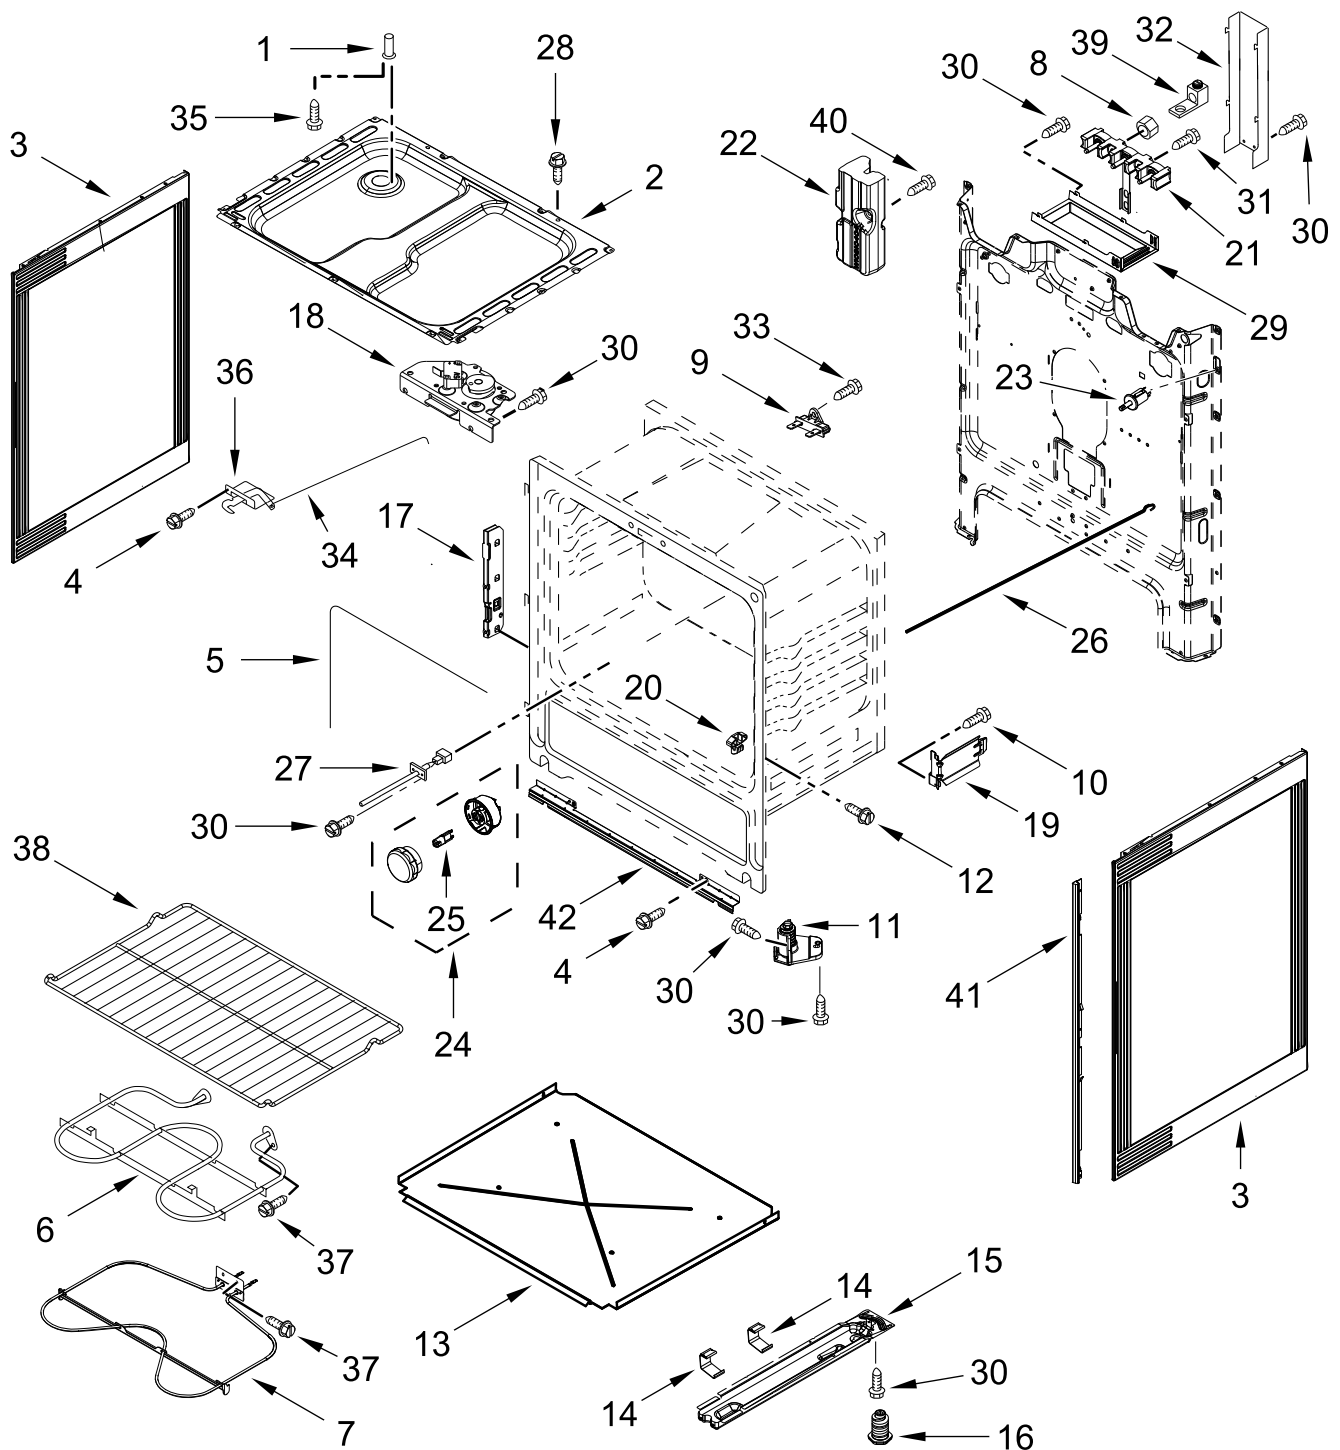

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222268	Vent Tube	17	W10289077	Receiver, Hinge	36	9761013	Front Door Latch Assembly
2	W11380208	Box, Burner	18	W10107820	Rear Door Latch Assembly	37	3196174	Screw
3		Panel, Side	19	W10404688	Clip, Oven Support	38	W11173792	Rack, Oven
	W10162245	Black	20	W10674705	Glide, Drawer Front	39	W10281322	Kit, Bare Wire Adapter Block
	W10575396	White	21	W10245259	Block, Terminal	40	W11034869	Screw
4	3196560	Screw	22	W10910404	Counterweight	41	W11510560	Barrier Rail, Rubber (Left and Right)
5	W11491751	Seal, Door	23	W11511828	Switch, Door	42	W11464547	Bracket, Front Frame
6	W10308476	Element, Broil	24	W11634772	Light Assembly			FOLLOWING PARTS NOT ILLUSTRATED
7	W11022836	Element, Bake	25	W10571723	Bulb, Halogen 40 Watts	W10774939		Insulation, Wrap
8	3400029	Nut	26	9757239	Rod, Door Switch	W11127325		Insulation, Back
9	3196548	Fuse, Thermal	27	W10181986	Sensor, Oven			
10	3196169	Screw	28	3196165	Screw			
11	W10341186	Front Foot Assembly	29	3186034	Bracket, Service			
12	W10067840	Screw	30	3196178	Screw			
13	8054068	Retainer, Insulation	31	3400016	Screw			
14	W10137382	Clip, Panel	32	W10326122	Cover, Terminal Block			
15	W10390008	Base Rail Assembly (Left)	33	3196172	Screw			
	W10390007	Base Rail Assembly (Right)	34	W10078380	Rod, Latch			
16	W10058460	Foot, Leveling	35	3196567	Screw			


DOOR PARTS

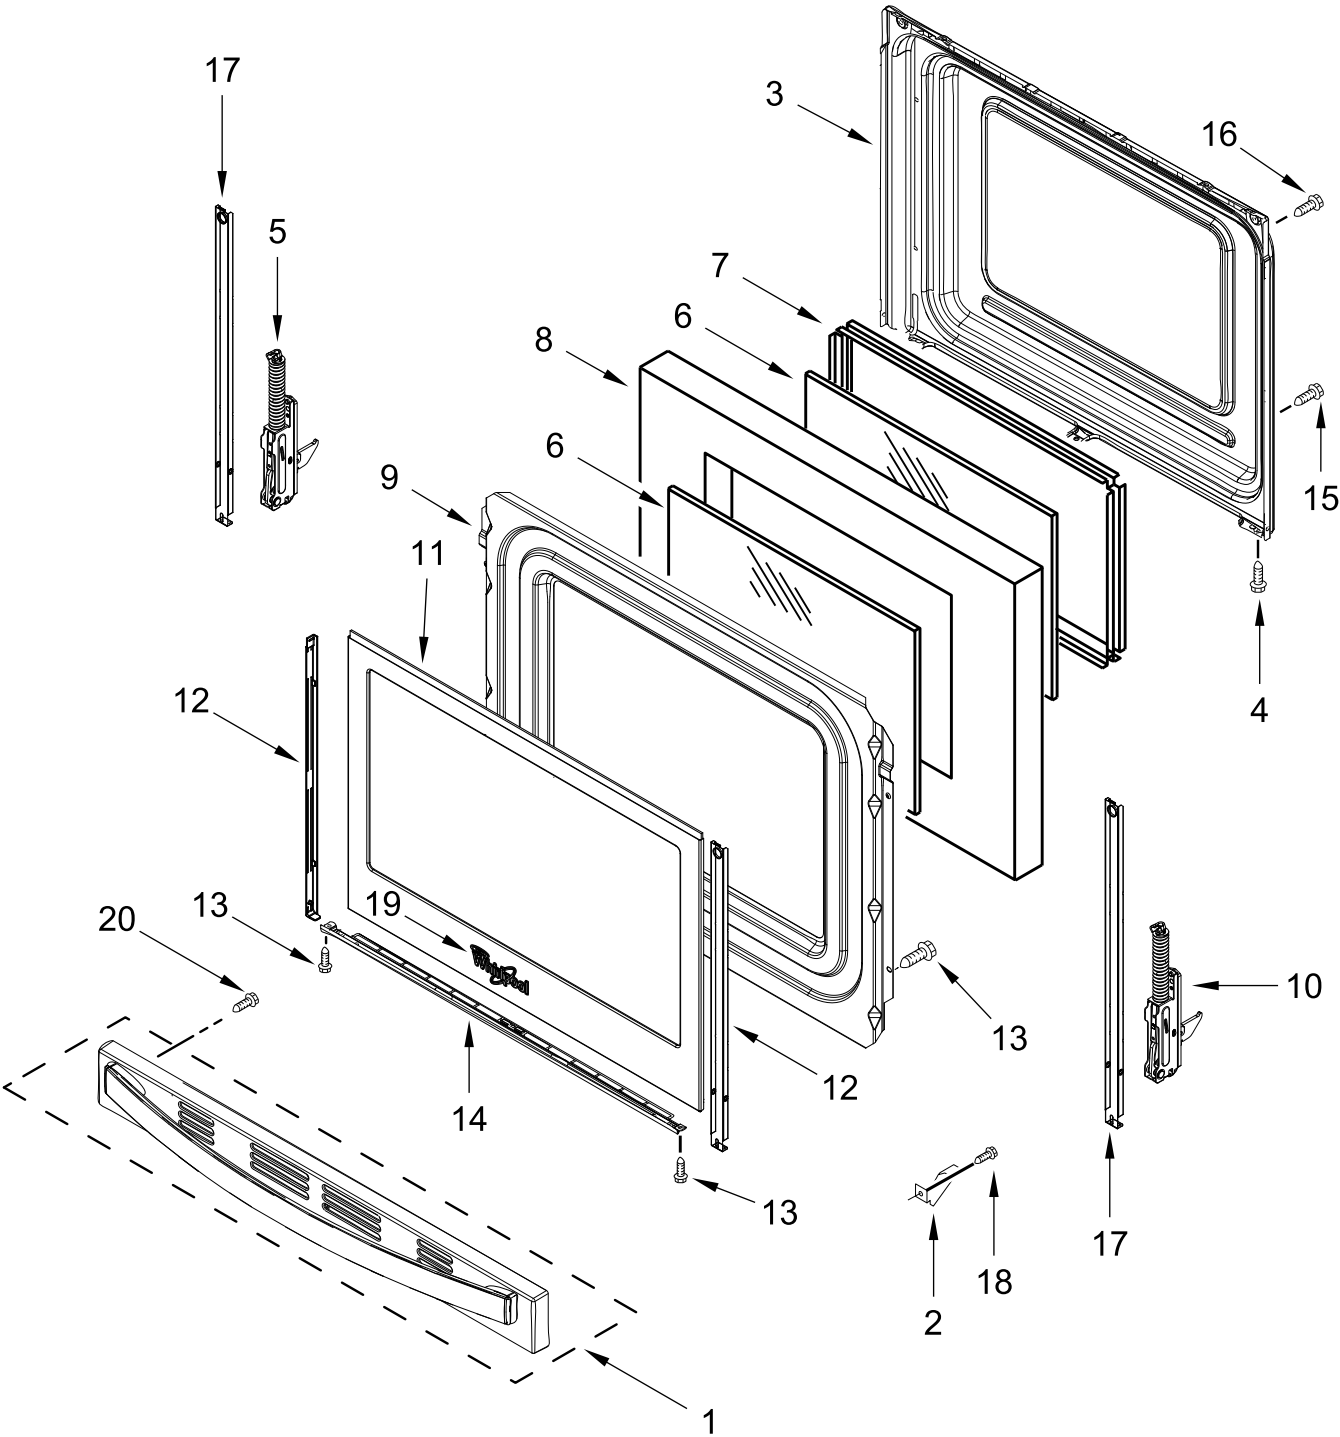

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly	9	W11380222	Retainer, Insulation	14		Trim, Lower
	W11242949	Black	10	W10299226	Hinge, Active		W11444043	Black
	W11242947	White	11		Glass, Outer		W11444042	White
2	W10137382	Clip, Panel		W10409946	Black	15	W10031790	Screw
3	9761344	Liner, Door		W10409945	White	16	W10200660	Screw
4	W10031780	Screw	12		Trim, Side	17	W11379944	Strap, Door
5	W10299227	Hinge, Door (Passive)		W10746436	Black (Left)	18	3196165	Screw
6	9758162	Glass, Inner		8523172	White (Left)	19	W10884775	Badge
7	W10316950	Frame, Glass		W10746435	Black (Right)	20	W10480830	Screw
8	W10278991	Insulation, Door Strip		8523166	White (Right)			
			13	W10327235	Screw			

DRAWER PARTS

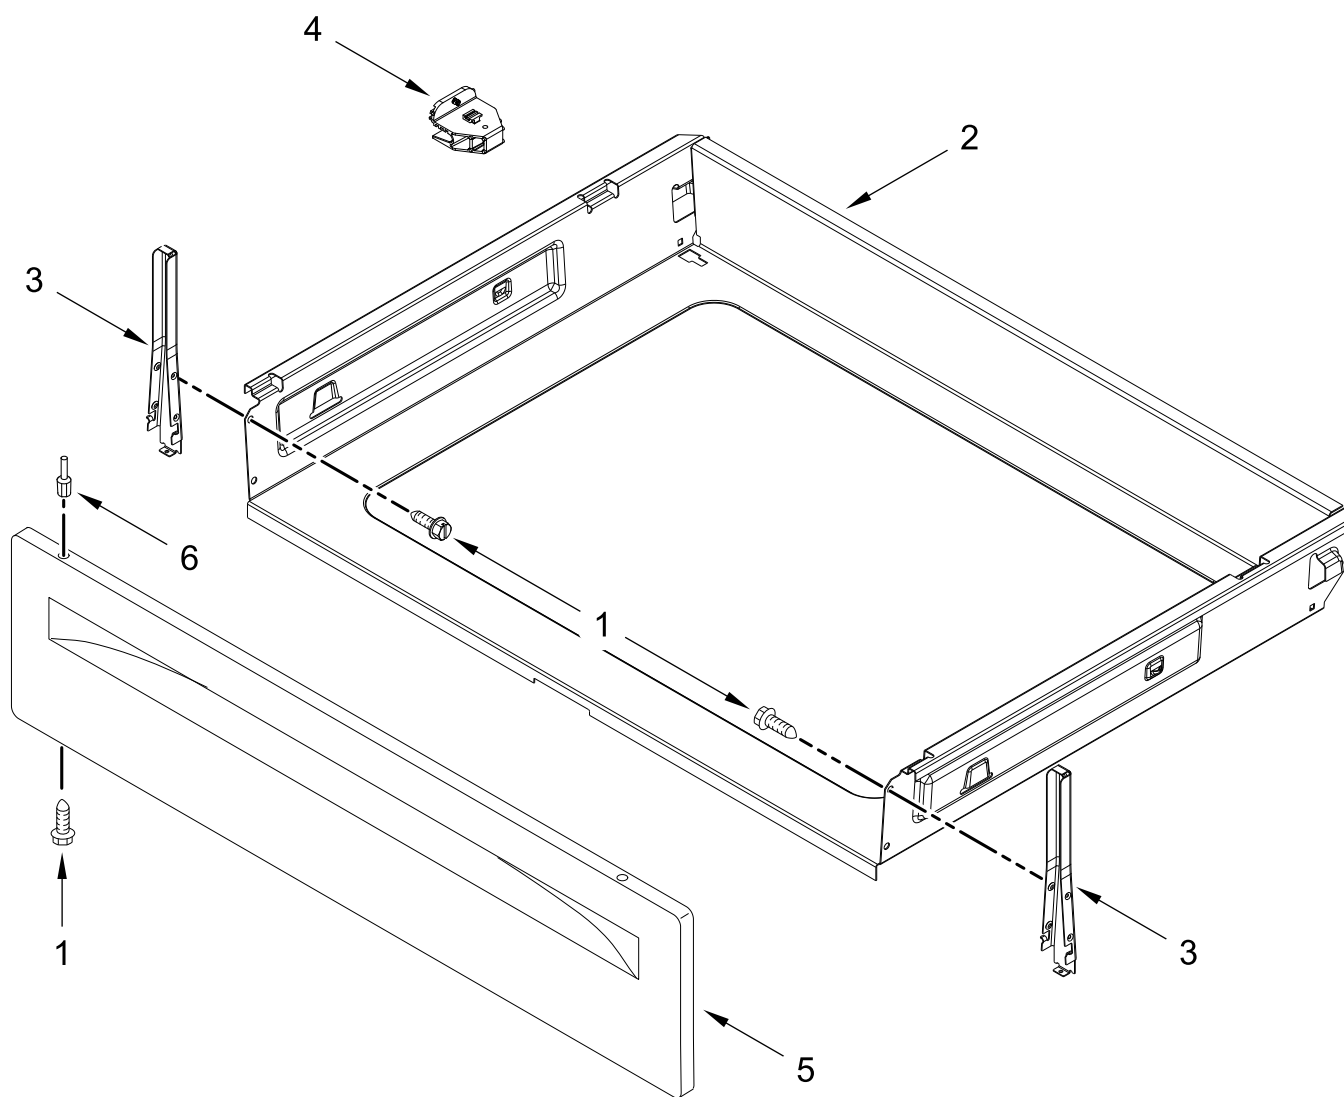

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw	5		Panel, Drawer Front	6		Rivet, Push
2	W10688022	Drawer, Storage		W11123900	Black		3196813	Black
3	W10462912	Bracket, Mounting Drawer		W11123901	White		3196814	Rivet, Plastic (WHITE)
4	W10674708	Glide, Drawer Rear						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	3184478	Cleaner, Glass
	4396923	Broiler Pan and Grid