




30" ELECTRIC SLIDE-IN SELF-CLEAN CONVECTION RANGE

MODELS:

WEEA25H0HZ1 (Stainless)

WEEA25H0HN1 (Sunset Bronze)


COOKTOP PARTS

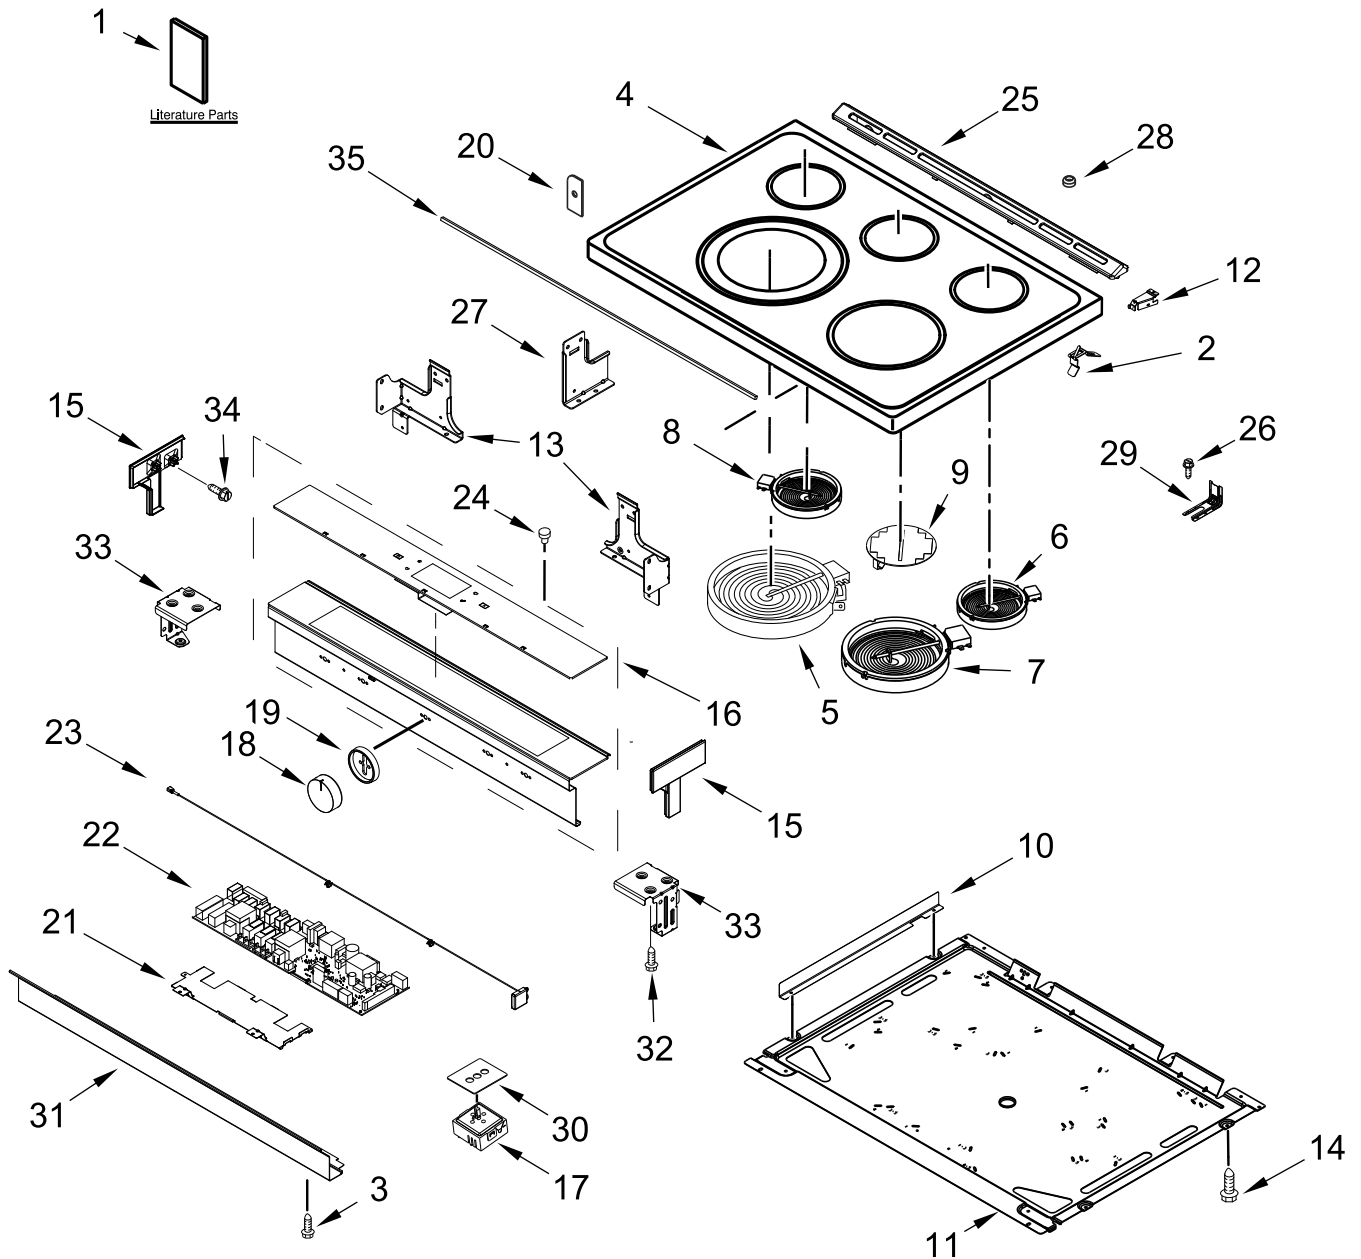

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	15		Endcap	25		Vent, Trim Top
	W11085332	Instructions, Installation		W10854356	Stainless (Left)		W10636528	Black
	W11085352	Use and Care Guide		W10854357	Sunset Bronze (Left)	26	7101P485-60	Screw, Anti-Tip Kit
	W11095707	Sheet, Tech		W10854360	Stainless (Right)	27	W10867600	Bracket, Console (Center)
	W11095651	Wiring, Diagram		W10854361	Sunset Bronze (Right)	28	W10664705	Bumper
	W11097305	Guide, Internet Connectivity	16		Console, Assembly	29	W10606241	Bracket, Anti-Tip
2	W10225448	Spring, Element		W11106694	Stainless	30	7201P077-60	Gasket, Infinite Switch
3	3196178	Screw		W11106695	Sunset Bronze	31		Console, Lower Panel
4		Cooktop	17	W10437092	Switch, Infinite (Right Front)		W10854346	Black
	W10865119	Black		W10578768	Switch, Infinite (Right Rear)	32	3196160	Screw
5	W10187839	Element (3000W) (Left Front)		W10437094	Switch, Infinite (Left Rear)	33	W10828159	Base, Console (Left)
6	8273994	Element (1200W) (Right Rear)		W10437097	Switch, Infinite (Left Front)		W10828160	Base, Console (Right)
7	W10275048	Element (3000/1400W) (Right Front)		W10888698	Switch, Warm Zone (Center)	34	9780274	Screw
8	W10342780	Element (1300W) (Left Rear)	18		Knob	35	W10612719	Gasket, Console/ Cooktop
9	W10799048	Element, Warm Zone (Center Rear)		W11108442	Stainless (Triple)			FOLLOWING PARTS NOT ILLUSTRATED
10	W10613286	Bracket, Radiant		W11108443	Stainless (Warming)		W11176682	Harness, Main
11	W10536275	Pan, Radiant		W11108444	Stainless (Dual)		W11134658	Harness, Cooktop
12	W10162253	Brace, Corner (Left)		W11108445	Stainless (Single)		W11174740	Harness, Console
	W10162252	Brace, Corner (Right)	19		Bezel		W10664316	Clip, Harness (Cooktop)
				W11108447	Stainless		313438	Clip, Harness
13	W10867592	Support, Cooktop (Right)	20	W10882900	Gasket			
	W10867593	Support, Cooktop (Left)	21	W10908536	Bracket, Control			
			22	W10868153	Control, Electronic (Powermax)			
14	3196173	Screw	23	W11223045	Antenna			
			24	3196068	Lens, Indicator			


CHASSIS PARTS

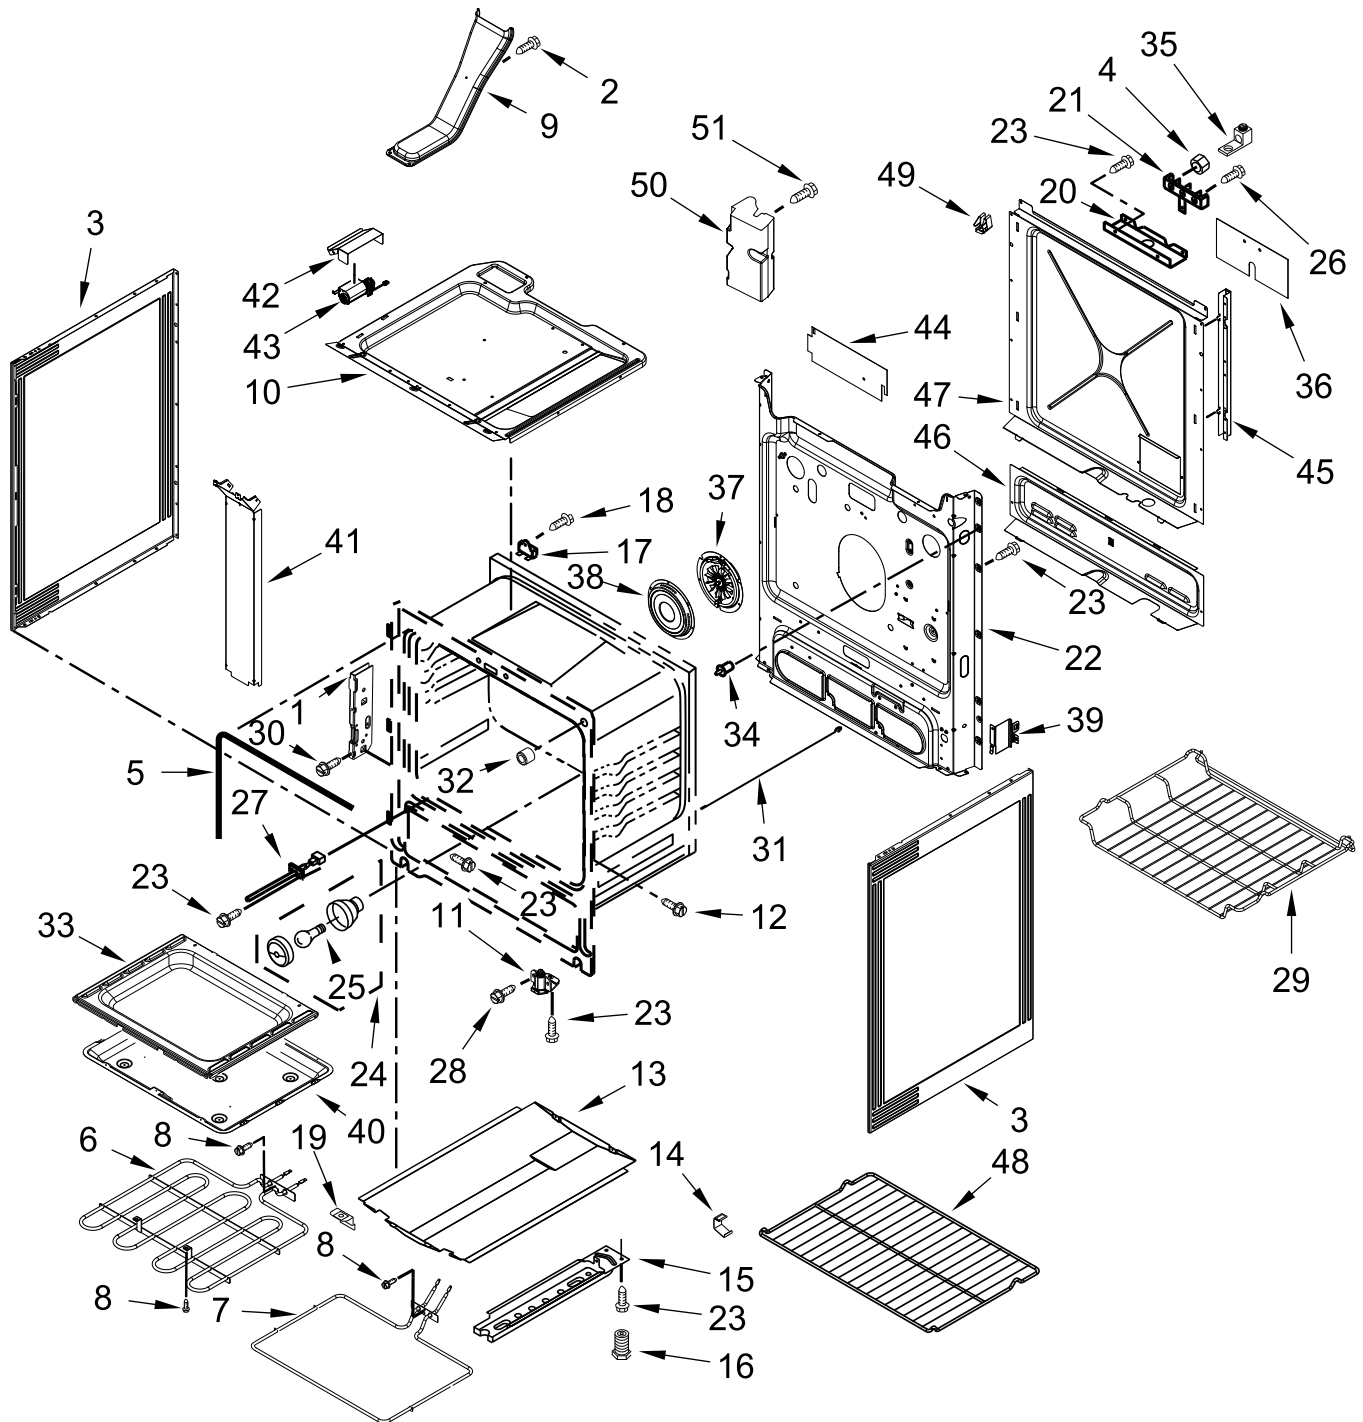

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	20	3186034	Bracket, Service	39	W10273002	Bracket, Oven Support
2	W10362924	Screw	21	W10245259	Block, Terminal	40	W10346147	Pan, Bake
3		Panel, Side	22		Back, Main (Not Serviced)	41	W10162255	Duct, Cover
	W10162245	Black	23	3196178	Screw	42	W10162254	Duct, Cooling
4	3400029	Nut	24	W10454648	Assembly, Light	43	W11190724	Assembly, Cooling Fan
5	W10162385	Gasket, Door	25	311255	Bulb, Oven Light	44	W11117035	Shield, Wire
6	W10544951	Element, Broil	26	3400016	Screw	45	W10162241	Channel, Rear
7	W10774342	Element, Bake	27	W10181986	Sensor, Oven	46	W10162248	Cover, Wire
8	W10362924	Screw	28	3196169	Screw	47	W10849261	Cover, Back
9	W11122085	Assembly, Flue	29	W10289145	Rack, Oven (Gull-Wing)	48	W10531060	Rack, Oven
10	W10289168	Box, Burner SI	30	W10031780	Screw	49	W10866583	Panel, Clip
11	W10341186	Assembly, Front Foot	31	W10273192	Rod, Door Switch	50	W10914589	Counterweight
12	W10067840	Screw	32	9758701	Spacer, Door	51	W11034869	Screw
13	W10541959	Shield, Bake	33	W10774446	Bottom, Oven			FOLLOWING PARTS NOT ILLUSTRATED
14	W10137382	Clip, Panel	34	W10627802	Switch, Door		W10289173	Insulation, Wrap
15	W10390008	Assembly, Base Rail (Left)	35	W10281322	Kit, Bare Wire Adapter Block		W10575374	Insulation, Bottom
	W10390007	Assembly, Base Rail (Right)	36	W10655441	Shield, Power Cord		4820F015-59	Insulation, Strap
16	W10058460	Foot, Leveling	37	W10874477	Assembly, Convection		W10162240	Insulation, Back
17	3196548	Fuse, Thermal	38	W10346154	Cover, Convection		7111P017-60	Clamp, Wire
18	3196172	Screw						
19	W10035900	Support, Oven Bottom						

DOOR PARTS

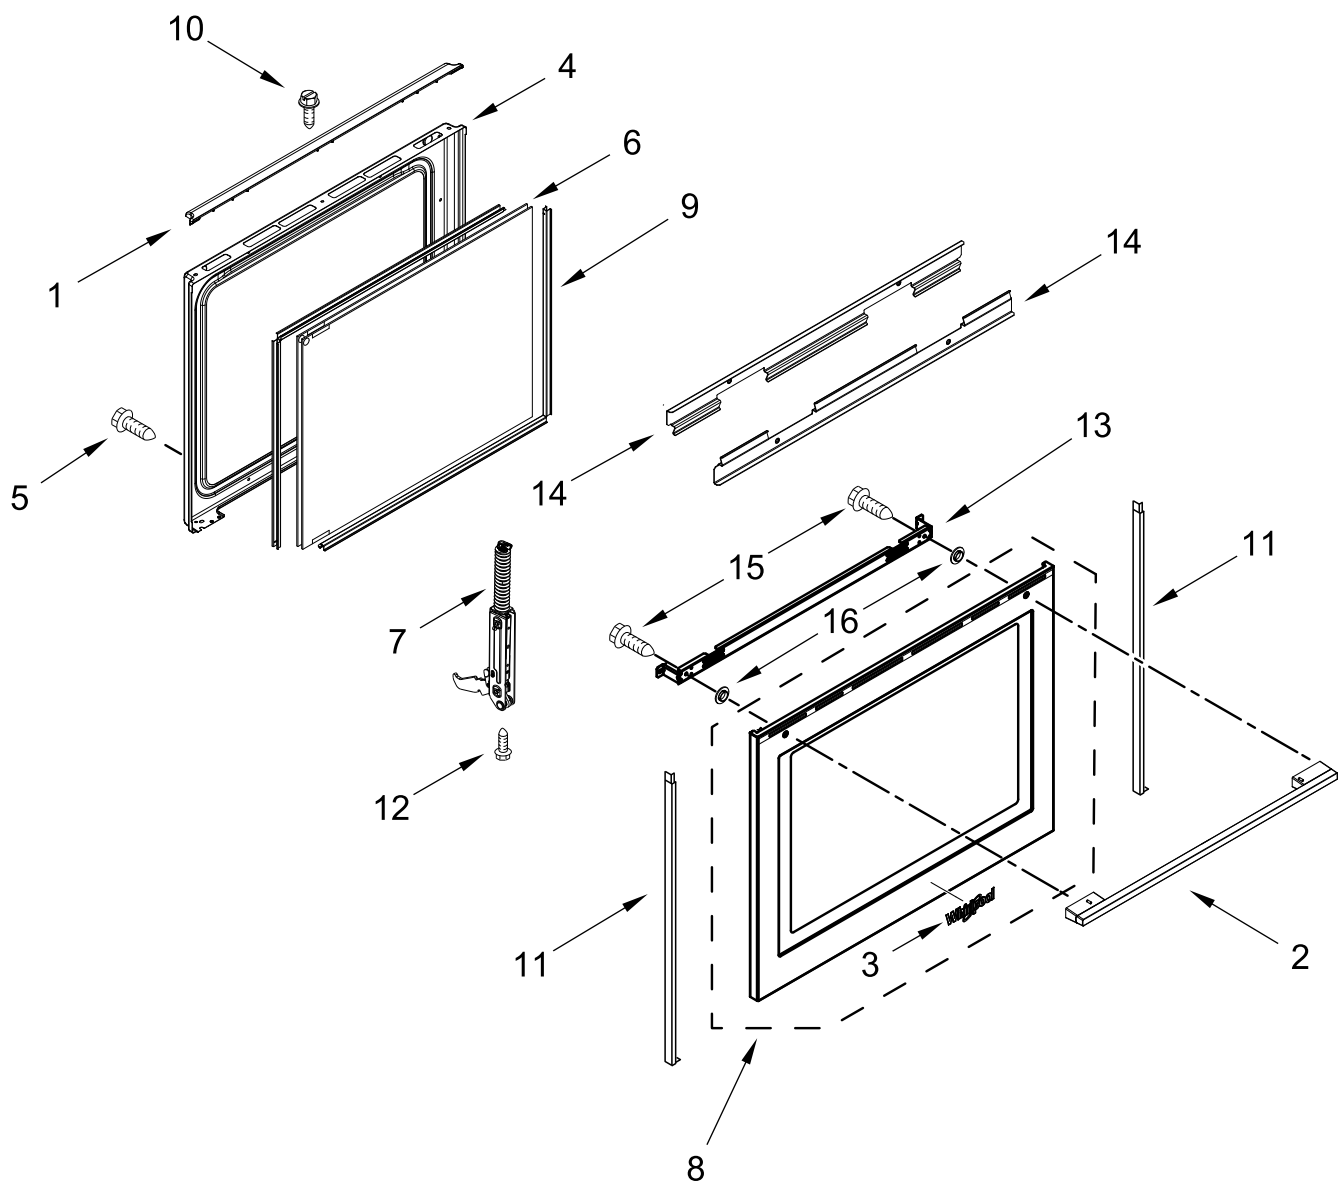


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W10887939	Black
2		Assembly, Door Handle
	W10914779	Stainless
3	W10884775	Nameplate
4	W10826568	Liner, Door
5	W10031790	Screw
6	W11088591	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W11184046	Hinge, Door (Active)
8		Assembly, Outer Door
	W10864214	Stainless
	W10859924	Sunset Bronze
9	W10813142	Spacer, Glass
10	W10327235	Screw
11	W10813139	Rail, Vertical Support
12	W10031780	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10541911	Bracket, Glass Upper Handle
14	W10813140	Rail, Horizontal Support
15	W11091878	Screw
16	W10319024	Washer, Door

DRAWER PARTS

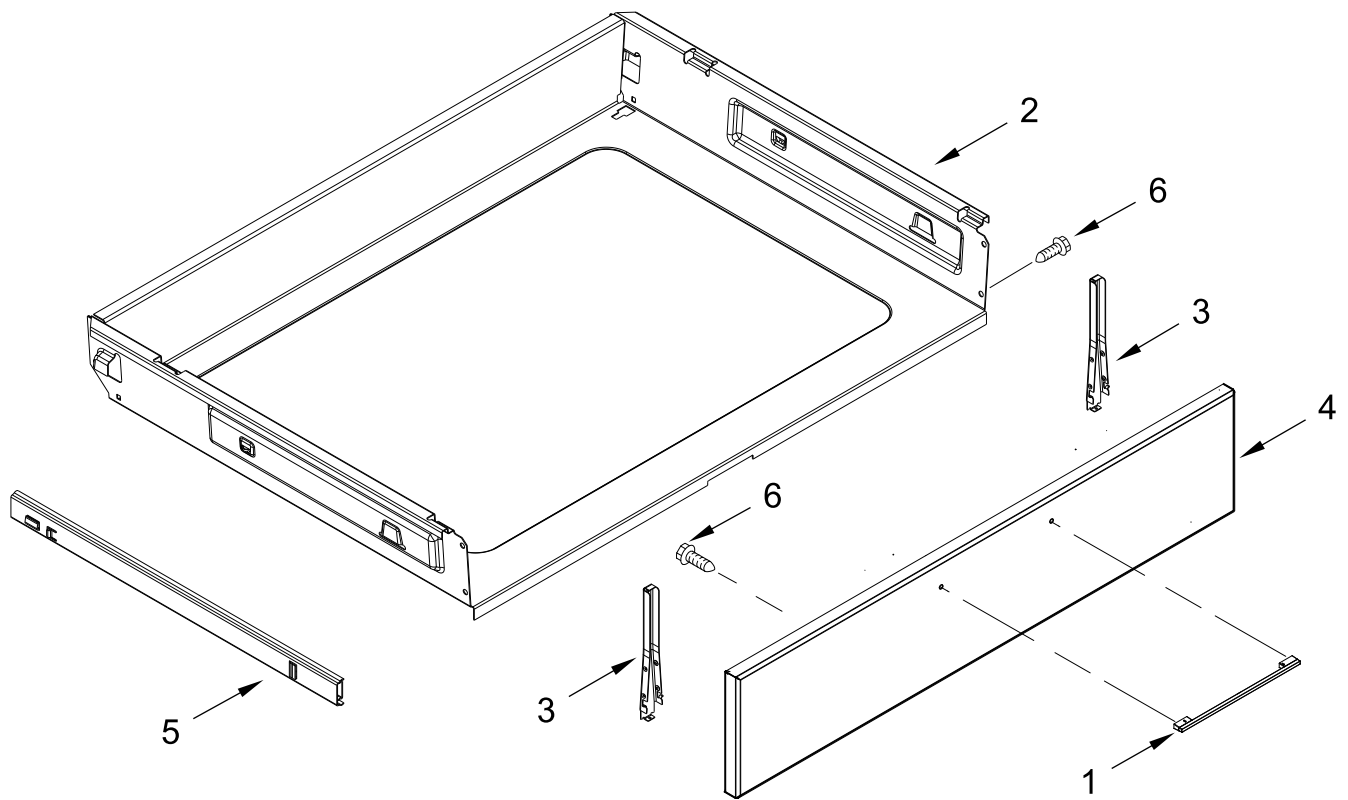

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer
	W11082254	Stainless
2	W10688022	Drawer, Storage
3	W10318026	Bracket, Mounting

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4		Panel, Drawer Front
	W11039972	Stainless
	W11039973	Sunset Bronze

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
6	3196169	Screw

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10391473	Pad, Cooktop Cleaning
	31605	Kit, Cooktop Care
	W10432019	Alt Cleaning Kit
	W10355049	Wipes, Stainless Steel Cleaning
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	242905	Kit, Canning Unit
	W10432539	Griddle
	4396927	Rack, Oven (Split)
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	W10432545	Kit, Grill Assembly, Trim
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")