




30" ELECTRIC FREESTANDING SELF CLEAN RANGE

MODELS:

ACR4503SFB7 (Black)
ACR4503SFW7 (White)


COOKTOP PARTS

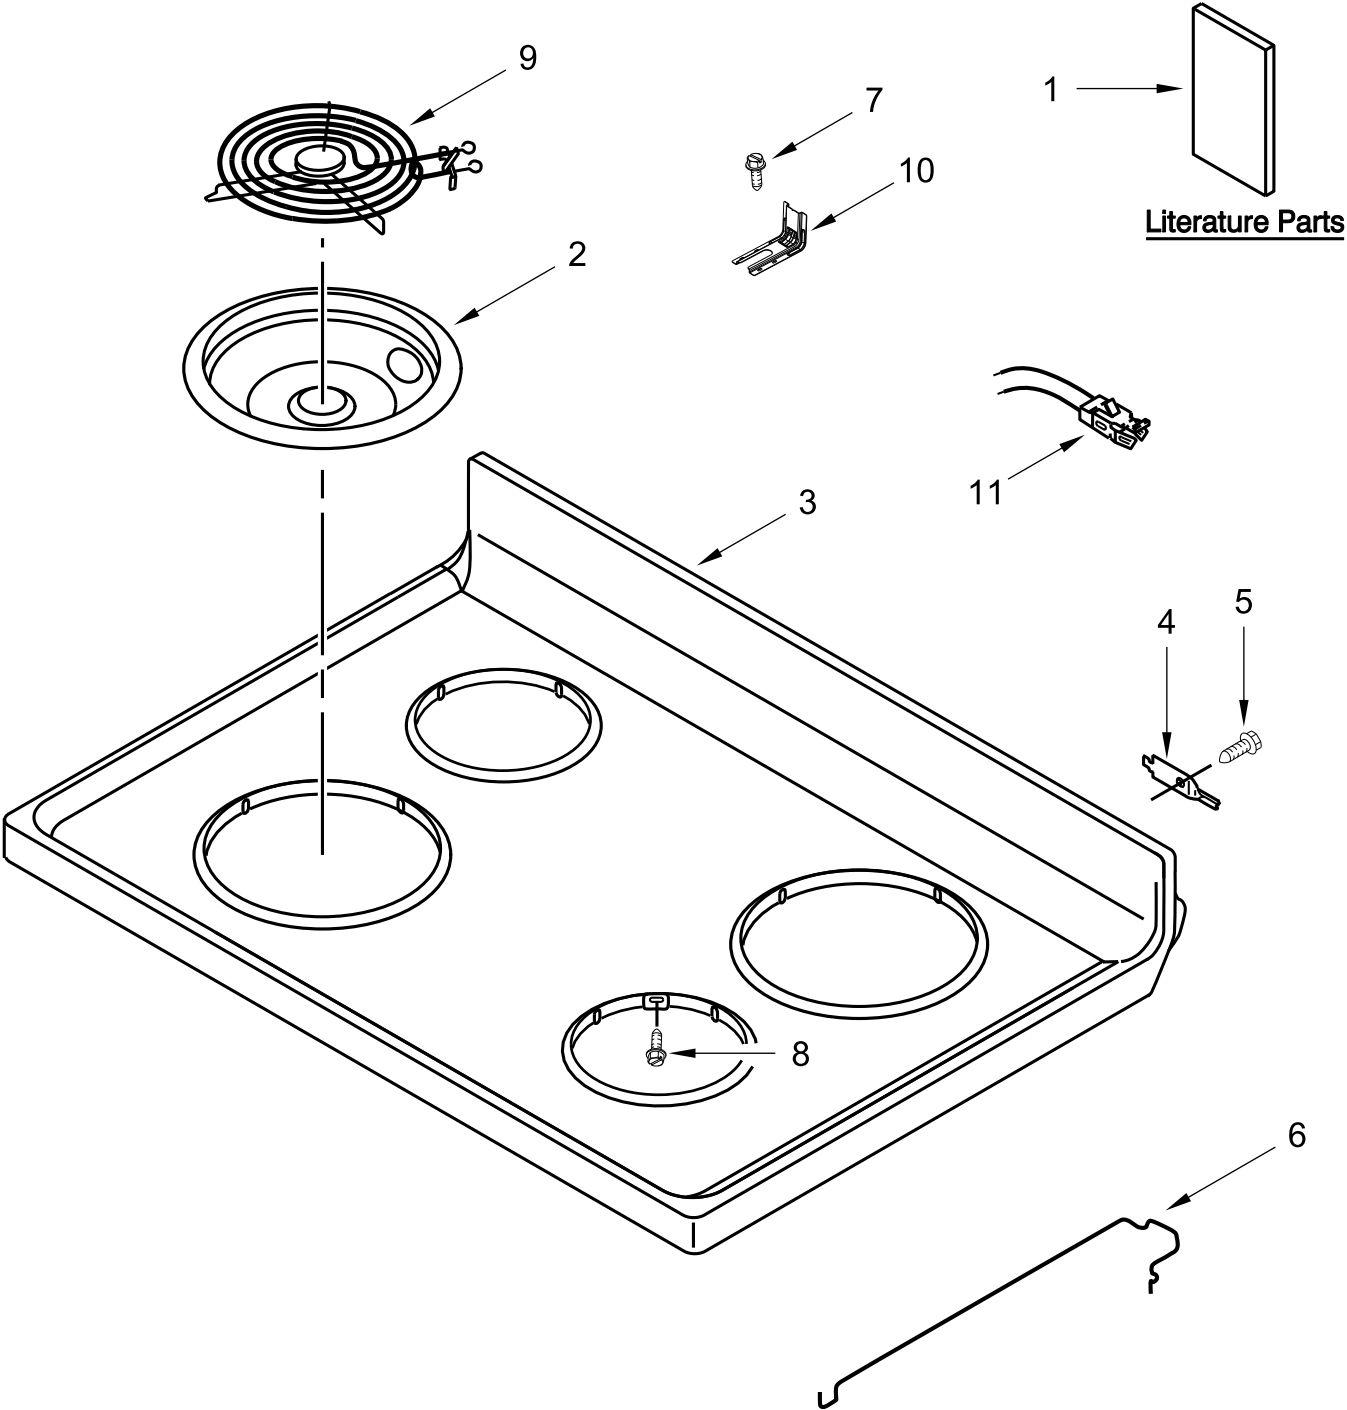

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	3196178	Screw	11	814399	Receptacle, Element
	W11509598	User Instructions	6	3195812	Rod, Support			FOLLOWING PARTS NOT ILLUSTRATED
	W11401730	Tech Sheet	7	7101P485-60	Screw, Anti-Tip Kit			
2	W10196406	Bowl, Drip (6") (Right Front and Left Rear)	8	3196154	Screw	W11452636		Harness, Wire (Main)
	W10196405	Bowl, Drip (8") (Left Front and Right Rear)	9	W11364018	Element, Coil Heating (1500W) (Right Front and Left Rear)	W11134595		Harness, Cooktop
				W11364019	Element, Coil Heating (2400W) (Left Front and Right Rear)			
3		Cooktop						
	3186233	Black						
	3186231	White						
4	3195060	Hinge, Cooktop	10	W11379945	Bracket, Anti-Tip			


CONTROL PANEL PARTS

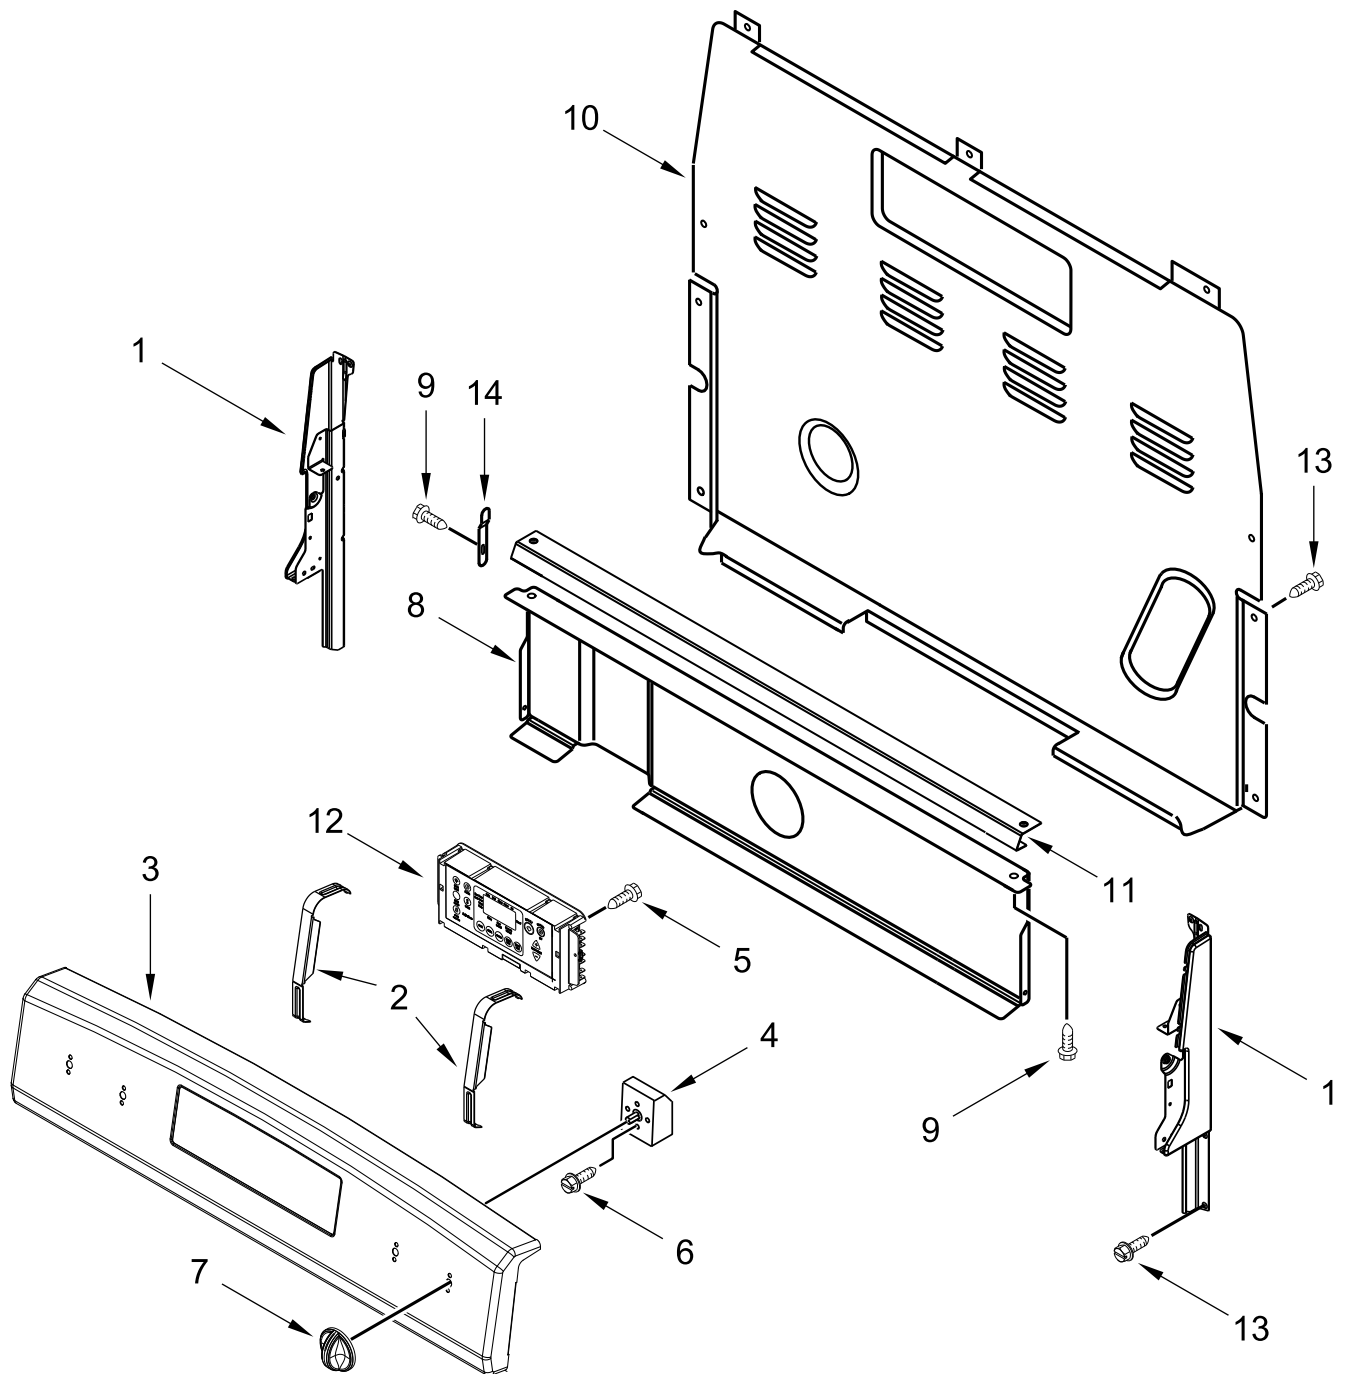

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148952	Switch, Infinite (Yellow)	8	W10134247	Shield, Heat
	W11130372	Black (Left)			(Right Front and Left Rear)	9	3196165	Screw
	W11130379	Black (Right)				10	8272473	Cover, Upper Rear
	W11130371	White (Left)				11	W10525121	Bracket, Console Mounting
	W11130378	White (Right)		3148954	Switch, Infinite (Orange)	12		Control, Electronic
2	W10695491	Bracket, Control			(Left Front and Right Rear)		W11515098	Black
3		Panel, Control					W11515099	White
	W11157013	Black	5	3196169	Screw	13	3196178	Screw
	W11157012	White	6	3400882	Screw	14	3196200	Clip, Spring
			7		Knob, Infinite			
				W10844801	Black			
				W10844800	White			


CHASSIS PARTS

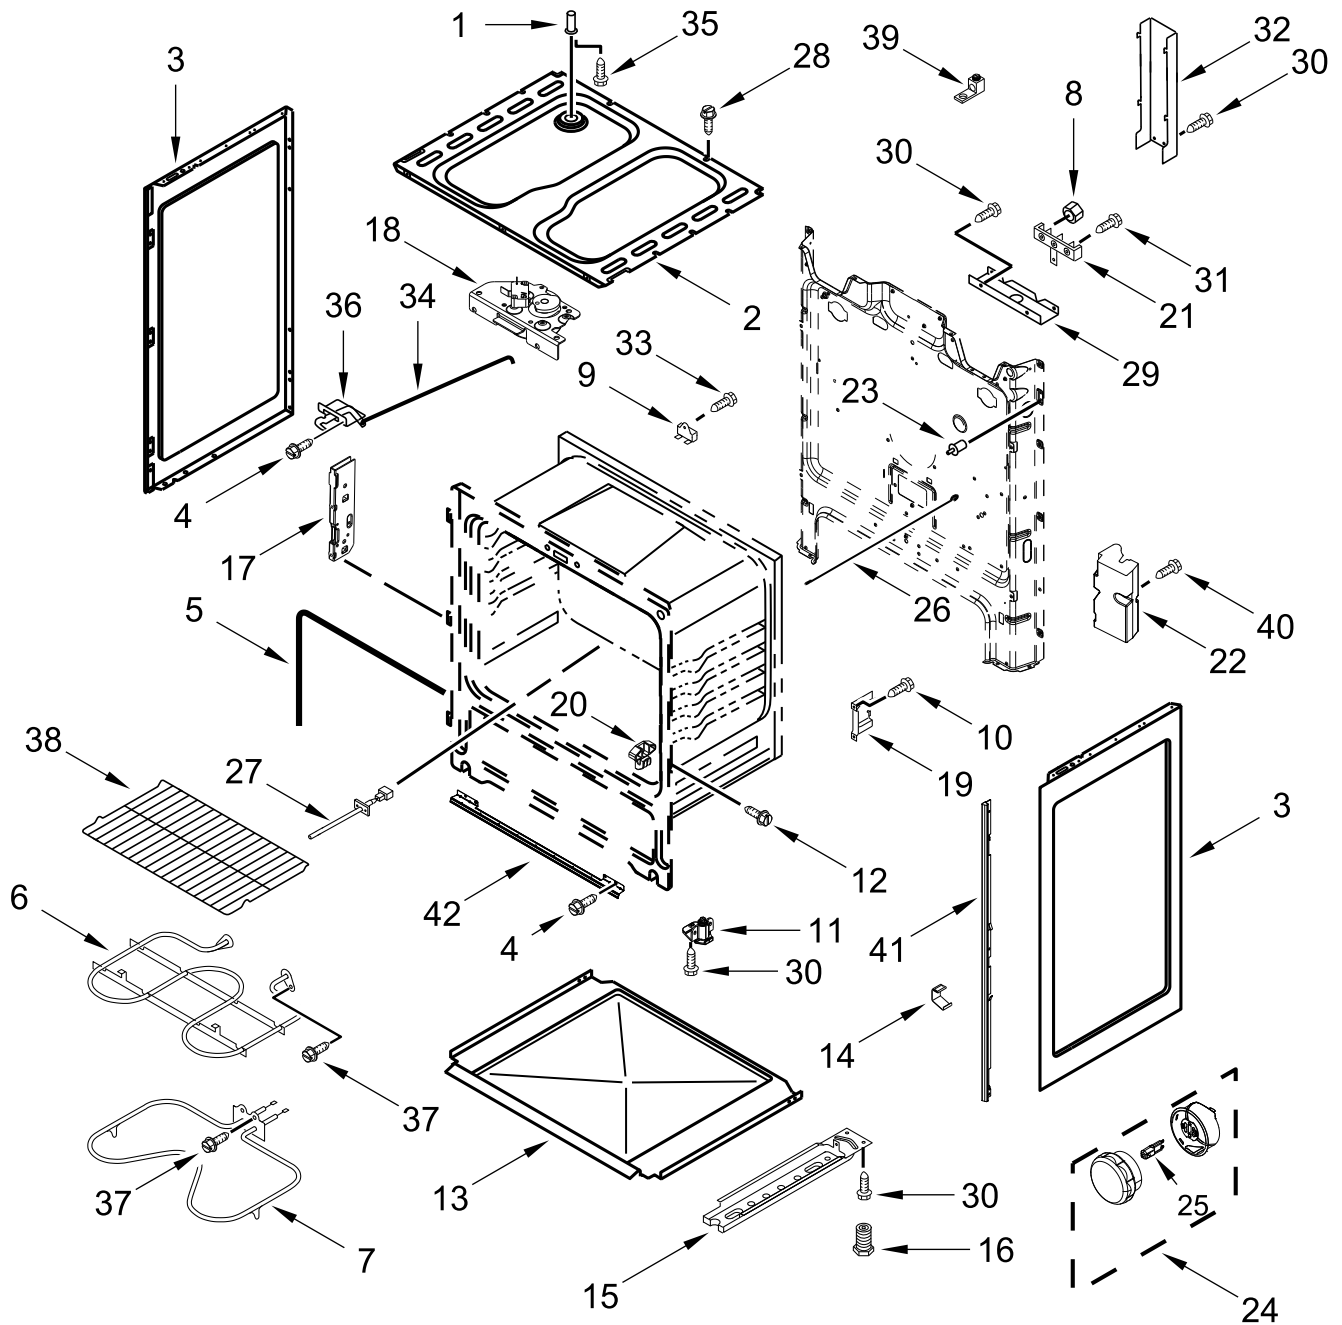

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222268	Vent Tube	17	W10289077	Receiver, Hinge	36	9761013	Front Door Latch Assembly
2	W10209613	Box, Burner	18	W10107820	Rear Door Latch Assembly	37	3196174	Screw
3		Panel, Side	19	W10404688	Clip, Oven Support	38	W11173792	Rack, Oven
	W10162245	Black	20	W10674705	Glide, Drawer Front	39	W10281322	Kit, Bare Wire Adapter Block
	W10575396	White	21	W10245259	Block, Terminal	40	W11034869	Screw
4	3196560	Screw	22	W10910404	Counterweight	41	W11510560	Barrier Rail, Rubber (Left & Right)
5	W11491751	Seal, Door	23	W10627802	Switch, Door	42	W11464547	Bracket, Front Frame
6	W10308476	Element, Broil	24	W11544377	Light Assembly			FOLLOWING PARTS NOT ILLUSTRATED
7	W11022836	Element, Bake	25	W10571723	Bulb, Halogen 40 Watts			
8	3400029	Nut	26	9757239	Rod, Door Switch			
9	3196548	Fuse, Thermal	27	W10181986	Sensor, Oven	W10774939		Insulation, Wrap
10	3196169	Screw	28	3196165	Screw	W11127325		Insulation, Back
11	W10341186	Front Foot Assembly	29	3186034	Bracket, Service			
12	W10067840	Screw	30	3196178	Screw			
13	8054068	Retainer, Insulation	31	3400016	Screw			
14	W10137382	Clip, Panel	32	W10326122	Cover, Terminal Block			
15	W10390008	Base Rail Assembly (Left)	33	3196172	Screw			
	W10390007	Base Rail Assembly (Right)	34	W10078380	Rod, Latch			
16	W10058460	Foot, Leveling	35	3196567	Screw			

DOOR PARTS

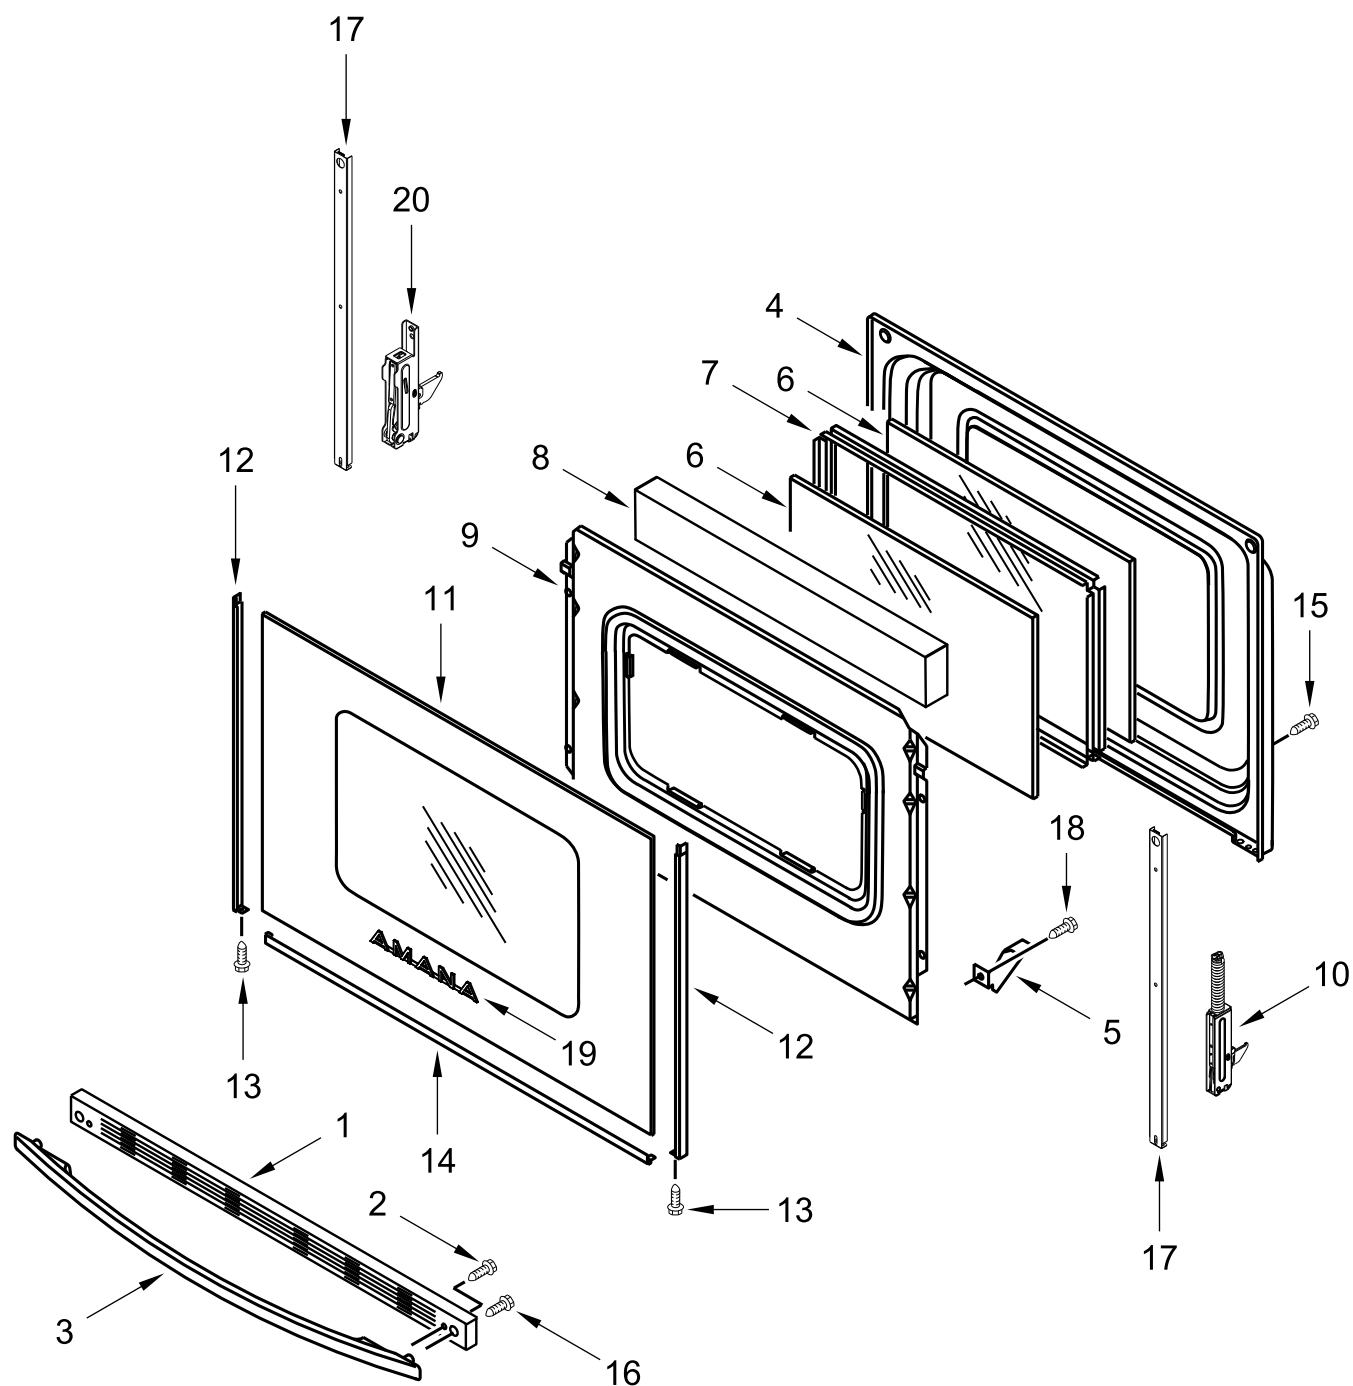

DOOR PARTS

Illus.
No. **Part No.** **Description**

1		Trim, Top
	W10310922	Black
	W10310920	White
2	W10168559	Screw
3		Handle, Door
	W10323589	Black
	W10323588	White
4	9761344	Liner, Door
5	W10137382	Clip, Panel
6	9758162	Glass, Inner
7	W10316950	Frame, Glass
8	W10278991	Insulation, Door Strip


Illus.
No. **Part No.** **Description**

9	9761357	Retainer, Insulation
10	W10299226	Hinge, Active
11		Glass, Outer
	W10831686	Black
	W10851723	White
12		Trim, Side
	W10746435	Black (Right)
	W10746436	Black (Left)
	8523166	White (Right)
	8523172	White (Left)
13	W10327235	Screw

Illus.
No. **Part No.** **Description**

14		Trim, Lower
	W11444043	Black
	W11444042	White
15	W10031790	Screw
16	W10200660	Screw
17	W11379944	Strap, Door
18	3196165	Screw
19		Badge
	W10846751	Black
	W10849465	White
20	W10299227	Hinge, Door (Passive)

DRAWER PARTS

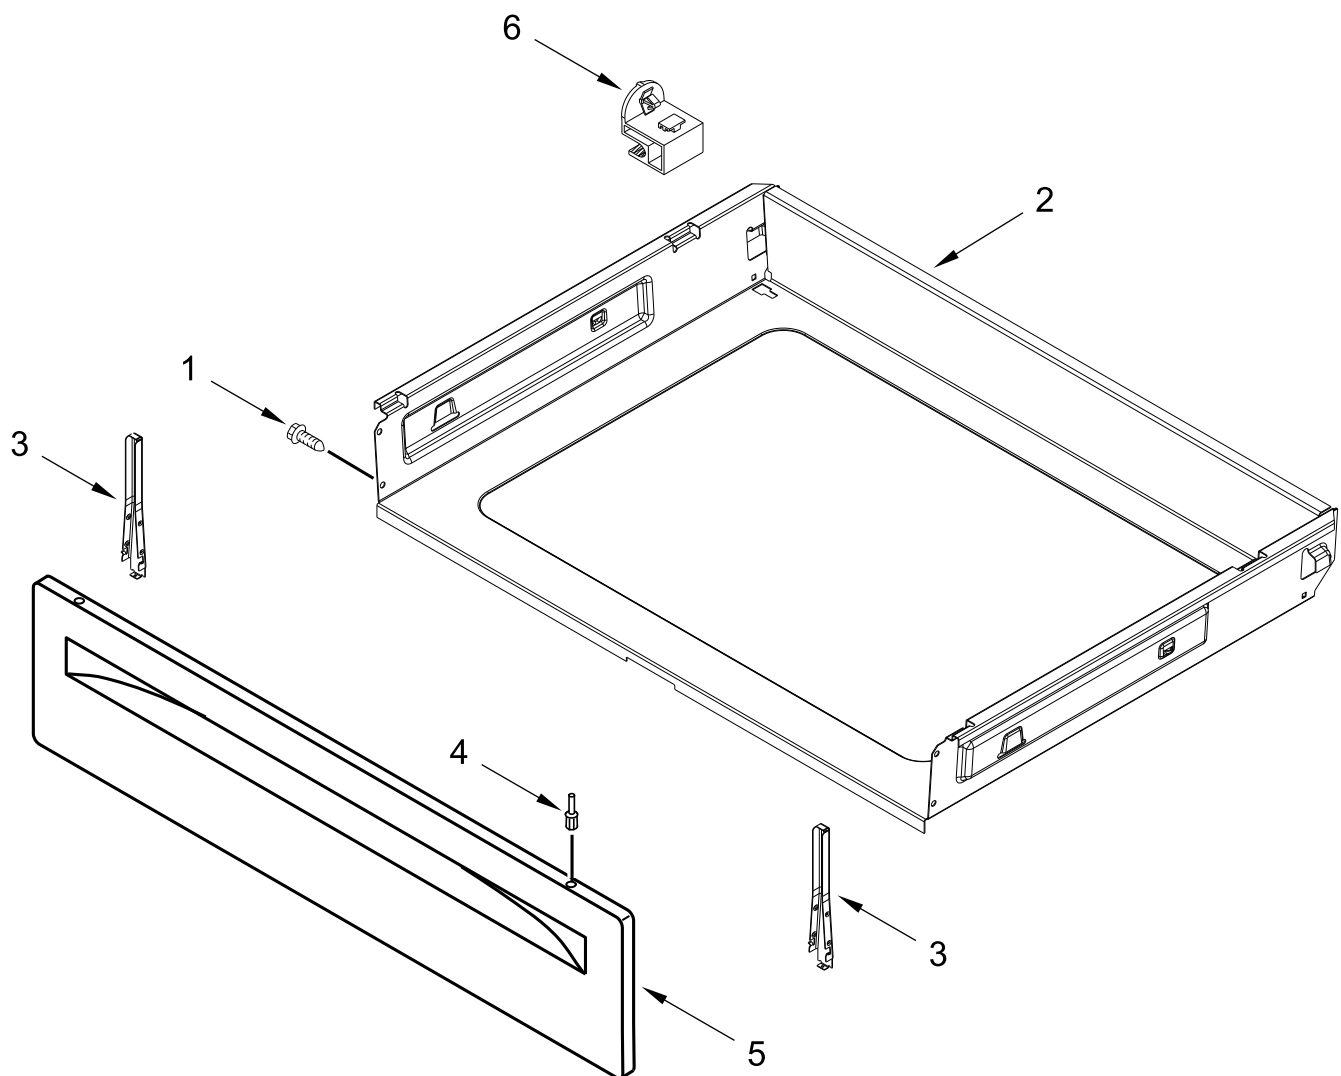

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw
2	W10688022	Drawer, Storage
3	W10462912	Bracket, Mounting Drawer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4		Rivet, Push
	3196813	Black
	3196814	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W11123900	Black
	W11123901	White
6	W10674708	Glide, Drawer Rear

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	3184478	Cleaner, Glass
	4396923	Broiler Pan and Grid