




36" DUAL-FUEL FREESTANDING RANGE WITH 6 BURNERS

MODELS:

KFDC506JIB01 (Ink Blue)


BURNER BOX PARTS

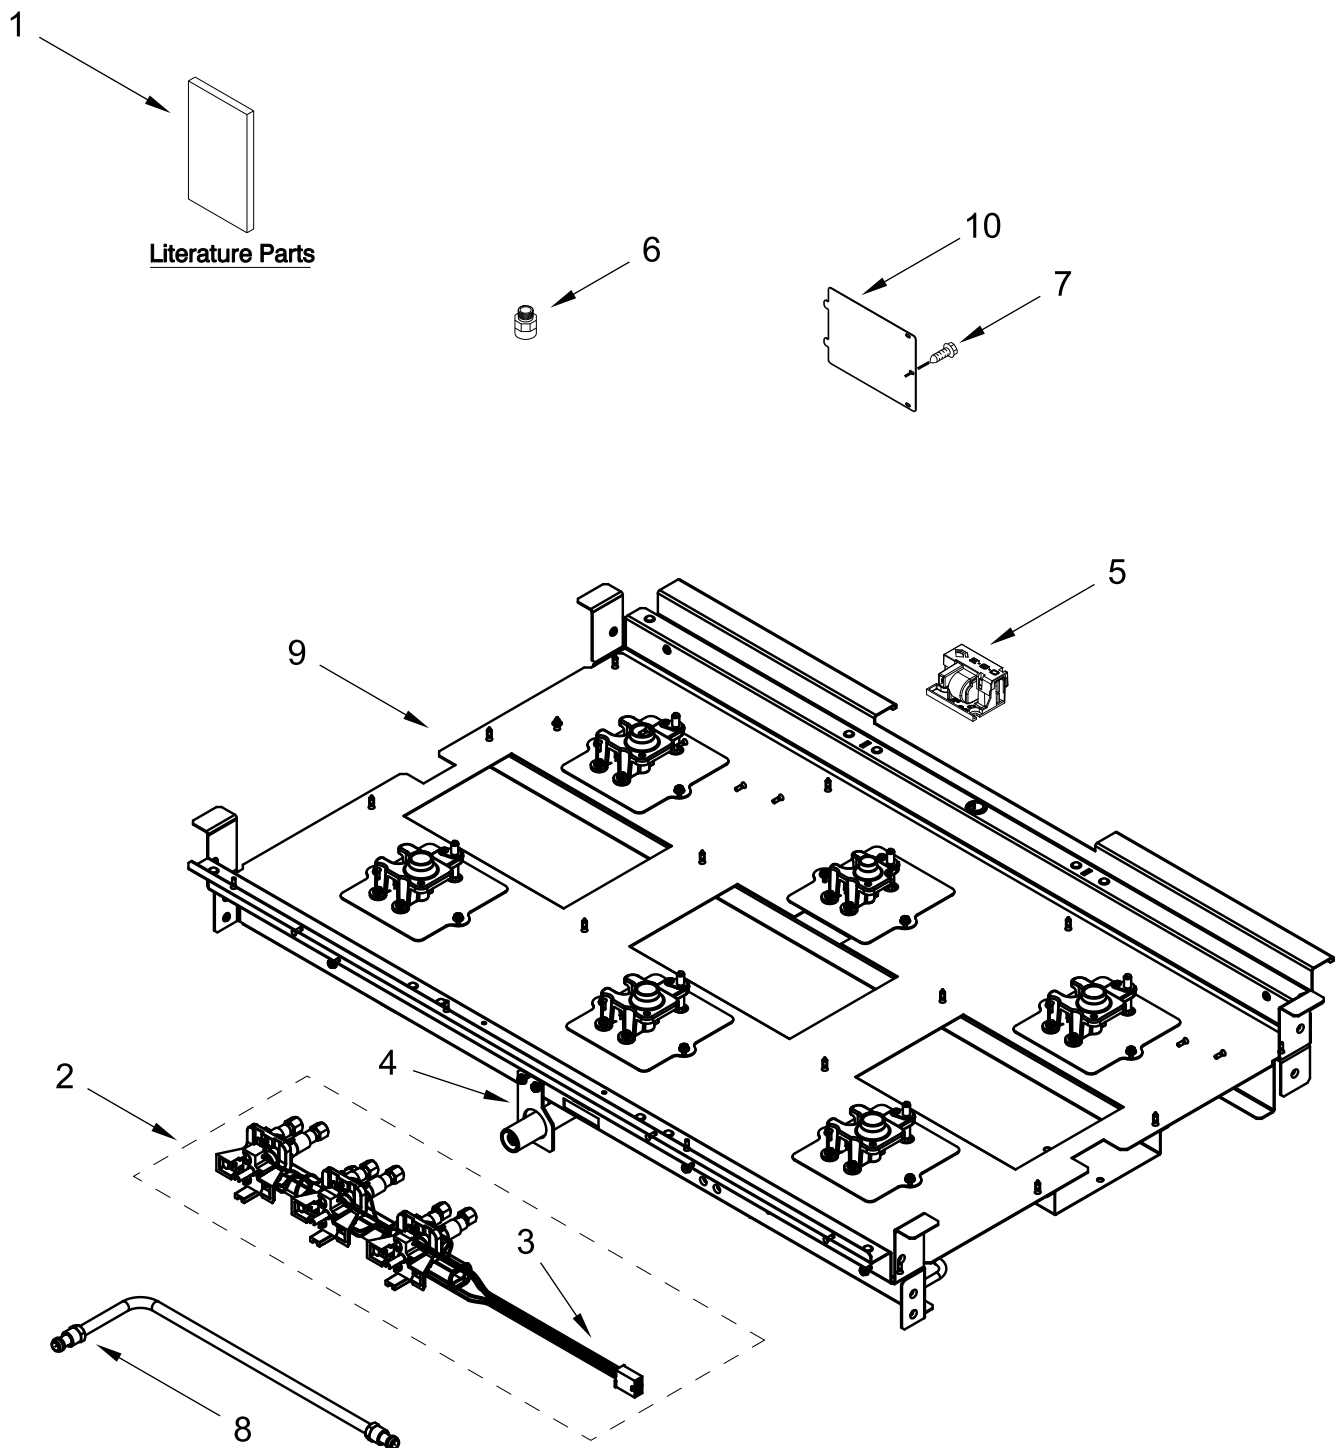

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2	W10892995	Assembly, Valve Manifold	10	W10115843	Cover, Ignition
	W11114331	Guide, Use And Care			(Left Front, Left Rear, Center Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11114334	Instructions, Installation		W10893005	Assembly, Valve Manifold		W11200303	Harness, Main (36")
	W11184759	Guide, Internet Connectivity			(Center Front, Right Front, Right Rear)		W11200332	Harness, Cooktop
	W11202391	Diagram, Wiring (Cooktop)					W10780278	Harness, Door Lock
	W11202385	Diagram, Wiring (Oven)	3	W10903729	Switch, Harness		W11200325	Harness, Communication
	W11202289	Sheet, Tech	4	W11121194	Bracket, Manifold		W11242785	Harness, WIFI
	W11114332	Guide, Quick Start	5	W11121317	Module, Spark		W11212216	Cord, Power
			6	4453116	Adapter, Male		9759877	Retainer, Strain Relief
			7	7101P426-60	Screw		4450800	Screw, Grounding
			8	W10892073	Tube, Manifold Supply (Left)		W10253333	Bracket, Anti-Tip
				W10892334	Tube, Manifold Supply (Right)		7101P485-60	Screw, Anti-Tip Kit
			9		Box, Burner (Not Serviced)		W11238042	Kit, LP Conversion


COOKTOP, BURNER AND GRATE PARTS

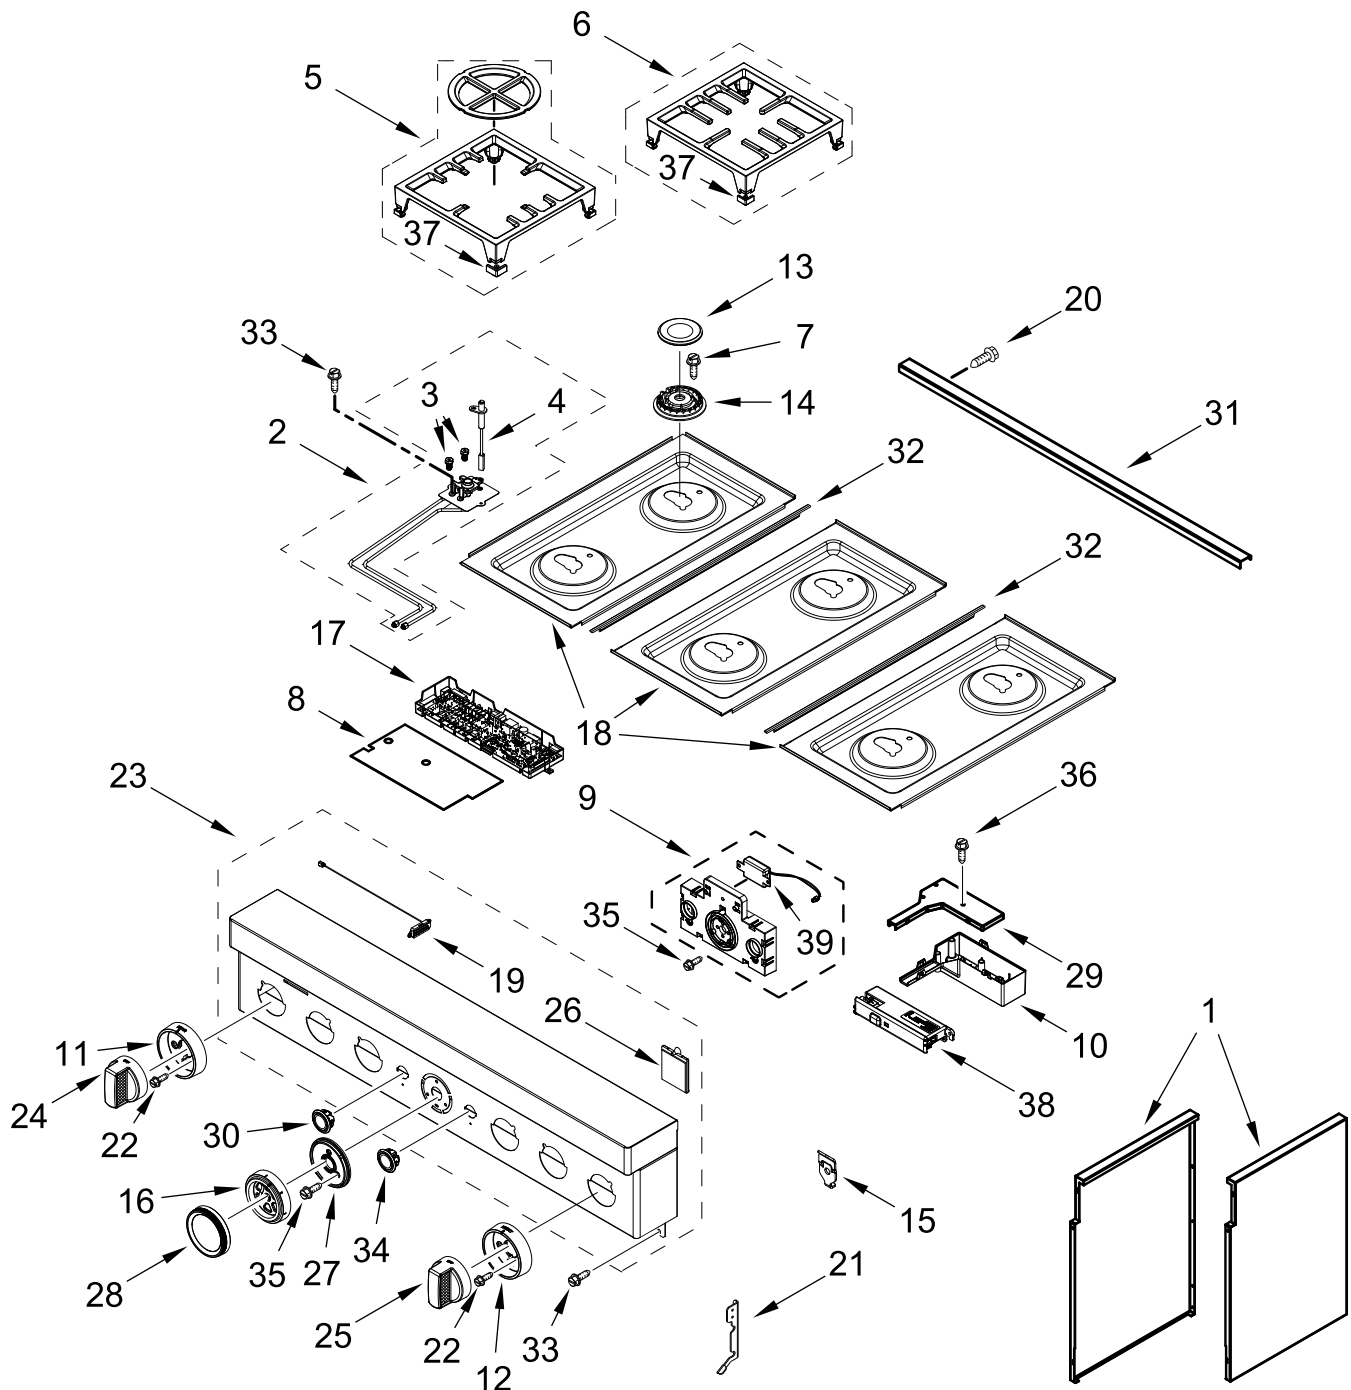

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	5	W11291183	Burner, Grate (With Wok Ring)	21	W10130760	Bracket, Moving Console (Left)
	W11106880	Panel, Cabinet Side (Right)	6	W11291179	Burner, Grate		W10130759	Bracket, Moving Console (Right)
2	W10892774	Assembly, Orifice Holder (Left Front)	7	W11323261	Screw (8-18 X 1")	22	W11328357	Screw
	W10892492	Assembly, Orifice Holder (Left Rear)		W11323309	Screw (8-18 X 1/2")	23	W10877950	Panel, Console
	W11159467	Assembly, Orifice Holder (Center Front)	8	W11281269	Barrier, Appliance Manager	24		Knob, Single
	W10892725	Assembly, Orifice Holder (Center Rear)	9	W11436332	Interface, User		W10912166	Stainless Knob, Dual
	W10892731	Assembly, Orifice Holder (Right Front)	10	W11205795	Cover, WIFI Outer	25	W10883172	Stainless
	W10892477	Assembly, Orifice Holder (Right Rear)	11	W10883433	Bezel (Rear Burners)	26	W10896366	Assembly, Light Pipe
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	12	W10881642	Bezel (Front Burners)	27		Bezel, Oven
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Front)	13		Cap, Burner		W10913810	Stainless
	W10892419	Orifice, Main (15K) (Left Rear, Center Front, Right Rear)		W11121390	Black (Includes 6)	28		Knob, Oven Temperature
	W10892438	Orifice, Simmer (5K) (Center Rear)	14	W10891746	Spreader, Flame (High)		W11429269	Stainless
4	W11238757	Igniter (Left Front, Right Front)			(Left Front, Right Front)	29	W11205794	Cover, WIFI Inner
	W10892340	Igniter (Center Front, Center Rear)		W10891974	Spreader, Flame (Low)	30	W11241511	Button Assembly, Oven Light
	W11114379	Igniter (Left Rear, Right Rear)			(Left Rear, Center Front, Right Rear)	31	W11156416	Trim, Island
			15	W11036559	Spring Clip, Range	32		Trim, T-Strip
			16		Knob, Oven Mode		W10271524	Black
				W11249667	Stainless	33	7101P426-60	Screw
			17	W11100280	Manager, Appliance (Powermax)	34	W11241510	Button Assembly, Oven Start
			18		Panel, Cooktop	35	3400814	Screw
				W11038235	Black (Left)	36	7101P624-60	Screw
				W11038257	Black (Center)	37	W11042504	Bumper, Grate
				W11038248	Black (Right)	38	W11110768	Assembly, WIFI Module
			19	W11130078	Antenna, WIFI	39	W10568405	Assembly, Speaker
			20	7101P338-60	Screw			


CHASSIS PARTS

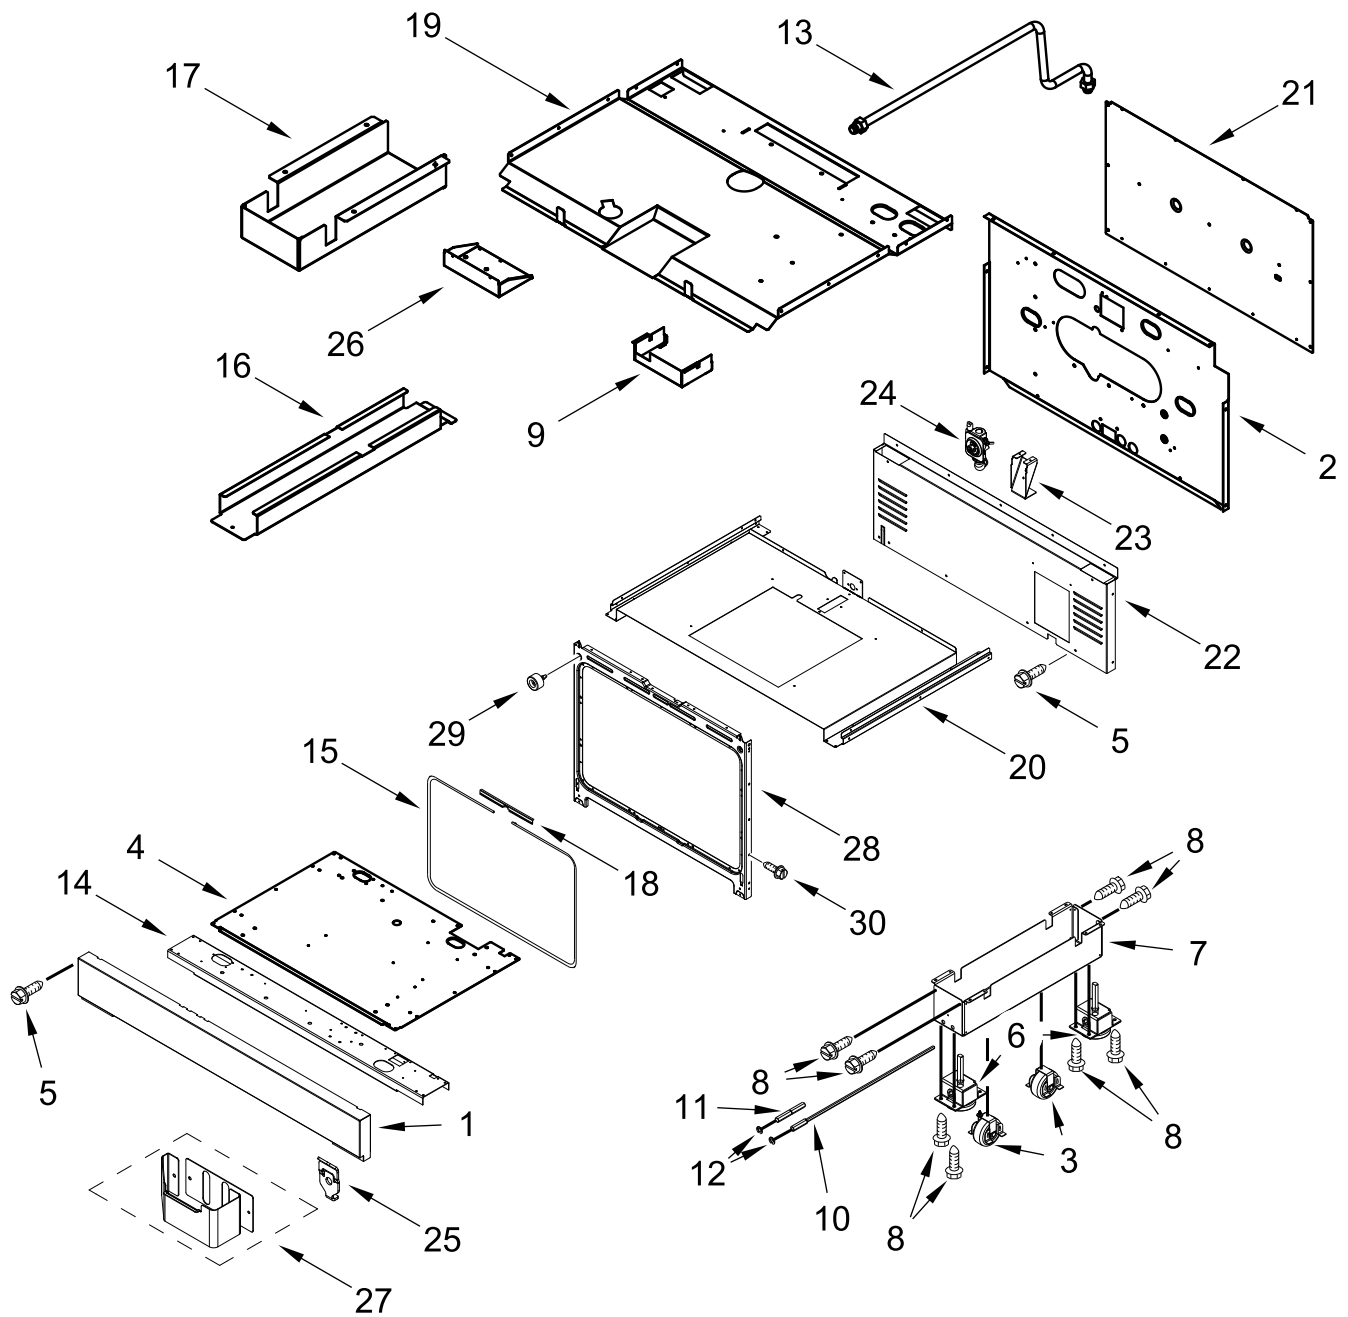

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394786	Kickplate	13	W11106963	Tube, Pressure Regulator	23	W11096823	Bracket, Pressure Regulator
2	W11324988	Back, Chassis	14	W11087493	Support, Channel	24	W10449140	Regulator, Pressure
3	W10138054	Assembly, Roller	15	W11115330	Gasket, Oven (36")	25	W11036559	Spring Clip, Range
4	W11095572	Duct, Bottom (36")	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
5	7101P426-60	Screw	17	W11368831	Channel, Wire	27	W11199181	Cover, Foot (Left)
6	9760860	Leveler	18	W11362015	Retainer, Gasket (9" Long)		W11199178	Cover, Foot (Right)
7	W10908710	Base, Leveling Leg	19	W11324985	Top, Chassis	28	W11192749	Frame, Front
8	4449743	Screw	20	W11040801	Chassis, Bottom	29	W10351278	Bumper & Screw
9	W11369237	Cabinet, Appliance Manager	21	W11103333	Panel, Back Top	30	3196560	Screw
10	W10115869	Shaft, Long	22	W11034133	Panel, Back Bottom			
11	W10115793	Shaft, Short						
12	489504	E-Ring						


OVEN PARTS

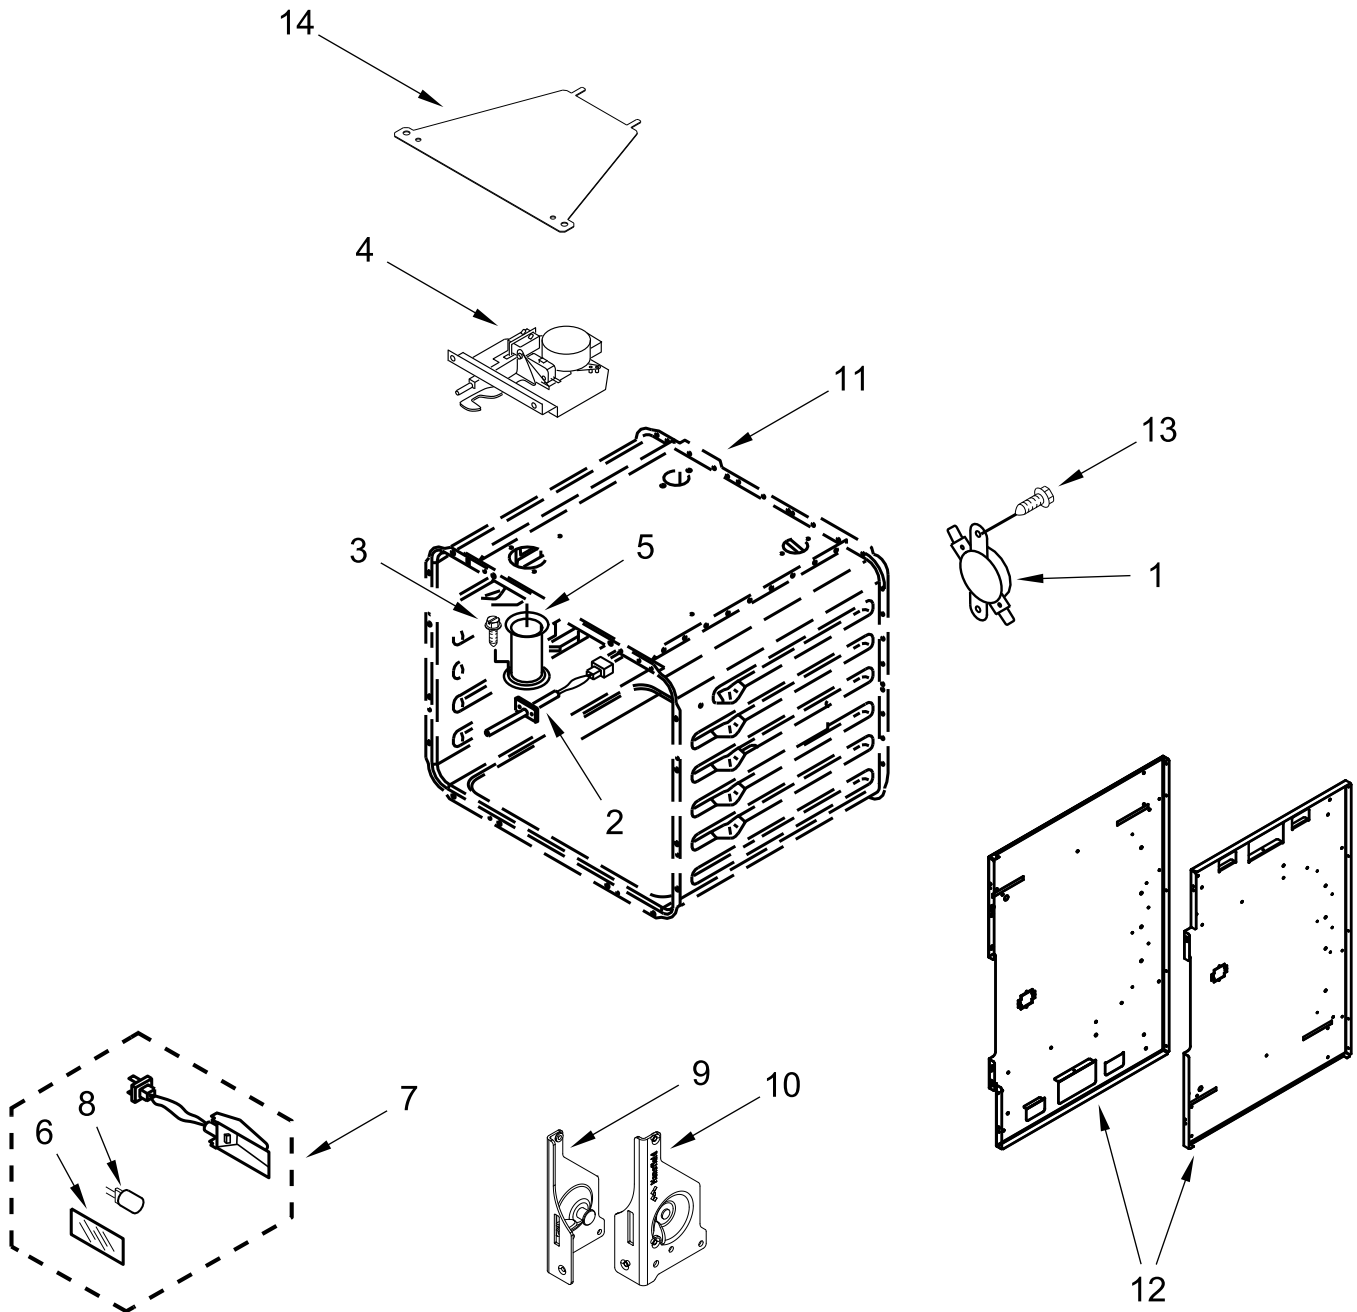

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	14	W10160858	Cover, Latch
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	3196176	Screw	11		Liner, Oven (Not Serviced)		W10282811	Insulation, Wrap
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)		W10282813	Insulation, Back, 36"
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)		3400968	Nut
6	W10169756	Lens, Light						
7	W11223932	Assembly, Oven Light	13	7101P426-60	Screw			
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)						


VENTING PARTS

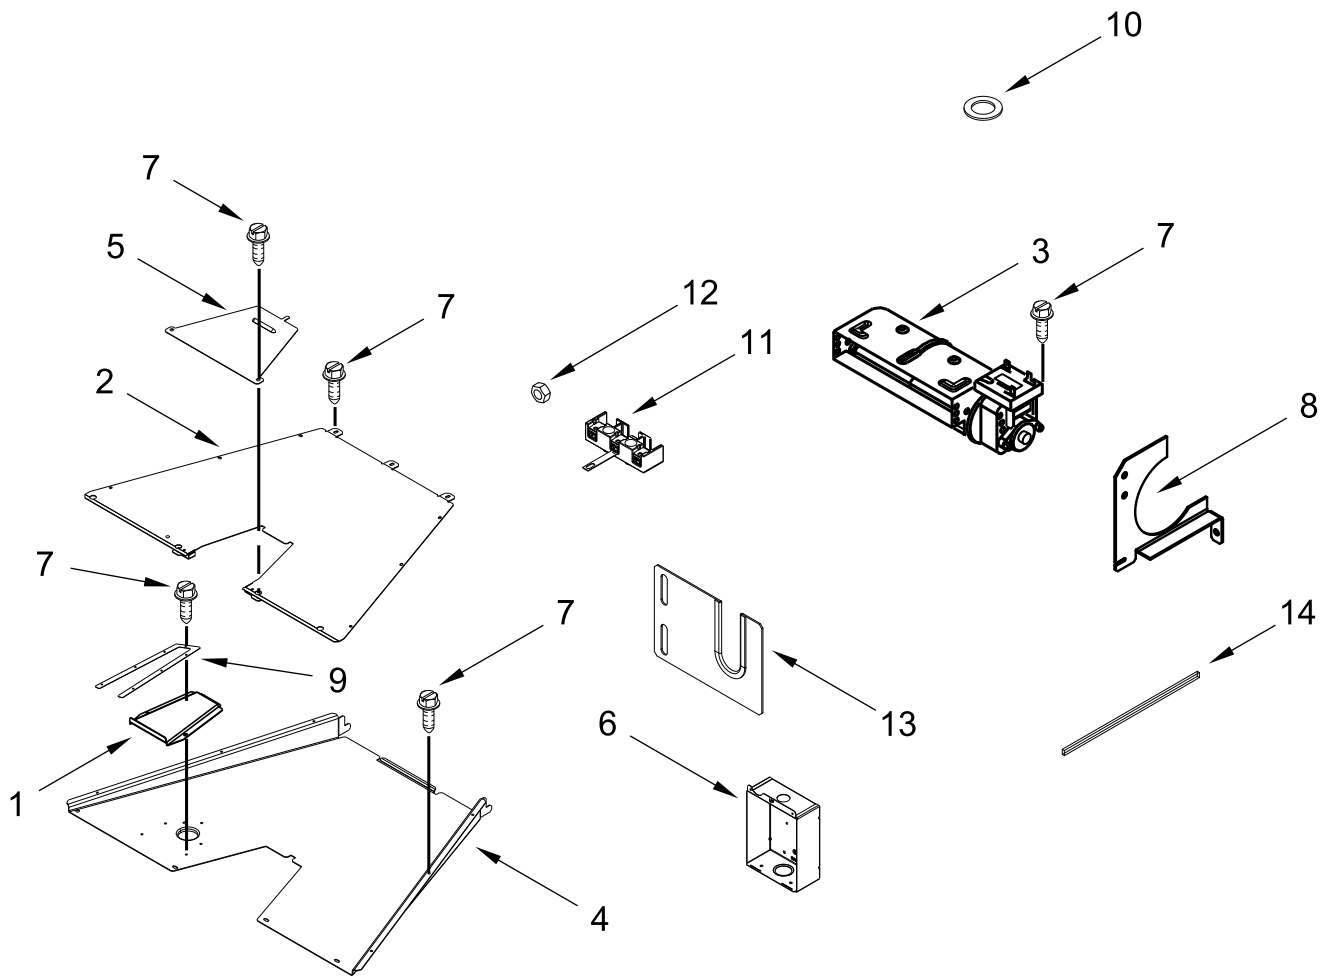

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	6	W11353392	Box, Terminal	13	W11106956	Cover, Channel
2	W11105223	Vent, Cooling Top (30")	7	7101P426-60	Screw	14	W10919715	Gasket
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount			
4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")			
5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney			
			11	9761958	Block, Terminal			
			12	112432	Nut, Hex			


OVEN DOOR PARTS

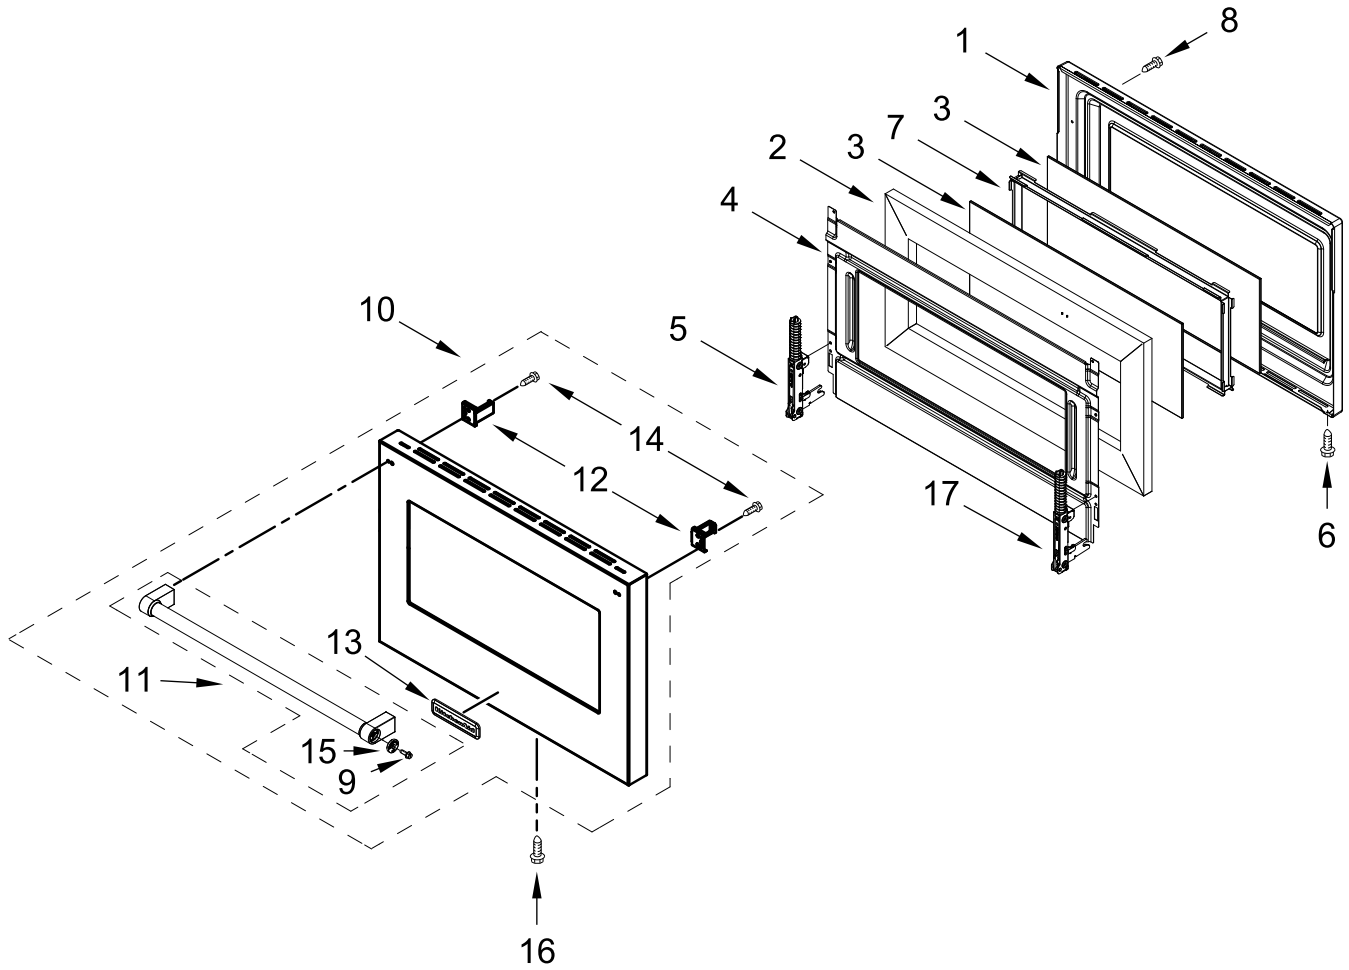

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	8	W10898280	Screw	14	W10276043	Screw
2	W10884823	Insulation, Door	9	W10656499	Screw	15	W11361074	Medallion, Handle
3	W11036791	Glass, Inner	10	W11389312	Assembly, Outer Door (Includes Handle)	16	W10162096	Screw
4	W11194820	Retainer, Glass	11	W11362709	Handle Assembly	17	W11096977	Hinge, Door (Right)
5	W11096978	Hinge, Door (Left)	12	W11197830	Bracket, Handle			
6	W10607120	Screw	13	W10518672	Badge			
7	W11194814	Frame, Glass						

INTERNAL OVEN PARTS

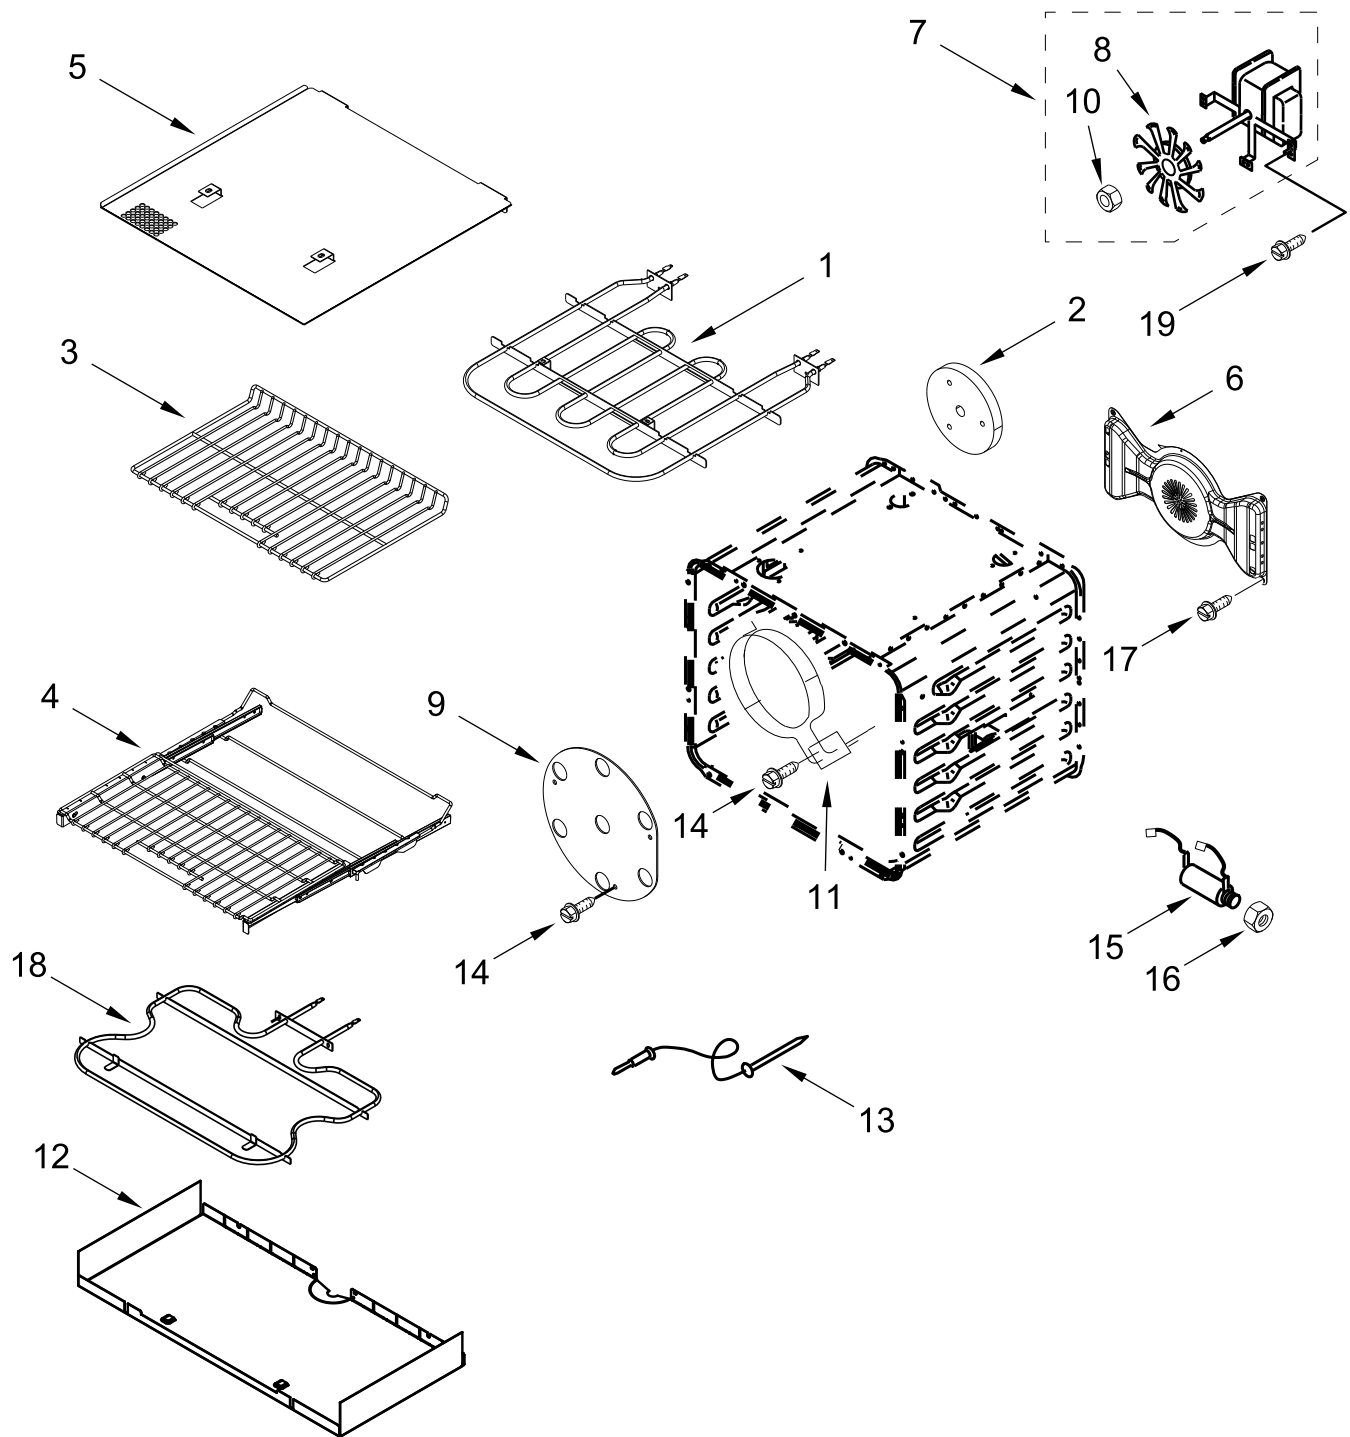

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10115994	Element, Broil	9	W10261523	Plate, Fan	17	W10739592	Screw
2	W10282821	Insulation, Convection Cover	10	W10631504	Nut, Acorn (LH)	18	W10115992	Element, Hidden Bake
3	W10822069	Rack, Oven	11	9762242	Element, Convection Steam	19	W10720084	Screw
4	W11108464	Rack, Sliding Oven	12	W11106922	Tray, Hidden Bake			
5	W10160856	Shield, Element Broil	13	9755542	Probe, Temperature			
6	W11212180	Baffle, Convection	14	4449154	Screw			
7	W10722667	Fan, Convection	15	9755543	Jack, Meat Probe			
8	W10631503	Blade, Fan	16	W11033111	Nut, Locking			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Medallion, Handle
	W11368841SI	Sl. Silver
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841CF	Copper
	W11368841BN	Bronze
	W11368841DD	Dark Blue