




30" BUILT-IN ELECTRIC COMBINATION MICROWAVE WALL OVEN

MODELS:

WOC75EC0HB01 (Black)

WOC75EC0HW01 (White)


CONTROL PANEL PARTS

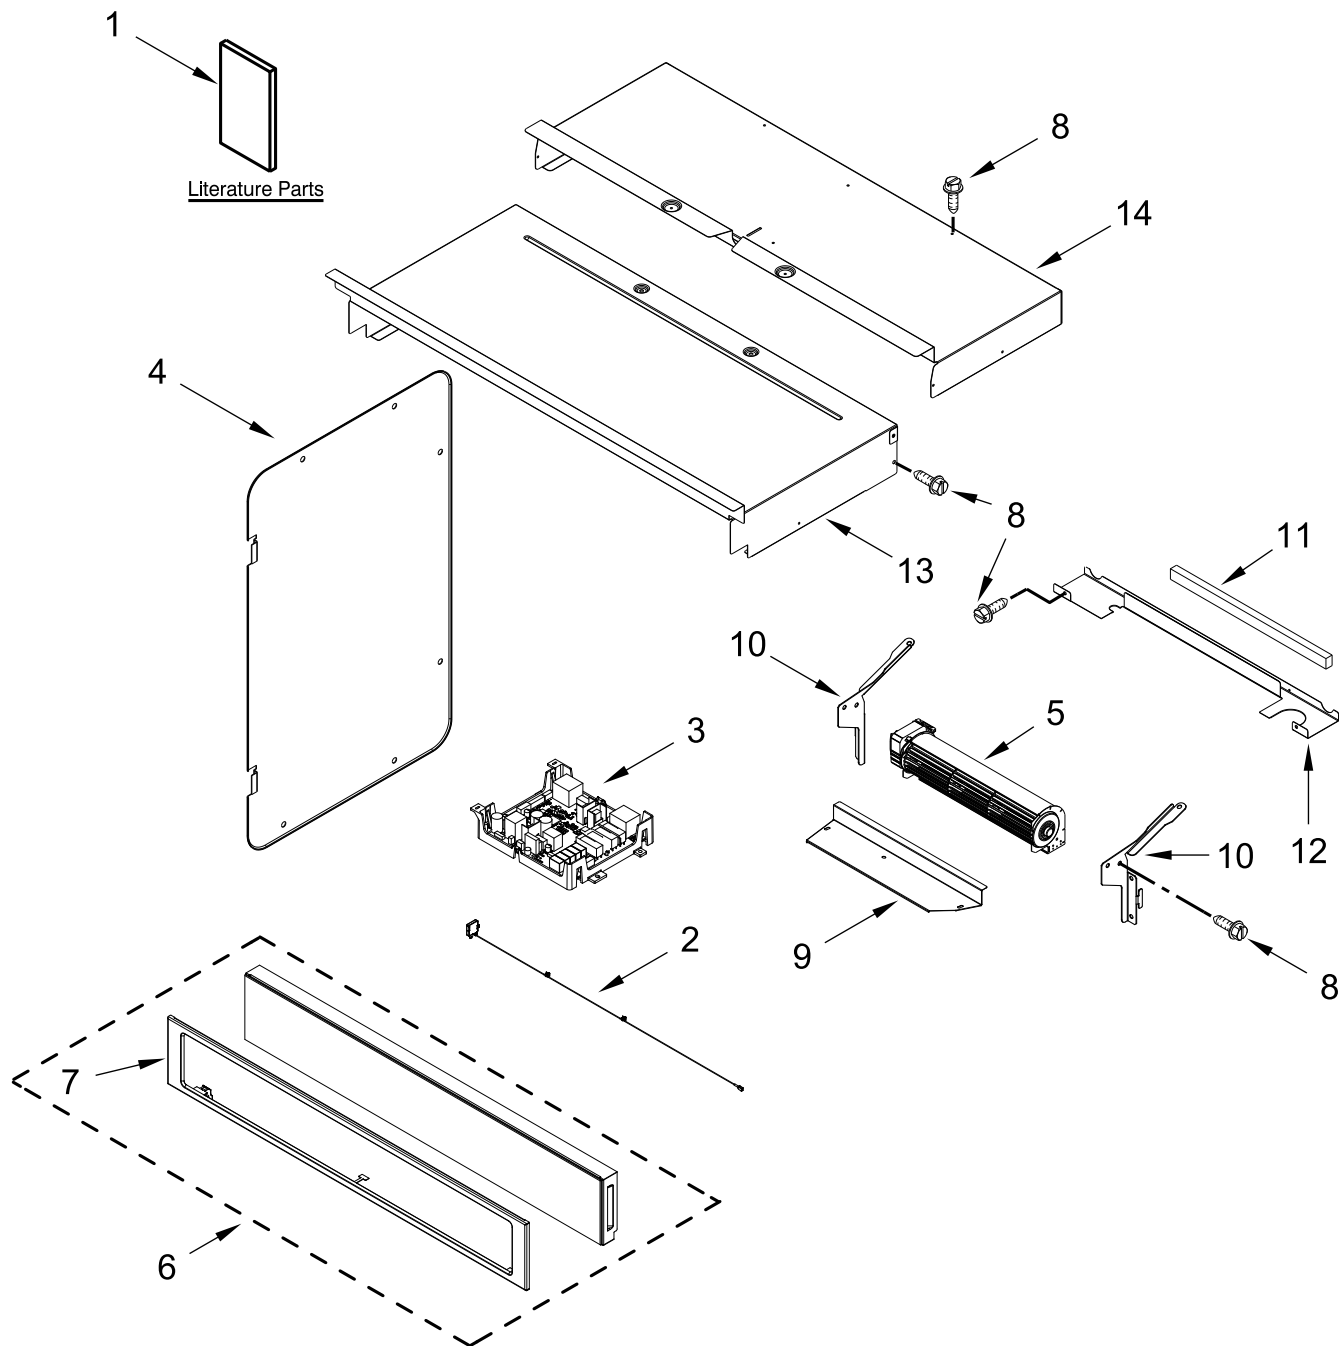

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7		Skin, Control Panel	14	W10588732	Chassis, Cover Top Back 30"
	W11220322	Guide, Use & Care (Oven)		W11026970	Black			
	W11040305	Guide, Use & Care (Microwave Oven)		W11026969	White			FOLLOWING PARTS NOT ILLUSTRATED
	W11129957	Instructions, Installation	8	7101P426-60	Screw		W11225372	Harness, Main
	W11097305	Guide, Internet Connectivity	9	W10681157	Cover, Combo Blower		W11225373	Harness, Signal
	W11046177	Sheet, Tech	10	W10655463	Bracket, Blower (Left)		W10874059	Harness, Fan & Turntable
	W11046183	Diagram, Wiring		W10655462	Bracket, Blower (Right)		W10874060	Harness, Inverter
2	W11234541	Antenna	11	W10728475	Gasket, Rubber		W10709980	Harness, Solo GM
3	W11253186	Appliance Manager, Copernicus (With Power Supply)	12	W10655465	Chassis, Back Divider		W11233569	Harness, Ground Console Combo
4	W10655467	Chassis, Combo Side	13	W10318158	Chassis, Cover Top Front 30"		W11233529	Harness, Communication
5	W11200129	Blower					W11132989	Harness, Door Latch
6		Assembly, Control Panel (Includes Overlay)					W10889134	Harness, Cable Tree Assembly
	W11107250	Black					4450800	Screw, Grounding
	W11107251	White					4448664	Clamp, Conduit
							313438	Clip, Harness
							4454842	Tie, Cable

OVEN PARTS

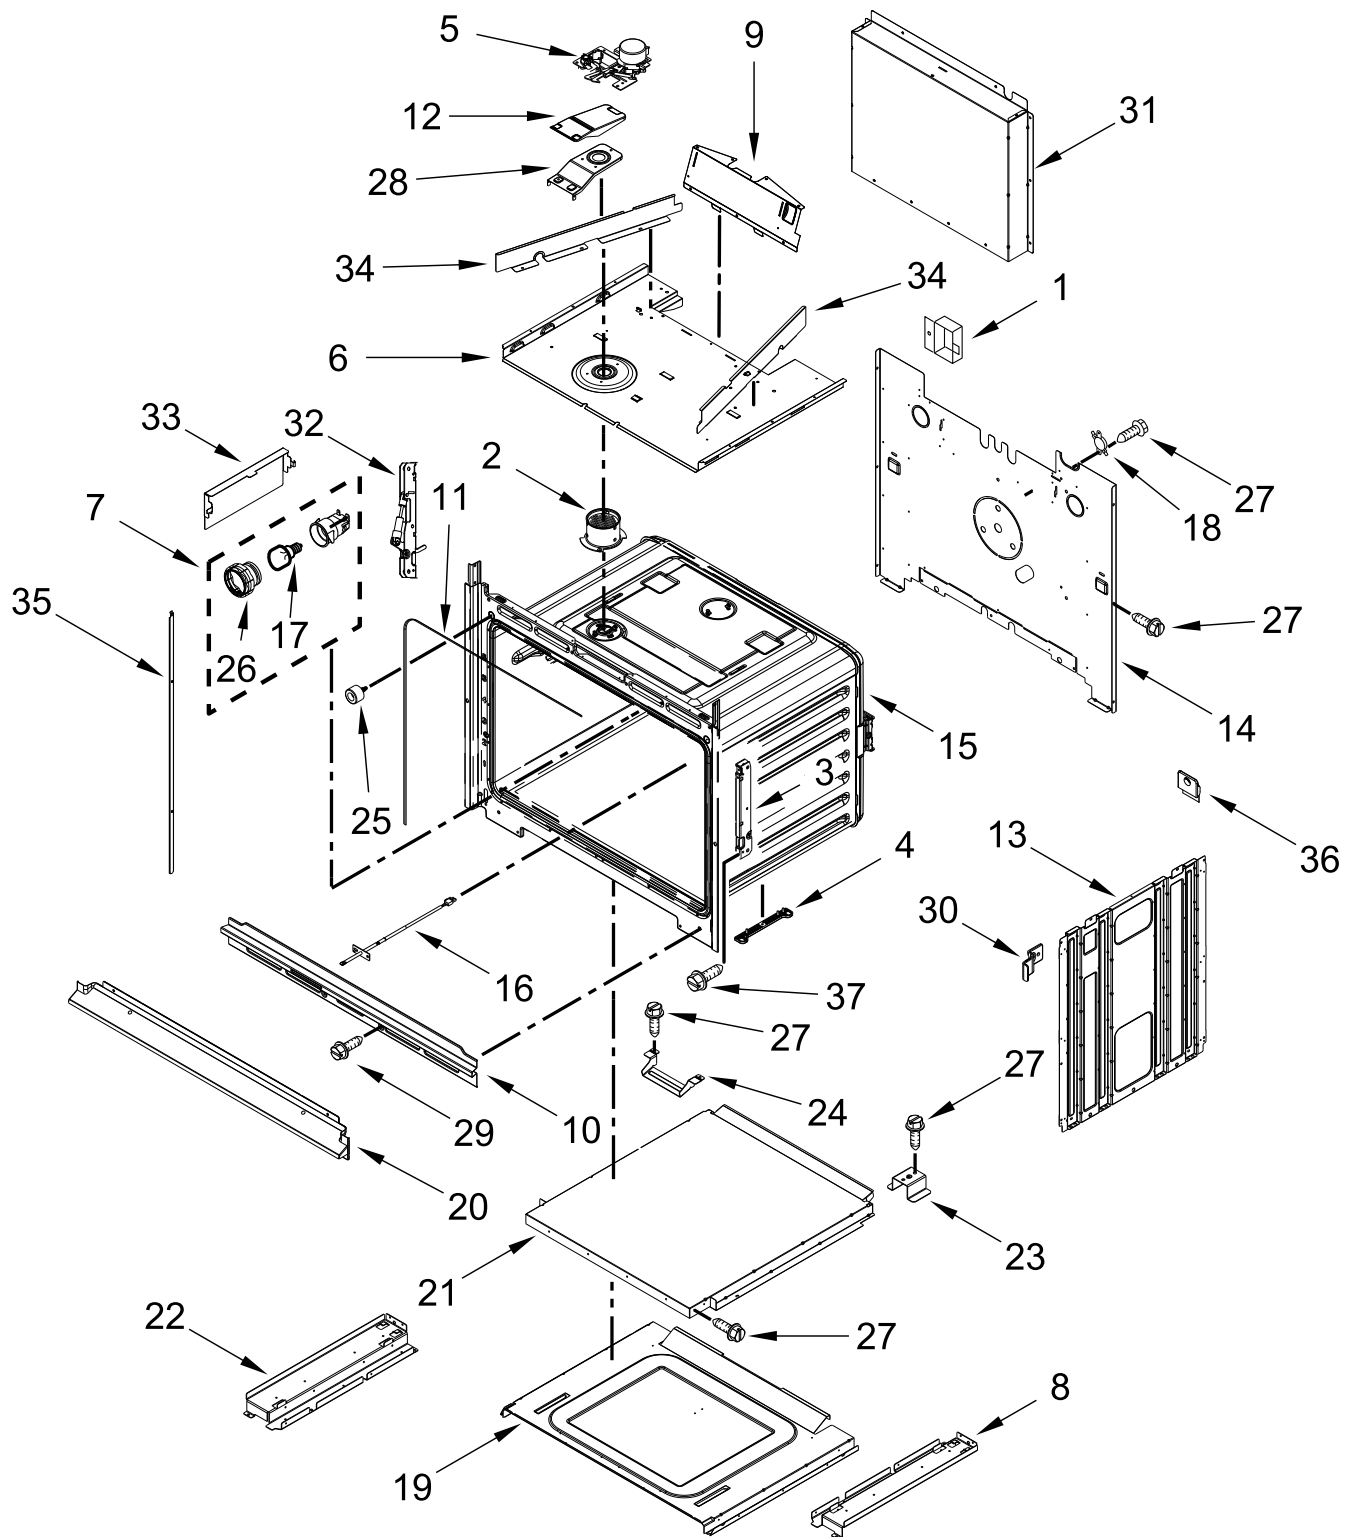


OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8285593	Cover, Connector
2	W11085298	Tube, Vent
3	W11044775	Receiver, Hinge
4	W10618102	Spacer, Base
5	W10618131	Latch, Motorized
6	W10904158	Top, Chassis
7	W10734063	Assembly, Light
8	W10283021	Support, Base (Right)
9	W10904163	Deflector, Blower
10	W10495154	Vent, Center 30"
11	W10282960	Gasket
12	W10616810	Cover, Vent Exhaust
13	W10663556	Side, Chassis (Left)
	W10318190	Side, Chassis (Right)
14	W10904160	Back, Chassis
15		Liner, Oven (Not Serviceable)
16	W10622170	Probe, Sensor

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
17	W10412711	Bulb, Light
18	4449751	Thermostat (TOD)
19	W10834867	Base, Chassis
20		Assembly, Bottom Vent
	W10327373	Black
	W10506344	White
21	W10283008	Chassis, Bottom Duct
22	W10283020	Support, Base (Left)
23	W10213759	Support, Air Channel
24	W10351308	Spacer, Chassis Bottom Duct
25	W10351278	Bumper & Screw
26	W10412722	Lens, Light
27	7101P426-60	Screw
28	W10616809	Base, Vent Exhaust
29	7101P427-60	Screw
30	W10834501	Spacers, Front

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
31	W11037653	Cover, Combo Chassis Back Duct (With Hole)
32	W11045086	Receiver, Slow Close Hinge
33	W11034940	Shield, Slow Close Hinge
34	W10681156	Deflector, Chassis
35		Trim, Side
	W10344483	Black (Left)
	W10344482	Black (Right)
36	W10834286	Spacer, Center
37	W10254050	Screw
		FOLLOWING PARTS NOT ILLUSTRATED
	W10520715	Insulation, Wrap
	W10282944	Insulation, Cavity
	W10464568	Insulation, Control Knob


OVEN DOOR PARTS

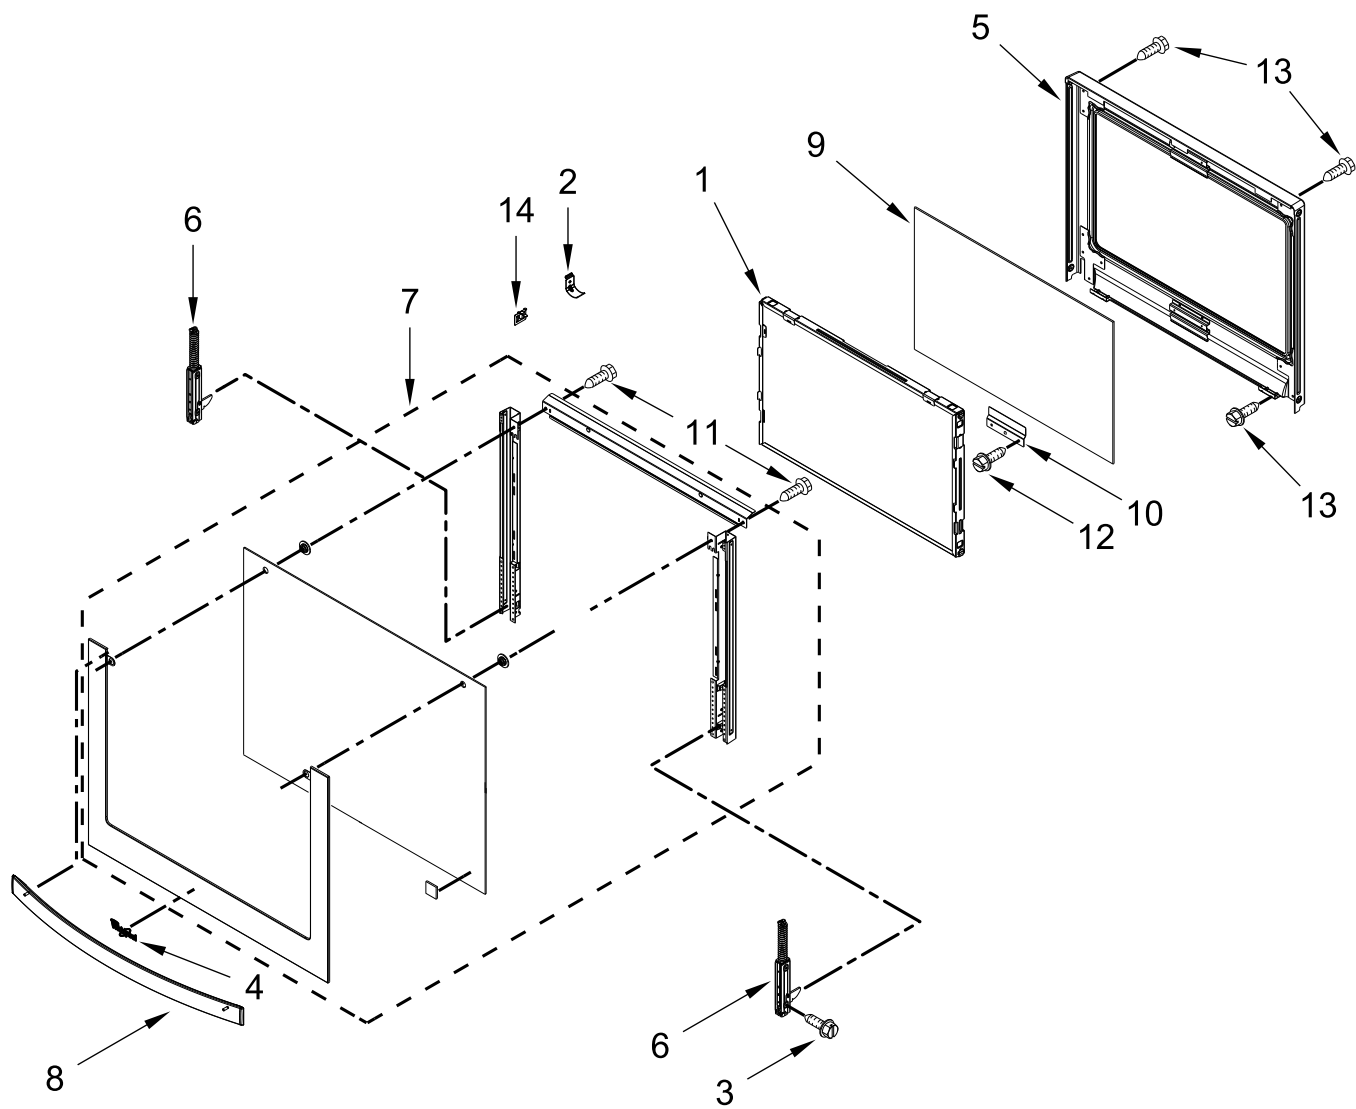

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack	7		Assembly, Door	11	W10480830	Screw
				W10866266	Black	12	7101P426-60	Screw
2	W10284285	Spring, Door Glass Fixation		W10866267	White	13	7101P633-60	Screw (Black)
			8		Assembly, Handle	14	W10653954	Clip, Spring Metal
3	3196183	Screw		W11022638	Black			
4	W10884775	Nameplate		W11022639	White			
5	W10709147	Assembly, Liner	9	W10678524	Glass, Inner			
6	W11044773	Hinge, Slow Close Door	10	W10284297	Bracket, Glass			


INTERNAL OVEN PARTS

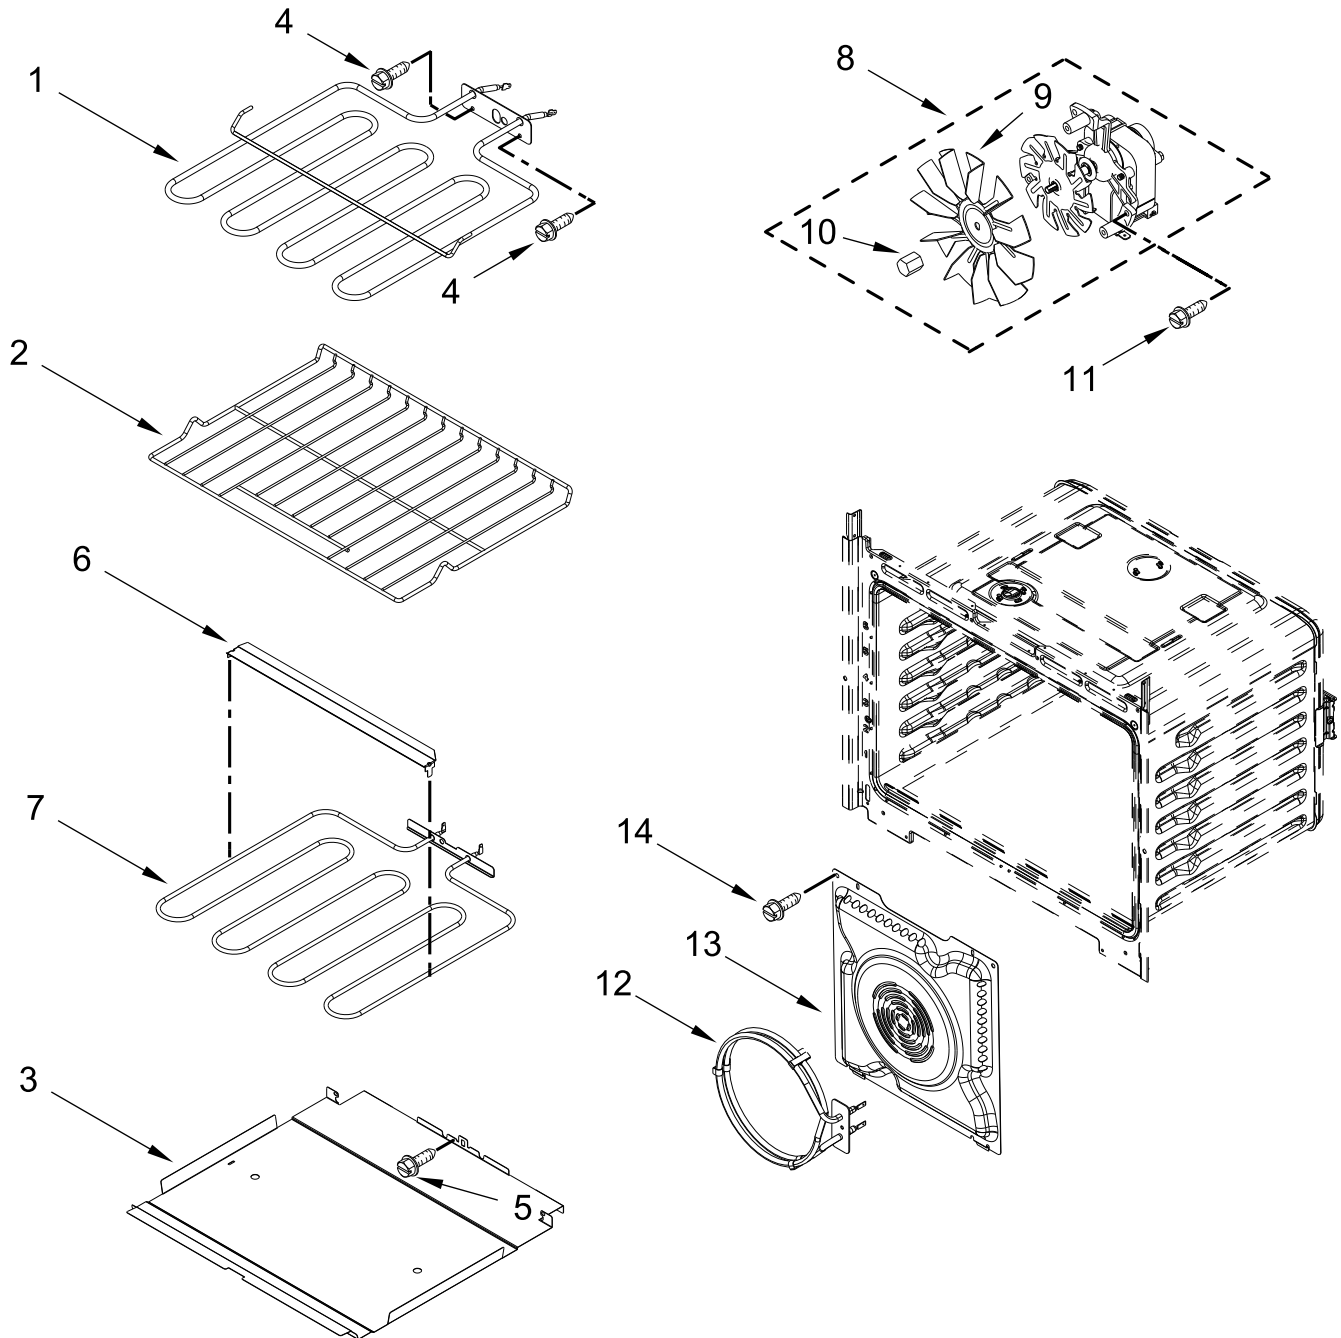

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10260252	Element, Broil	7	W10546517	Element, Bake	13	W10359278	Baffle, Convection
2	W11122597	Rack, Oven	8	W10722667	Fan, Convection	14	W10906658	Screw
3	W10318198	Tray, Hidden Bake	9	W10631503	Blade, Fan			
4	7101P434-60	Screw	10	W10631504	Nut, Acorn (LH)			
5	7101P426-60	Screw	11	W10720084	Screw			
6	W10282957	Crossbar, Hidden Bake Tray	12	W10260248	Ring, Element			


CABINET AND STIRRER PARTS

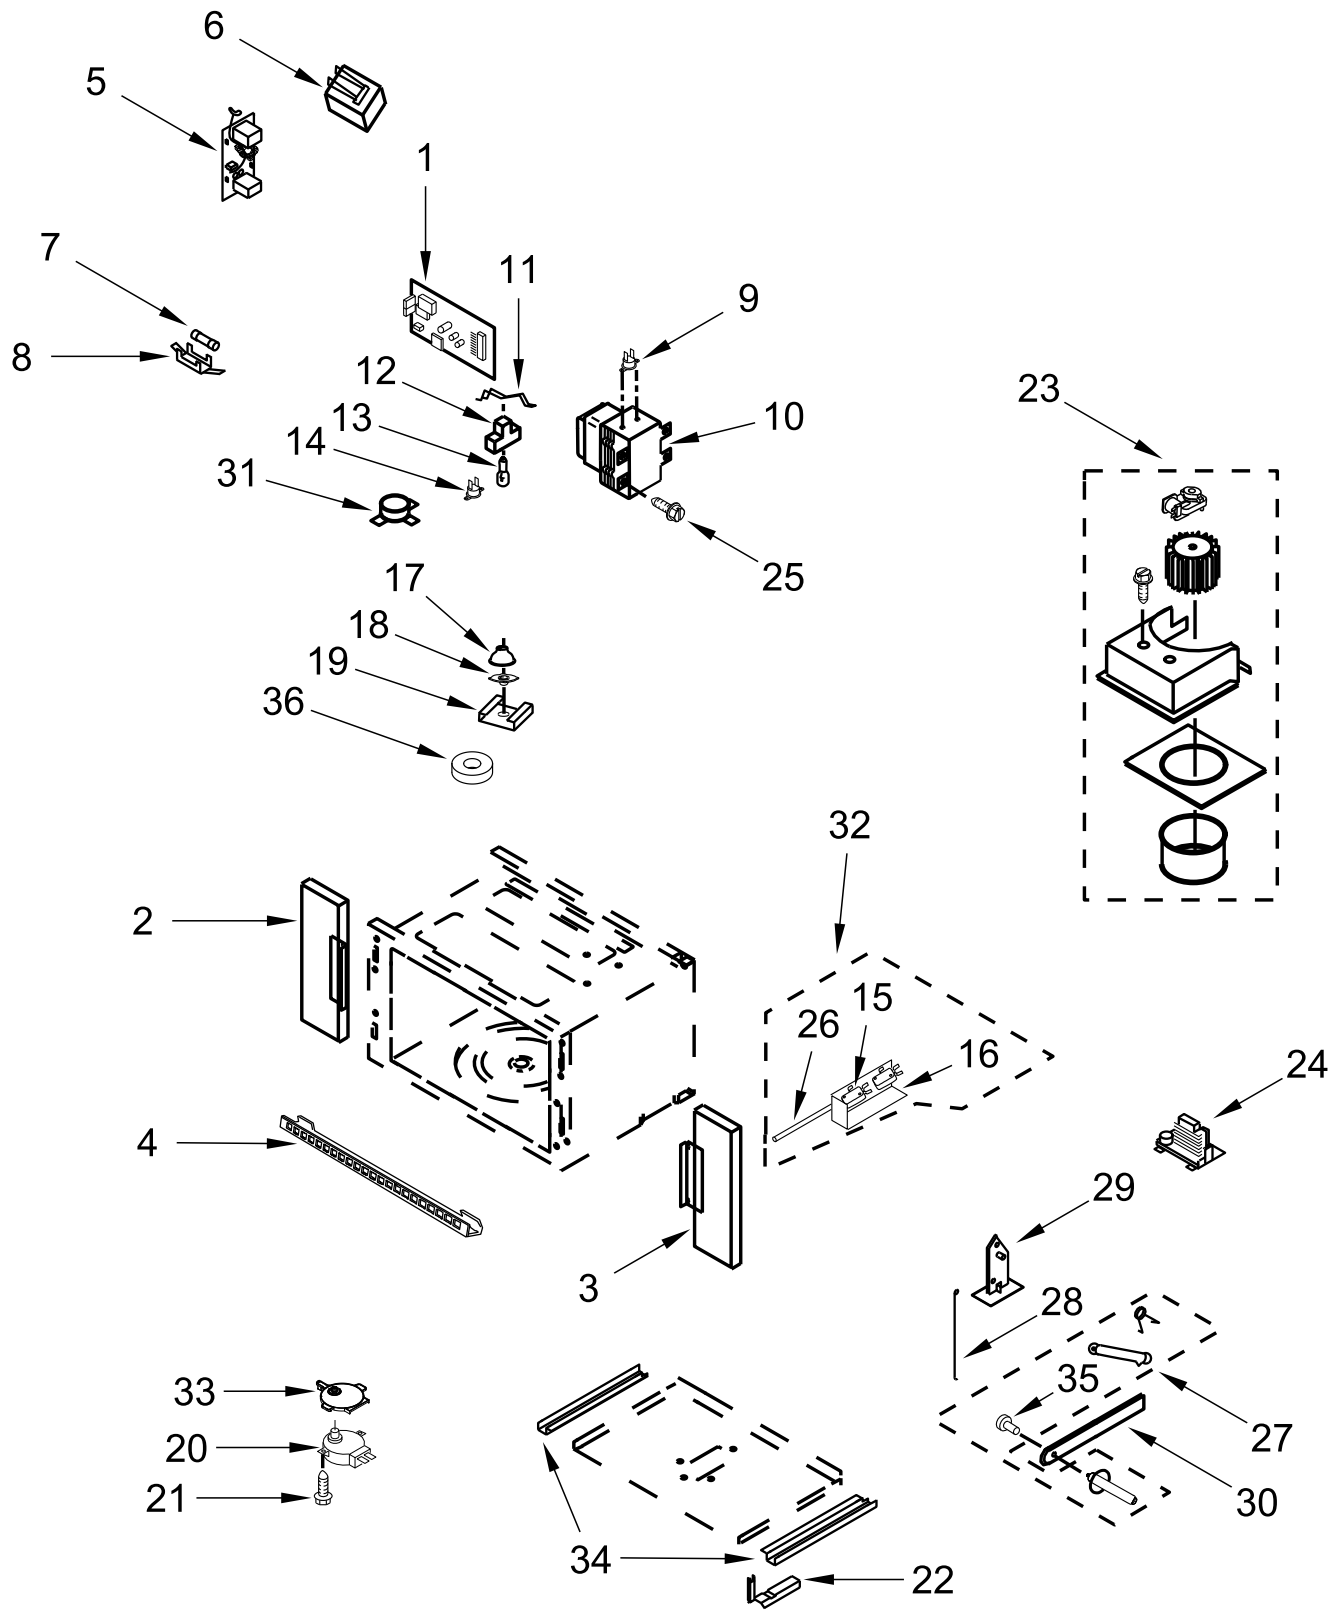

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10913742	Control, Electric	13	W10795595	Lamp, Halogen	27	251968600013	Pin, Damper
2	461967017491	Trim, Side (Left)	14	W10389447	Thermostat	28	461967570351	Spring, Torsion
3	461967017481	Trim, Side (Right)	15	W10330566	Switch	29	461967750494	Support
4	461968973241	Vent, Top Microwave	16	8205683	Holder, Switch	30	461967750483	Arm, Sliding
5	W10692851	Filter, Noise	17	423107022541	Reflector	31	W10460457	Sensor, Humidity
6	461967848621	Transformer, Light (20V)	18	423107720491	Lens, Lamp	32	W10358241	Assembly, Interlock Switch
7	241908600053	Fuse	19	461967010591	Clip, Spring	33	461967753742	Adapter, Turntable Motor
8	4375231	Block, Fuse	20	461967848971	Motor, Turntable	34	461967008461	Support, Bottom
9	461967846741	Thermostat, Magnetron	21	461967825321	Screw	35	461967510191	Bushing
10	461967847321	Magnetron	22	461968979601	Hinge, Door	36	W10769147	Sealing, Lamp
11	W10465869	Spring, Lamp	23	461968969271	Assembly, Cooling Fan			
12	W10490593	Holder, Lamp	24	W10468206	Inverter			
			25	461967825971	Screw			
			26	W10120235	Rod, Release			

INTERNAL MICROWAVE PARTS

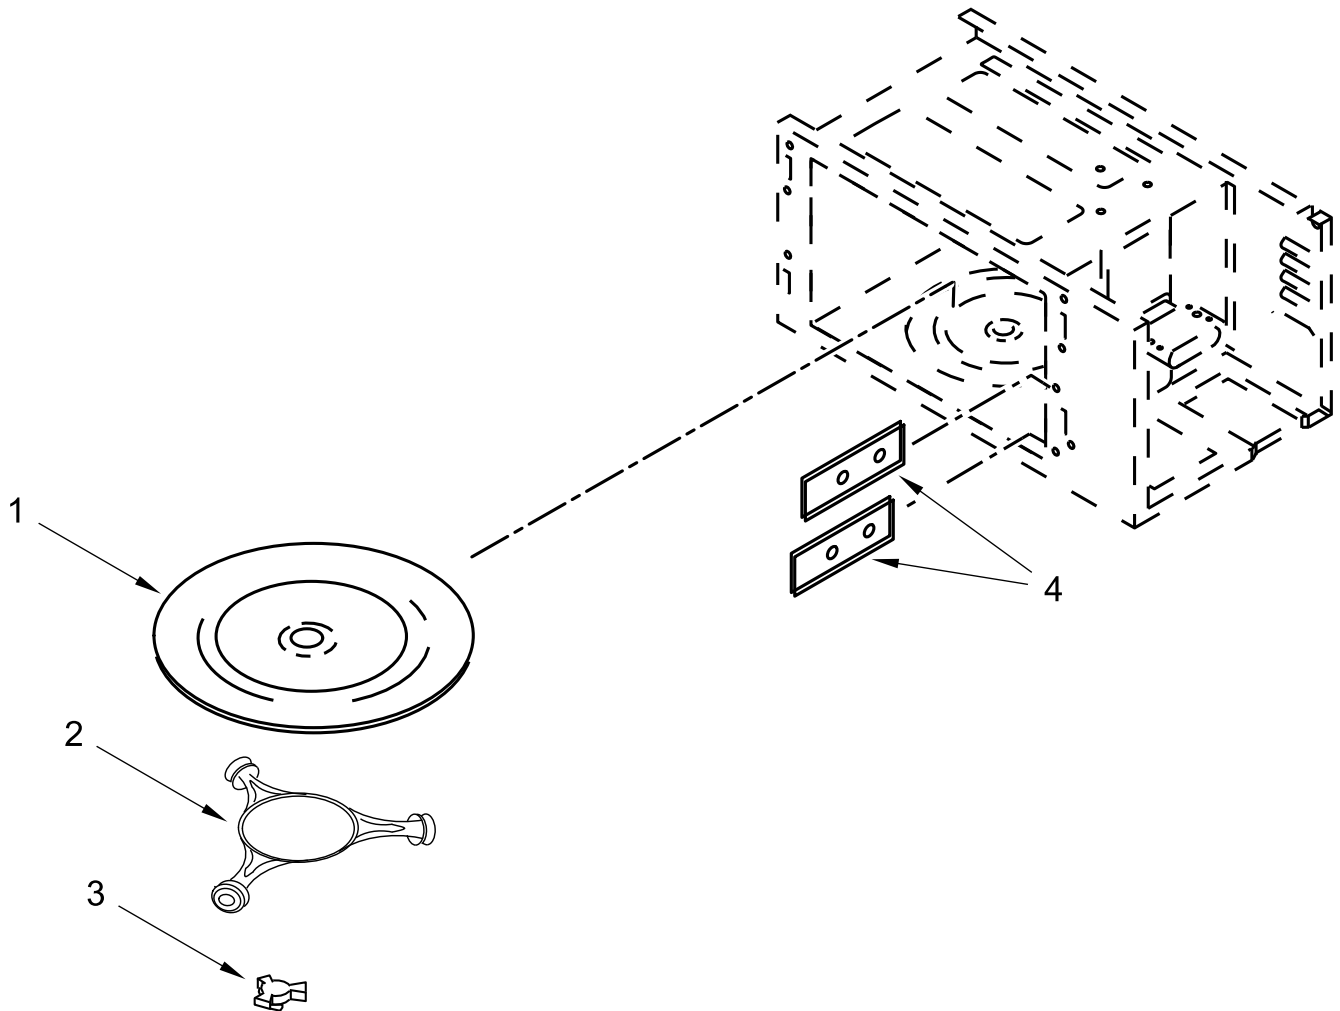

INTERNAL MICROWAVE PARTS

Illus.
No.

Part No.

Description

- | | | |
|---|--------------|-----------------|
| 1 | 461967720541 | Tray, Cook |
| 2 | W10367316 | Ring, Turntable |


Illus.
No.

Part No.

Description

- | | | |
|---|--------------|------------------|
| 3 | W10545578 | Drive, Turntable |
| 4 | 461967451001 | Plate, Cover |


TOP VENTING PARTS

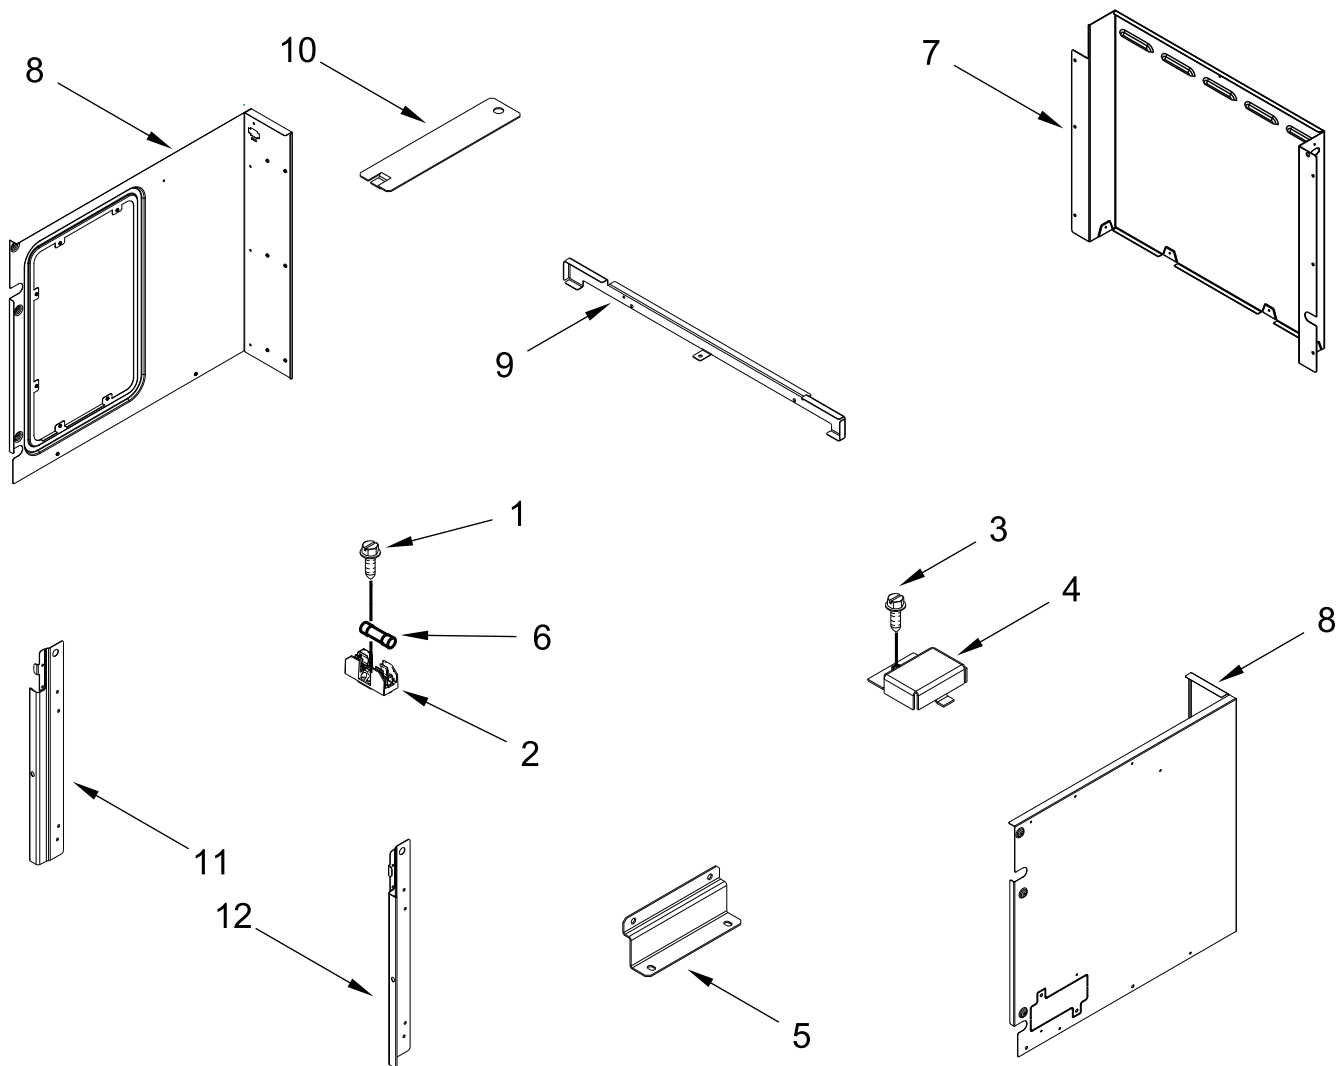

TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	7101P060-60	Screw	7	W10519707	Cover, Back Duct	10	W10356437	Cover, Slot Module
2	4454949	Holder, Fuse	8	W10655466	Chassis, Combo Side (Left)	11	W10360516	Rail, Side (Left)
3	7101P426-60	Screw		W11037649	Chassis, Combo Side (Right)	12	W10360518	Rail, Side (Right)
4	8285593	Cover, Connector	9	W10283022	Support, Crossbar			
5	W10283024	Side, Bracket						
6	W10017410	Fuse, Time Delay						

MICROWAVE DOOR PARTS

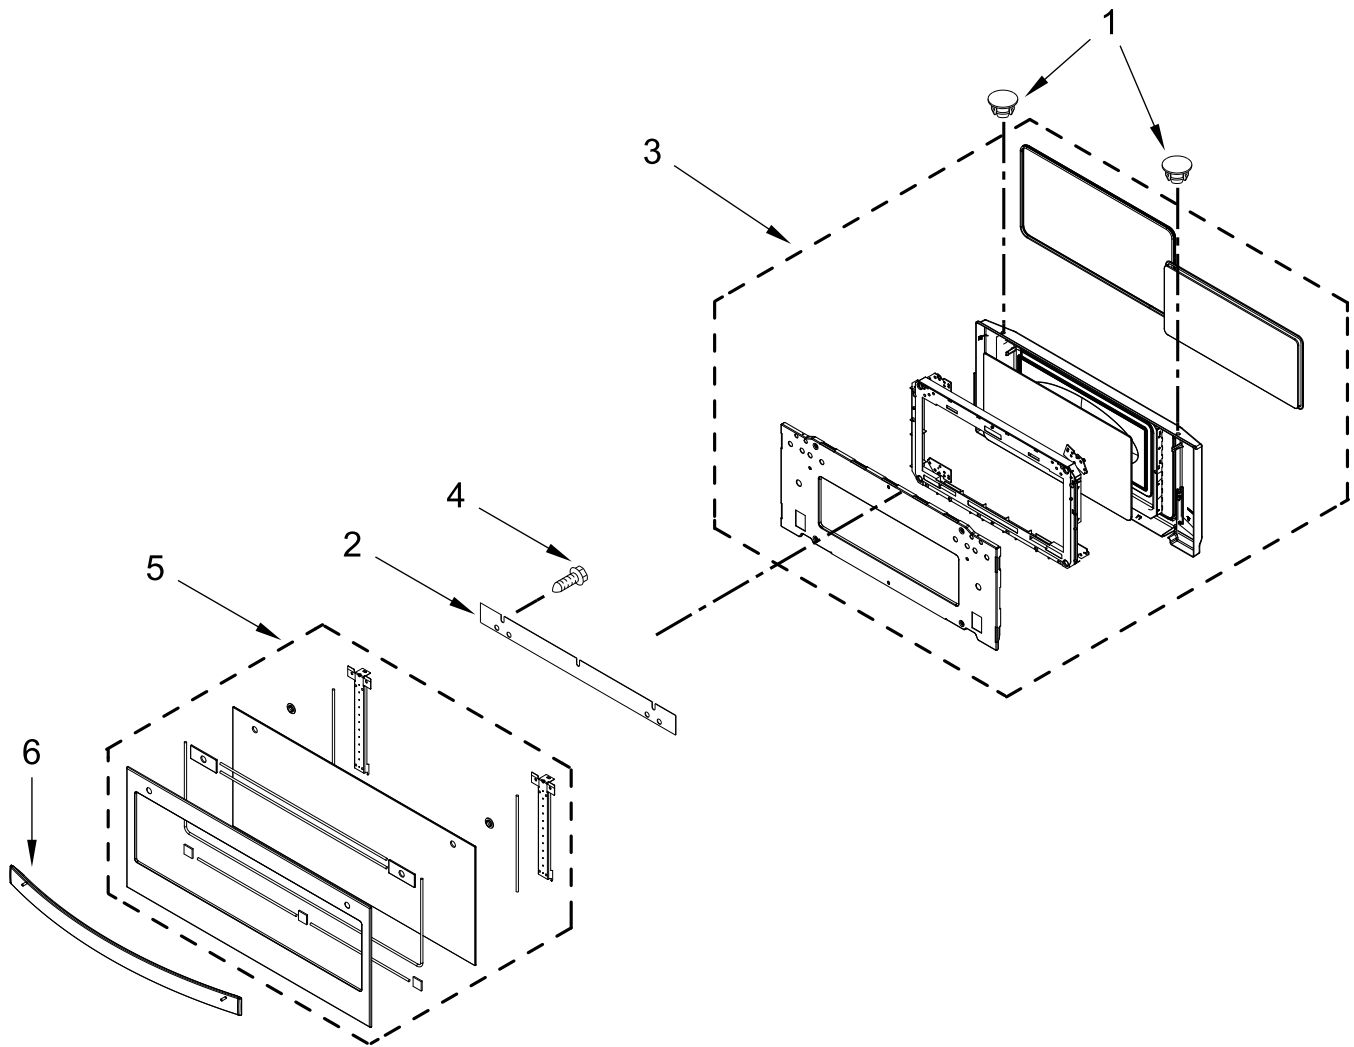

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	5		Assembly, Outer Door	6		Assembly, Handle
2	W10359769	Foam, Door Handle		W10866274	Black		W11022638	Black
3	W10687342	Assembly, Inner Door		W10866275	White		W11022639	White
4	W10480830	Screw						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	4396923	Grid, Broiler Pan and
	8205262RB	Steamer, Microwave
	W10355049	Wipes, Stainless Steel Cleaning
	W10745649	Rack, Sliding