




30" ELECTRIC FREESTANDING STANDARD CLEAN RANGE

MODELS:

4KMER7600AW3 (White)


COOKTOP PARTS

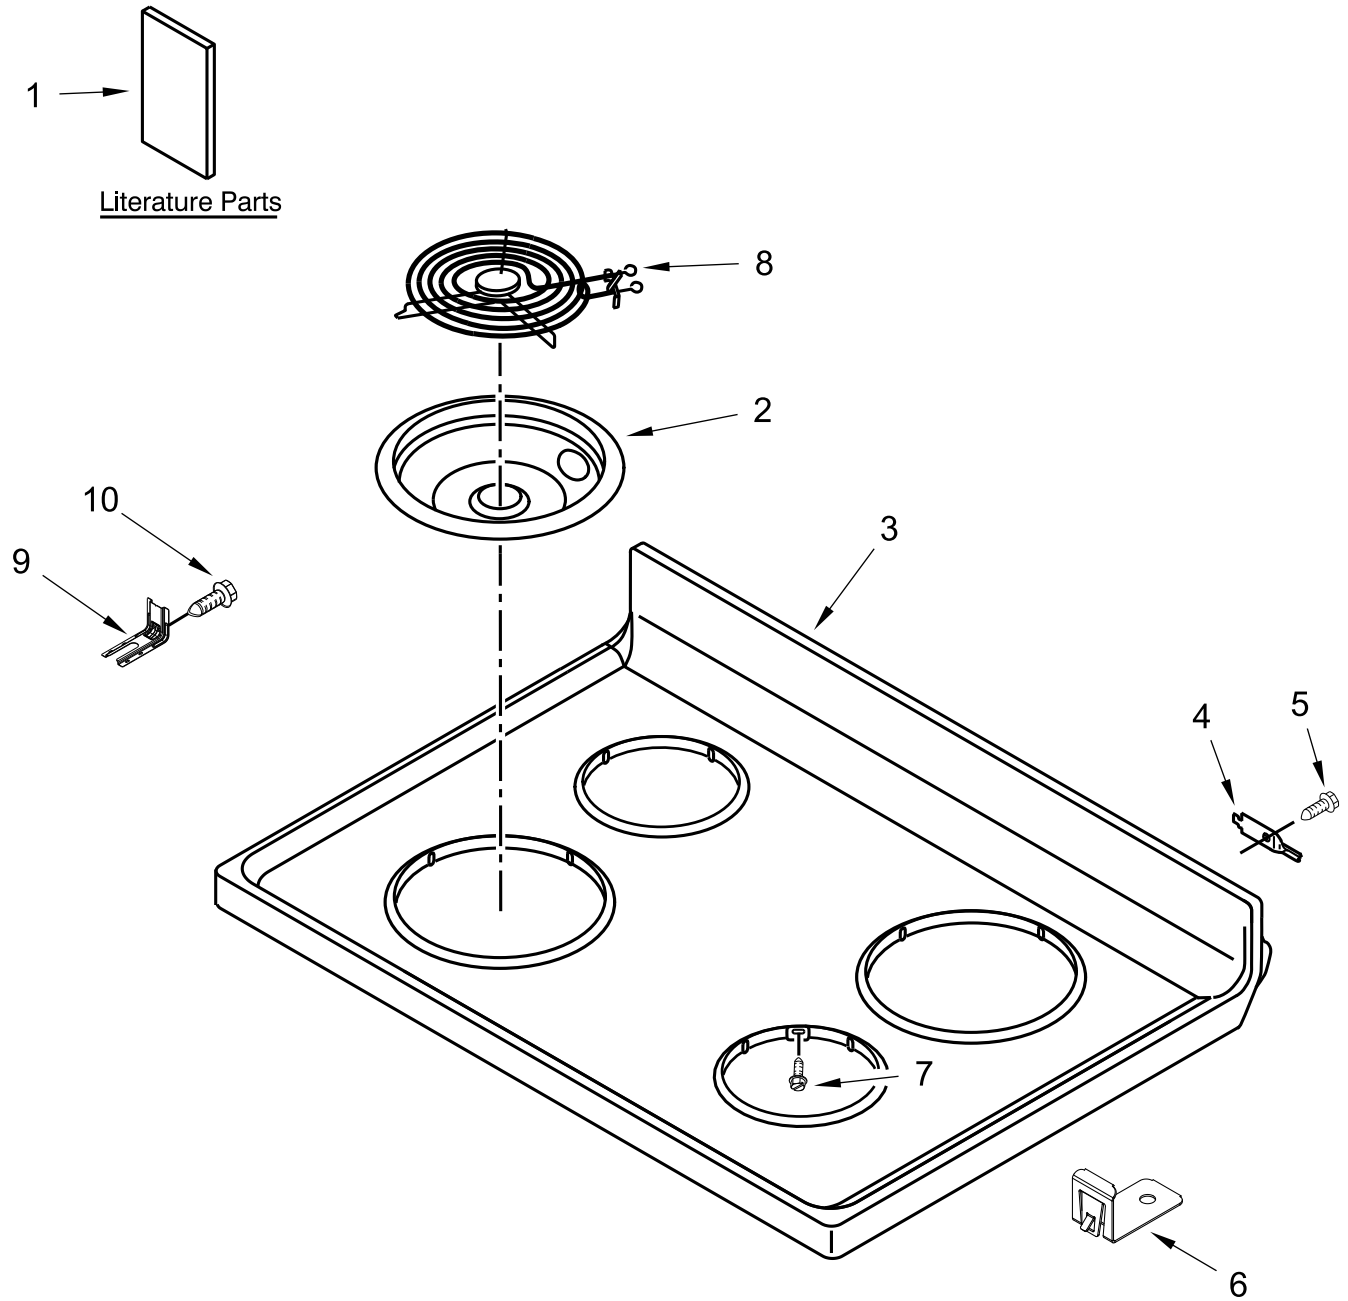

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2	W10196406	Bowl, Drip (6") (Right Front and Left Rear)	8	W10259870	Element, Surface (6") (Right Front and Left Rear)
	W11034224	Instructions, Installation (English)						
	W11035119	Instructions, Installation (Arabic)		W10196405	Bowl, Drip (8") (Left Front and Right Rear)		W10259867	Element, Surface (8") (Left Front and Right Rear)
	W10916032	Use and Care Guide (English)	3		Cooktop	9	W11379945	Bracket, Anti-Tip
	W10916033	Use and Care Guide (Arabic)		3186231	White	10	7101P485-60	Screw, Anti-Tip Kit
	W10394783	Tech Sheet (English)	4	3195060	Hinge, Cooktop			FOLLOWING PARTS NOT ILLUSTRATED
	W10464421	Tech Sheet (Arabic)	5	3196178	Screw			
			6	W10626011	Clip, Cooktop		W11452638	Harness, Main
			7	3196154	Screw		W10279107	Harness, Cooktop


CONTROL PANEL PARTS

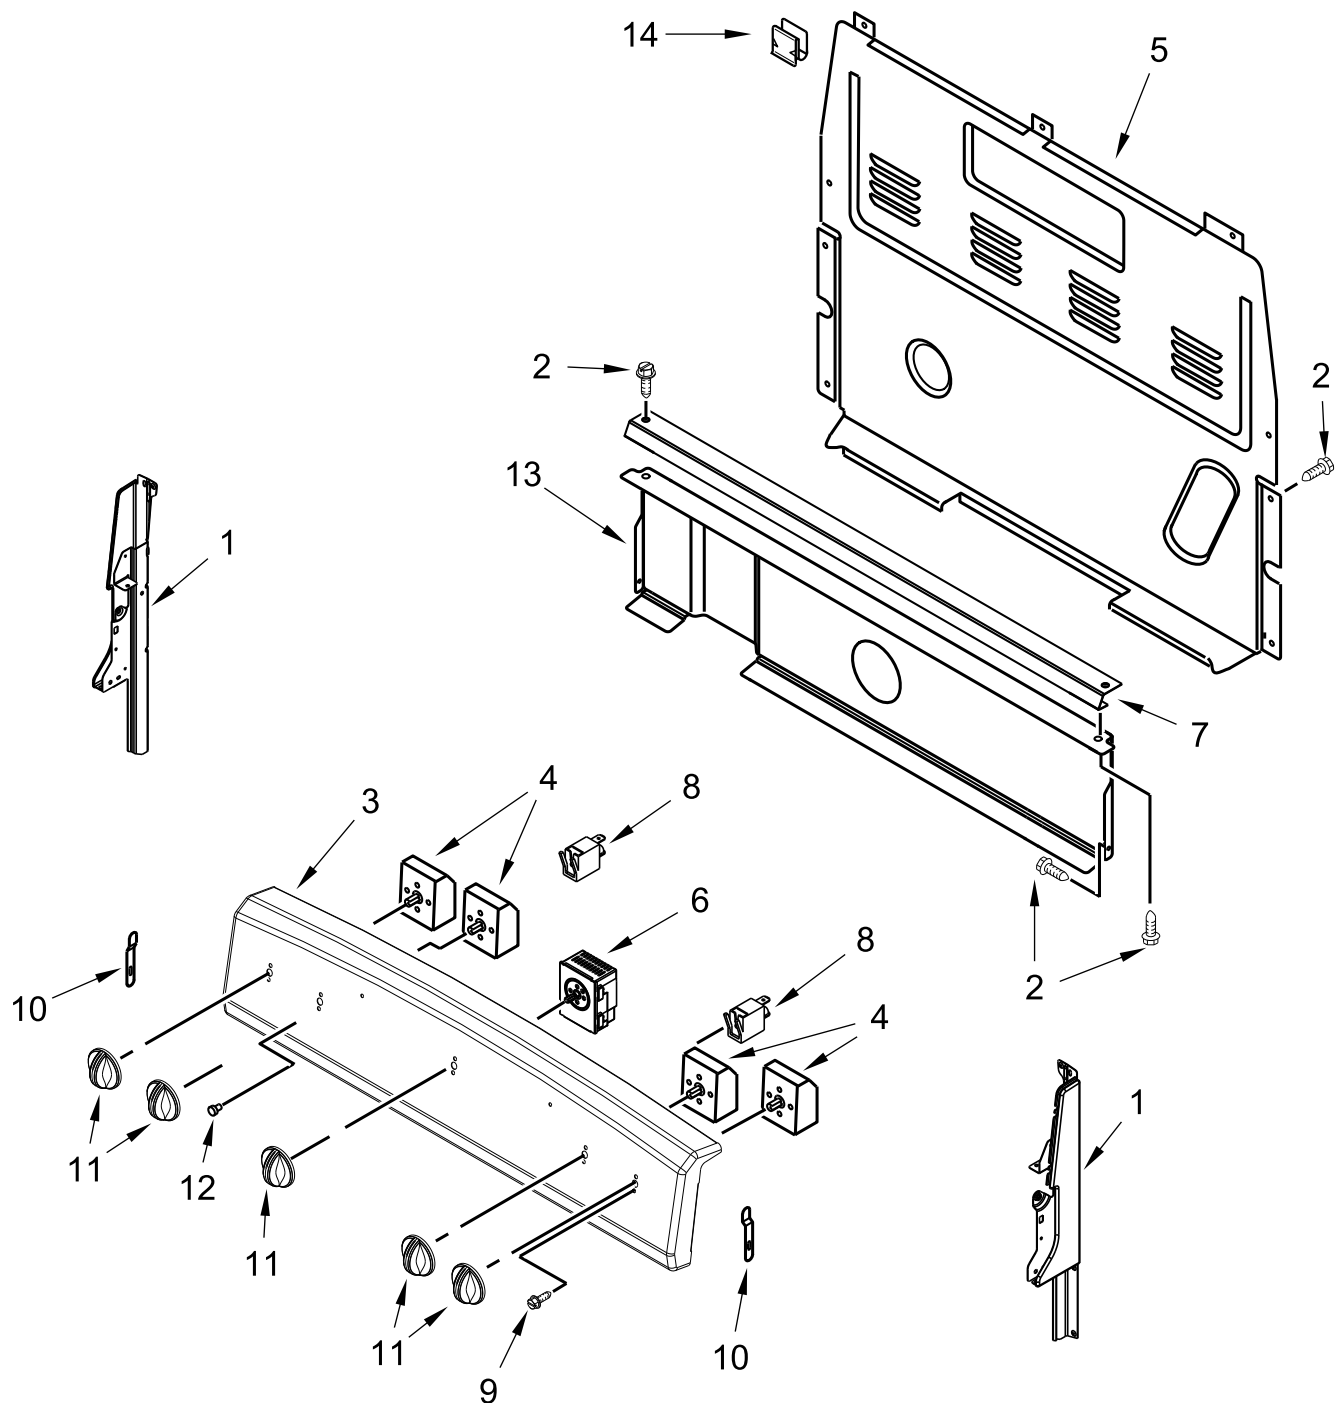

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	8272473	Cover, Upper Rear	13	W10134247	Shield, Heat
	W11130371	White (Left)	6	W10466758	Control, Electronic (ROC70)	14	8273564	Clip, Rear Upper Cover
	W11130378	White (Right)						
2	3196178	Screw	7	W10525121	Bracket, Console Mounting			
3		Panel, Backguard	8	8523266	Indicator, Light (250V)			
	W11134310	White	9	3400882	Screw			
4	3148951	Switch, Infinite (Right Front and Left Rear)	10	3196200	Clip, Spring			
	3148953	Switch, Infinite (Green) (Left Front and Right Rear)	11		Knob			
				W10211371	White			
			12	3196068	Lens, Indicator			


CHASSIS PARTS

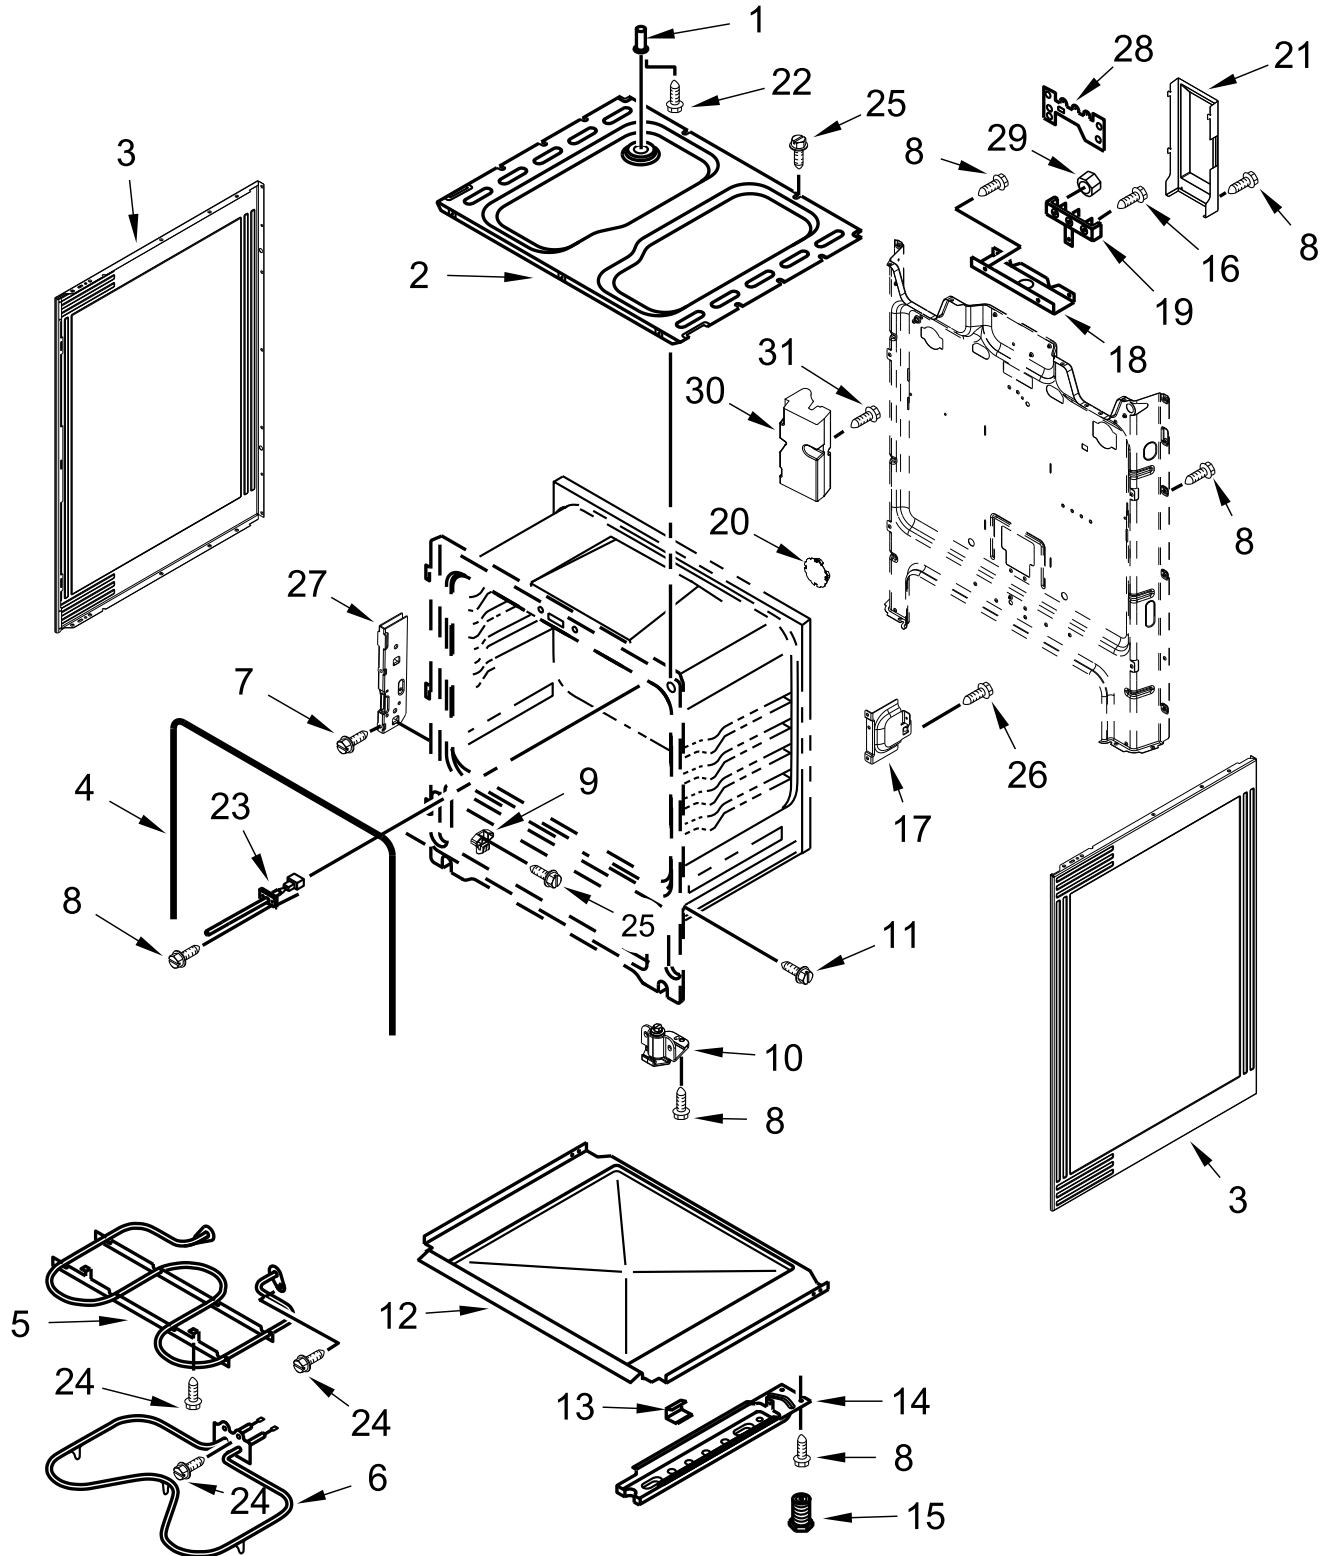

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222267	Tube, Vent	14	W10390007	Base Rail Assembly (Right)	25	3196165	Screw
2	W10209613	Box, Burner				26	3196169	Screw
3		Panel, Side		W10390008	Base Rail Assembly (Left)	27	W10289077	Receiver, Hinge
	W10575396	White				28	W10451176	Suppressor, Transient
4	W10129032	Seal, Door	15	W10058460	Foot, Leveling	29	3400029	Nut
5	W10308476	Element, Broil	16	3400016	Screw	30	W10910404	Counterweight
6	W11022836	Element, Bake	17	W10404688	Clip, Oven Support	31	W11034869	Screw
7	W10031780	Screw	18	3186034	Bracket, Service			FOLLOWING PARTS NOT ILLUSTRATED
8	3196178	Screw	19	W10245259	Block, Terminal		8273263	Insulation, Wrap
9	W10674705	Glide, Drawer Front	20	W11047127	Hole, Cover Light		8272611	Insulation, Back
10	W10341186	Front Foot Assembly	21	W10326122	Cover, Terminal Block		W10281322	Kit, Bare Wire Adapter Block
11	W10067840	Screw	22	3196567	Screw			
12	8054068	Retainer, Insulation	23	W10181986	Sensor, Oven			
13	W10137382	Clip, Panel	24	3196174	Screw			

DOOR PARTS

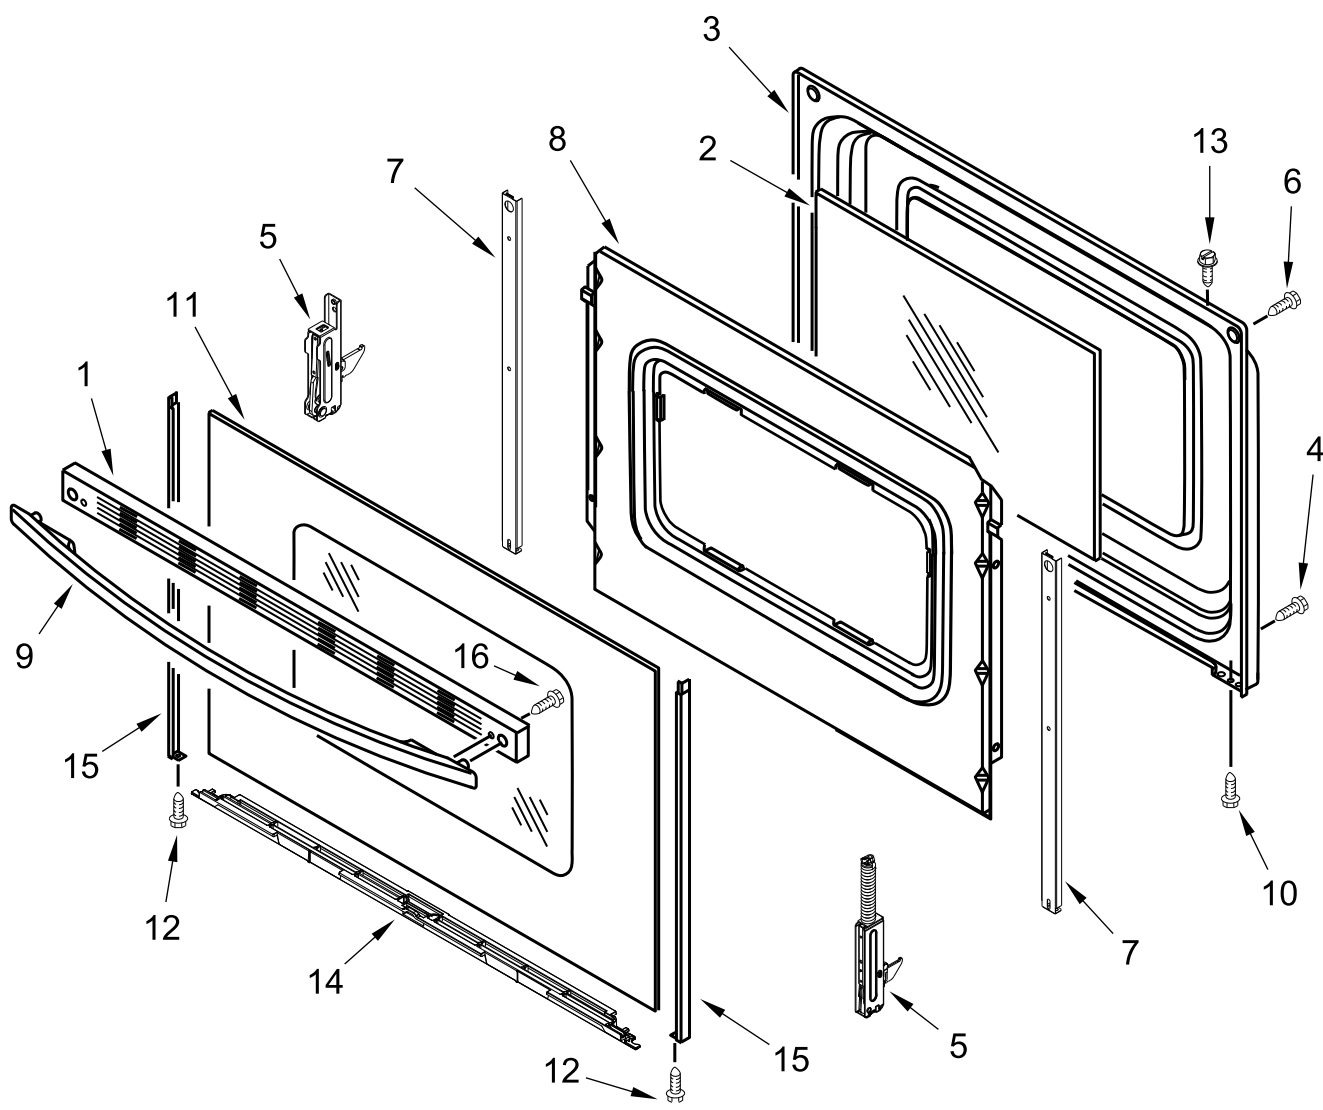


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310920	White
2	W11367326	Glass, Inner
3	9761344	Liner, Door
4	W10031780	Screw
5	W10299225	Hinge, Active
	W10299227	Hinge, Door (Passive)
6	W10200660	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W11379944	Strap, Door
8	9761505	Retainer, Insulation
9		Handle, Door
	W10323581	White
10	W10327235	Screw
11		Panel, Outer Door
	W10106404	White
12	3196165	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10031790	Screw
14		Trim, Lower Door
	W11444042	White
15		Trim, Door Side
	8523166	White (Right)
	8523172	White (Left)
16	W10168559	Screw

DRAWER AND BROILER PARTS

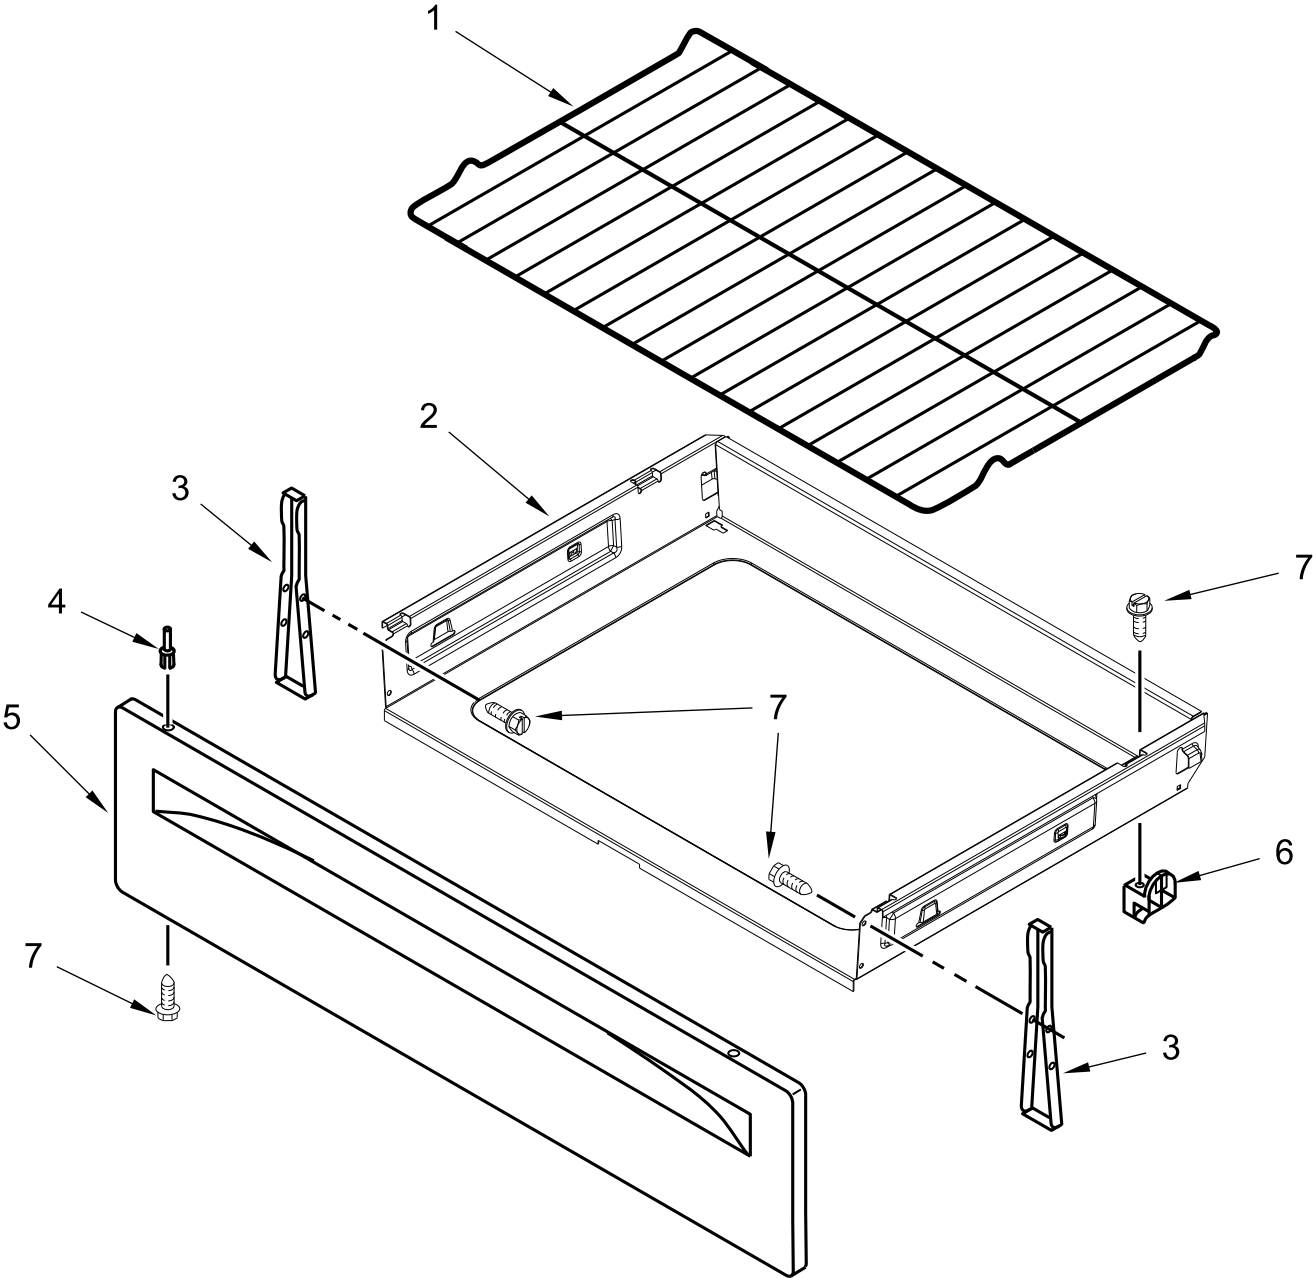

DRAWER AND BROILER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11173792	Rack, Oven	5		Panel, Drawer Front	6	W10674708	Glide, Drawer Rear
2	W10688022	Drawer, Storage		W11123901	White	7	3196165	Screw
3	W10462912	Bracket, Mounting Drawer						
4		Rivet, Push						
	3196814	White						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit/Bisque
	285006	Black
	206922	Primer (White)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting