




ELECTRIC RANGE

MODELS:

WFES3530RB0 (Black)
WFES3530RW0 (White)


COOKTOP PARTS

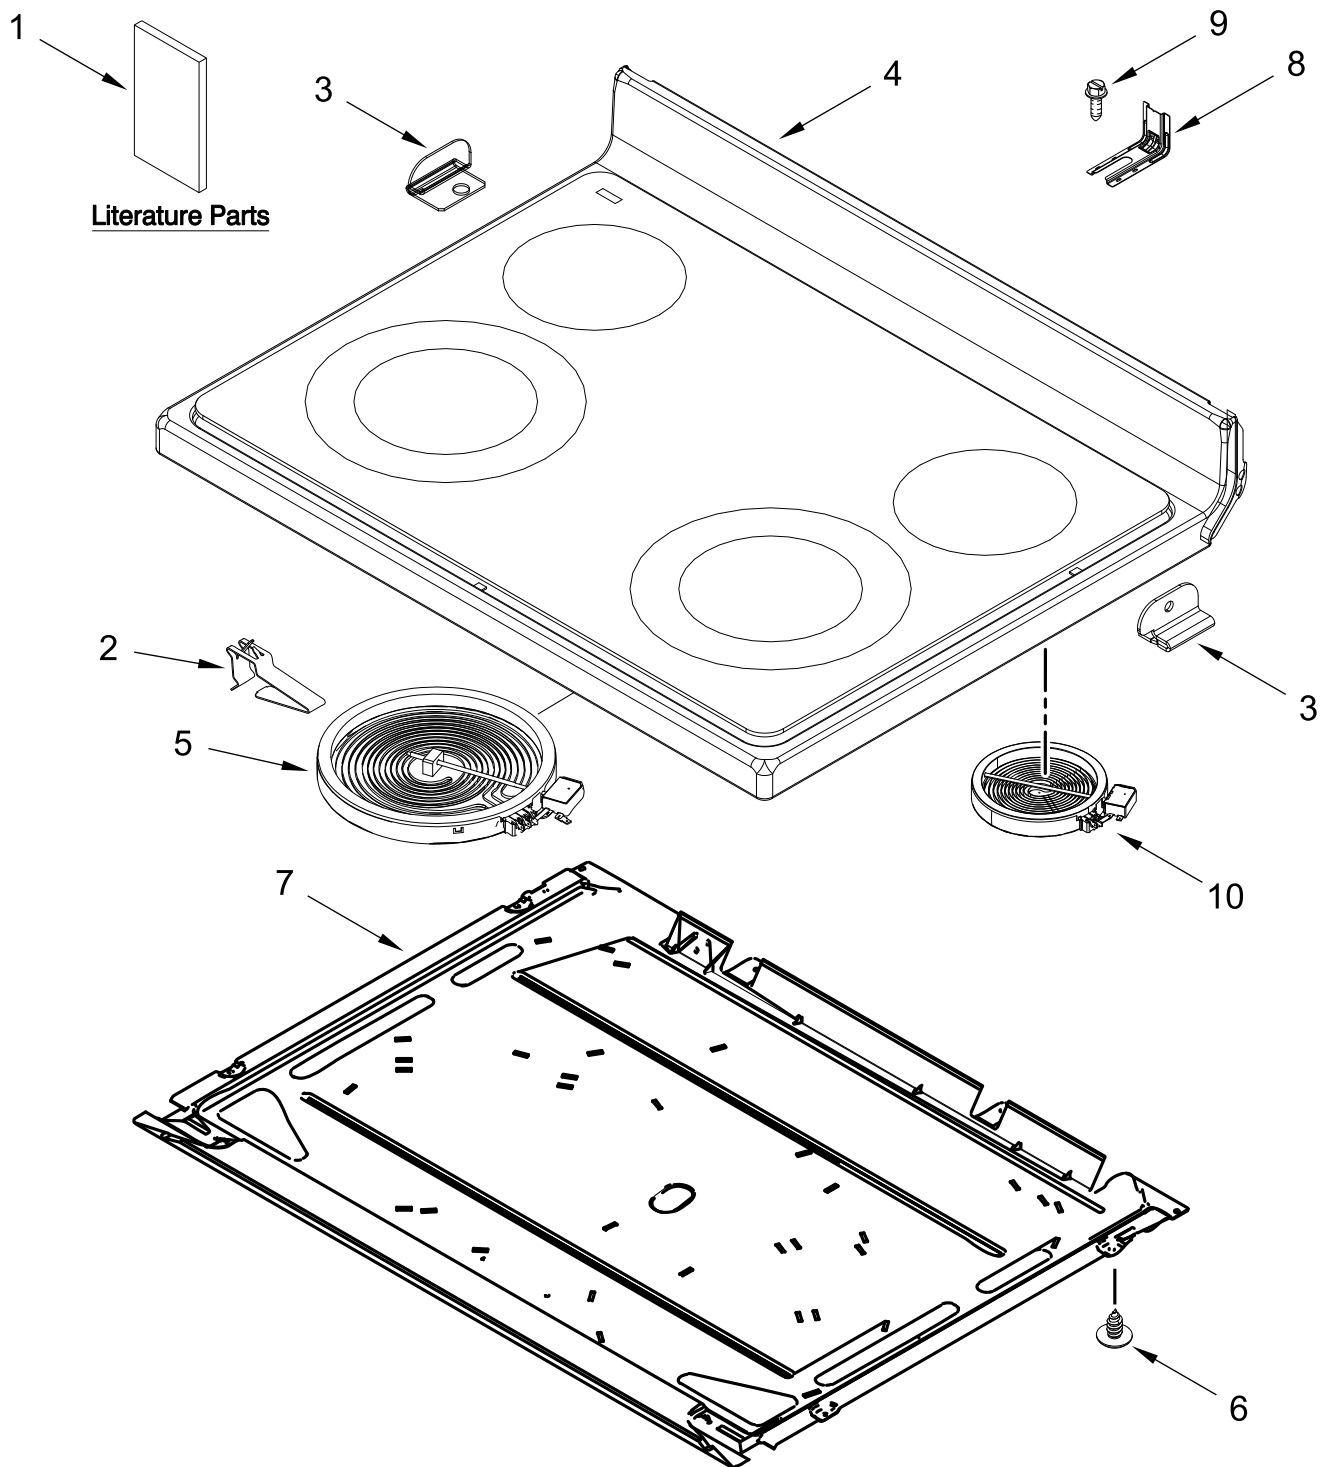

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4		Cooktop	9	7101P485-60	Screw, Anti-Tip Kit
	W11617173	Owners Manual		W11629153	Black	10	W10248261	Element (1200W)
	W11626731	Tech, Sheet		W11629154	White			(Left Rear, Right Rear)
	W11618614	Quick Start Guide	5	W10275048	Element (3000 and 1400W)			FOLLOWING PARTS NOT ILLUSTRATED
2	W11600012	Spring, Element			(Left Front and Right Front)		W11448102	Main, Harness
3	W10607641	Bracket, Cooktop (Left)					W11134845	Harness, Cooktop (Right)
	W10607642	Bracket, Cooktop (Right)	6	3196169	Screw		W11134603	Harness, Cooktop (Left)
			7	W10691223	Pan, Radiant Element			
			8	W11379945	Bracket, Anti-Tip			

CONTROL PANEL PARTS

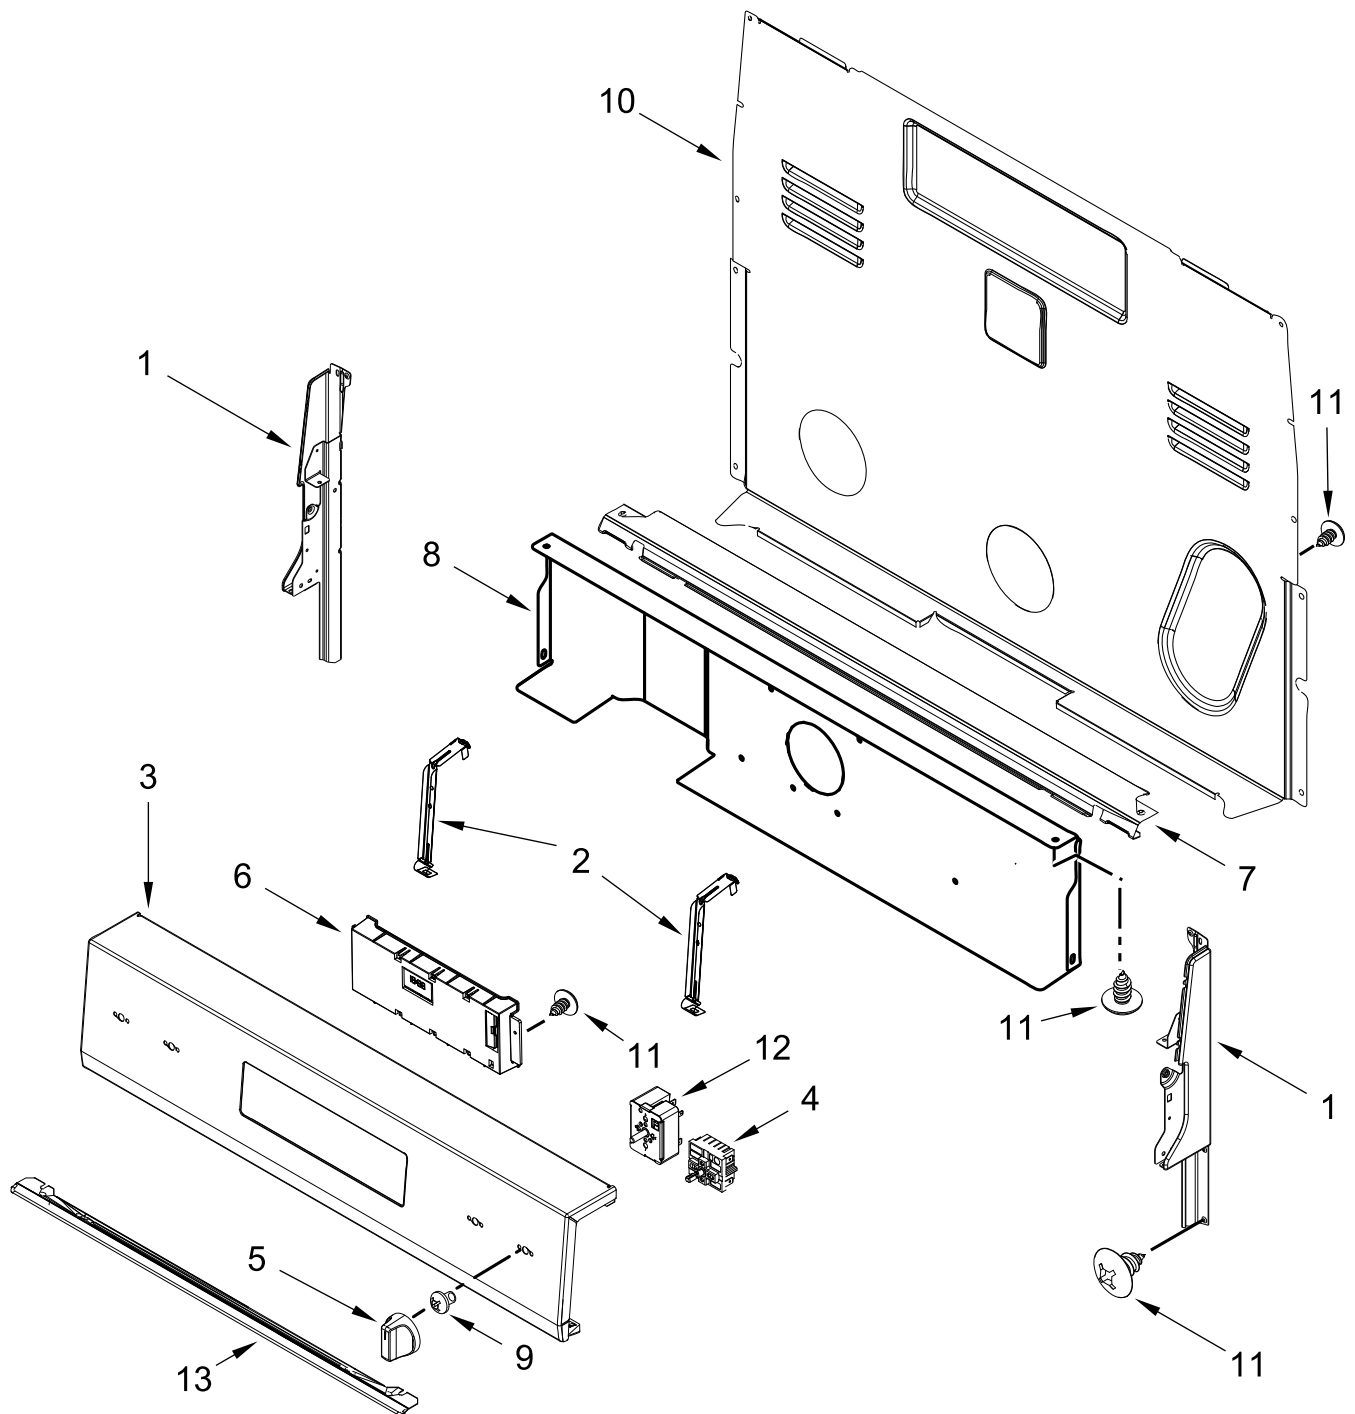


CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap
	W11213290	Black (Left)
	W11213292	Black (Right)
	W11213291	White (Left)
	W11213293	White (Right)
2	W11290750	Bracket, Control
3		Console, Assembly
	W11299264	Black
	W11299265	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10437092	Switch, Infinite (Left Front and Right Front)
5		Knob
	W11331196	Black
	W11331195	White
6		Control, Electronic (LCX)
	W11637090	Black
7	W10525121	Bracket, Console Mounting
8	W10134247	Shield, Heat

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
9	3400882	Screw
10	8272473	Cover, Upper Rear
11	3196178	Screw
12	W10578768	Switch, Infinite (Right Rear and Left Rear)
13		Bracket, Eye Brow
	W11443964	Black
	W11443963	White


CHASSIS PARTS

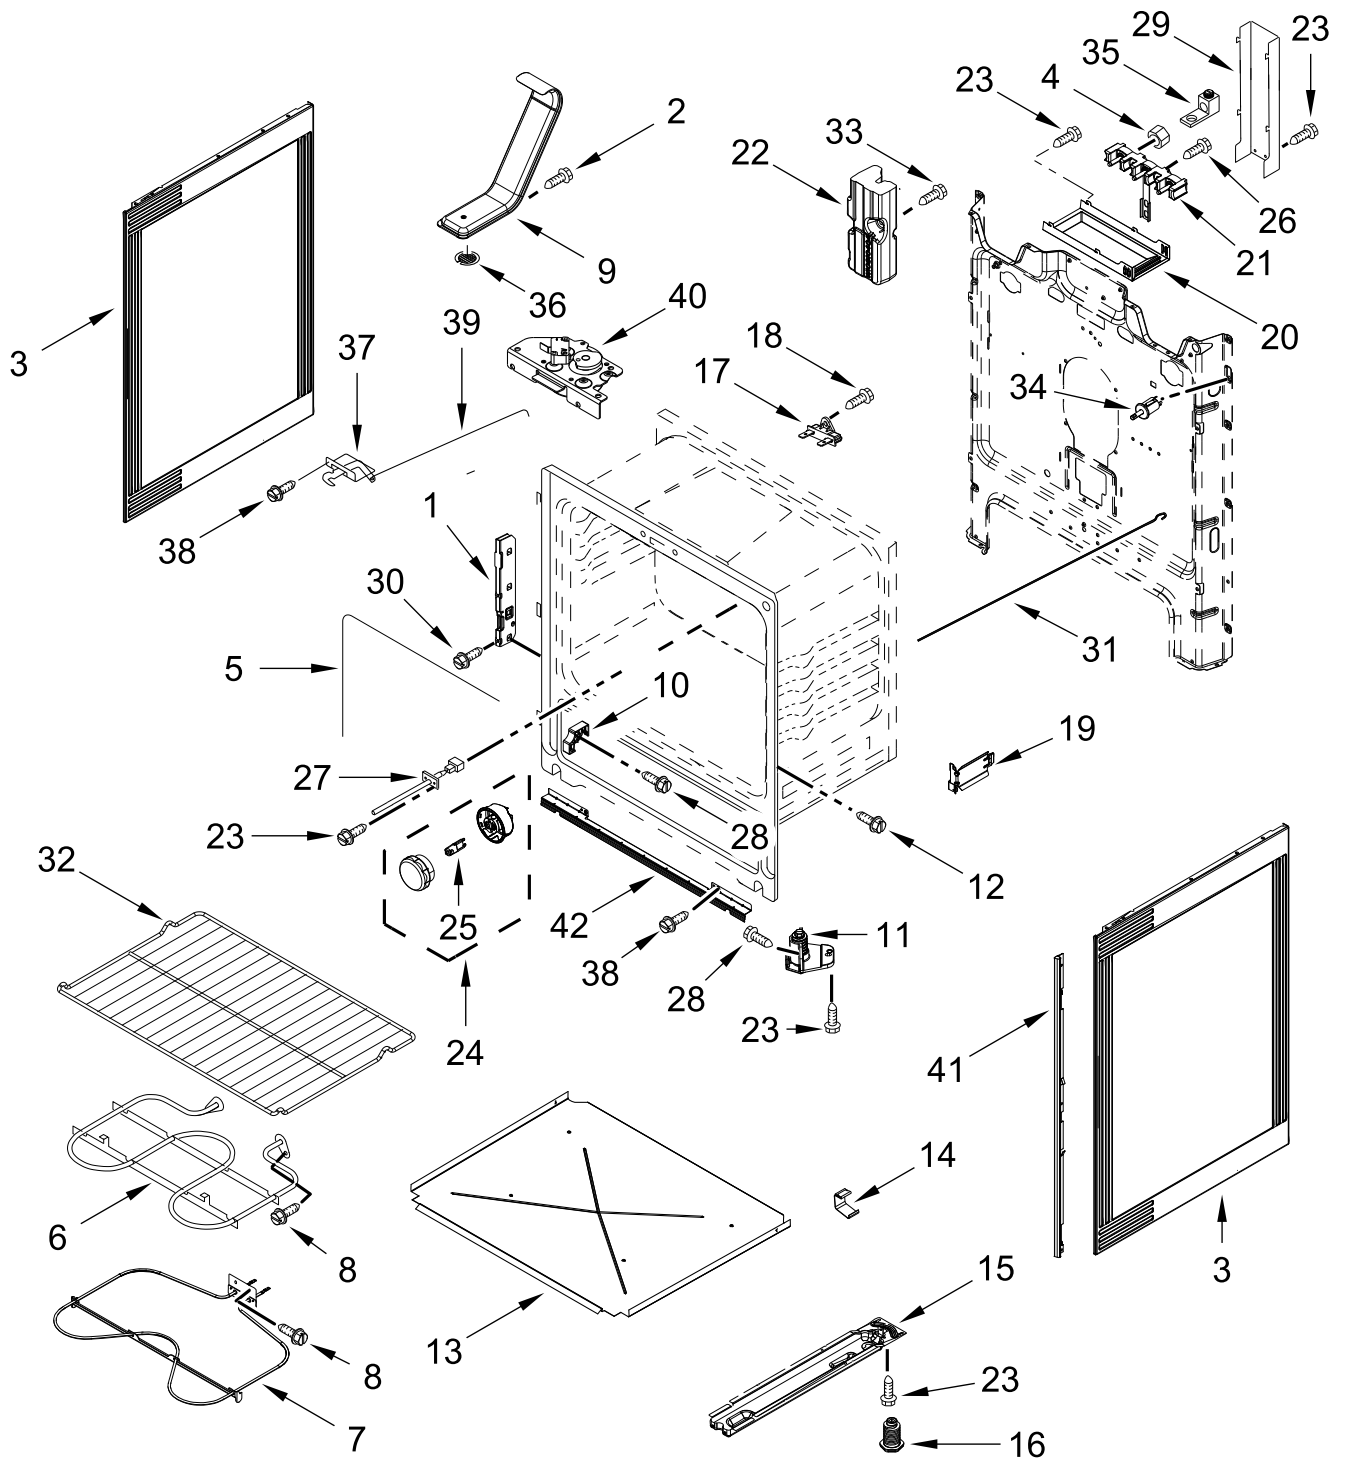

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	16	W10058460	Foot, Leveling	35	W10281322	Kit, Bare Wire Adapter Block
2	3196154	Screw	17	3196548	Fuse, Thermal	36	W11092984	Screen, Vent
3		Panel, Side	18	3196172	Screw	37	9761013	Front Door Latch Assembly
	W10162245	Black	19	W10404688	Clip, Oven Support	38	3196560	Screw
	W10575396	White	20	3186034	Bracket, Service	39	W10078380	Rod, Latch
4	3400029	Nut	21	W10245259	Block, Terminal	40	W10107820	Rear Door Latch Assembly
5	W11491751	Seal, Door	22	W10910404	Counterweight	41	W11510560	Barrier Rail, Rubber (Left and Right)
6	9757340	Element, Broil	23	3196178	Screw	42	W11464547	Bracket, Front Frame
7	W11022836	Element, Bake	24	W11634772	Light Assembly			FOLLOWING PARTS NOT ILLUSTRATED
8	3196174	Screw	25	W10571723	Bulb, Halogen 40 Watts	W10774939		Insulation, Wrap
9	W10134285	Tube, Vent	26	3400016	Screw	W11127325		Insulation, Back
10	W10674705	Glide, Drawer Front	27	W10586204	Sensor	W10333344		Insulation, Flue
11	W10341186	Front Foot Assembly	28	3196169	Screw			
12	W10067840	Screw	29	W10326122	Cover, Terminal Block			
13	8054068	Retainer, Insulation	30	W10031780	Screw			
14	W10137382	Clip, Panel	31	9757239	Rod, Door Switch			
15	W10390008	Base Rail Assembly (Left)	32	W11173792	Rack, Oven			
	W10390007	Base Rail Assembly (Right)	33	W11034869	Screw			
			34	W11511828	Switch, Door			

DOOR PARTS

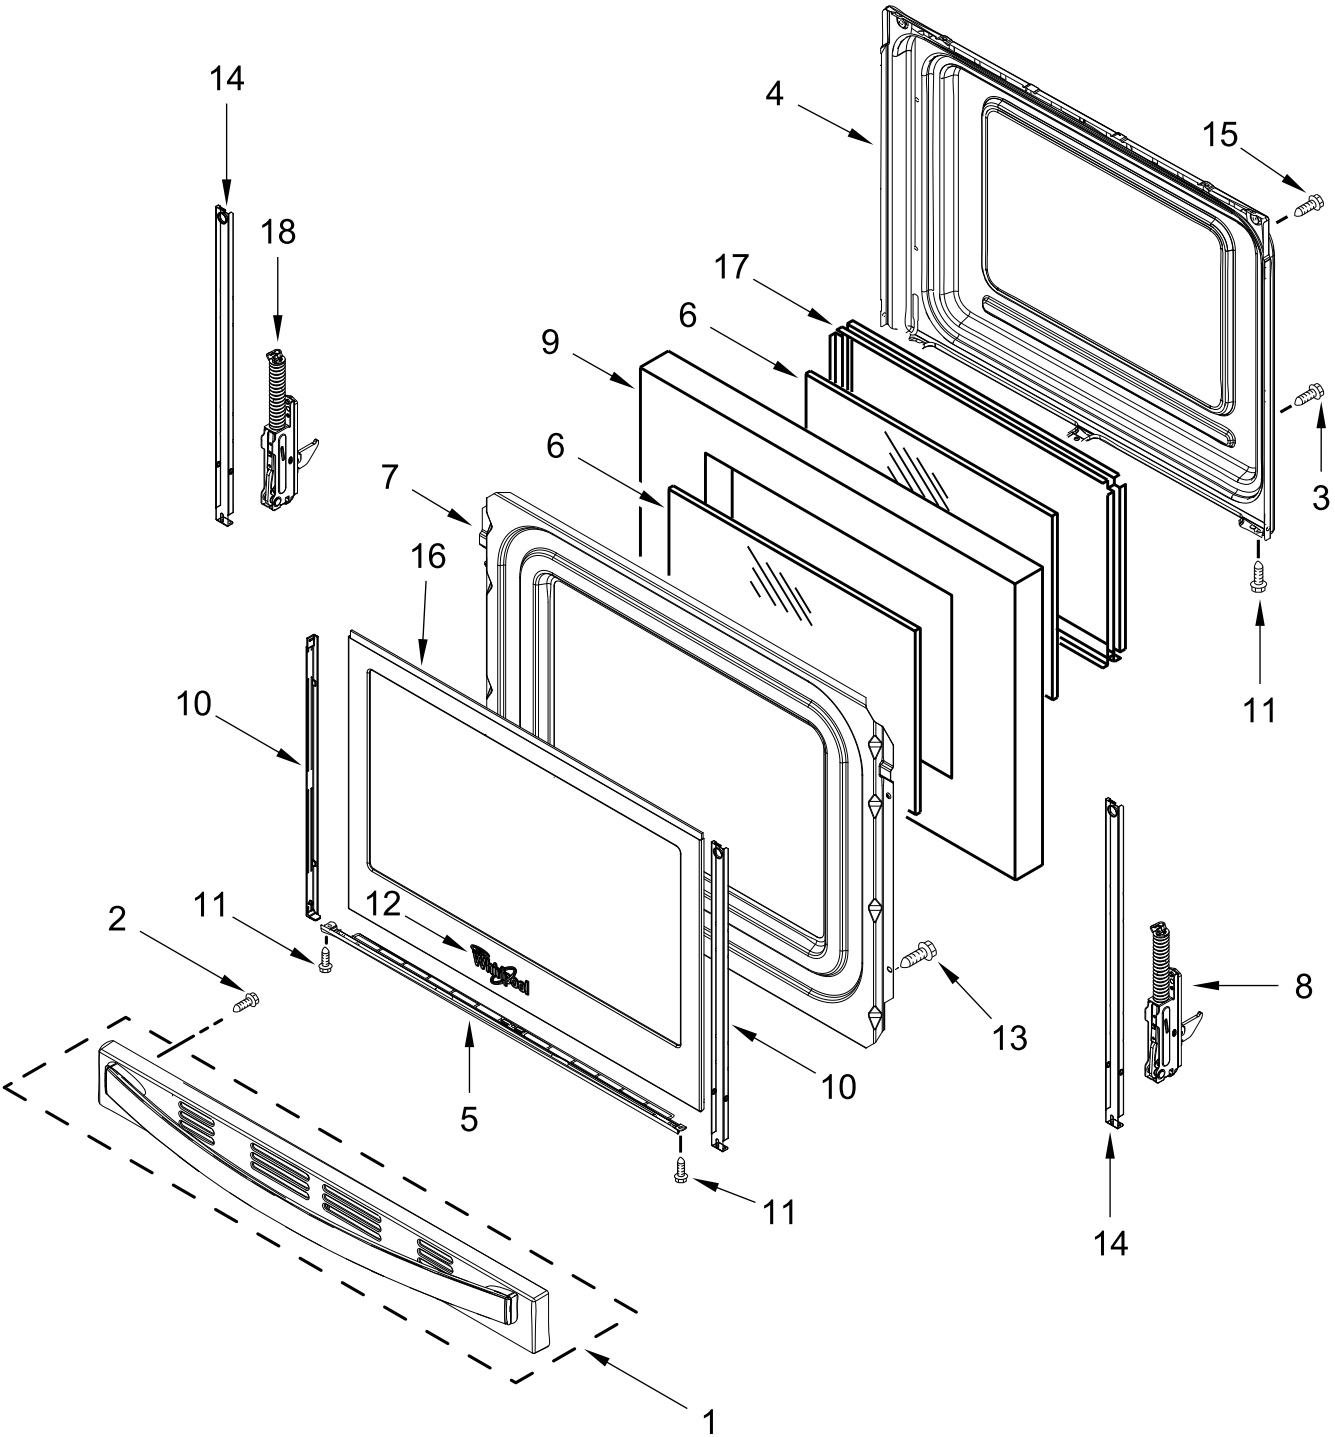


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle and Vent Assembly
	W11353052	Black
	W11353053	White
2	W10465158	Screw
3	W10031790	Screw
4	9761344	Liner, Door
5		Trim, Lower Door
	W11444043	Black
	W11444042	White
6	9758162	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W11380222	Retainer, Insulation
8	W10388635	Hinge, Door (Active)
9	W10278991	Insulation, Door Strip
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
	8523166	White (Right)
	8523172	White (Left)
11	W10327235	Screw
12	W10884775	Badge

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10031780	Screw
14	W11379944	Strap, Door
15	W10200660	Screw
16		Glass, Outer Door
	W11624777	Black
	W11624778	White
17	W10316950	Frame, Glass
18	W10440013	Hinge, Door (Active)

DRAWER PARTS

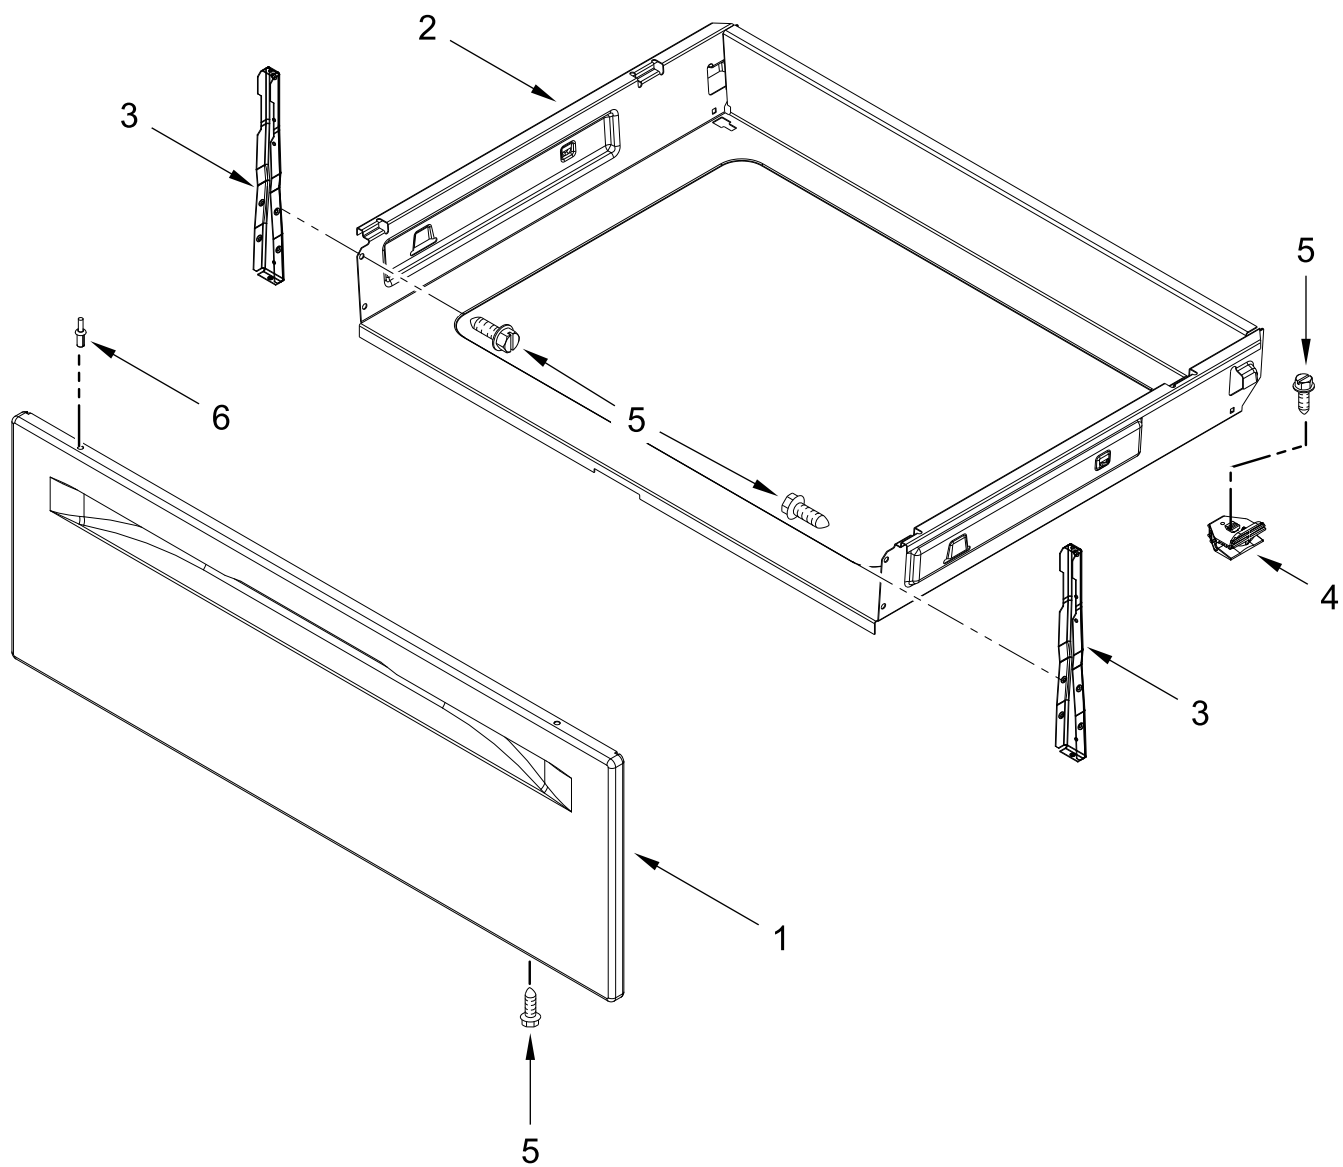

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462912	Bracket, Mounting Drawer	6		Rivet, Push
	W11123900	Black					3196813	Black
	W11123901	White	4	W10674708	Glide, Drawer Rear		3196814	White
2	W10688022	Drawer, Storage	5	3196165	Screw			

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting