




GAS RANGE
Includes Griddle

MODELS:

KFDC558JYP01 (Yellow Pepper)


BURNER BOX AND GRIDDLE PARTS

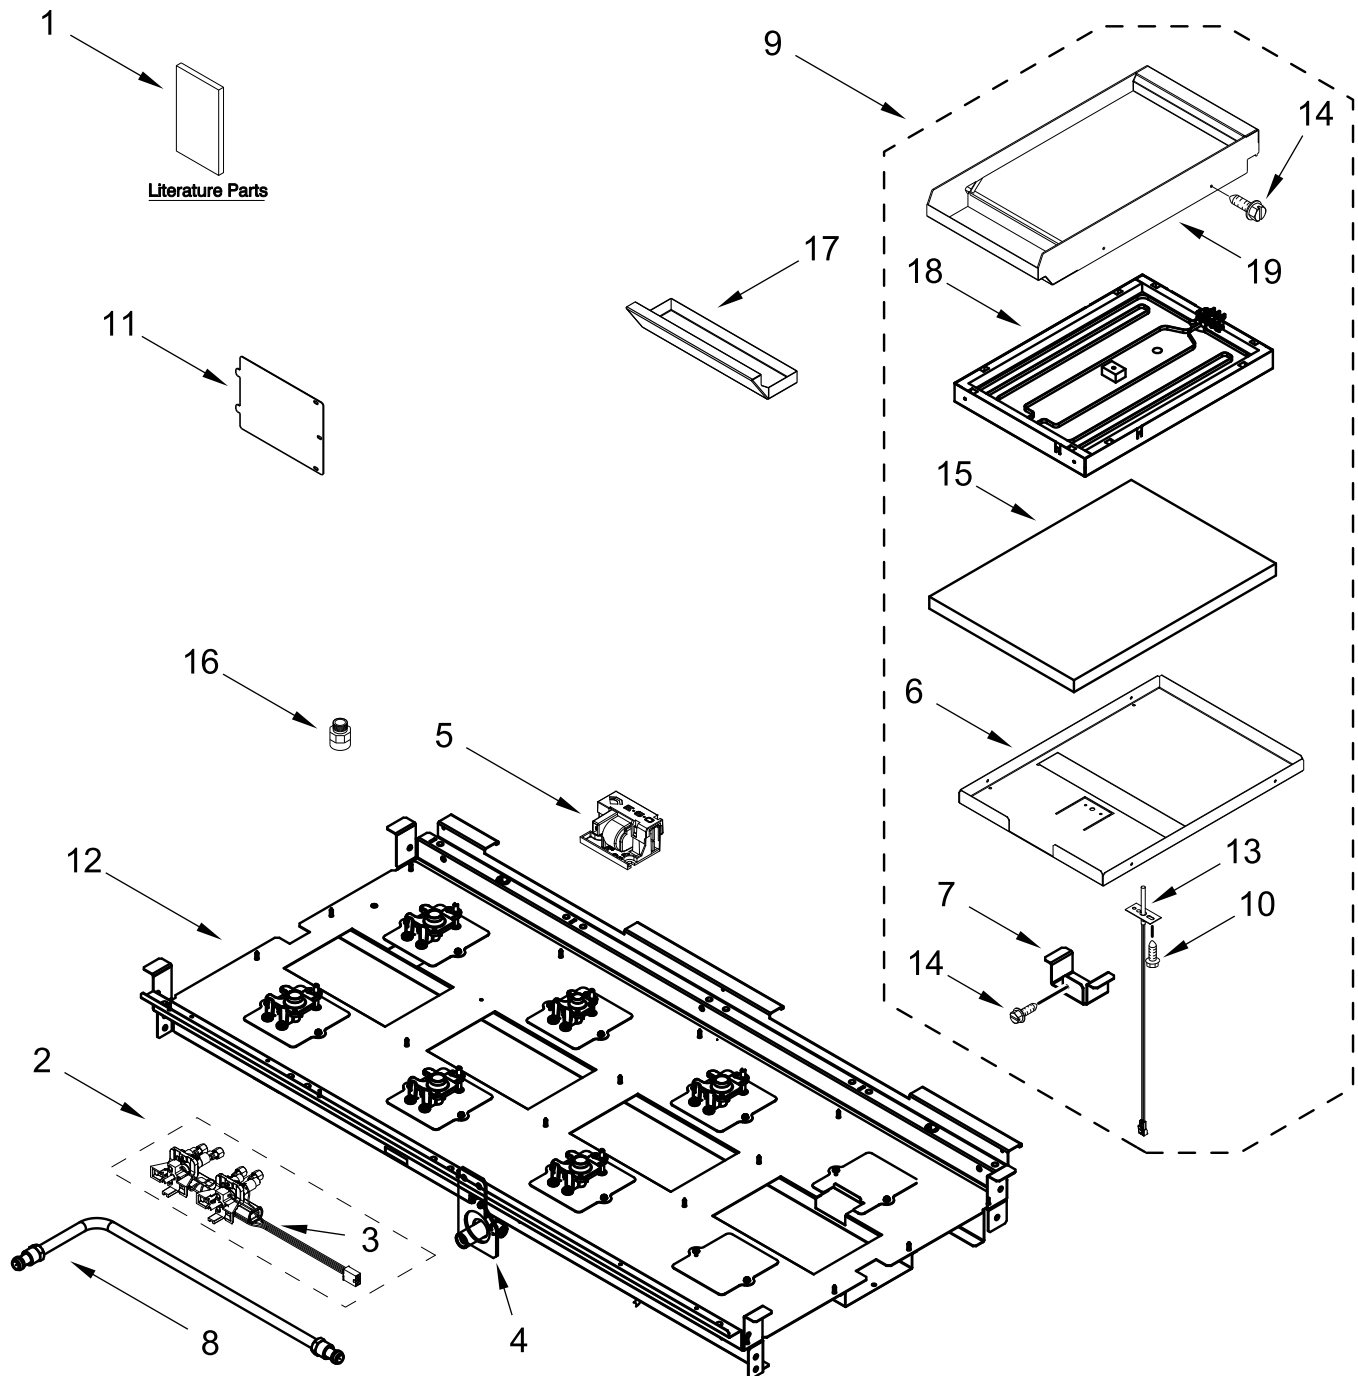

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10903728	Switch, Harness	17	W10276497	Tray, Griddle Drip
	W11114331	Guide, Use And Care	4	W11121194	Bracket, Manifold	18	W10891698	Element, Griddle
	W11508847	Instructions, Installation	5	W11121317	Module, Spark	19	W11360151	Module, Griddle
	W11184759	Guide, Internet Connectivity	6	W11330430	Tray, Griddle Insulation			FOLLOWING PARTS NOT ILLUSTRATED
	W11114332	Guide, Quick Start	7	W11121384	Bracket, Griddle-RTD		W11200302	Harness, Main (30 In)
	W11202393	Diagram, Wiring	8	W10892809	Tube, Manifold Supply (Left)		W11200311	Harness, Main (18 In)
	W11202387	Diagram, Wiring (Oven)		W10892804	Tube, Manifold Supply (Left Center)		W10903727	Harness, Griddle
	W11202289	Sheet, Tech		W10892805	Tube, Manifold Supply (Right Center)		W11200329	Harness, Cooktop
2	W11183720	Assembly, Valve Manifold (Left Front And Left Rear)	9	W11505236	Griddle Module Assembly		W10780278	Harness, Door Lock
	W11036612	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	10	3196160	Screw		W11200318	Harness, Communication
	W10892994	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	11	W10115843	Cover, Ignition		W11242785	Harness, WIFI
			12		Box, Burner (Not Serviced)		313438	Clip, Harness
			13	W10891584	Sensor, Griddle		W11212216	Cord, Power
			14	W10162096	Screw		9759877	Retainer, Strain Relief
			15	W11121383	Insulation, Griddle		4450800	Screw, Grounding
			16	4453116	Adapter, Male		W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11238042	Kit, LP Conversion


COOKTOP, BURNER AND GRATE PARTS

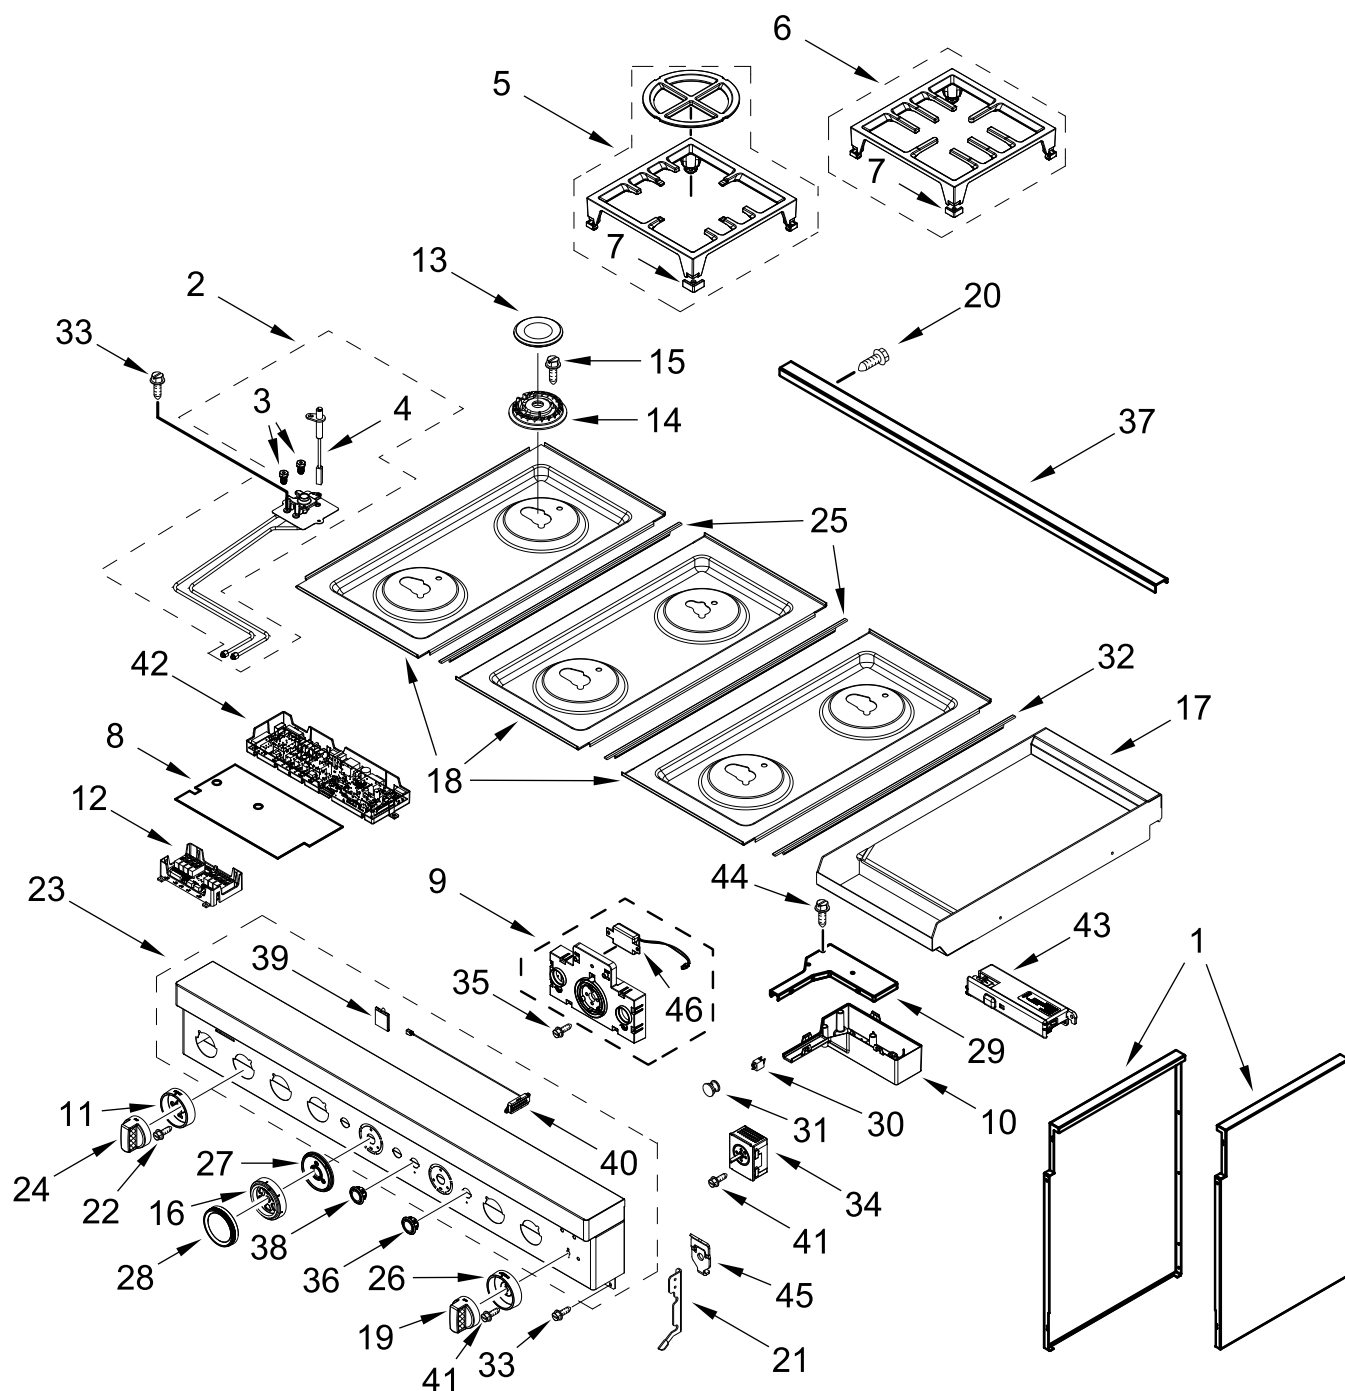

COOKTOP, BURNER AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	6	W11291179	Burner, Grate	21	W10130760	Bracket, Moving Console (Left)
	W11111428	Panel, Cabinet Side (Right)	7	W11042504	Bumper, Grate		W10130759	Bracket, Moving Console (Right)
2	W10892793	Assembly, Orifice Holder (Left Front)	9	W11436331	Interface, User	22	W11328357	Screw
	W10892492	Assembly, Orifice Holder (Left Rear)	10	W11205795	Cover, WIFI Outer	23	W10877951	Panel, Control
	W11159461	Assembly, Orifice Holder (Left Center Front)	11	W10881642	Bezel (Front Burners)	24	W10912166	Knob, Burner
	W10892808	Assembly, Orifice Holder (Left Center Rear)		W10883433	Bezel (Rear Burners)			Stainless (Left Rear, Left Center Front, Right Center Rear)
	W10892505	Assembly, Orifice Holder (Right Center Front)	12	W10890116	Manager, Appliance (Expansion)		W10883172	Stainless (Left Front, Left Center Rear, Right Center Front)
	W10892446	Assembly, Orifice Holder (Right Center Rear)	13		Cap, Burner	25		Trim, T-Strip
				W11121390	Black (Includes 6)		W10271524	Black
			14	W10891746	Spreader, Flame (High)	26	W10886700	Bezel, Griddle
					(Left Front, Right Center Front)	27		Bezel, Oven
				W10891974	Spreader, Flame (Low)		W11500871	Stainless
					(Left Rear, Left Center Front, Right Center Rear)	28		Knob, Oven Temperature
				W10891978	Spreader, Flame (AUX)		W11500868	Stainless
					(Left Center Rear)	29	W11205794	Cover, WIFI Inner
3	W10892422	Orifice, Main (17.4K)				30	W10116114	Light, Indicator Housing
		(Left Front, Right Center Front)	15	W11323261	Screw (8-18 X 1 in)	31	W10294500	Lens, Indicator Light
	W10892419	Orifice, Main (15K)		W11323309	Screw (8-18 X 1/2 in)	32	W10291193	Trim, L-Strip
		(Left Rear, Left Center Front, Right Center Rear)	16		Knob, Oven Mode	33	7101P426-60	Screw
	W10892435	Orifice, Simmer (2.6K)		W11500863	Stainless	34	W11033497	Control, Griddle
		(Left Front, Right Center Front)	17		Assembly, Griddle Module	35	3400814	Screw
					(Part Number Shown On Burner Box and Griddle Parts Page)	36	W11241510	Button Assembly, Oven Start
	W10892438	Orifice, Simmer (5K)	18		Panel, Cooktop	37	W11156418	Trim, Island
		(Left Center Rear)		W11038235	Black (Left)	38	W11241511	Button Assembly, Oven Light
4	W11238757	Igniter (Left Front, Right Center Front)		W11038257	Black (Left Center)	39	W10896366	Assembly, Light Pipe
	W11114379	Igniter (Left Rear)		W11038243	Black (Right Center)	40	W11130078	Antenna, WIFI
	W10892340	Igniter (Left Center Front, Left Center Rear, Right Center Rear)	19		Knob, Griddle	41	W10674068	Screw
				W10912167	Stainless	42	W11100281	Manager, Appliance (Powermax)
			20	7101P338-60	Screw	43	W11110768	Assembly, WIFI Module
5	W11291183	Burner, Grate (With Wok Ring)				44	7101P624-60	Screw
						45	W11036559	Spring Clip, Range
						46	W10568405	Assembly, Speaker


48 IN. CHASSIS PARTS

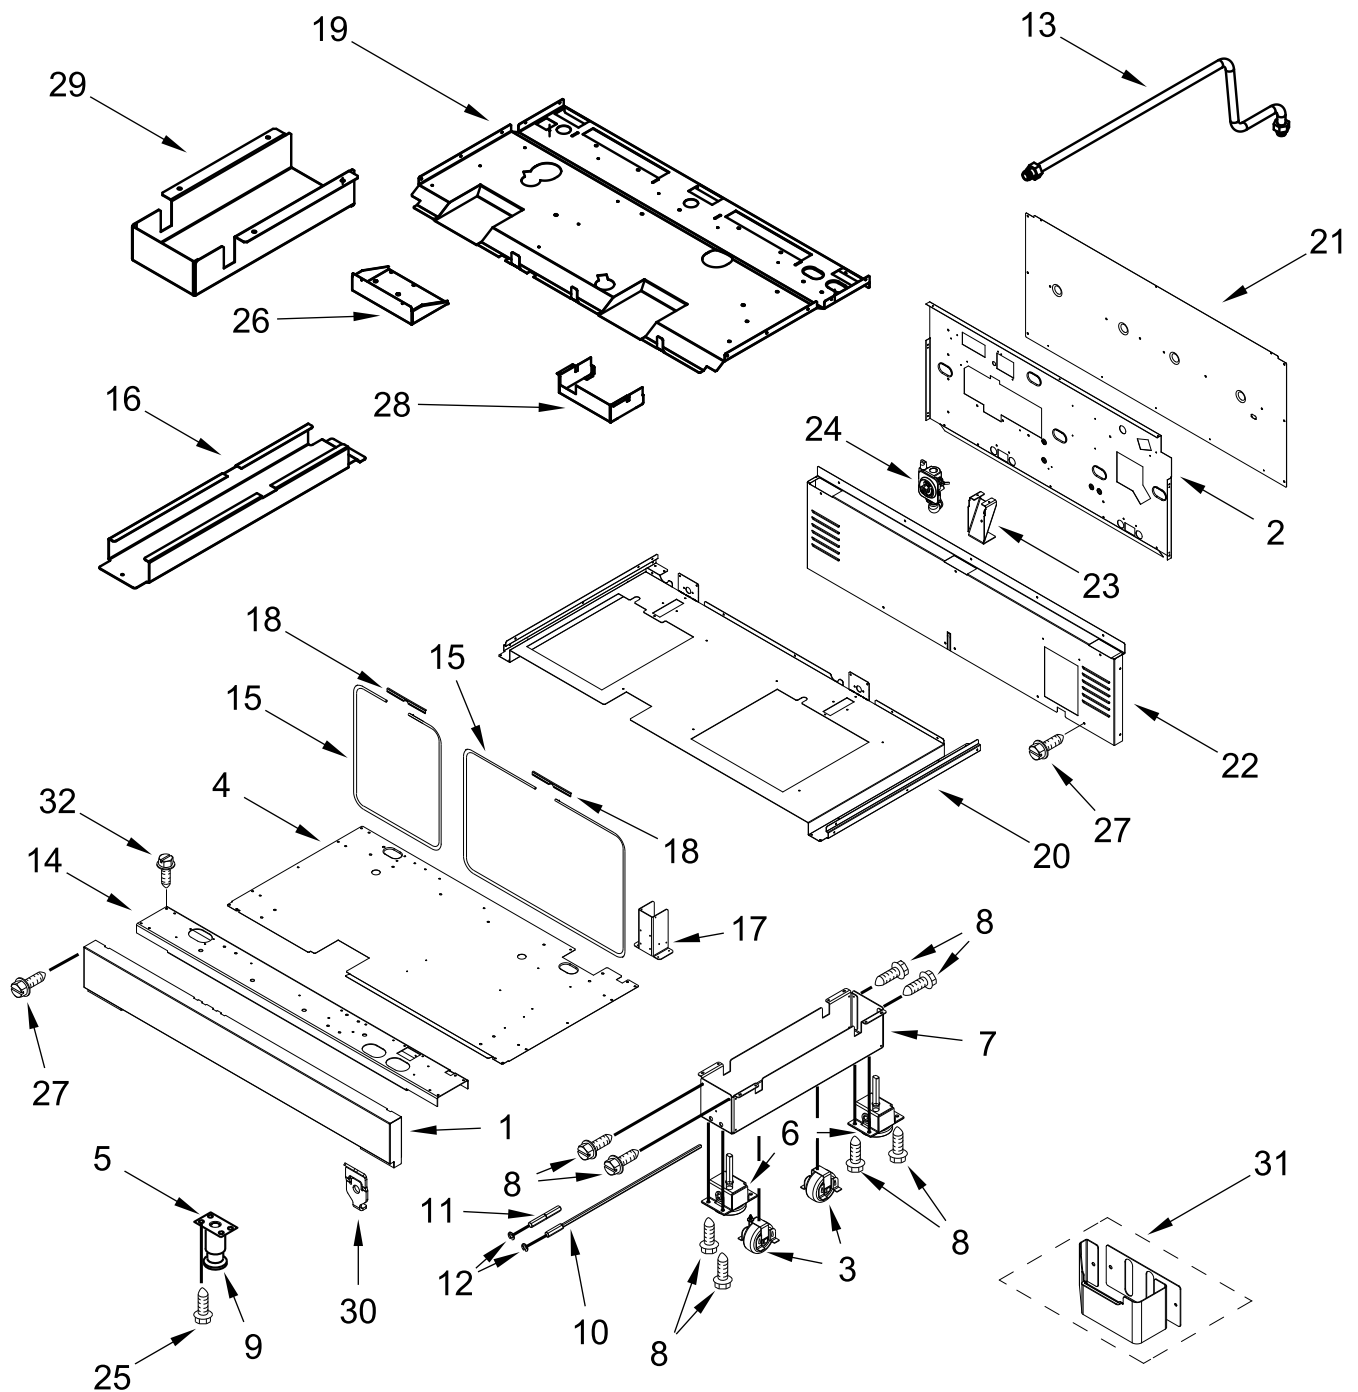

48 IN. CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394819	Kickplate	14	W11369238	Support, Channel	24	W10449140	Regulator, Pressure
2	W11324987	Back, Chassis	15	W11115328	Gasket, Oven (30 in)	25	3400518	Screw
3	W10138054	Assembly, Roller		W11115326	Gasket, Oven (18 in)	26	W11106341	Drawer, Appliance Manager
4	W11110260	Duct, Bottom (48 in)	16	W11050145	Duct-Chassis, Rear	27	7101P426-60	Screw
5	9759118	Plate, Mounting	17	W10115819	Column, Central	28	W11369237	Cabinet, Appliance Manager
6	9760860	Leveler	18	W11362015	Retainer, Gasket (9 in Long)	29	W11368831	Channel, Wire
7	W10908710	Base, Leveling Leg	19	W11324984	Top, Chassis	30	W11036559	Spring Clip, Range
8	4449743	Screw	20	W11040800	Chassis, Bottom	31	W11199181	Cover, Foot (Left)
9	9759117	Foot, Dual Fuel	21	W11103335	Panel, Back Top		W11199178	Cover, Foot (Right)
10	W10115869	Shaft, Long	22	W11034123	Panel, Back Bottom	32	3196560	Screw
11	W10115793	Shaft, Short						
12	489504	E-Ring	23	W11096823	Bracket, Pressure Regulator			
13	W11106963	Tube, Pressure Regulator						


30 IN. OVEN PARTS

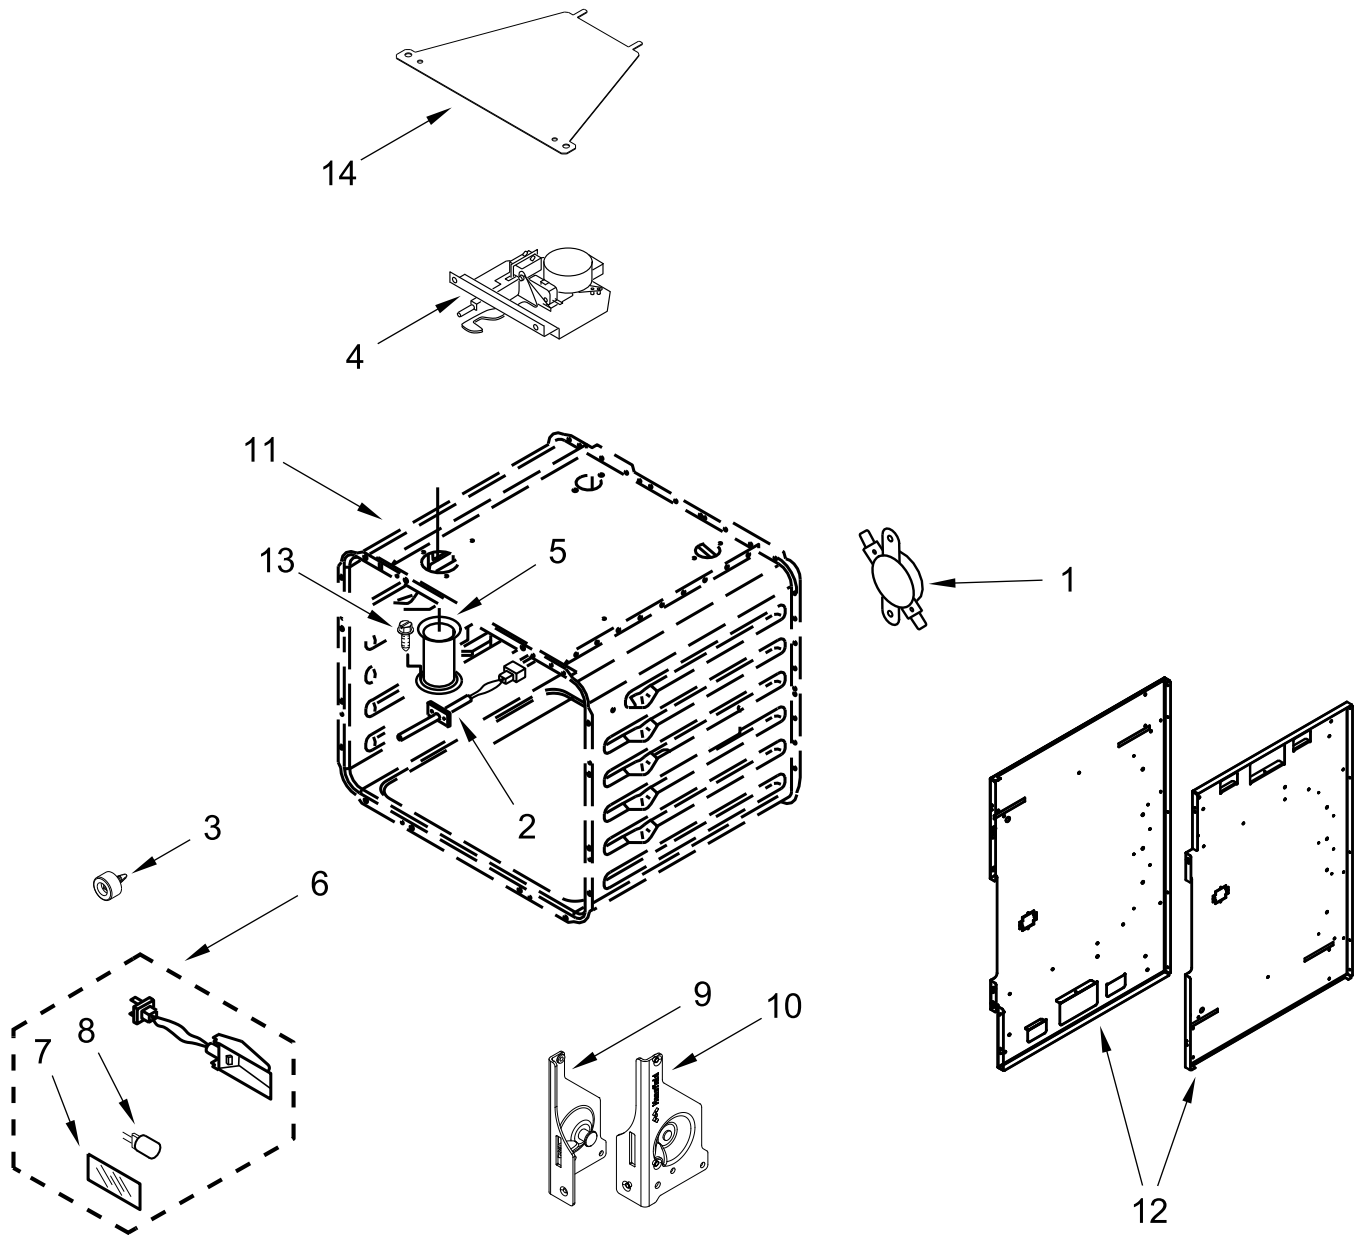

30 IN. OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	14	W10160858	Cover, Latch
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw	11		Liner, Oven (Not Serviced)		W10282810	Insulation, Wrap (30 In)
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)		W10282818	Insulation, Back, (30 In)
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)			
6	W11223932	Assembly, Oven Light	13	3196176	Screw		3400968	Nut
7	W10169756	Lens, Light						
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)						


18 IN. OVEN PARTS

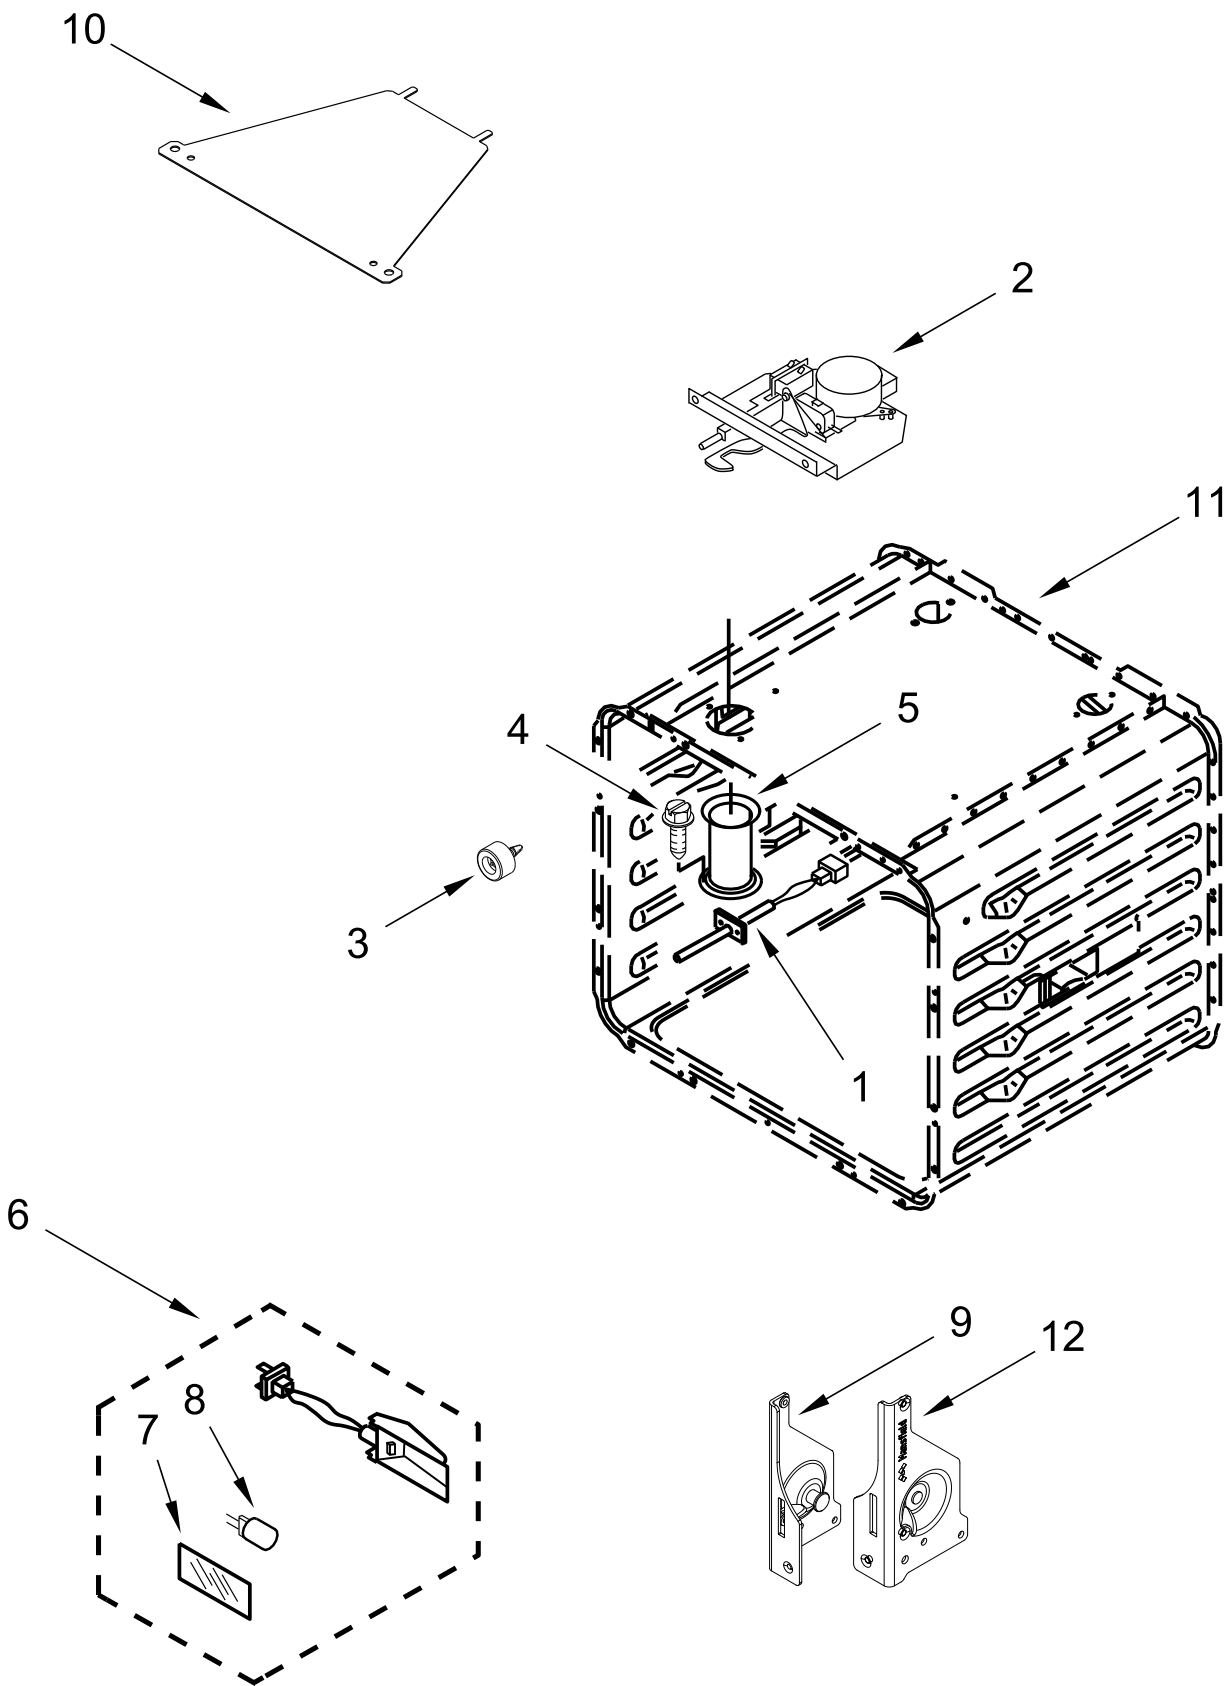

18 IN. OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	8	W10169757	Bulb, Light	12	W11096293	Receiver, Hinge (Right)
2	W10830016	Latch, Motorized	9	W11096294	Receiver, Hinge (Left)			FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper and Screw	10	W10160858	Cover, Latch			
4	3196176	Screw	11		Liner, Oven (Not Serviced)			
5	W10288078	Tube, Vent					W10282820	Insulation, Wrap, 18 in
6	W11223932	Assembly, Oven Light					W11529898	Insulation, Back, 18 in
7	W10169756	Lens, Light					3400968	Nut


VENTING PARTS

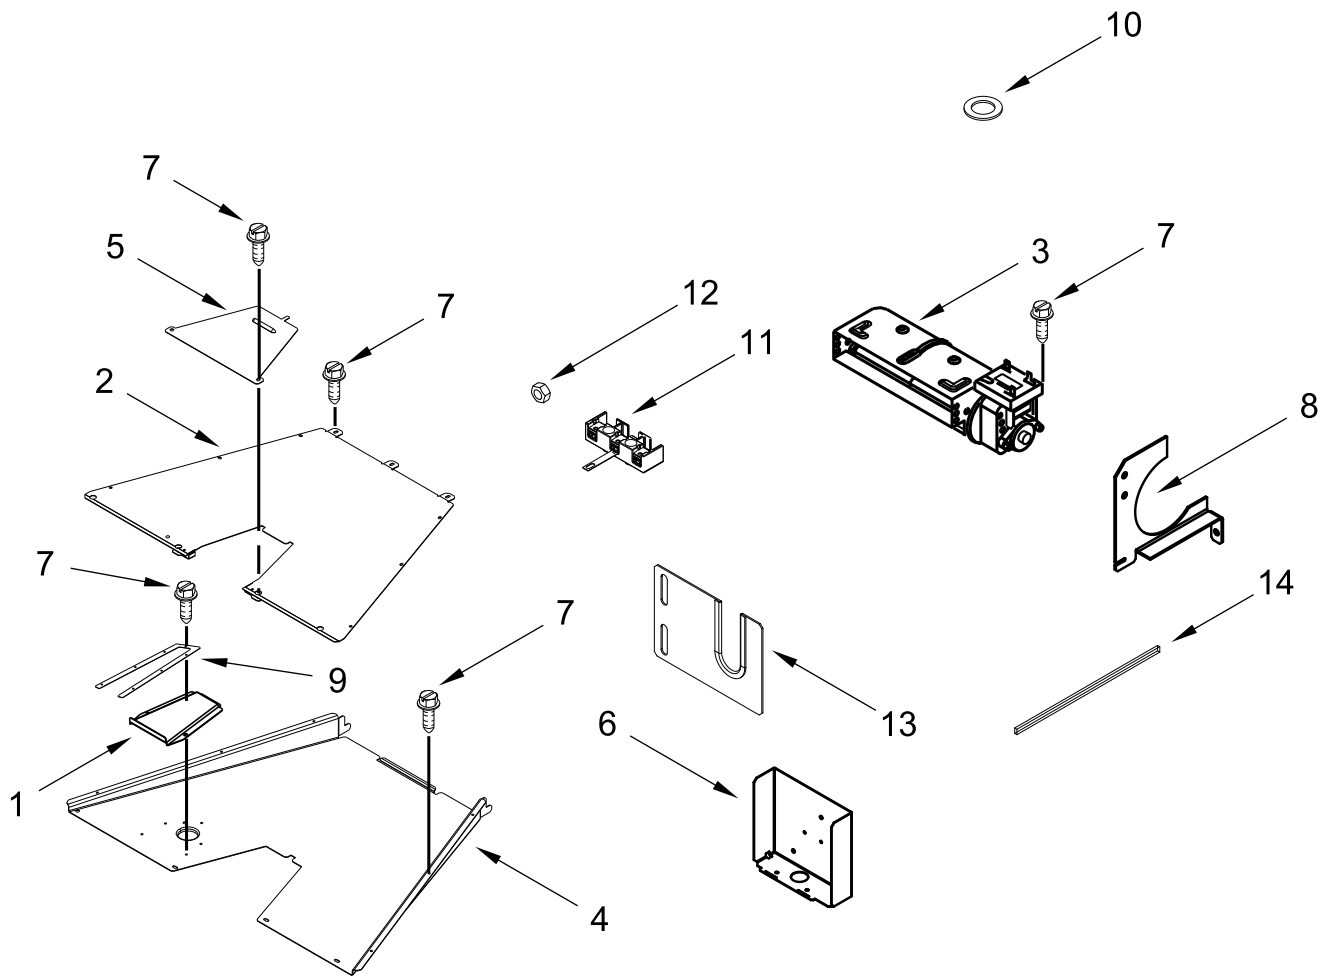

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30 In)	4	W11105222	Vent, Cooling Bottom (30 In)	9	W10270397	Seal, Vent Slope (30 In)
	W10818235	Slope, Exhaust Vent (18 In)		W11113378	Vent, Cooling Bottom (18 In)		W10270402	Seal, Vent Slope (18 In)
2	W11105223	Vent, Cooling Top (30 In)	5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney
	W11113380	Vent, Cooling Top (18 In)	6	W11353392	Box, Terminal	11	9761958	Block, Terminal
3	W11200129	Blower	7	7101P426-60	Screw	12	112432	Nut, Hex
			8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel
						14	W10919715	Gasket


30 IN. OVEN DOOR PARTS

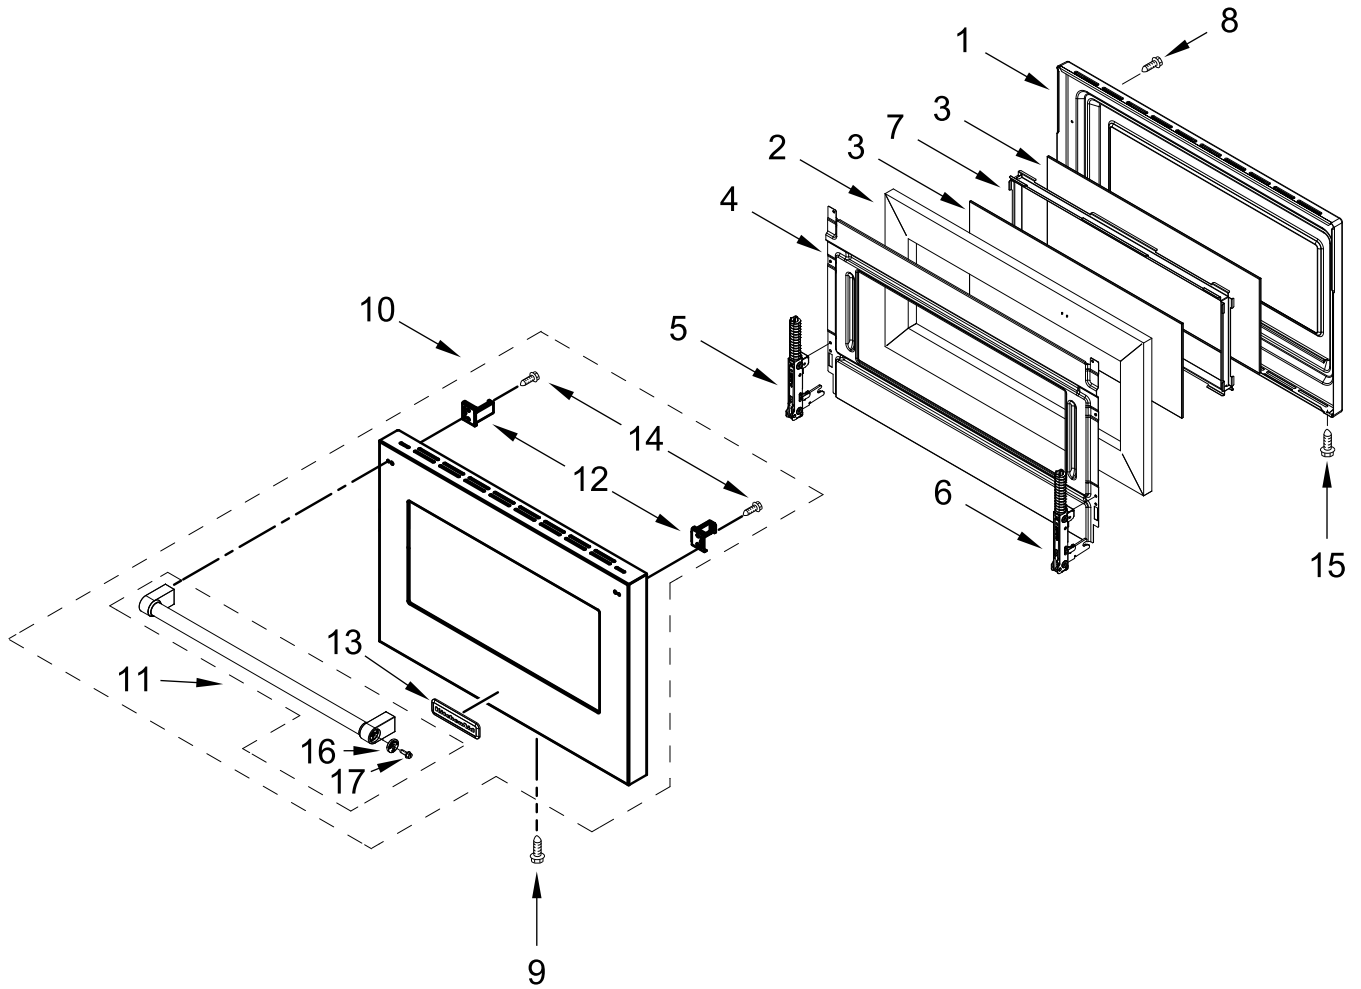

30 IN. OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W11413190	Insulation, Door (30 in)	8	W10898280	Screw	13	W10518672	Badge
3	W11184409	Glass, Inner	9	W10162096	Screw	14	W10276043	Screw
4	W11194821	Retainer, Glass	10	W11389302	Assembly, Outer Door (Includes Handle)	15	W10607120	Screw
5	W11390105	Hinge, Door (Left)	11	W11362706	Handle Assembly	16	W11361074	Medallion, Handle
6	W11390124	Hinge, Dual (Right)				17	W10656499	Screw


18 IN. OVEN DOOR PARTS

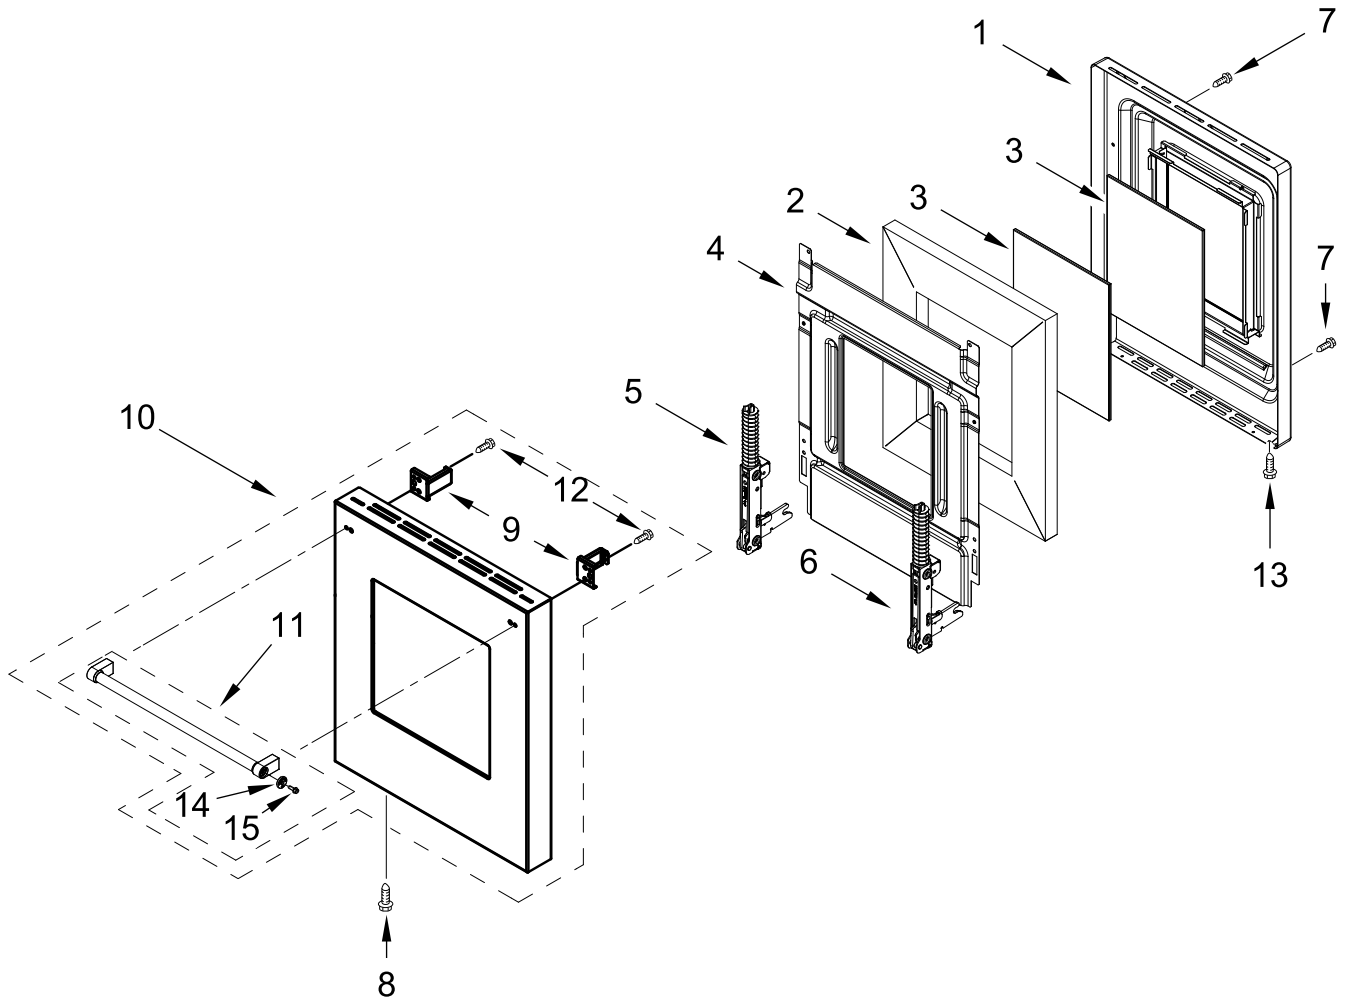

18 IN. OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	12	W10276043	Screw
2	W10884821	Insulation, Door	8	W10162096	Screw	13	W10607120	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	14	W11361074	Medallion, Handle
4	W11194818	Retainer, Glass	10	W11389277	Assembly, Outer Door (Includes Handle)	15	W10656499	Screw
5	W11390106	Hinge, Door (Left)						
6	W11390125	Hinge, Door (Right)	11	W11362703	Handle Assembly			


30 IN. INTERNAL OVEN PARTS

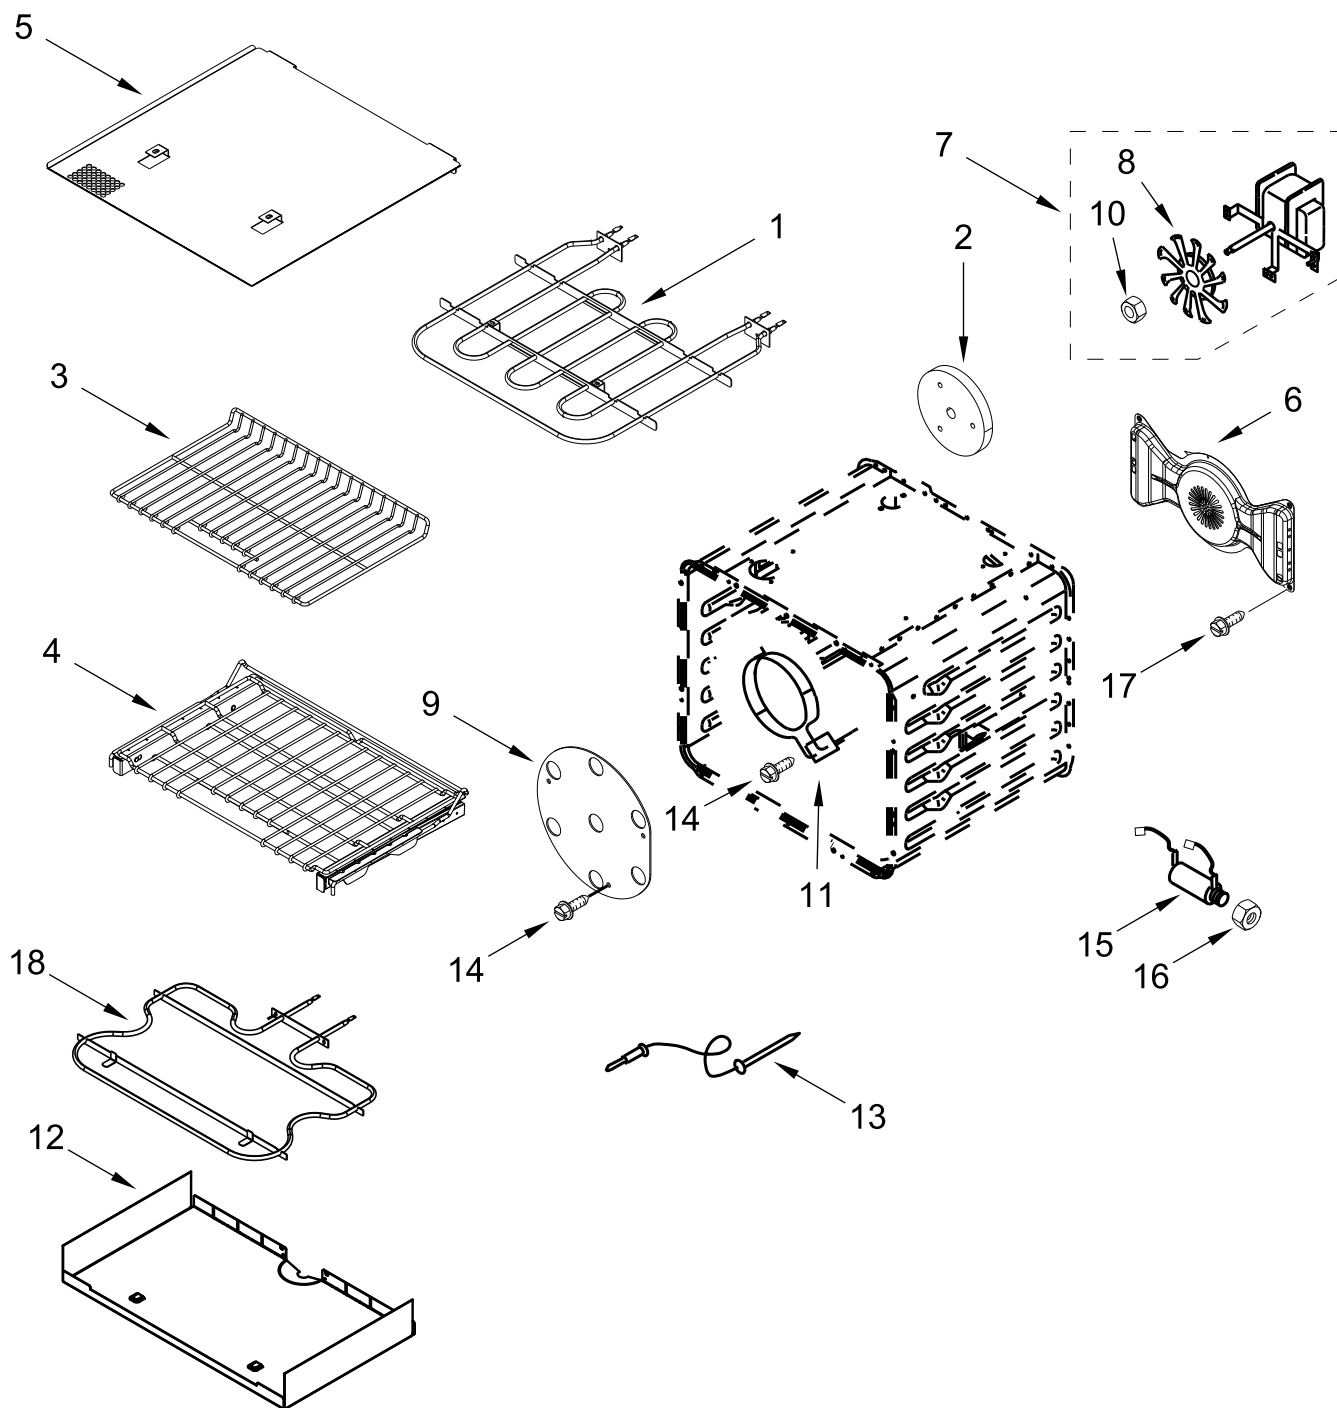

30 IN. INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10115994	Element, Broil	8	W10631503	Blade, Fan	15	9755543	Jack, Meat Probe
2	W10282821	Insulation, Convection Cover	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
3	W10570887	Rack, Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
4	W11496977	Rack, Sliding Oven	11	9762242	Element, Convection Steam	18	W10115995	Element, Hidden Bake
5	W10160856	Shield, Element Broil	12	W11109421	Tray, Hidden Bake			
6	W11212180	Baffle, Convection	13	9755542	Probe, Temperature			
7	W10722667	Fan, Convection	14	4449154	Screw			

18 IN. INTERNAL OVEN PARTS

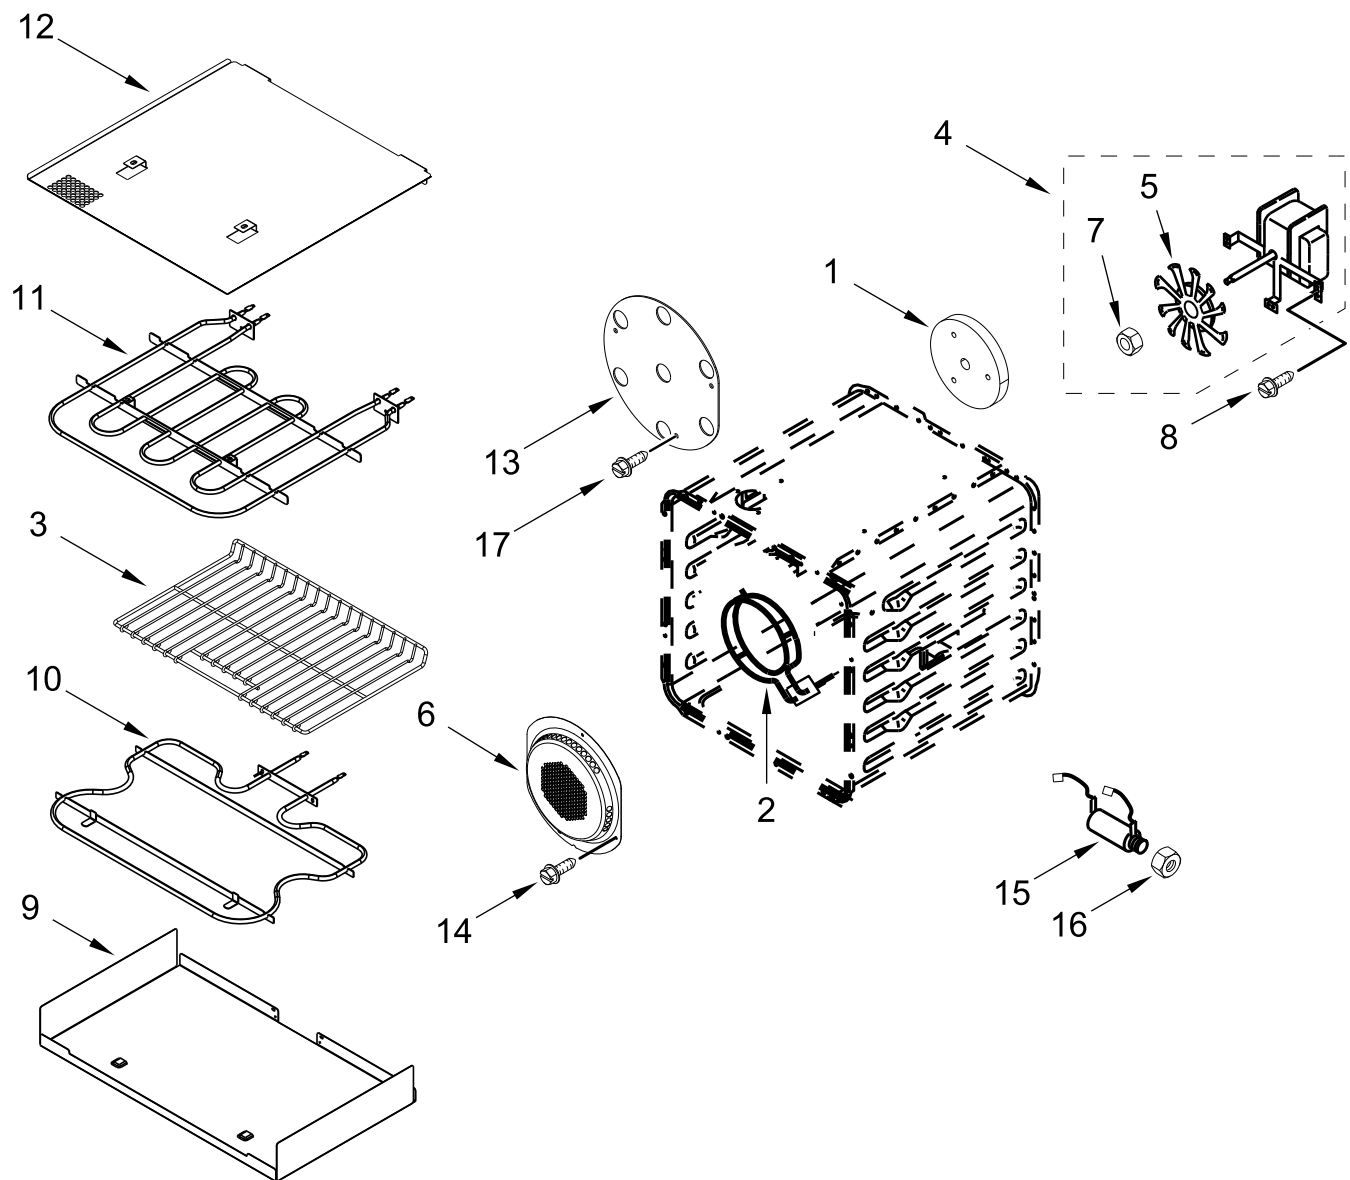

18 IN. INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	6	W11211948	Cover, Fan	13	W10261523	Plate, Fan
2	9762242	Element, Convection Steam	7	W10631504	Nut, Acorn (LH)	14	W10739592	Screw
			8	4449154	Screw	15	9755543	Jack, Meat Probe
			9	W11110223	Tray, Hidden Bake	16	W11033111	Nut, Locking
3	W10570879	Rack, Oven (18 in)	10	W11045324	Element, Hidden Bake	17	W10720084	Screw
4	W10722667	Fan, Convection	11	W10116010	Element, Broil			
5	W10631503	Blade, Fan	12	W10160855	Shield, Element Broil			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	W10355051	Cleaner, Cooktop
	W11042467	Spray, Stainless Steel Cleaning
	W10115777	Backsplash, 48 In Stainless Steel
		Backsplash
	W10285449	48-In With Shelf Medallion, Handle
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841BN	Bronze
	W11368841DD	Dark Blue
	W11368841CF	Copper