




ELECTRIC RANGE

MODELS:

MER6600FB6 (Black)
MER6600FW6 (White)


COOKTOP PARTS

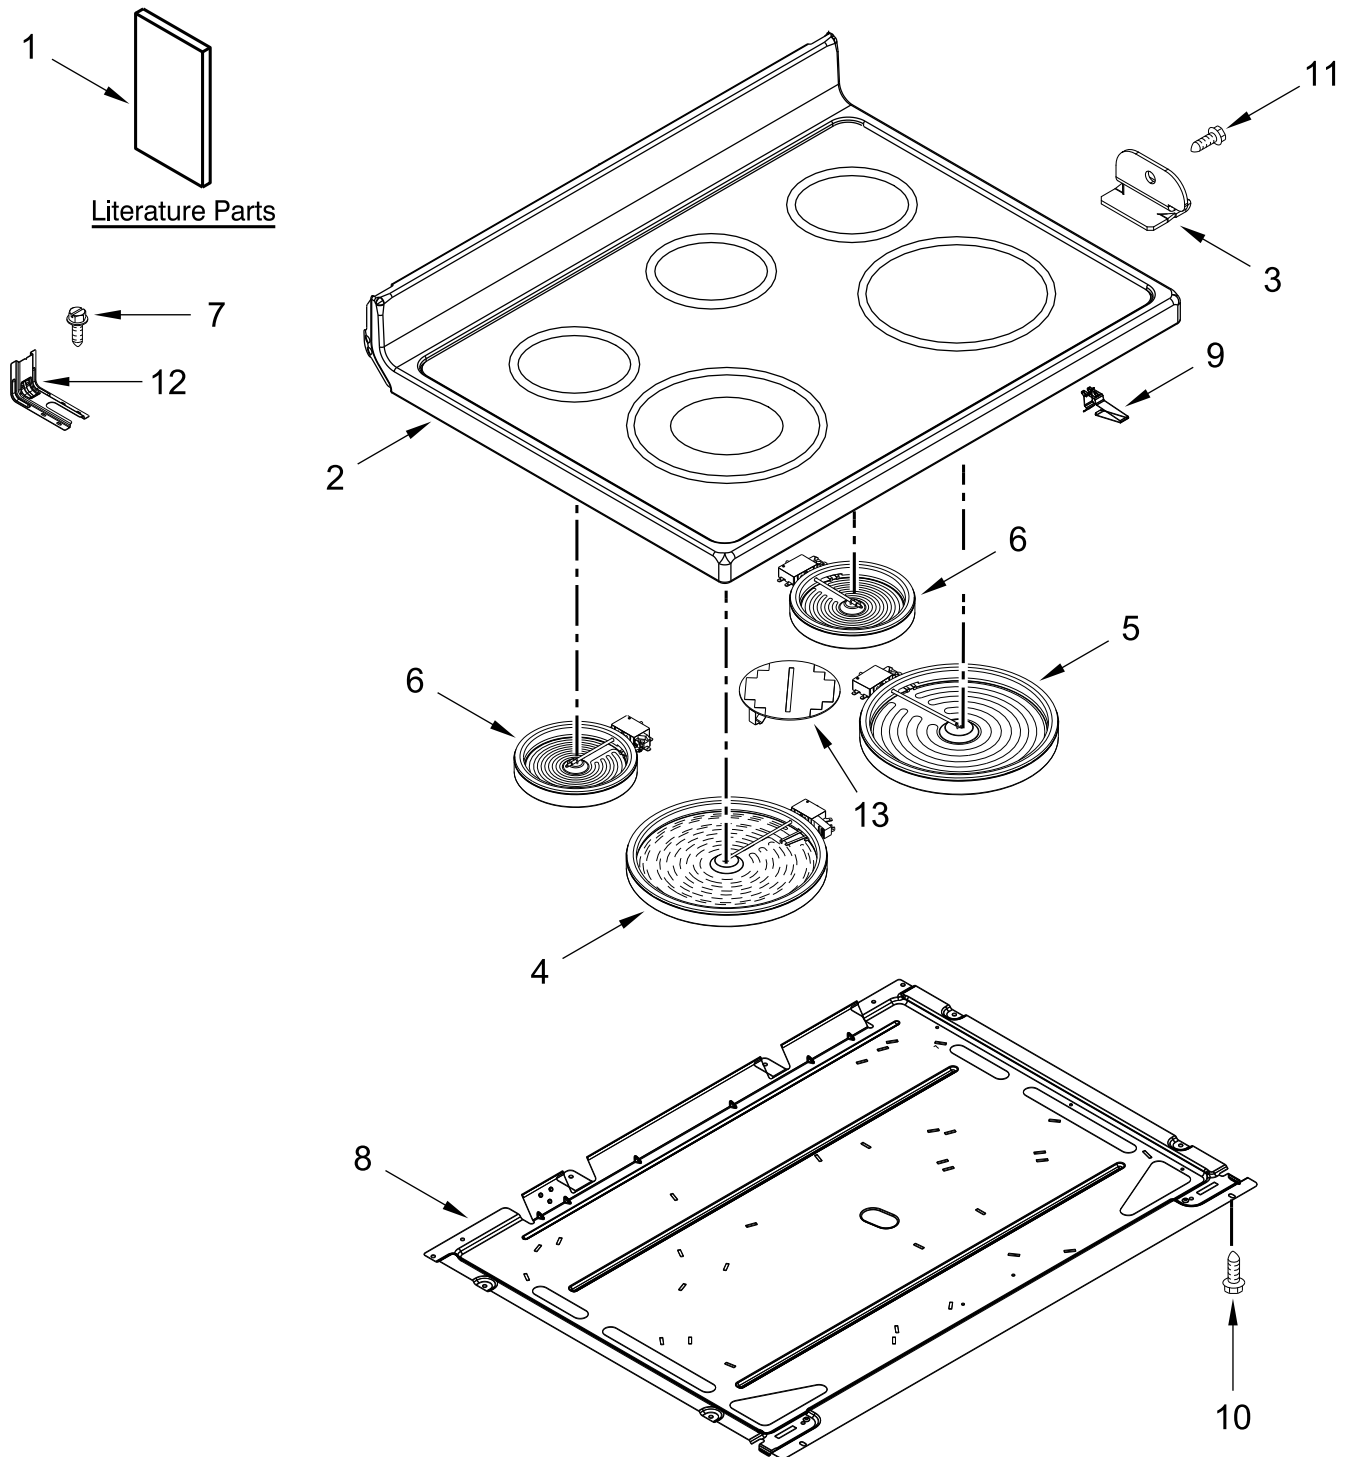

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	8273992	Element (2500W)	13	W11668631	Element, Warm Zone
	W11509598	User Instructions			(Right Front)			FOLLOWING PARTS
	W11435574	Quick Start Guide	6	8273994	Element (1200W)			NOT ILLUSTRATED
	W11326824	Tech Sheet			(Left Rear and Right Rear)		W11452625	Harness, Main
2		Cooktop	7	7101P485-60	Screw, Anti-Tip Kit		W11134603	Harness, Cooktop (Left)
	W11022824	Black	8	W10691223	Pan, Radiant Element		W11134551	Harness, Cooktop (Right)
	W11022825	White	9	W11600012	Spring, Element		W11598759	Harness, Warm Zone
3	W10607641	Bracket, Cooktop (Left)	10	3196165	Screw		W11172528	Harness, Hidden Bake
	W10607642	Bracket, Cooktop (Right)	11	3196178	Screw		W10281322	Kit, Bare Wire Adapter Block
4	W10275048	Element (3000 and 1400W)	12	W11379945	Bracket, Anti-Tip		W10183541	Clip, Spring Steel
		(Left Front)						

CONTROL PANEL PARTS

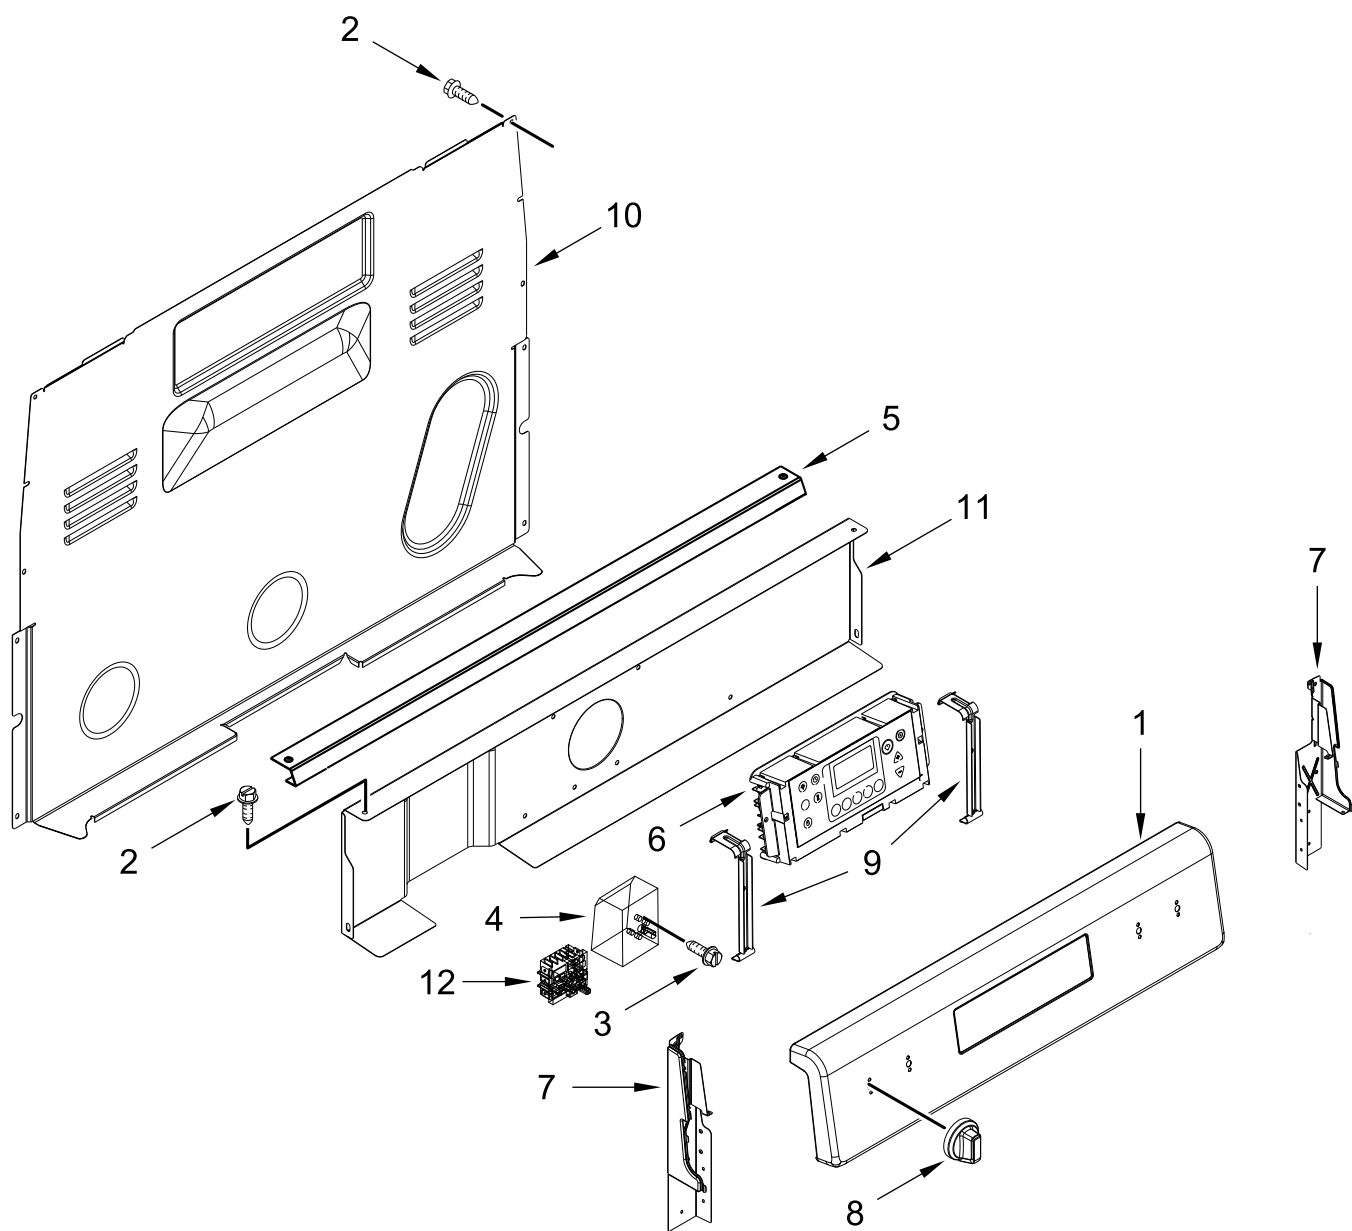


CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console
	W10885609	Black
	W10885608	White
2	3196178	Screw
3	3400882	Screw
4	3148954	Switch, Infinite (Orange)
		(Right Rear)
	3148951	Switch, Infinite (Left Front, Right Front)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5	W10525121	Bracket, Console Mounting
6		Board, Control
	W11515115	Black
	W11515114	White
7		Endpost, Console
	W11130372	Black (Left)
	W11130379	Black (Right)
	W11130371	White (Left)
	W11130378	White (Right)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8		Knob
	W10892251	Black
	W10892250	White
9	W10695491	Bracket, Control
10	8272473	Cover, Upper Rear
11	W10134247	Shield, Heat
12	W10434452	Switch, Infinite (Dual) (Left Rear)


CHASSIS PARTS

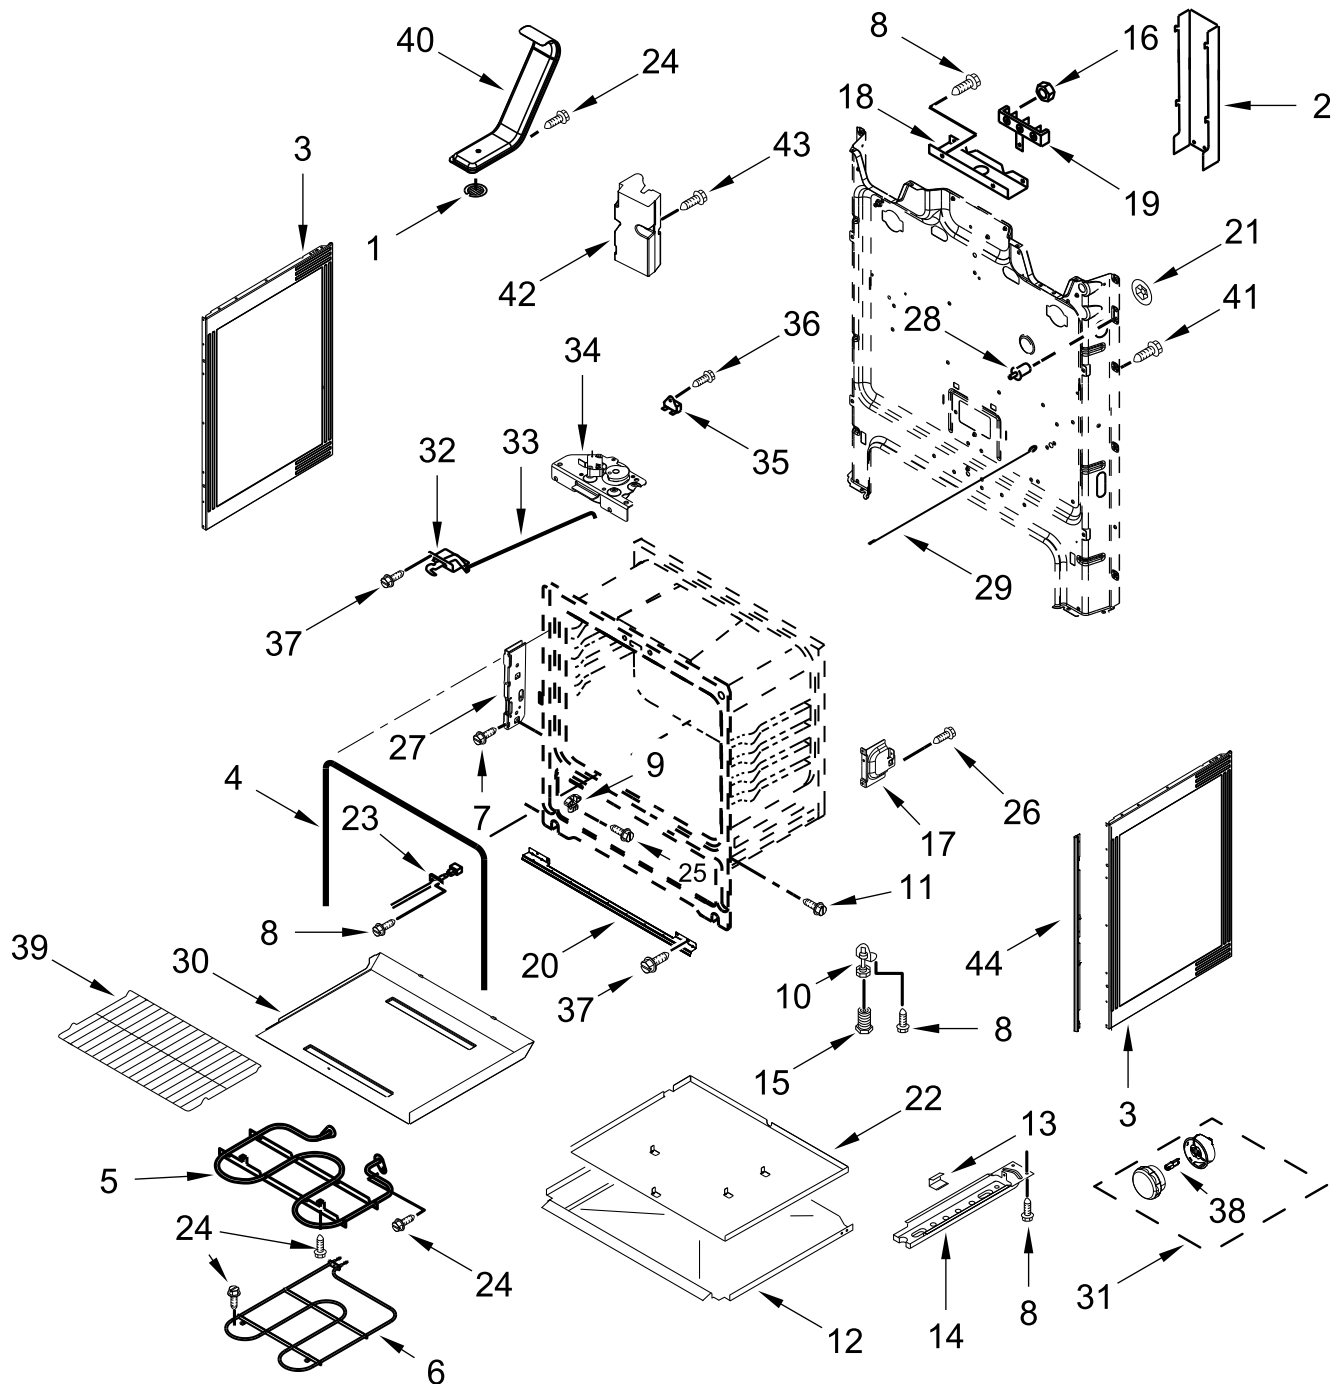

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11092984	Screen, Vent	17	W10404688	Clip, Oven Support	36	3196172	Screw
2	W10326122	Cover, Terminal Block	18	3186034	Bracket, Service	37	3196560	Screw
3		Panel, Side	19	W10245259	Block, Terminal	38	W10571723	Bulb, Halogen 40 Watts
	W10162245	Black	20	W11464547	Bracket, Front Frame	39	W11173792	Rack, Oven
	W10575396	White	21	3400968	Nut	40	W10134285	Tube, Vent
4	W11491751	Seal, Door	22	W10134125	Shield, Heat	41	3400016	Screw
5	9757340	Element, Broil	23	W10181986	Sensor, Oven	42	W10910404	Counterweight
6	9755770	Element, Bake	24	3196154	Screw	43	W11034869	Screw
7	W10031780	Screw	25	3400080	Screw	44	W11510560	Barrier Rail, Rubber (Left and Right)
8	3196178	Screw	26	3196169	Screw			FOLLOWING PARTS NOT ILLUSTRATED
9	W10674705	Glide, Drawer Front	27	W10289077	Receiver, Hinge			
10	W10341186	Front Foot Assembly	28	W11511828	Switch, Door			
11	W10067840	Screw	29	9757239	Rod, Door Switch		3196520	Clip, Wire
12	W10134121	Tray, Insulation	30	W10183712	Tray, Hidden Bake		W10774939	Insulation, Wrap
13	W10137382	Clip, Panel	31	W11634772	Light Assembly		W11127324	Insulation, Back
14	W10390008	Base Rail Assembly (Left)	32	9761013	Front Door Latch Assembly		W10646923	Card, Insulator
	W10390007	Base Rail Assembly (Right)	33	W10078380	Rod, Latch		W10333344	Insulation, Flue
15	W10058460	Foot, Leveling	34	W10107820	Rear Door Latch Assembly			
16	3400029	Nut	35	3196548	Fuse, Thermal			


DOOR PARTS

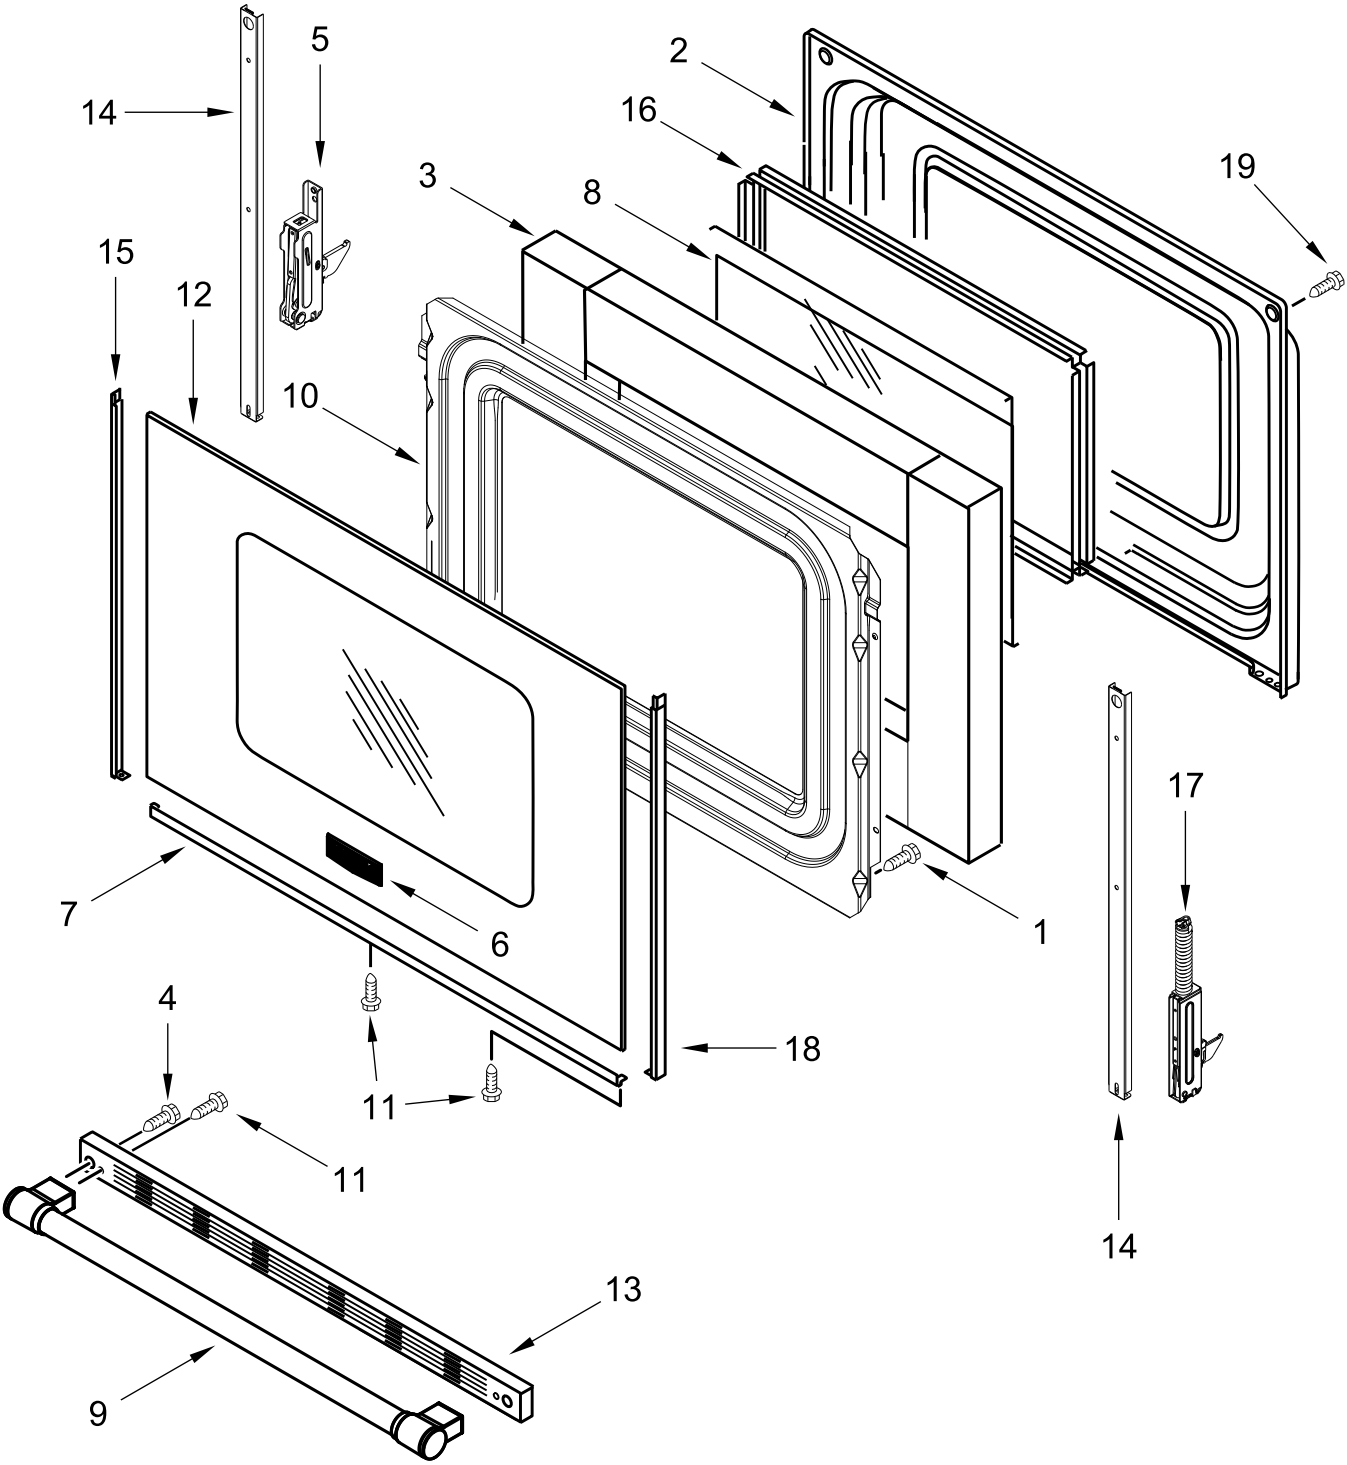

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw	10	W11380222	Retainer, Insulation	17	W10299226	Hinge, Active
2	9761344	Liner, Door	11	W10480830	Screw	18		Trim, Door
3	W10278991	Insulation, Door Strip	12		Glass, Window		W10746435	Black (Right)
4	W10200660	Screw		W11687920	Black		8523166	White (Right)
5	W10299227	Hinge, Door (Passive)		W10409945	White	19	W10327235	Screw
6	W10612925	Badge	13		Trim, Oven Door Vent			
7		Trim, Lower Door		W10875233	Black			
	W11444043	Black		W10875232	White			
	W11444042	White	14	W11379944	Strap, Door			
8	9758162	Glass, Inner	15		Trim, Door			
9		Handle, Oven Door		W10746436	Black (Left)			
	W10889624	Black		8523172	White (Left)			
	W10889625	White	16	W10316950	Frame, Glass			

DRAWER PARTS

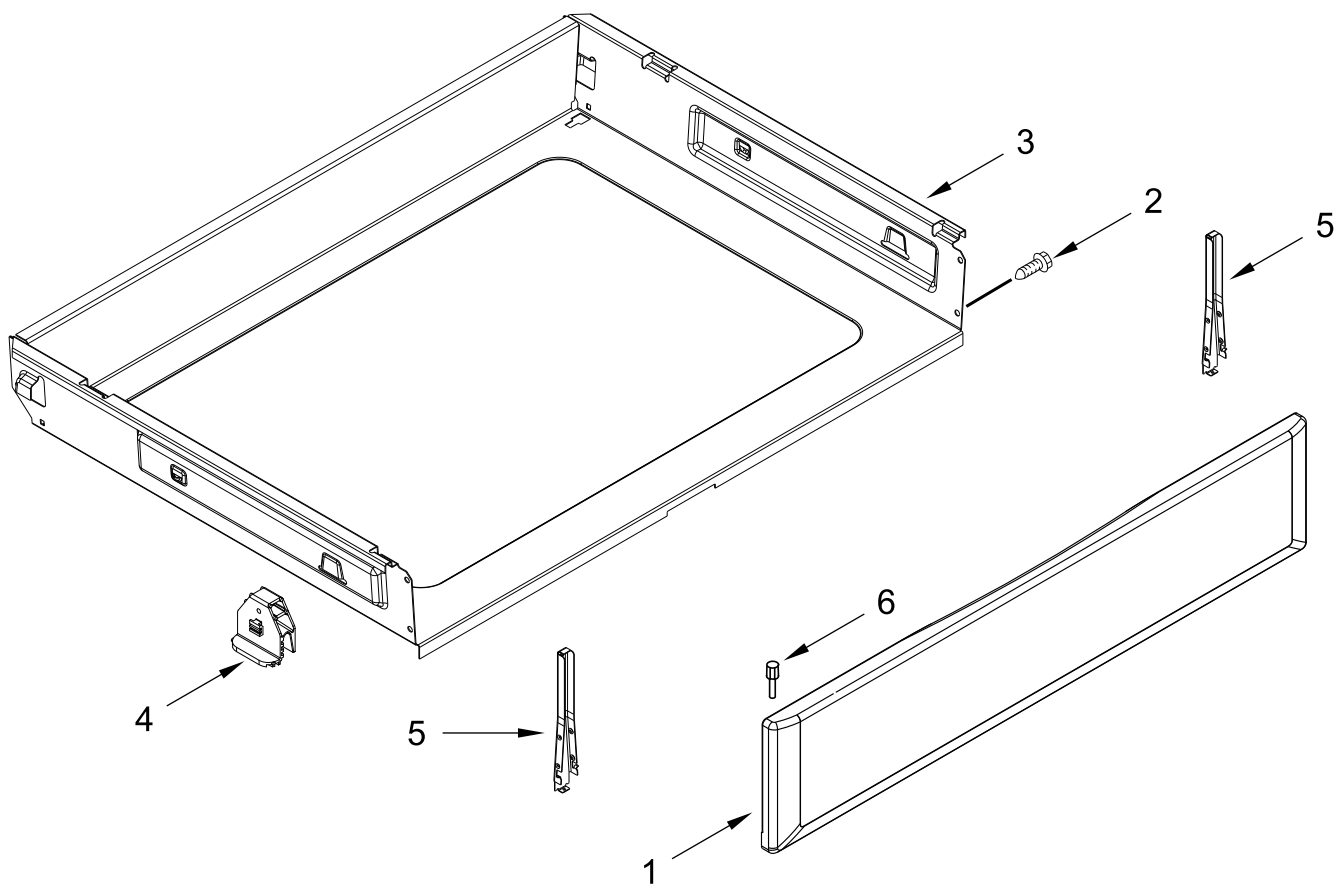

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer	3	W10688022	Drawer, Storage	6		Rivet, Push
	W11123900	Black	4	W10674708	Glide, Drawer Rear		3196813	Black
	W11123901	White	5	W10462912	Bracket, Mounting Drawer		3196814	White
2	3196165	Screw						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355051	Cleaner, Cooktop
	W10391473	Pad, Cooktop Cleaning
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10268578	Rack, Oven
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting